


Lighting System Headlight High/Low Beam Circuit Diagram (Page 1 of 2)

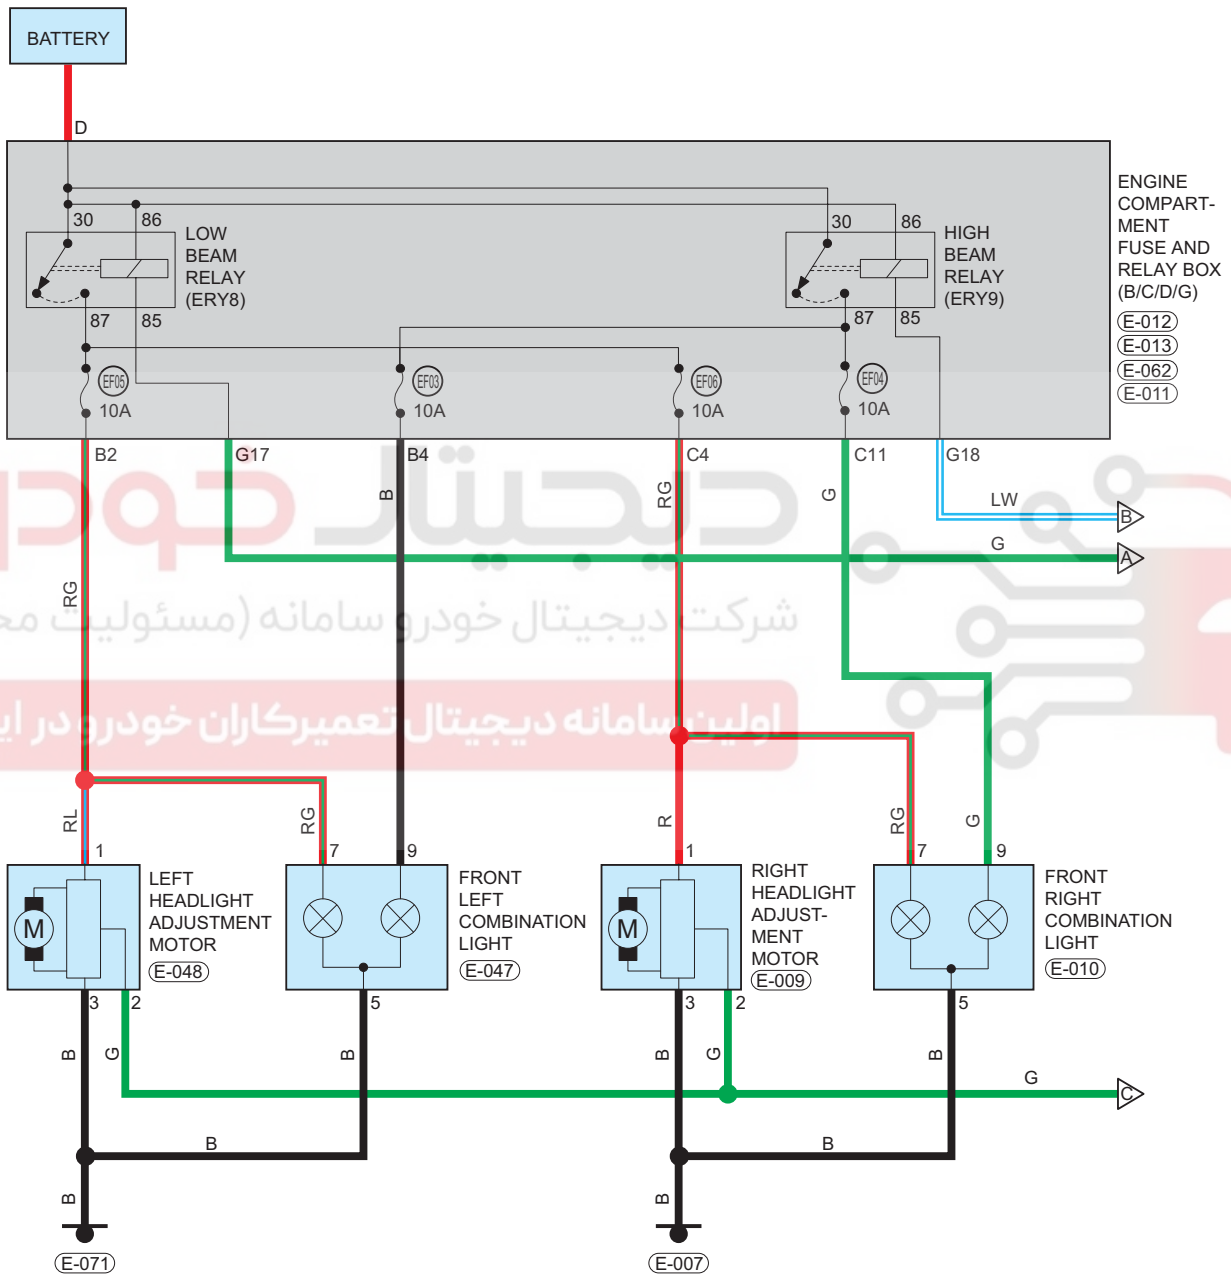

ET11091801

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-012	08-3	E-013	08-3	E-062	08-3
E-011	08-3	E-048	08-3	E-047	08-3
E-009	08-3	E-010	08-3	E-071	08-3
E-007	08-3				


Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF03	06-4	Engine Compartment Fuse and Relay Box
EF04	06-4	Engine Compartment Fuse and Relay Box
EF05	06-4	Engine Compartment Fuse and Relay Box
EF06	06-4	Engine Compartment Fuse and Relay Box
Low Beam Relay (ERY8)	06-4	Engine Compartment Fuse and Relay Box
High Beam Relay (ERY9)	06-4	Engine Compartment Fuse and Relay Box

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-012	12-2	E-013	12-2	E-062	12-2
E-011	12-2	E-048	12-2	E-047	12-2
E-009	12-2	E-010	12-2	E-071	12-2
E-007	12-2				

Circuit Diagram (Page 2 of 2)

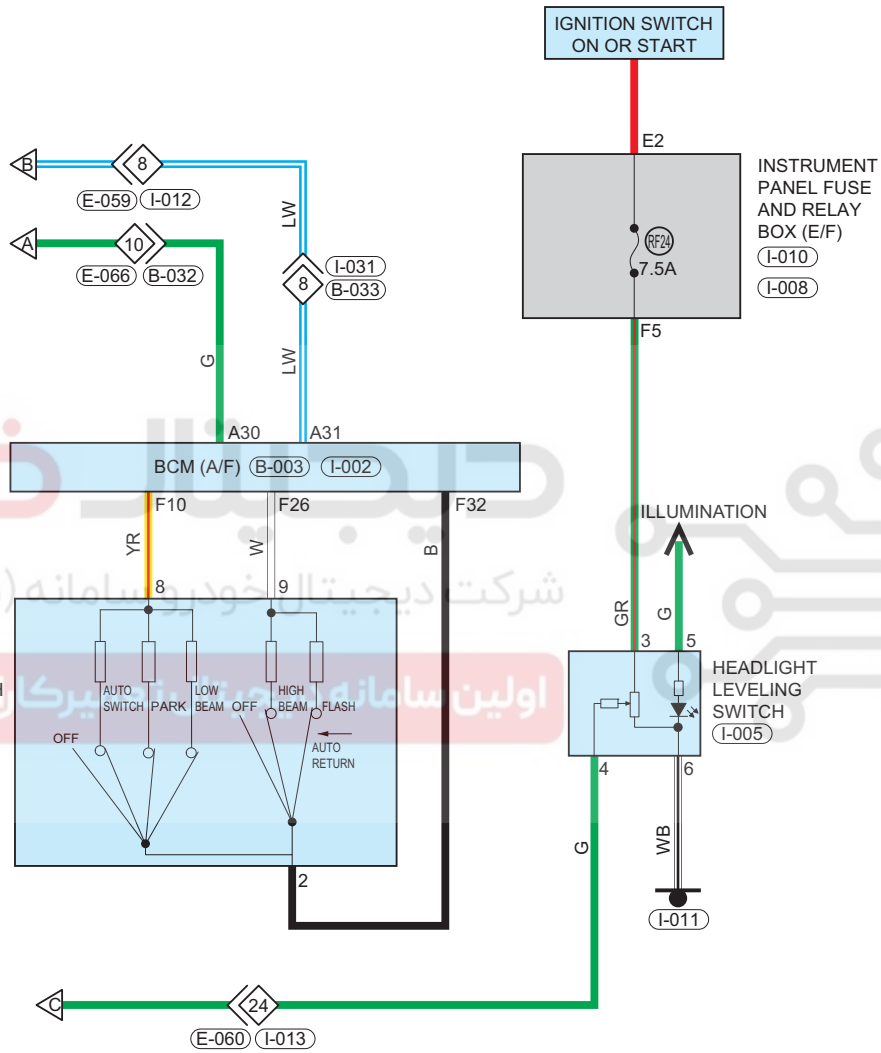

09

ET11091802