


QR019CHB CVT (For 2.0L Model)

Circuit Diagram (Page 1 of 5)

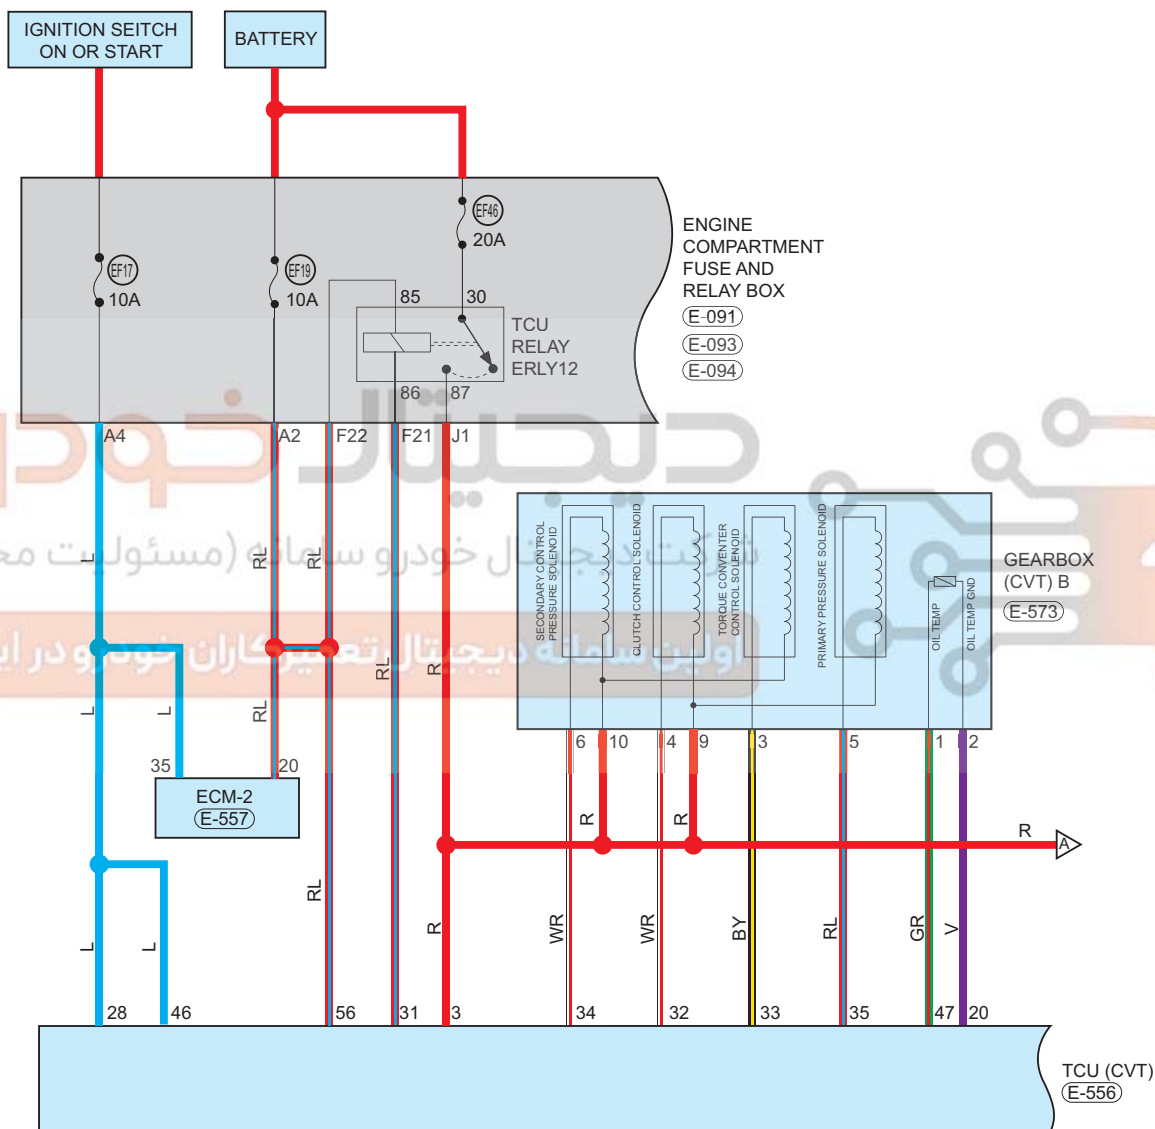

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-091	08-10	E-093	08-10	E-094	08-10
E-557	08-10	E-573	08-10	E-556	08-10

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF17	06-5	Engine Compartment Fuse and Relay Box
EF19	06-5	Engine Compartment Fuse and Relay Box
EF46	06-5	Engine Compartment Fuse and Relay Box
TCU Relay	06-5	Engine Compartment Fuse and Relay Box


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-091	12-5	E-093	12-5	E-094	12-6
E-557	12-7	E-573	12-8	E-556	12-7


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

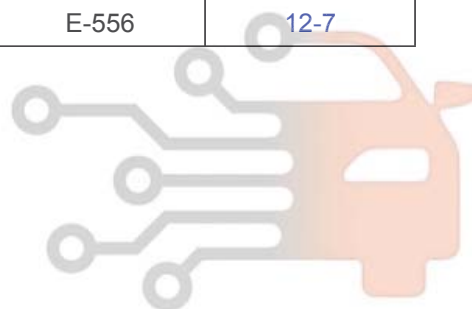

Circuit Diagram (Page 2 of 5)

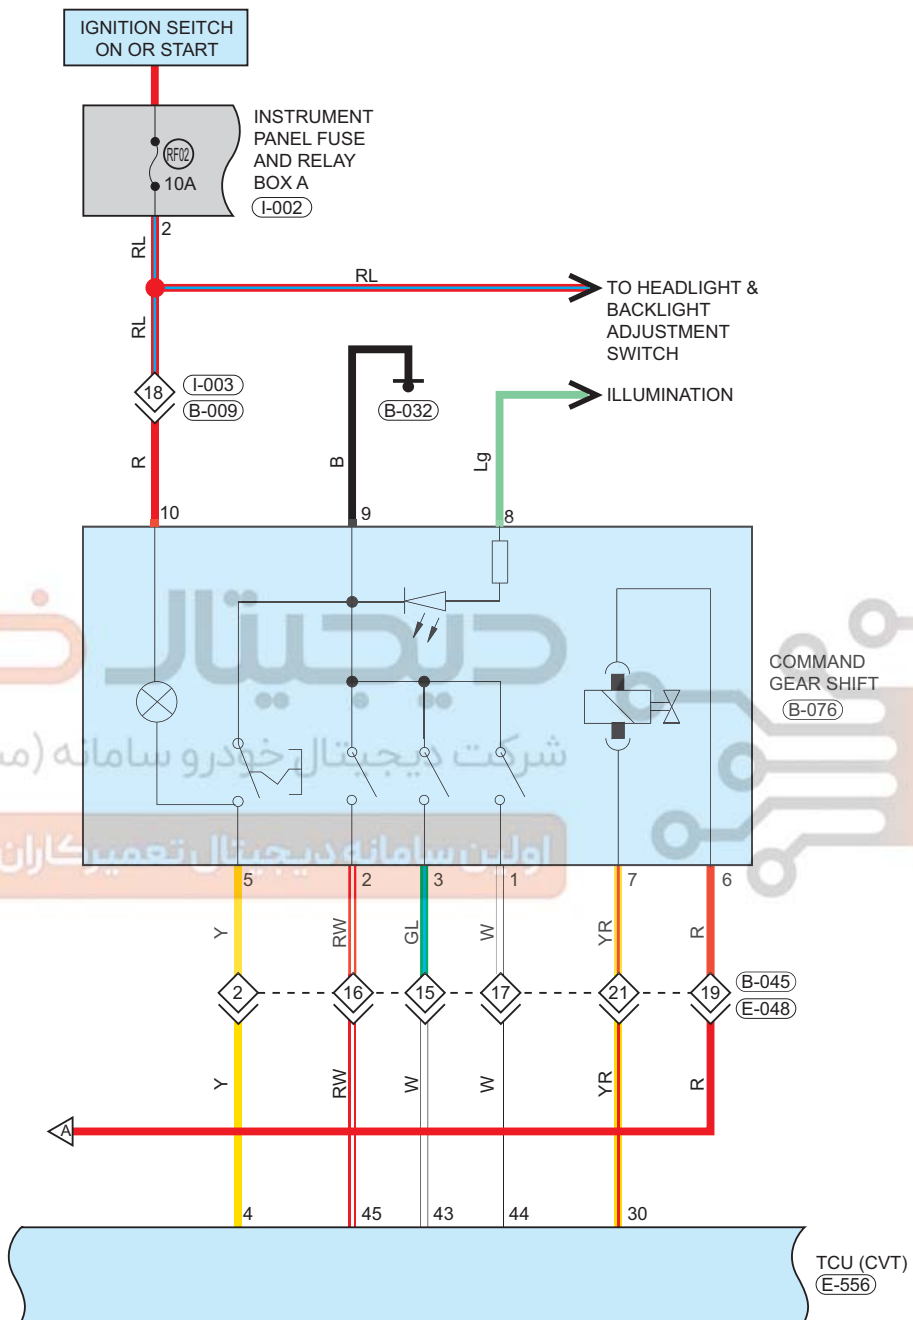

09

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

ET21090480

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-002	08-13	B-032	08-19	B-076	08-16
E-556	08-10				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF02	06-13	Instrument Panel Fuse and Relay Box A

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-003, B-009	08-13, 08-16	B-045, E-048	08-19, 08-10		


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-002	12-9	B-032	12-12	B-076	12-15
E-556	12-7	I-003, B-009	12-9	B-045, E-048	12-13

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 3 of 5)

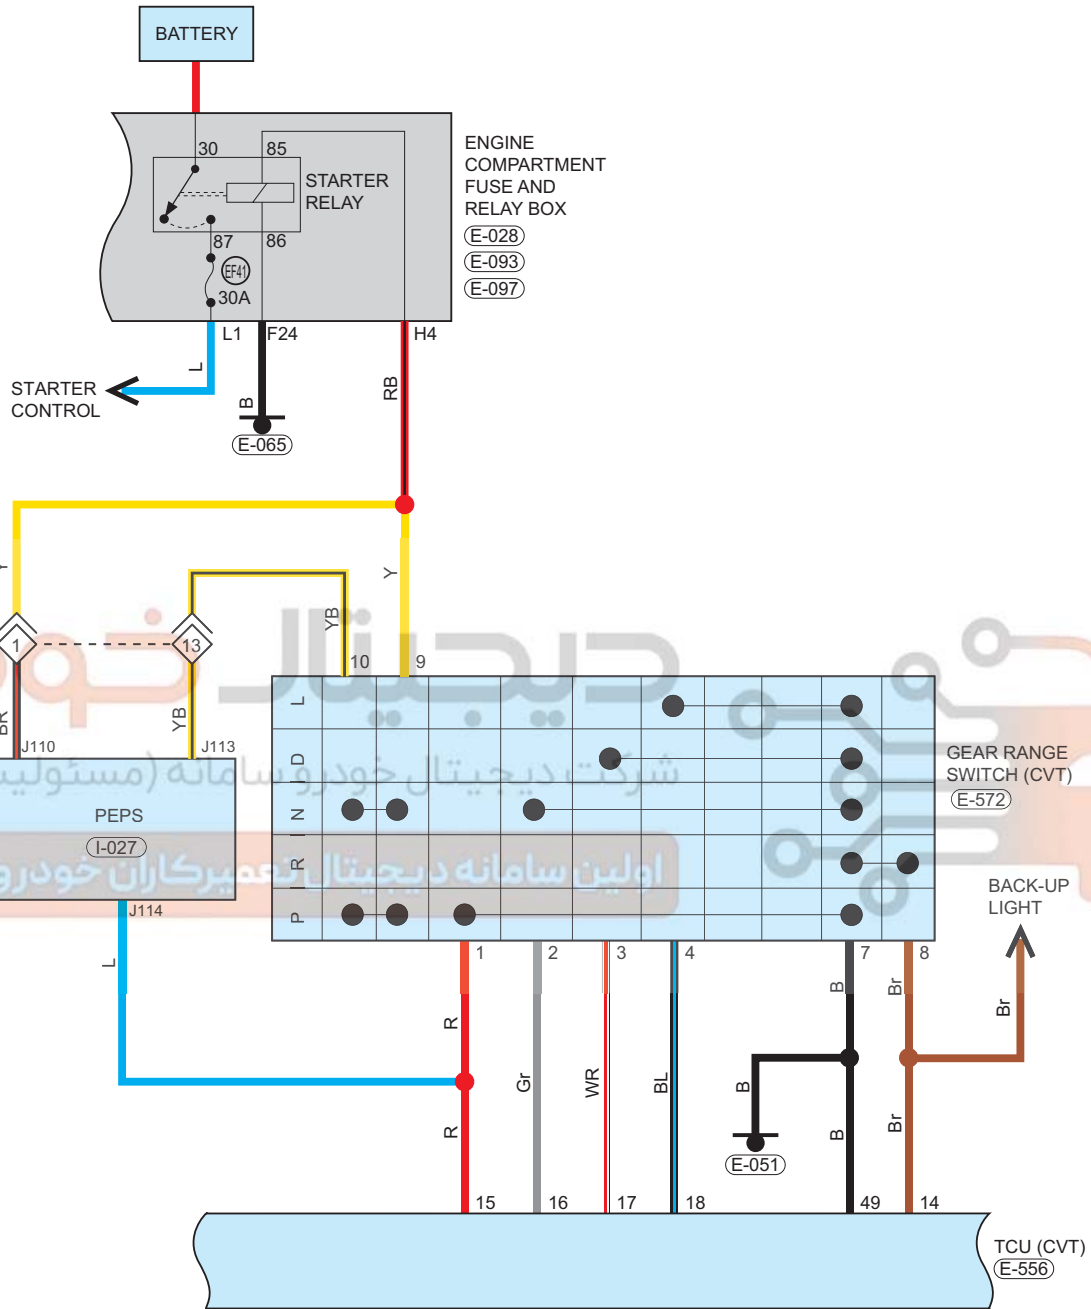

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-028	08-5	E-093	08-10	E-097	08-10
E-065	08-10	I-027	08-13	E-572	08-10
E-051	08-10	E-556	08-10		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF41	06-5	Engine Compartment Fuse and Relay Box
Starter Relay	06-5	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-061, I-004	08-10, 08-13				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-028	12-2	E-093	12-5	E-097	12-6
E-065	12-5	I-027	12-10	E-572	12-8
E-051	12-3	E-556	12-7	E-061, I-004	12-5

Circuit Diagram (Page 4 of 5)

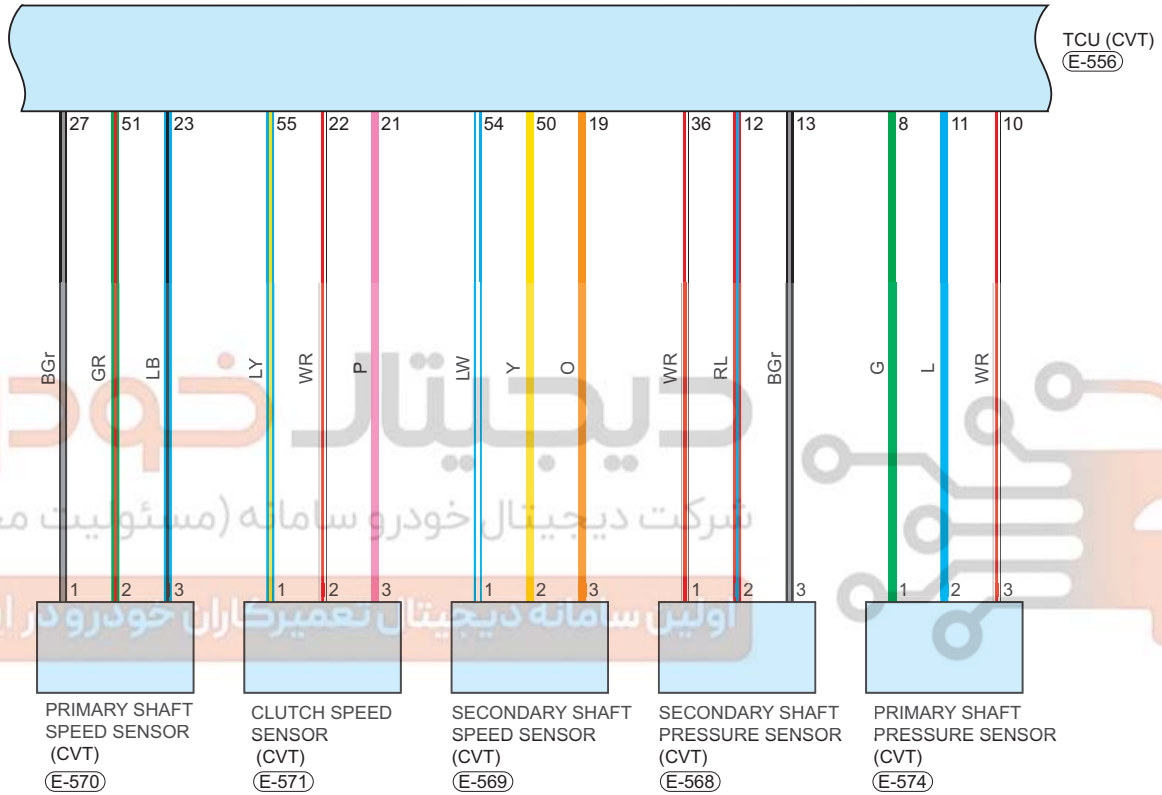

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-556	08-10	E-570	08-10	E-571	08-10
E-569	08-10	E-568	08-10	E-574	08-10

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-556	12-7	E-570	12-8	E-571	12-8
E-569	12-8	E-568	12-8	E-574	12-8

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 5 of 5)

