

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-096	08-7	E-097	08-7	E-082	08-7
E-080	08-7	E-036	08-7	E-037	08-7

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF04	06-3	Engine Compartment Fuse and Relay Box
EF02	06-3	Engine Compartment Fuse and Relay Box
EF03	06-3	Engine Compartment Fuse and Relay Box
EF01	06-3	Engine Compartment Fuse and Relay Box
Low Beam Relay	06-3	Engine Compartment Fuse and Relay Box
High Beam Relay	06-3	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-059, B-008	08-7, 08-16	E-061, I-004	08-7, 08-13		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-096	12-6	E-097	12-6	E-082	12-5
E-080	12-5	E-036	12-3	E-037	12-3
E-059, B-008	12-4	E-061, I-004	12-5		

Circuit Diagram (Page 2 of 2)

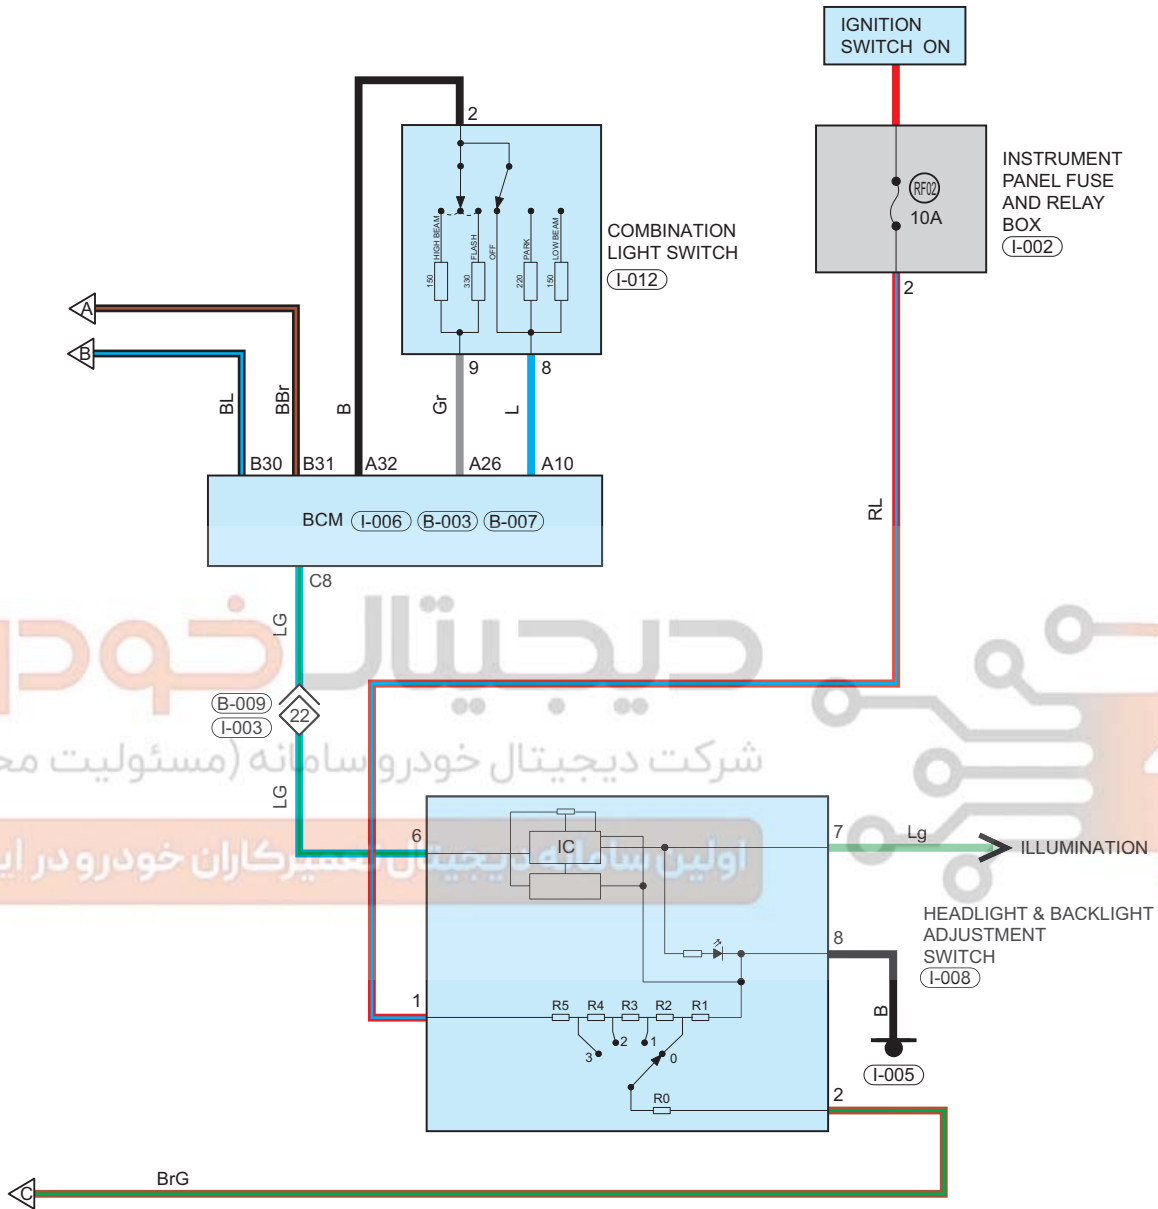

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال اسپیکاران خودرو در ایران