


Power harness arrangement diagram

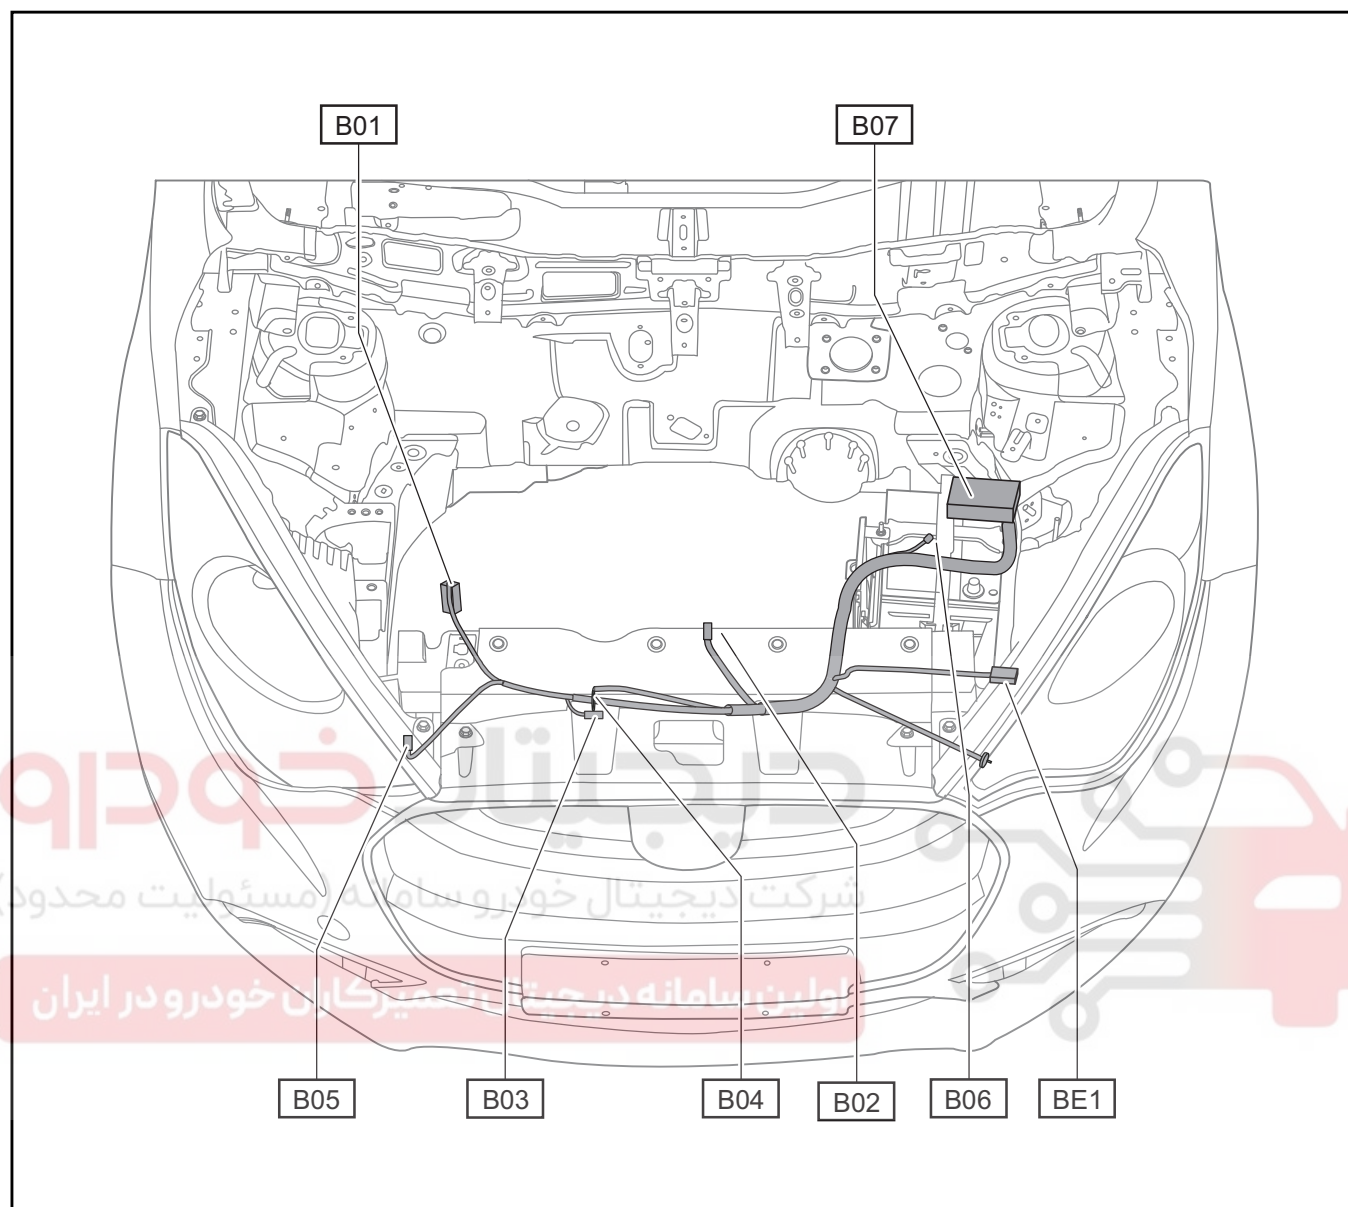

Power harness connector list

Harness connector	Name	Harness connector	Name
B01	Generator harness connector	B06	Connect fore-cabin power harness connector
B02	Starter harness connector	B07	A/C compressor harness connector
B03	Starting coil harness connector	BE01	Battery positive pole harness connector
B04	Air compressor harness connector	G03	Earth connection
B05	Generator harness connector	G04	Earth connection

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Power harness connector terminal diagram


B07 Battery positive post

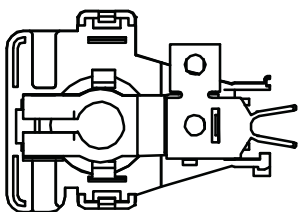

B06 Connect fore-cabin power harness connector




BE1 Power harness connect engine harness

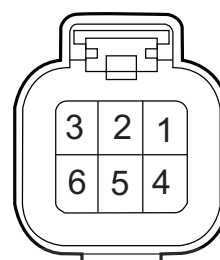


B02 Starter positive post harness connector




B04 Air compressor harness connector

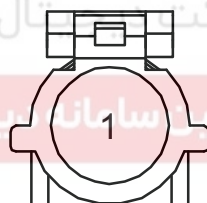


B03 Start coil harness connector

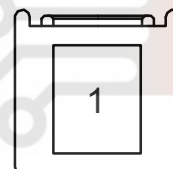


B01 Generator harness connector

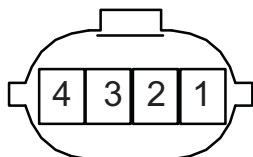


B05 Generator harness connector

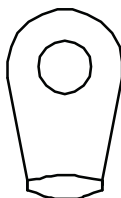

Engine harness connector

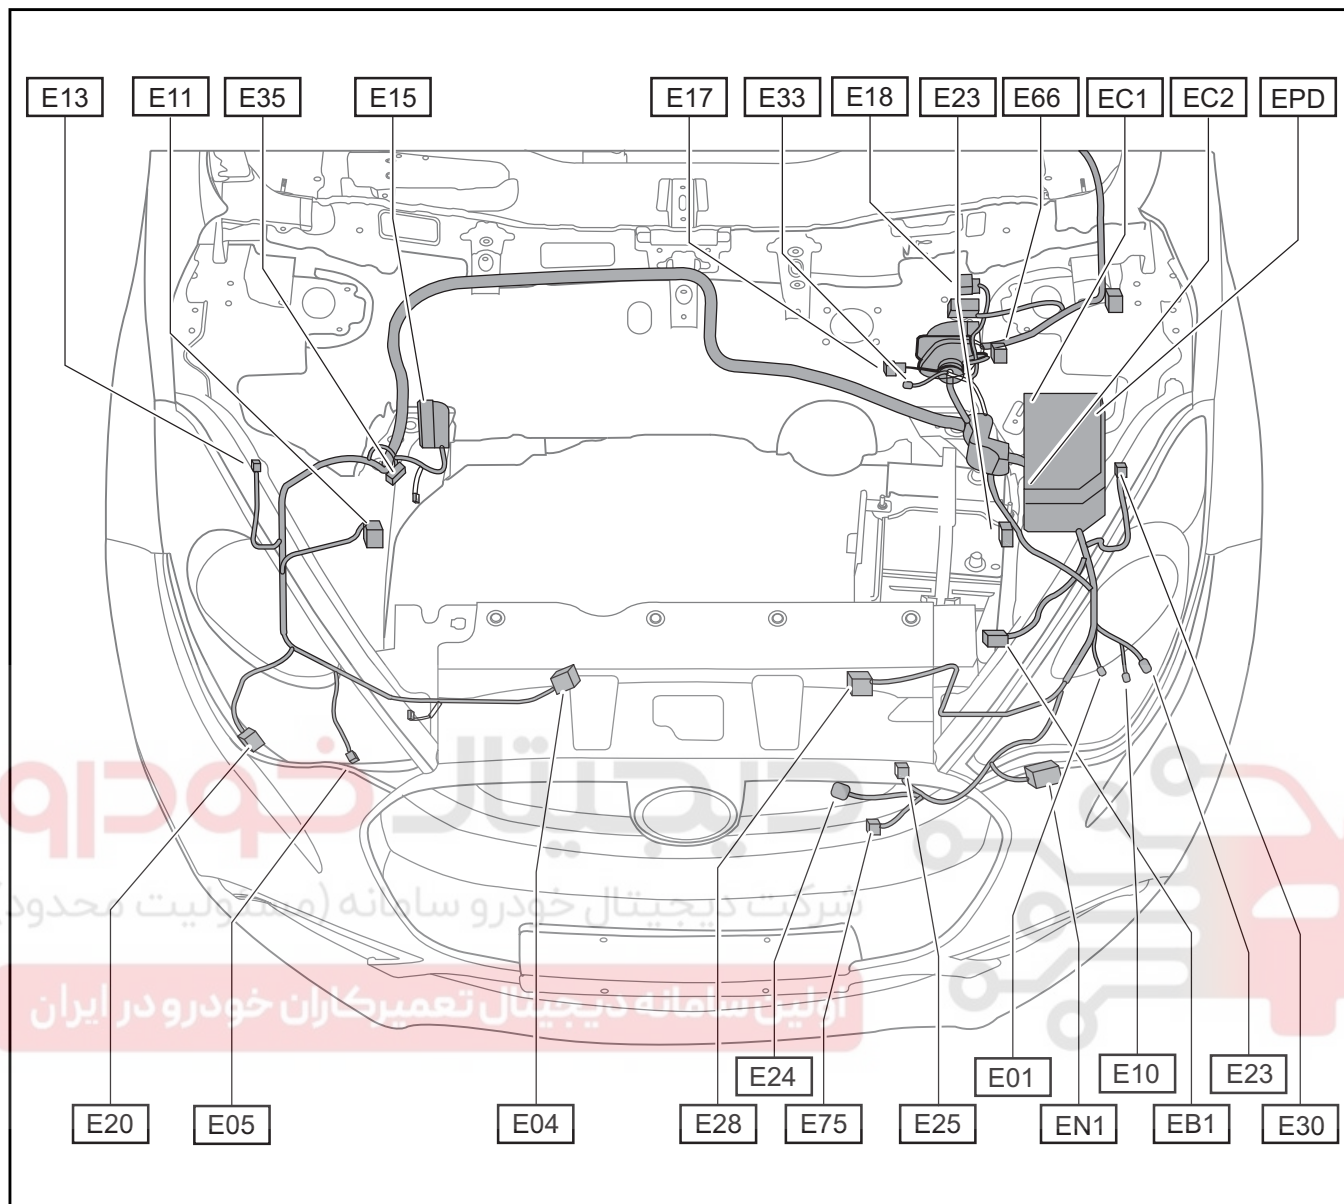

Engine harness arrangement diagram (continue)

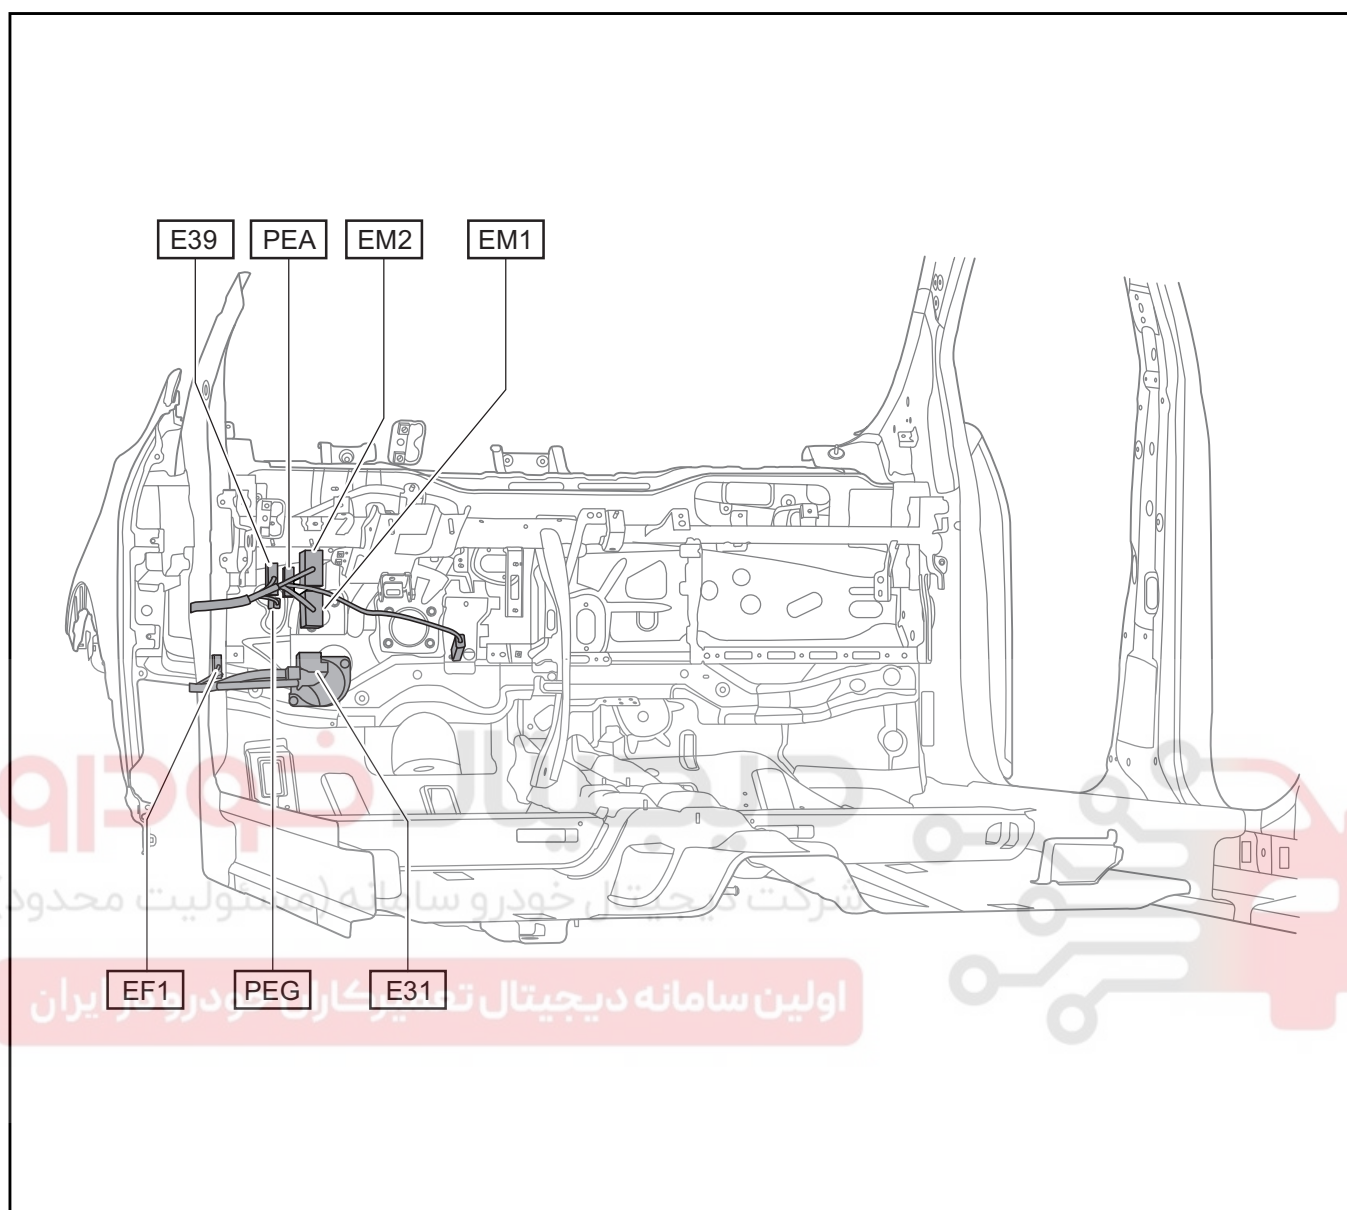

Engine harness connector list


Harness connector	Name	Harness connector	Name
E01	Connect power harness connector	E66	Clutch switch harness connector
E04	Cooling fan harness connector	E75	Outside temperature sensor harness connector
E05	Engine compartment cover harness connector	PEG	IP BOX G harness connector
E10	Battery sensor harness connector	PEA	IP BOX A harness connector
E11	Front -left headlight harness connector	EPD	Outside relay box
E13	Right wheel speed sensor harness connector	EF1	Engine harness connect body harness port
E15	ABS/ESP harness connector	EM1	Engine harness connect body harness port
E17	Brake liquid level sensor harness connector	EM2	Engine harness connect main harness port
E18	Wiper electric machine harness connector	EN1	Engine harness connect main harness port
E20	Washer pump harness connector	EC1	Engine harness connect front bumper harness port
E23	Front -left headlight harness connector	EC2	Engine harness connect control harness port
E24-1	Front-right klaxon harness connector	EB1	Engine harness connect control harness port
E25-1	Front-left klaxon harness connector	EB01	Engine harness connect battery positive post harness port
E28	Connect gearbox harness connector	E08	Earth connection
E30	Left wheel speed sensor harness connector	E16	Earth connection
E31	TCU harness connector	E19	Earth connection
E33	Vacuum degree harness connector	E26	Earth connection
E39	EPS electric machine harness connector	G06	Earth connection

شرکت دیجیتال خودرو (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Engine harness connector terminal diagram


E04 Cooling fan harness connector

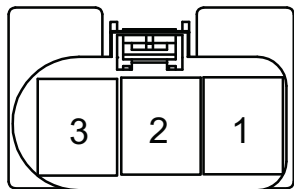


E05 Engine compartment touch switch harness connector

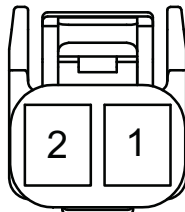


E20 Washer pump harness connector

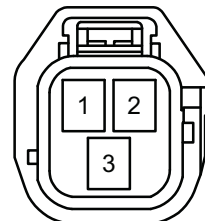


E11 Front-right headlight harness connector

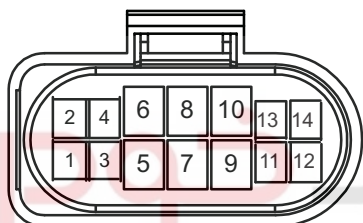


E35 A/C pressure harness connector

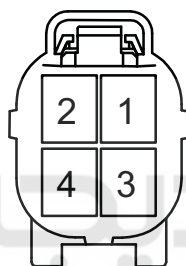


E13 Front-right wheel speed sensor harness connector

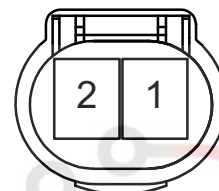


E15 ABS/ESP ECU harness connector

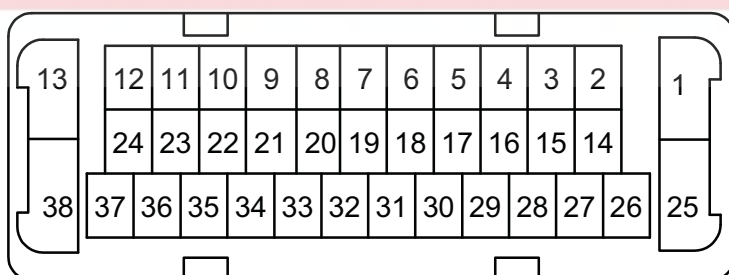


E39 EPS electric machine harness connector

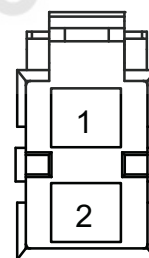

EM1 Engine harness connect main harness

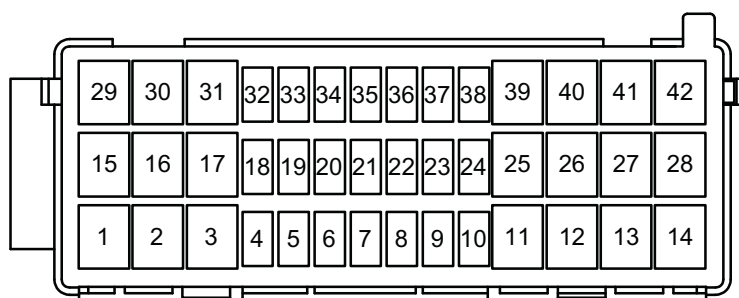


PEA Connect engine compartment electric box A

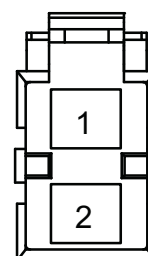


Engine harness connector terminal diagram (continue 1)


EM2 Engine harness connect main hransess ME2

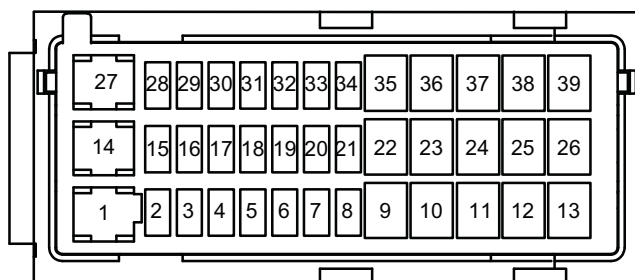


E18 Front wiper electric machine harness connector

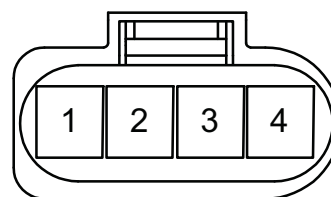


EF1 Engine harness connect body harnessbFE1

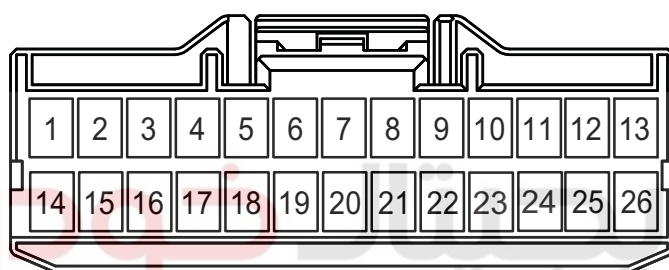


E33 Vacuum degree sensor harness connector

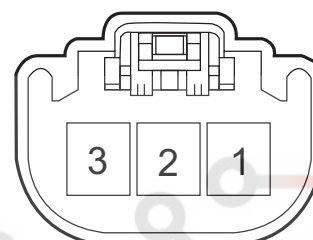


PEG Connect engine compartment electric box G

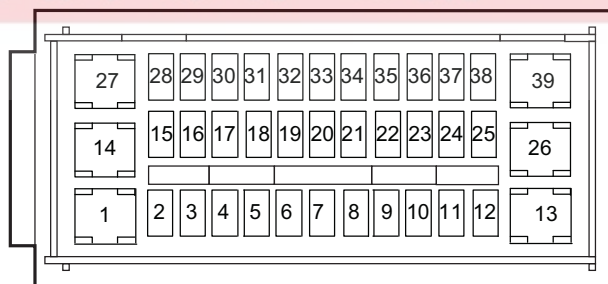


E17 Brake liquid level sensor harness connector

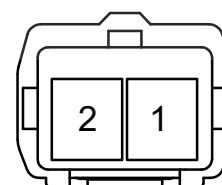

E31 TCU harness connector

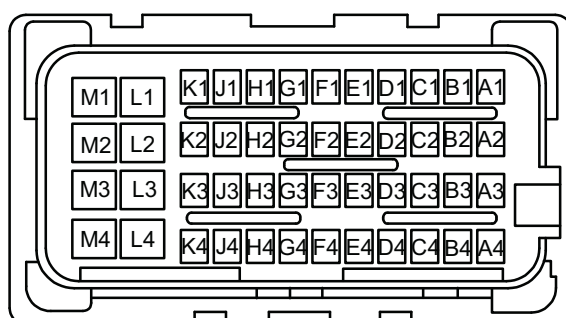


E66 Clutch switch harness connector

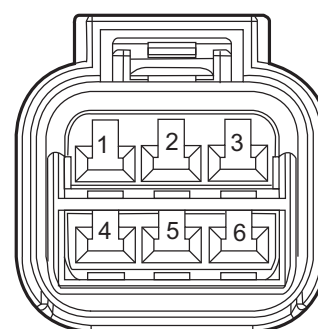


Engine harness connector terminal diagram (continue 2)


EC1 Engine harness connect control harness 1

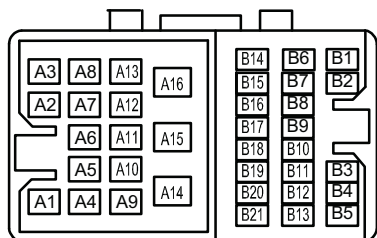


E24-1 Front-right klaxon harness connector

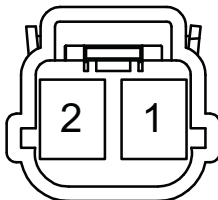

E30 Front-left wheel speed sensor Front-right klaxon harness connector

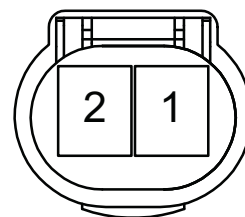


EC2 Engine harness connect control harness 2

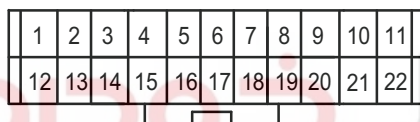


E25-1 Front-left klaxon harness connector




EB1 Engine harness connect power harness BE1

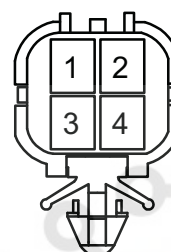


E10 Battery sensor harness connector

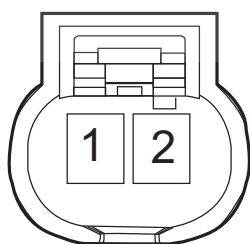


E01 Connect engine compartment electric box EPD

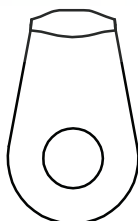


E23 Front-left headlight harness connector

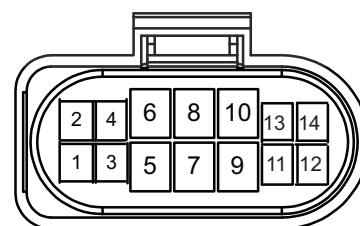


EN1 Engine harness connect front bumper harness NE1

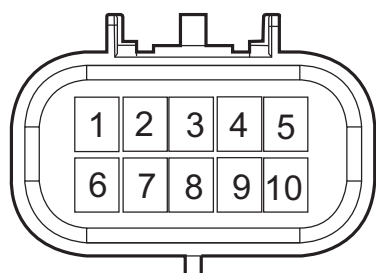

E75 Outside temperature sensor harness connector

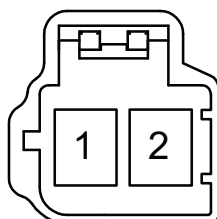

E28 Gearbox operator harness connector

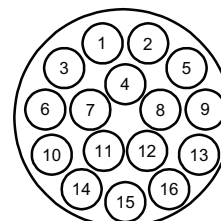

Engine control harness arrangement diagram

Engine control harness connector list

Harness connector	Name	Harness connector	Name
A2	Number 1 ignition coil harness connector	A3	Number 2 ignition coil harness connector
A4	Number 3 ignition coil harness connector	A5	Number 4 ignition coil harness connector
A6	Front oxygen sensor harness connector	A7	Canister magnetic valve harness connector
A8	Water temperature sensor harness connector	A9	Connect engine harness EC1
A10	Connect engine harness EC2	A11	Absolute temperature pressure sensor harness connector
A12	Fuel pressure switch harness connector	A13	Crankshaft position sensor harness connector
A14	Electronic throttle harness connector	A15	Knock sensor harness connector
A16	Camshaft position sensor harness connector	A17	Number 4 injection nozzle harness connector
A18	Number 3 injection nozzle harness connector	A19	Number 2 injection nozzle harness connector
A20	Number 1 injection nozzle harness connector	A21	OCV magnetic valve harness connector
A24	Engine control unit harness connector	A25	Reversing lamp switch harness connector

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




Control harness terminal diagram


A9 Control harness connect engine harness EC1

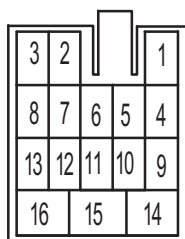


A10 Control harness connect engine harness EC2

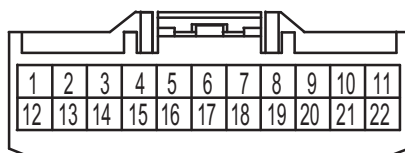


A6 Front oxygen sensor harness connector

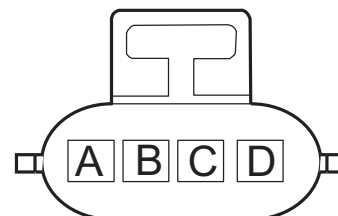


A7 Canister magnetic valve harness connector

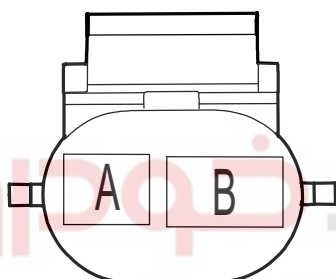


A8 Water temperature sensor harness connector

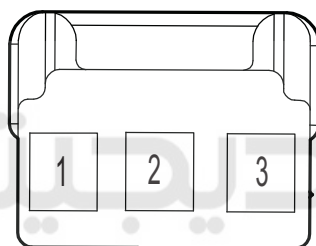


A11 Absolute temperature pressure sensor harness connector

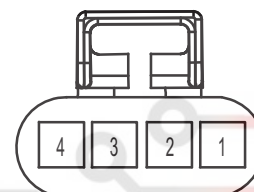


A13 Crankshaft position sensor harness connector

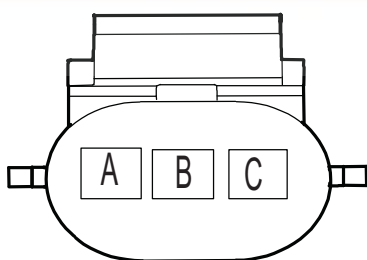


A24 Engine control unit harness connector

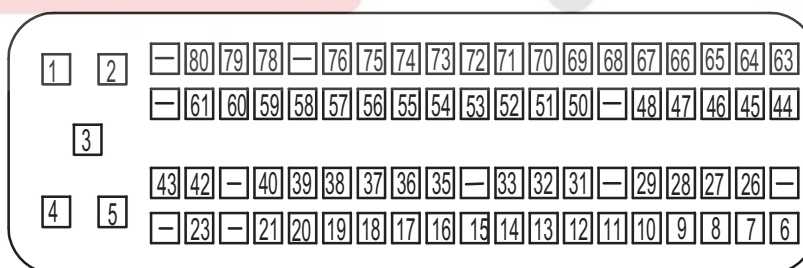

A15 Knock sensor harness connector

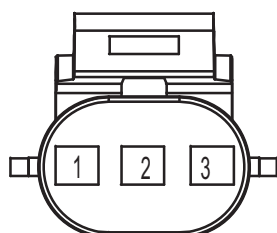

A16 Camshaft position sensor harness connector

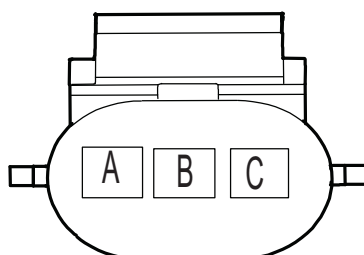


A12 Fuel pressure switch harness connector




Control harness terminal diagram (continue 1)


A24 Engine control unit harness connector

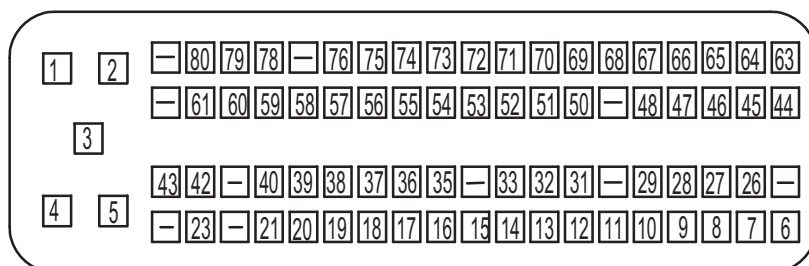


A2 Number 1 ignition coil harness connector

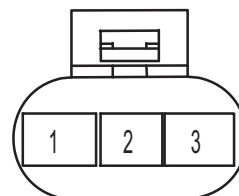


A3 Number 2 ignition coil harness connector

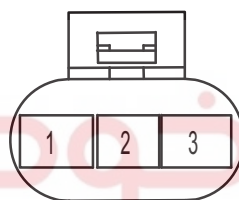


A4 Number 3 ignition coil harness connector

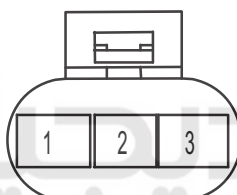


A5 Number 4 ignition coil harness connector

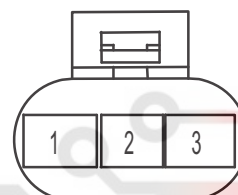


A17 Number 4 injection nozzle harness connector

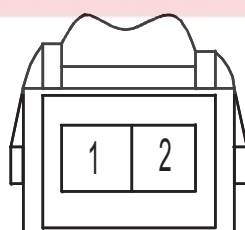


A18 Number 3 injection nozzle harness connector

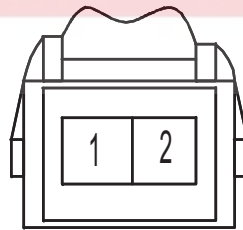


A19 Number 2 injection nozzle harness connector

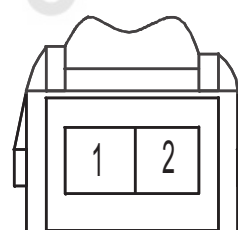


A20 Number 1 injection nozzle harness connector

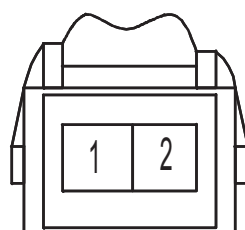


A21 OCV magnetic valve harness connector

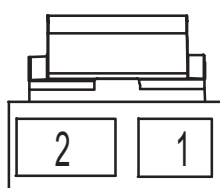


A26 Control harness connect engine harness 2

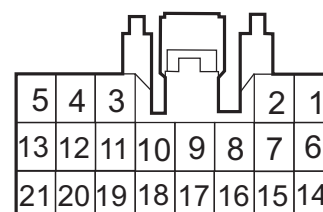

Main harness arrangement diagram

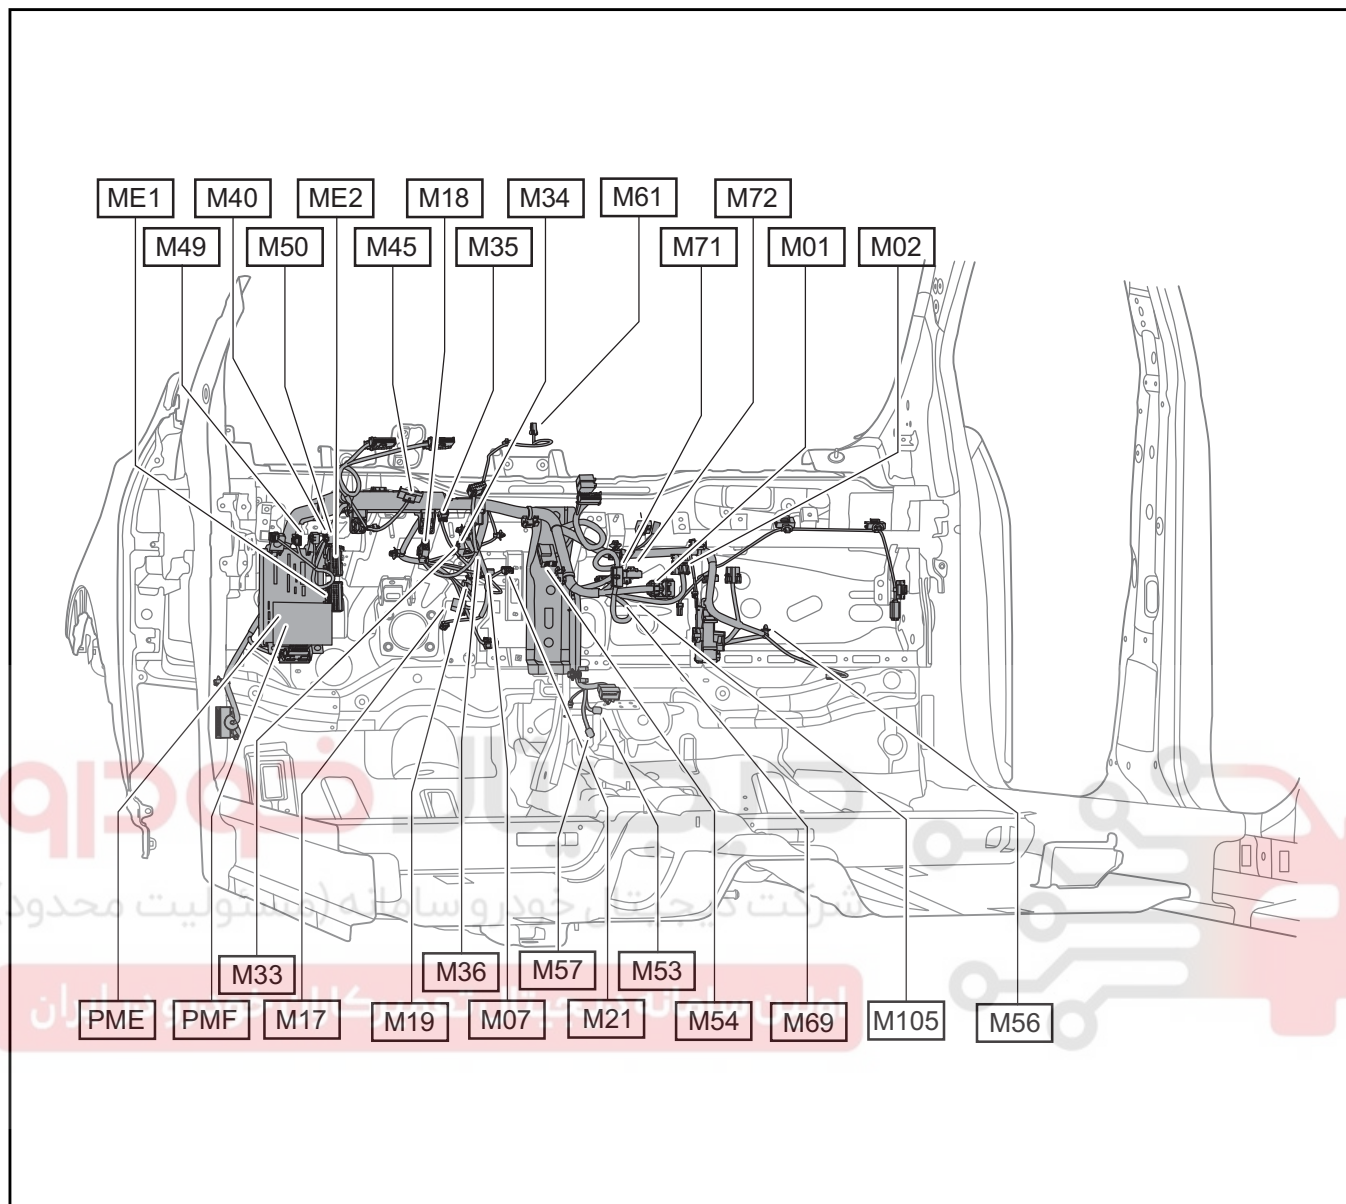

4.4 Main harness arrangement diagram (continue)

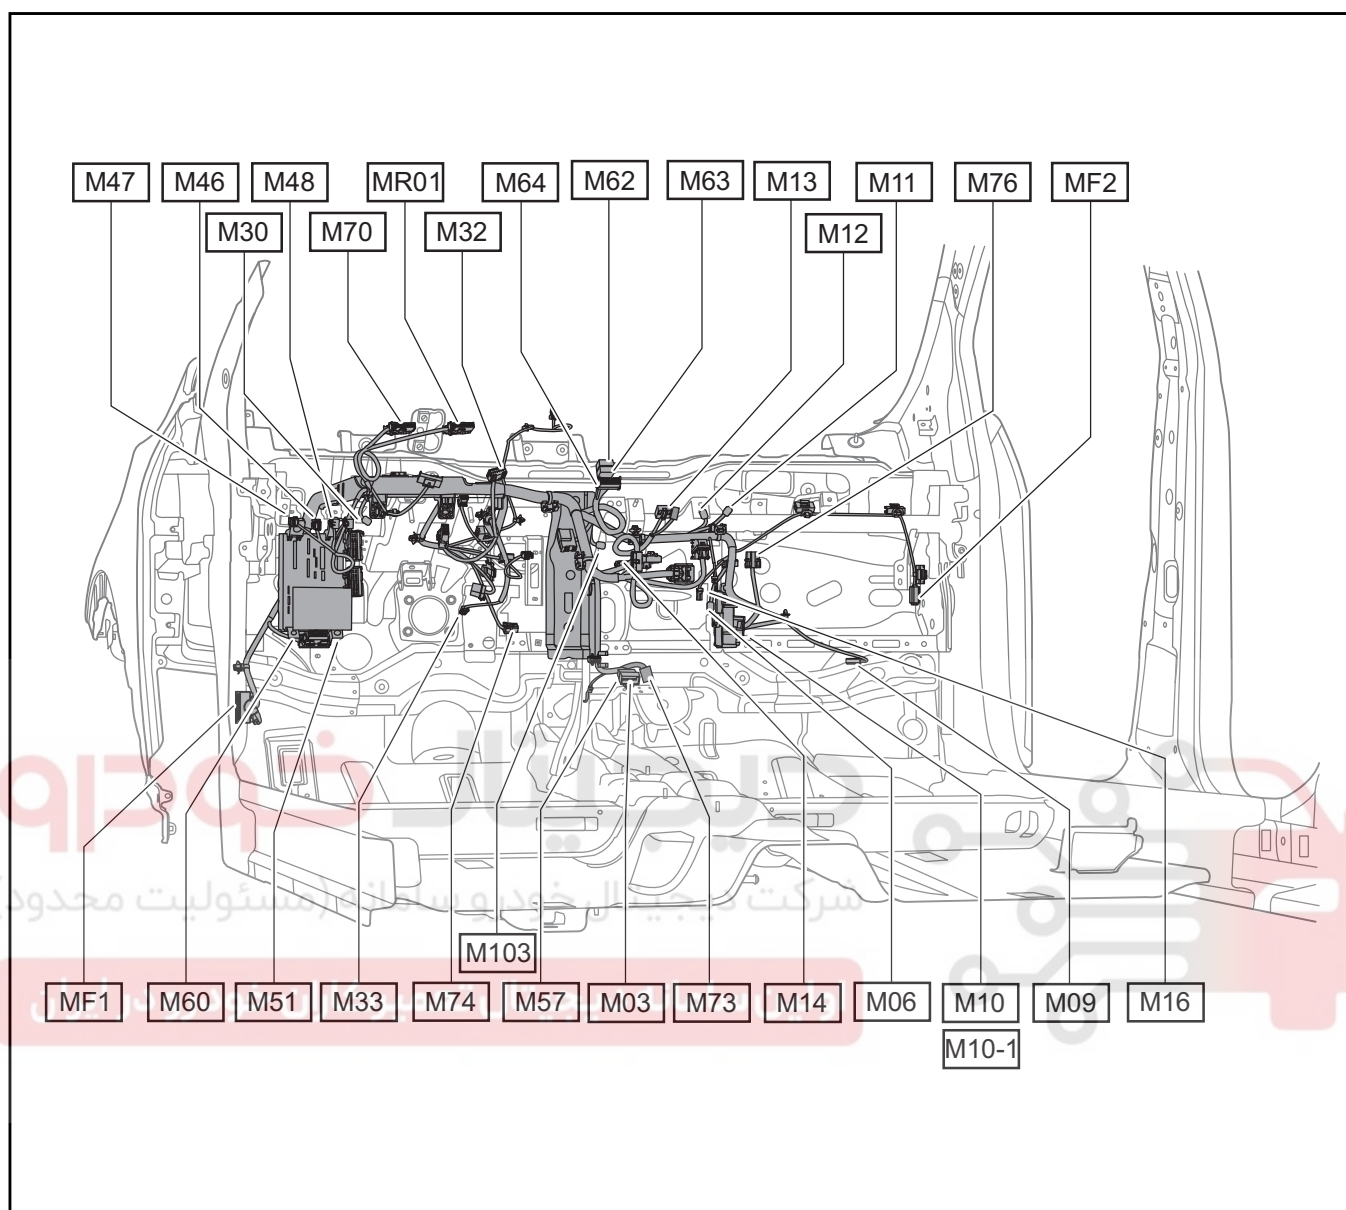


4.4 Main harness connector list


harness connector	名称	harness connector	名称
M01	BCM harness connector A	M02	BCM harness connector B
M03	BCM harness connector C	M04	Radio antenna power harness connector
M06	Circulation damper harness connector	M07	Temperature damper harness connector
M09	Blast electric machine harness connector	M10	Glovebox 1
M10-1	Glovebox switch 2	M11	Glove light box 1 harness connector
M12	Combination instrument C1 harness connector	M13	Alarmlight switch harness connector
M16	Temperature wrap harness connector	M17	Brake switch harness connector
M18	Module electric machine harness connector	M19	Accelerating pedal harness connector
M21	Anti-theft controller harness connector	M30	Combination instrument harness connector (Combination instrument with CAN)
M32	Wiper switch harness connector	M33	Engine anti-theft coil harness connector
M34	Ignition switch backlight harness connector	M35	Clock spring harness connector
M36	Ignition switch harness connector	M40	EPS harness connector
M34	Ignition switch backlight harness connector	M36	Ignition switch harness connector
M45	Lamp switch harness connector	M46	Dimming switch harness connector
M47	Lamp height adjustment switch harness connector	M48	Dimming switch harness connector
M49	RELAY MODULE_A harness connector	M50	RELAY MODULE_B harness connector
M51	Clutch switch harness connector	M53	Cigar lighter harness connector
M54	Connection cover harness connector	M57	Cigar lighter illumination harness connector
M60	Diagnosis port harness connector	M61	Sunshine harness connector
M62	MP5 harness connector A	M63	MP5 harness connector B
M64	MP5 harness connector C	M69	Central control switch harness connector
M70	Voice control module harness connector	M71	Automatic A/C control panel harness connector 1
M72	Automatic A/C control panel harness connector 2	M73	Vehicle power harness connector
M74	Interior temperature sensor harness connector	M79	FET harness connector
M101	Turn angle sensor harness connector	M103	Button starting switch harness connector
M104	Electronic steering pipe column harness connector	M105	PEPS Front low-frequency antenna harness connector
PME	IP.BOX E harness connector	PMF	IP.BOX F harness connector
ME01	Main harness connect engine harness port 1	ME02	Main harness connect engine harness port 2
MF02	Main harness connect body harness 2	MF01	Main harness connect body harness
MR01	Main harness connect ceiling harness port	M05	Earth connection
M31	Earth connection	M42	Earth connection
M52	Earth connection		

Main harness connector terminal diagram


MF1 Main harness connect body harness FM1

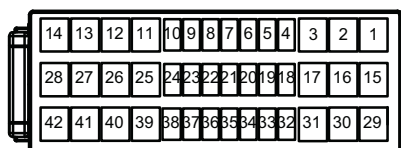


M60 Diagnosis port harness connector

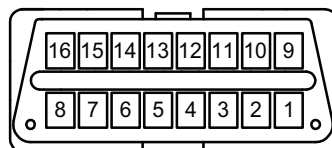


PME Connect interior electric box E

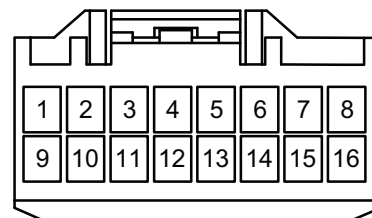


PMF Connect interior electric box F

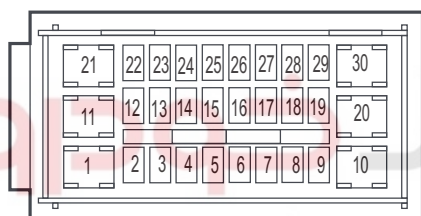


ME2 Main harness connect engine harness EM2

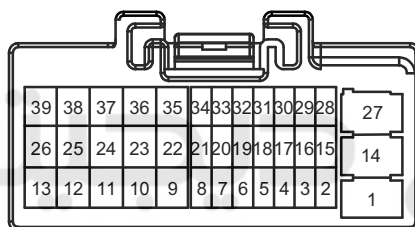


M40 EPS harness connector

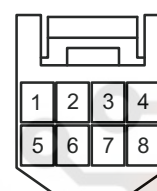


ME1 Main harness connect engine harness EM1

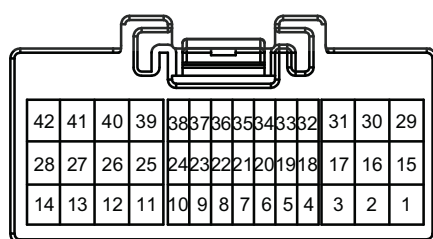


M48 Dimming switch harness connector

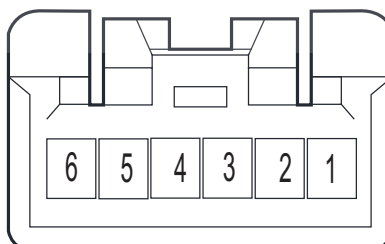


M46 Outside rearview mirror switch harness connector

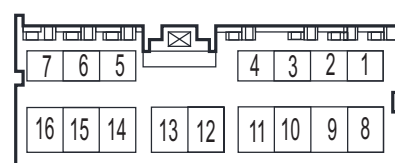


M49 Relay module A harness connector

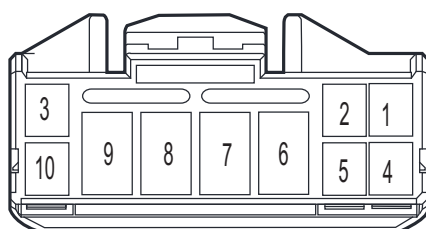

M50 Relay module B harness connector

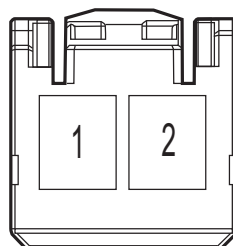


M47 Lamp height adjustment switch harness connector

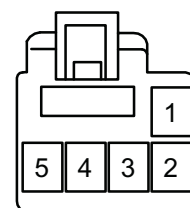


Main harness connector terminal diagram (continue 1)


M45 Lamp switch harness connector

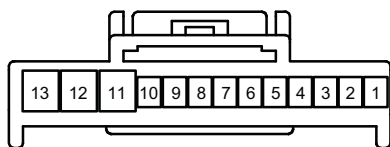


M30 Combination instrument harness connector1

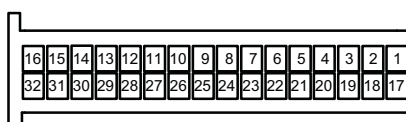


M51 Clutch switch harness connector

 


MR01 Main harness connect ceiling harness

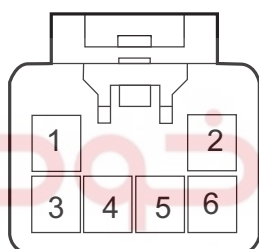


M70 Voice control module harness connector

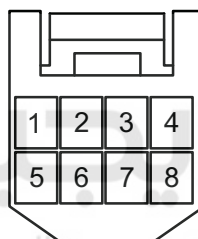


M19 Accelerating pedal harness connector

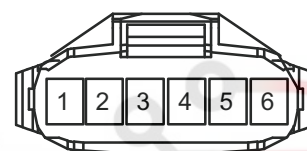


M18 Module electric machine harness connector

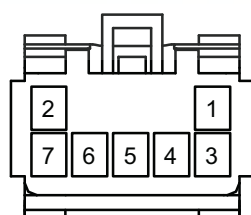


M61 Sunshine sensor harness connector

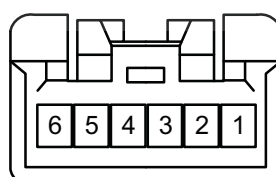


M17 Brake switch harness connector

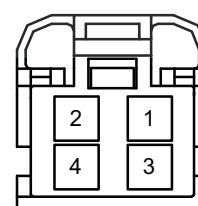

M07 Temperature damper harness connector

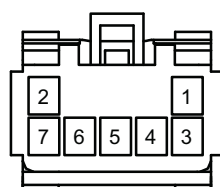

M62 MP5harness connector A

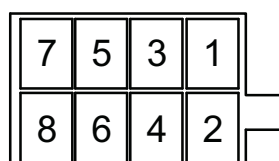


M63 MP5harness connector B




Main harness connector terminal diagram (continue 2)


M64 MP5 harness connector C

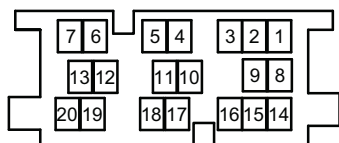


M54 Connection cover harness connector

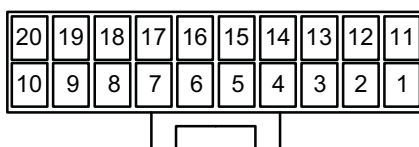


M103 Button starting switch harness connector

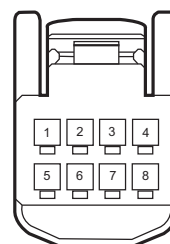


M105 PEPS Front low frequency antenna harness connector

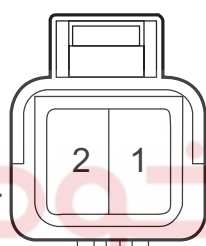


M69 Central control switch harness connector

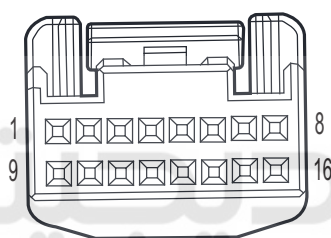


M71 M72 Automatic A/C control panel harness connector1

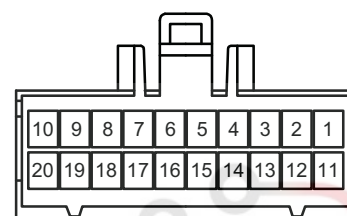


M01 BCM harness connectorA

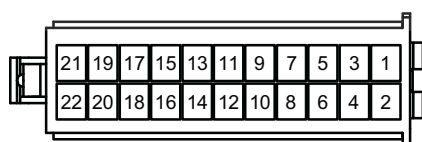


M02 BCM harness connector B

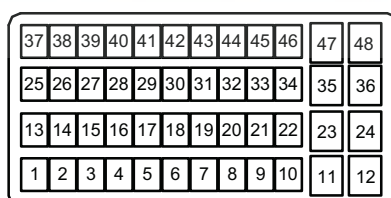


M72 Automatic A/C control panel harness connector 2

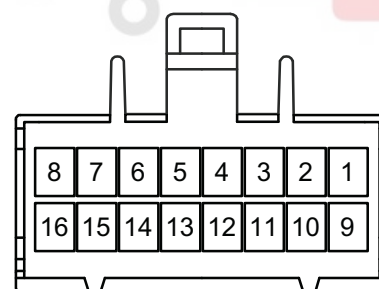

 
M57 Cigar lighter illumination harness connector



M53 Cigar lighter harness connector

 


M03 BCM harness connector C

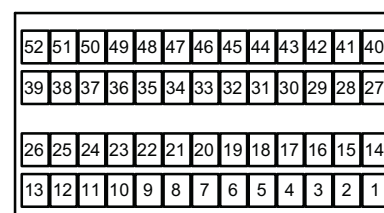


Main harness connector terminal diagram (continue 3)


M13 Alarmlight harness connector

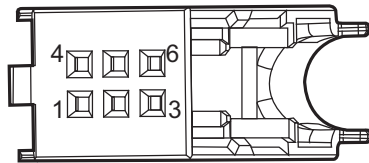

M11 Glovebox light 1 harness connector

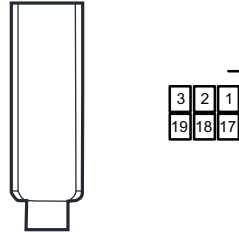


M12 Glovebox slight 2 harness connector

 


MF2 Main harness connect body harness 2



M16 Temperature wrap harness connector

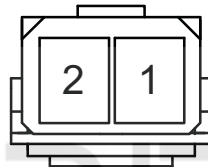

M06 Circulation damper harness connector

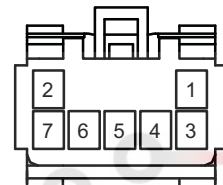


M10 Glovebox switch 1 harness connector




M10-1 Glovebox switch 2 harness connector



 
M09 Blast electric machine harness connector




M76 FET harness connector

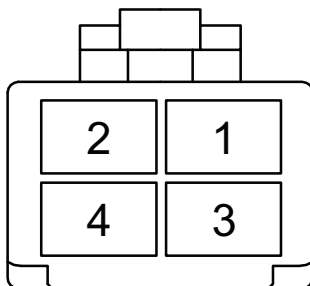

M84 Button starting module harness connector 4

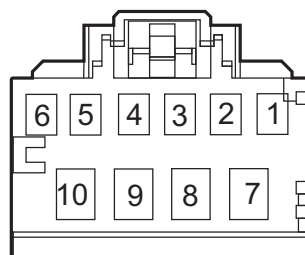


M21 Anti-theft controller harness connector

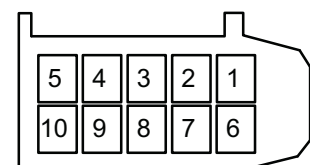


Main harness connector terminal diagram (continue 4)


M74 Interior temperature sensor harness connector

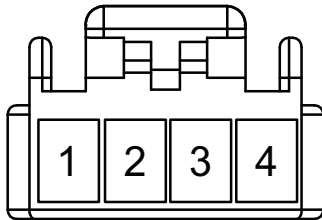


M104 Electronic steering pipe volume harness connector

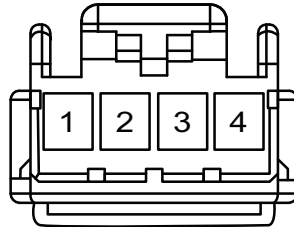


M34 Ignition switch backlight harness connector

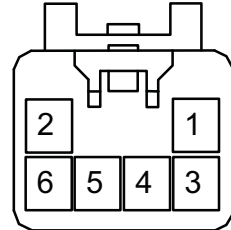

M36 Ignition switch harness connector

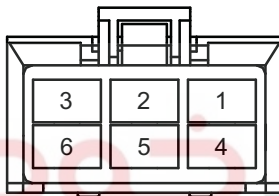


M33 Engine anti-theft coil harness connector

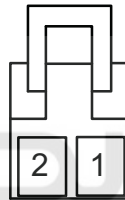


M35 Clock spring harness connector




M32 Wiper switch harness connector

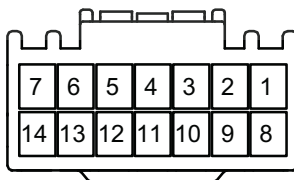


M101 Turn angle sensor harness connector

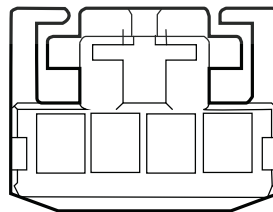


M81 Button starting module harness connector 1

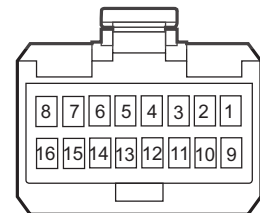


M82 Button starting module harness connector 2

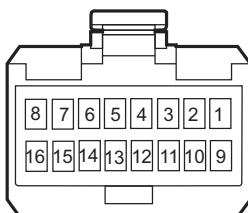

M83 Button starting module harness connector 3

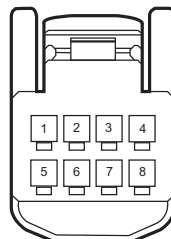

Airbag harness arrangement diagram

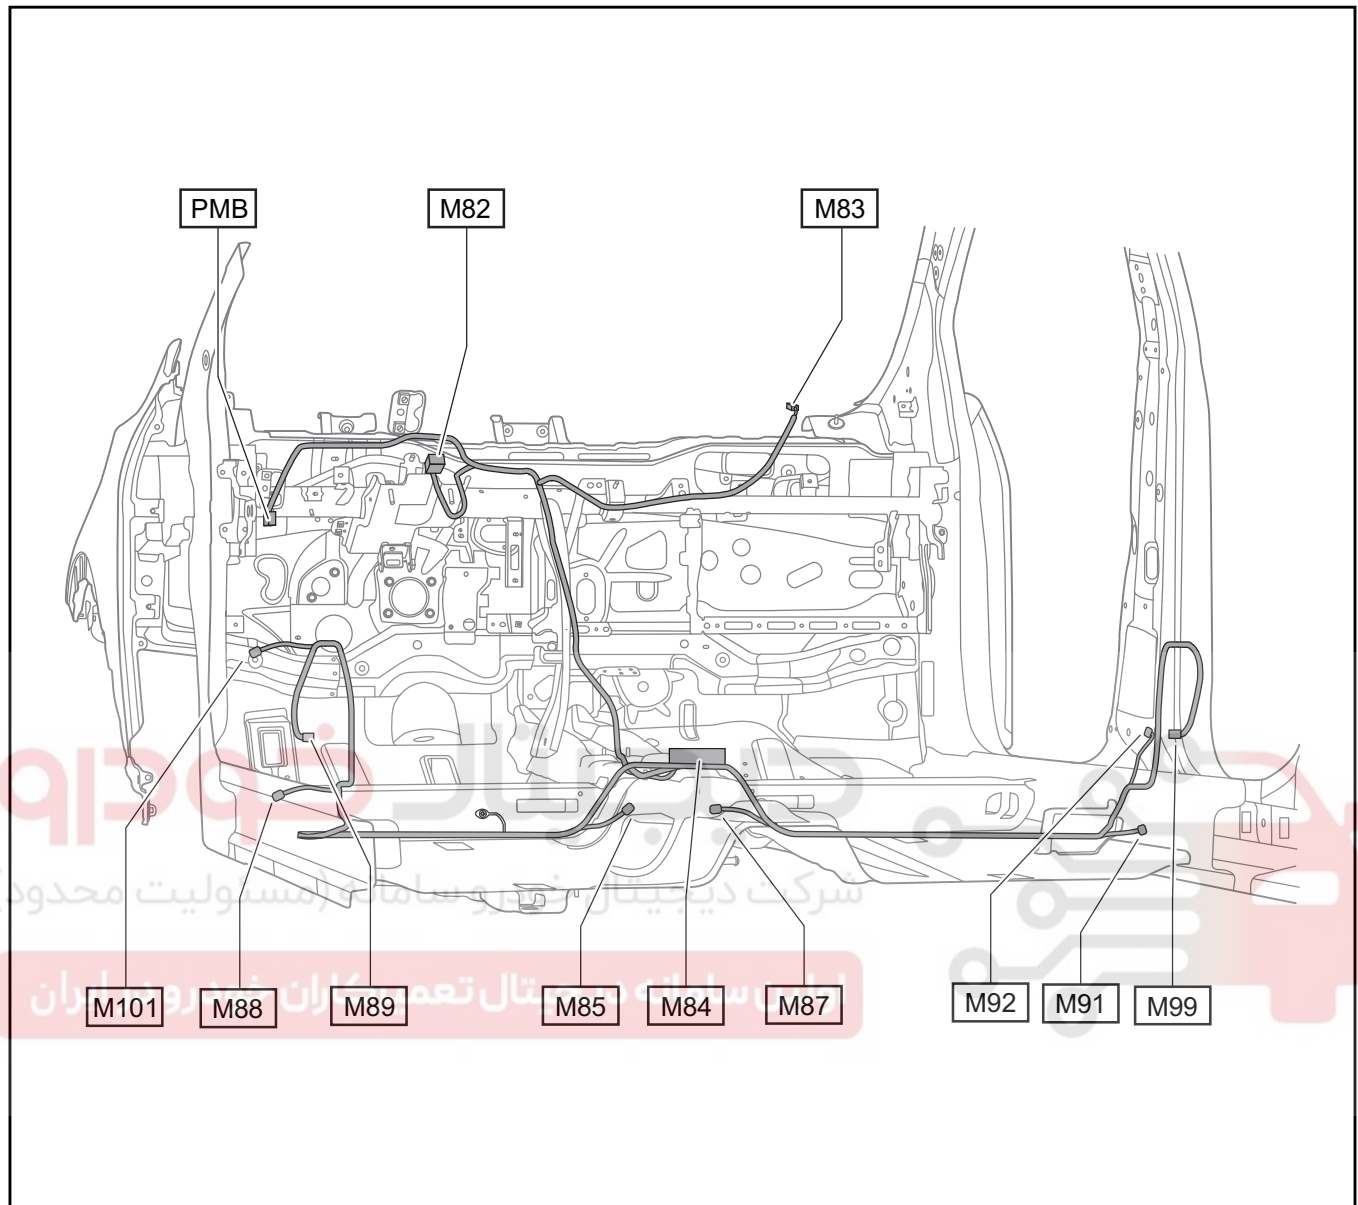

Airbag harness connector list

Harness connector	Name	Harness connector	Name
M82	Clock spring harness connector	M83	Co-driver airbag harness connector
M84	Airbag ECU harness connector	M85	Left airbag harness connector
M87	Right airbag harness connector	M88	Left collision sensor harness connector
M89	Left safety belt pre-tension harness connector	M90	Left airbag harness connector
M91	Right collision sensor harness connector	M92	Right safety belt pre-tension harness connector
M99	Connect right gas curtain harness connector	M101	Connect left gas curtain harness connector
PWB	Connect IP harness connector	M86	Earth connection

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




Airbag harness connector terminal diagram


M82 Clock spring harness connector

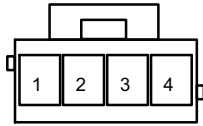


M83 Co-driver airbag harness connector

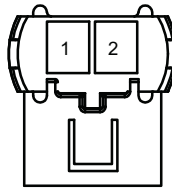


M85 Left airbag harness connector

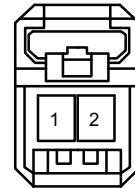


M84 airbag ECU harness connector

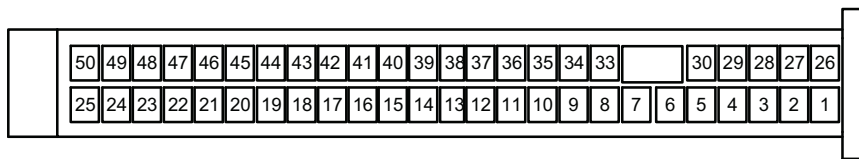


M87 Right airbag harness connector

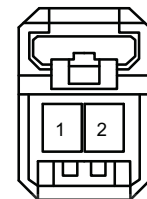


M88 Left collision sensor harness connector

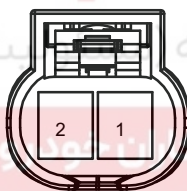


M89 Left safety belt pre-tension harness connector

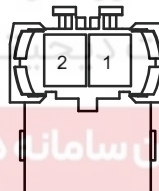


M101 Left gas curtain harness connector

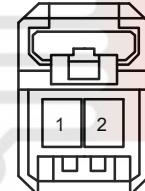


M91 Right collision sensor harness connector

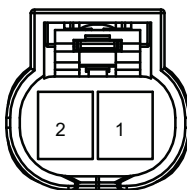


M92 Right safety belt pre-tension harness connector

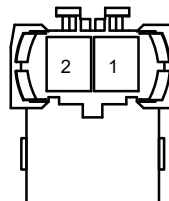


M99 Right gas curtain harness connector

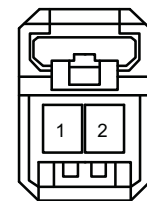

PMB Connect interior electric box B

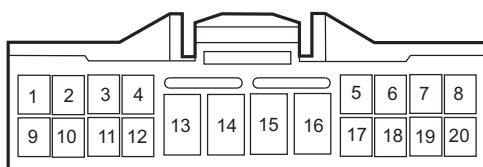

Ceiling harness arrangement diagram

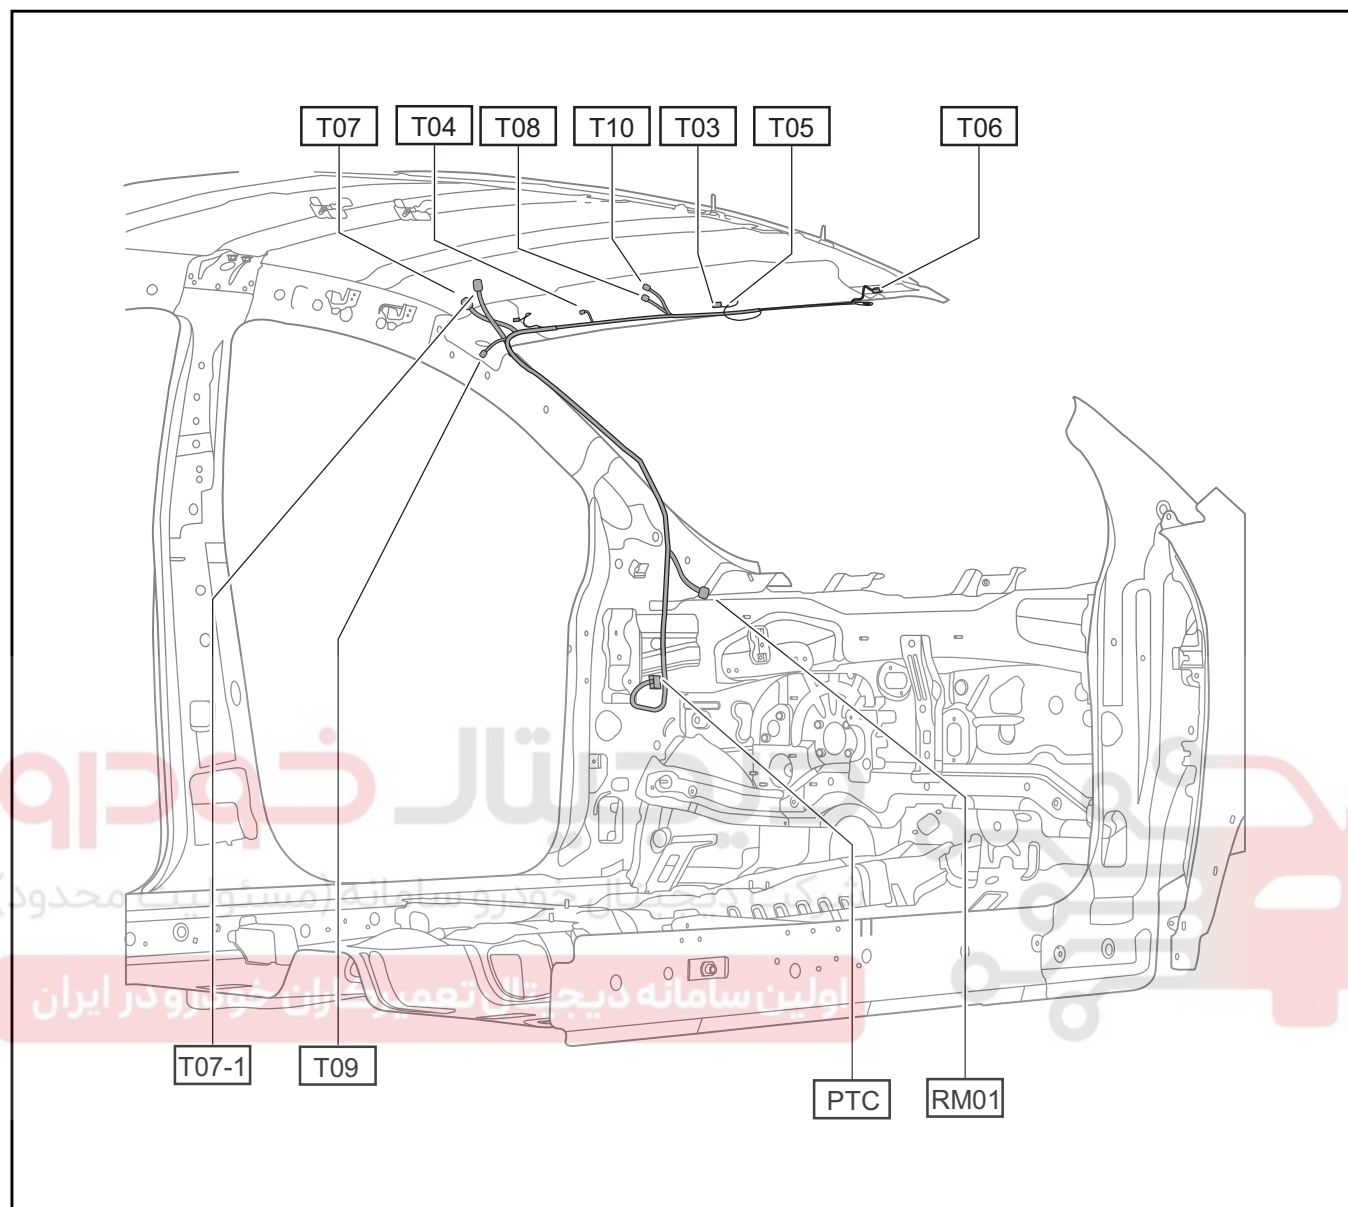

Ceiling harness connector list

Harness connector	Name	Harness connector	Name
PTD	Connect IED harness connector	T03	Front ceiling lamp harness connector
T04	Skylight module harness connector	T05	Front ceiling lamp harness connector
T07	Central ceiling lamp harness connector	T07-1	Central ceiling lampharness connector
T08	Automobile data recorder (rear assemble) harness connector	T09	Main cosmetic mirror lamp harness connector
T06	Cosmetic mirror lamp harness connector	T10	Automobile data recorder (front assemble) harness connector
RM01	Ceiling harness connect main harness		

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




Ceiling harness connector terminal diagram


PTD Connect IED harness connector

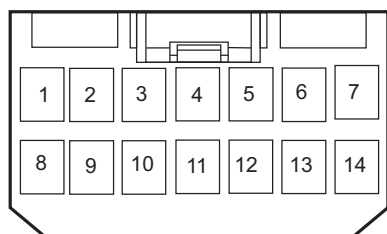


RM01 Ceiling harness connect main harness

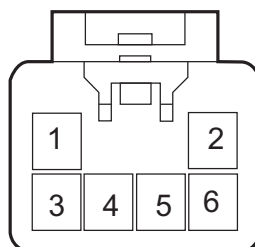


T10 Automobile data recorder (front assemble) harness connector

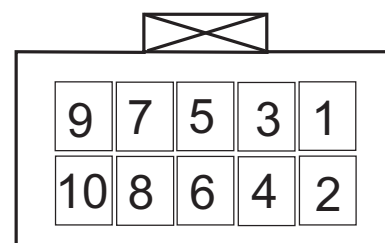


T09 Main cosmetic mirror lamp harness connector

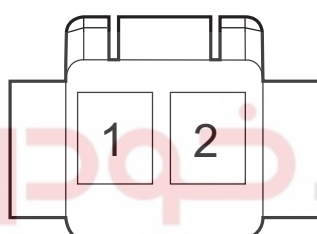


T08 Automobile data recorder (rear assemble) harness connector

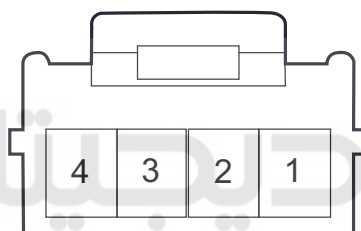


T06 Cosmetic mirror lamp harness connector

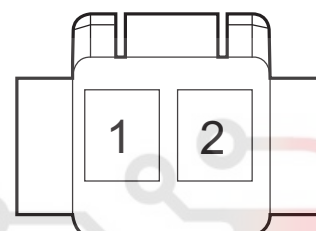


T05 Front ceiling lamp harness connector

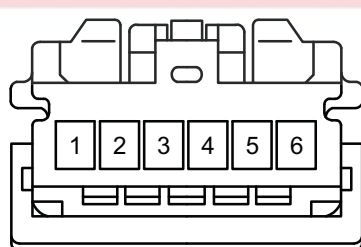


T03 Front ceiling lamp harness connector

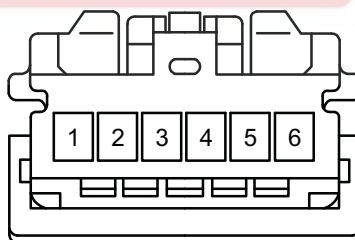


T04 Skylight module harness connector

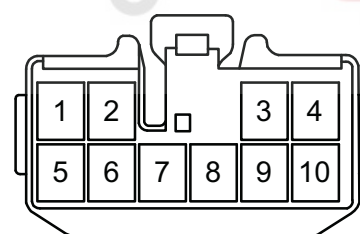


T07 Central ceiling lamp harness connector

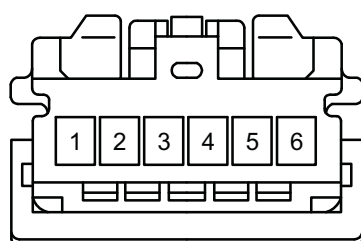

T07-1 Central ceiling lamp harness connector

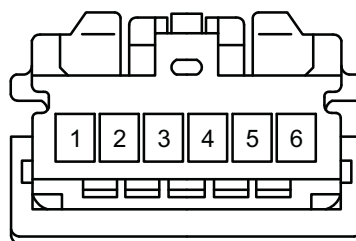

Reversing radar harness arrangement diagram

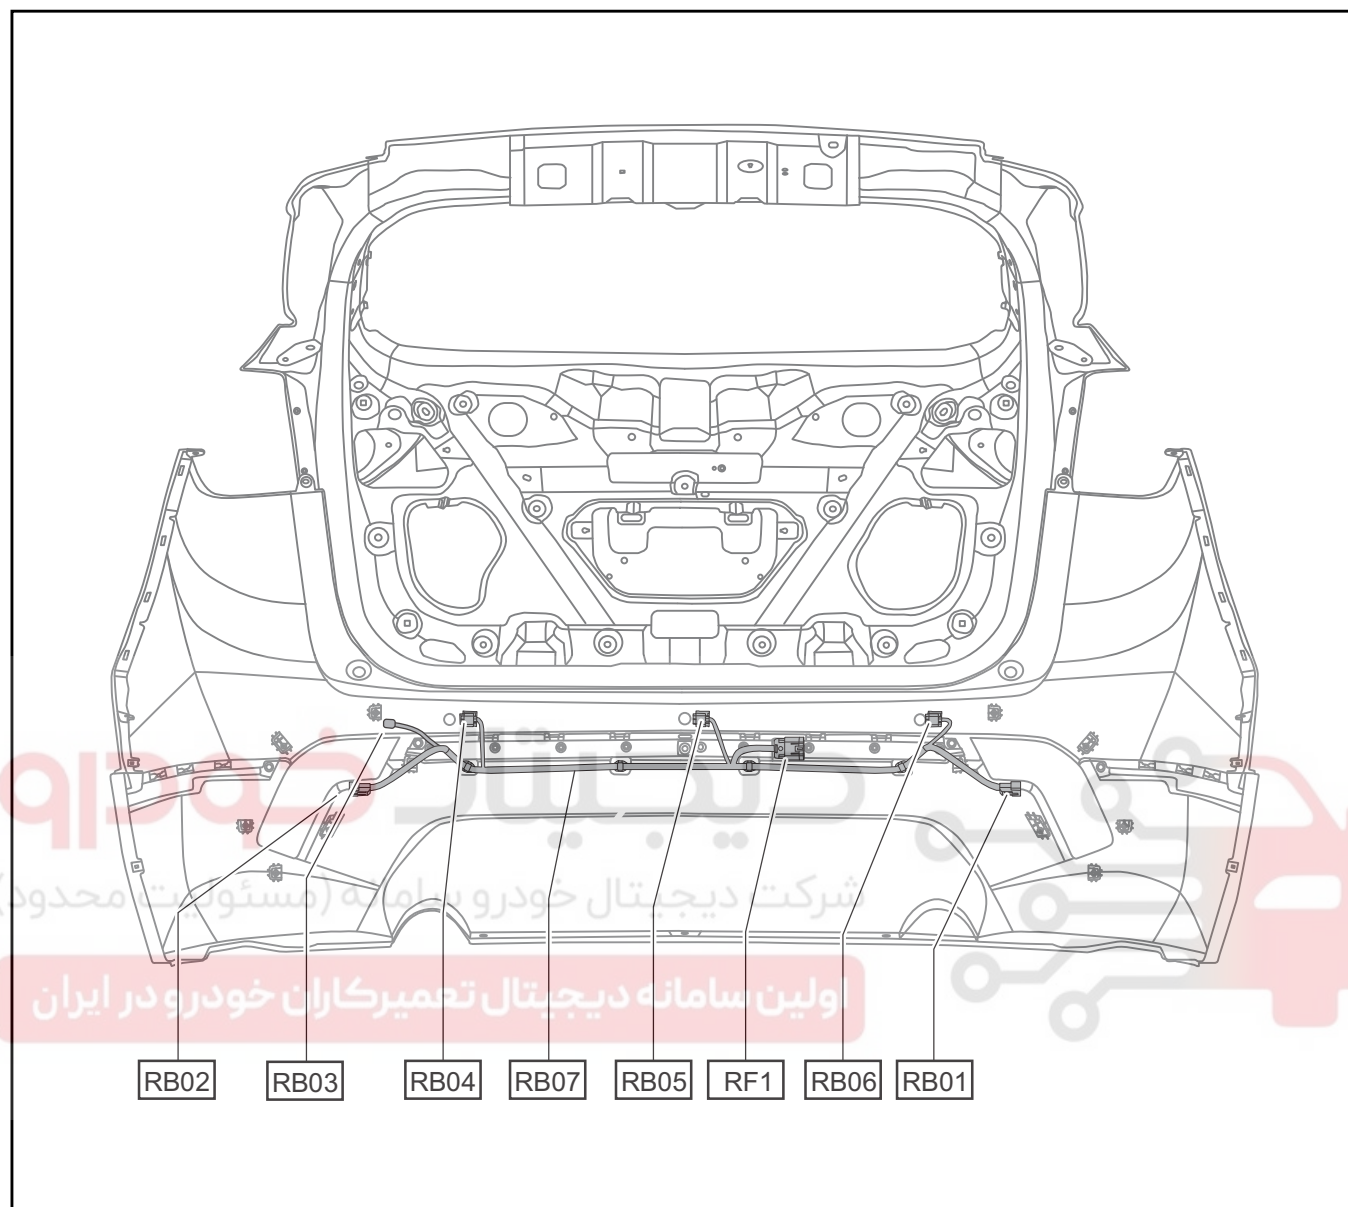

Reversing radar harness connector list

Harness connector	Name	Harness connector	Name
RB01	Rear-left bumper combination lamp harness connector	RB02	Rear-right bumper combination lamp harness connector
RB03	Rear-right reversing radar probe harness connector	RB04	Central-right reversing radar probe harness connector
RB05	Central-left reversing radar probe harness connector	RB06	Rear-left reversing radar probe harness connector
RB07	Rear bumper antenna harness connector	RF01	Reversing radar harness connect body harness

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




Reversing radar harness connector terminal diagram


RB01 Rear-left bumper combination lamp harness connecto

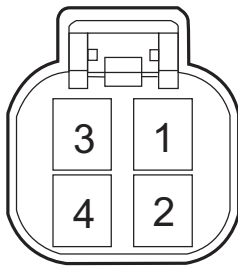


RB02 Rear-right bumper combination lamp harness connecto

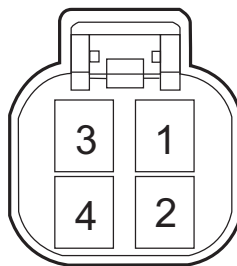


RB03 Rear-right reversing radar probe harness connector

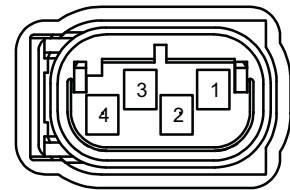


RB04 Central-right reversing radar probe harness connector

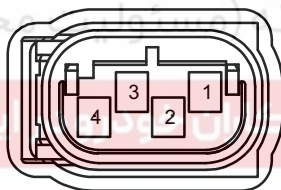


RB05 Central-left reversing radar probe harness connector

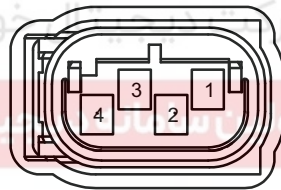


RB06 Rear-left reversing radar probe harness connector

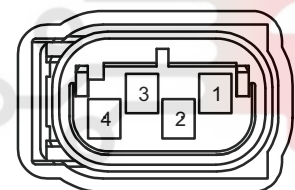


RB07 Rear bumper antenna harness connector

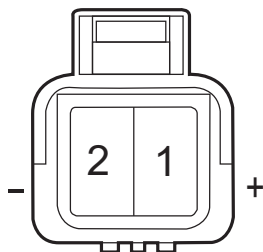

RF1 Reversing radar harness connect body harness

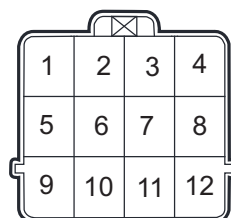

Front bumper harness arrangement diagram

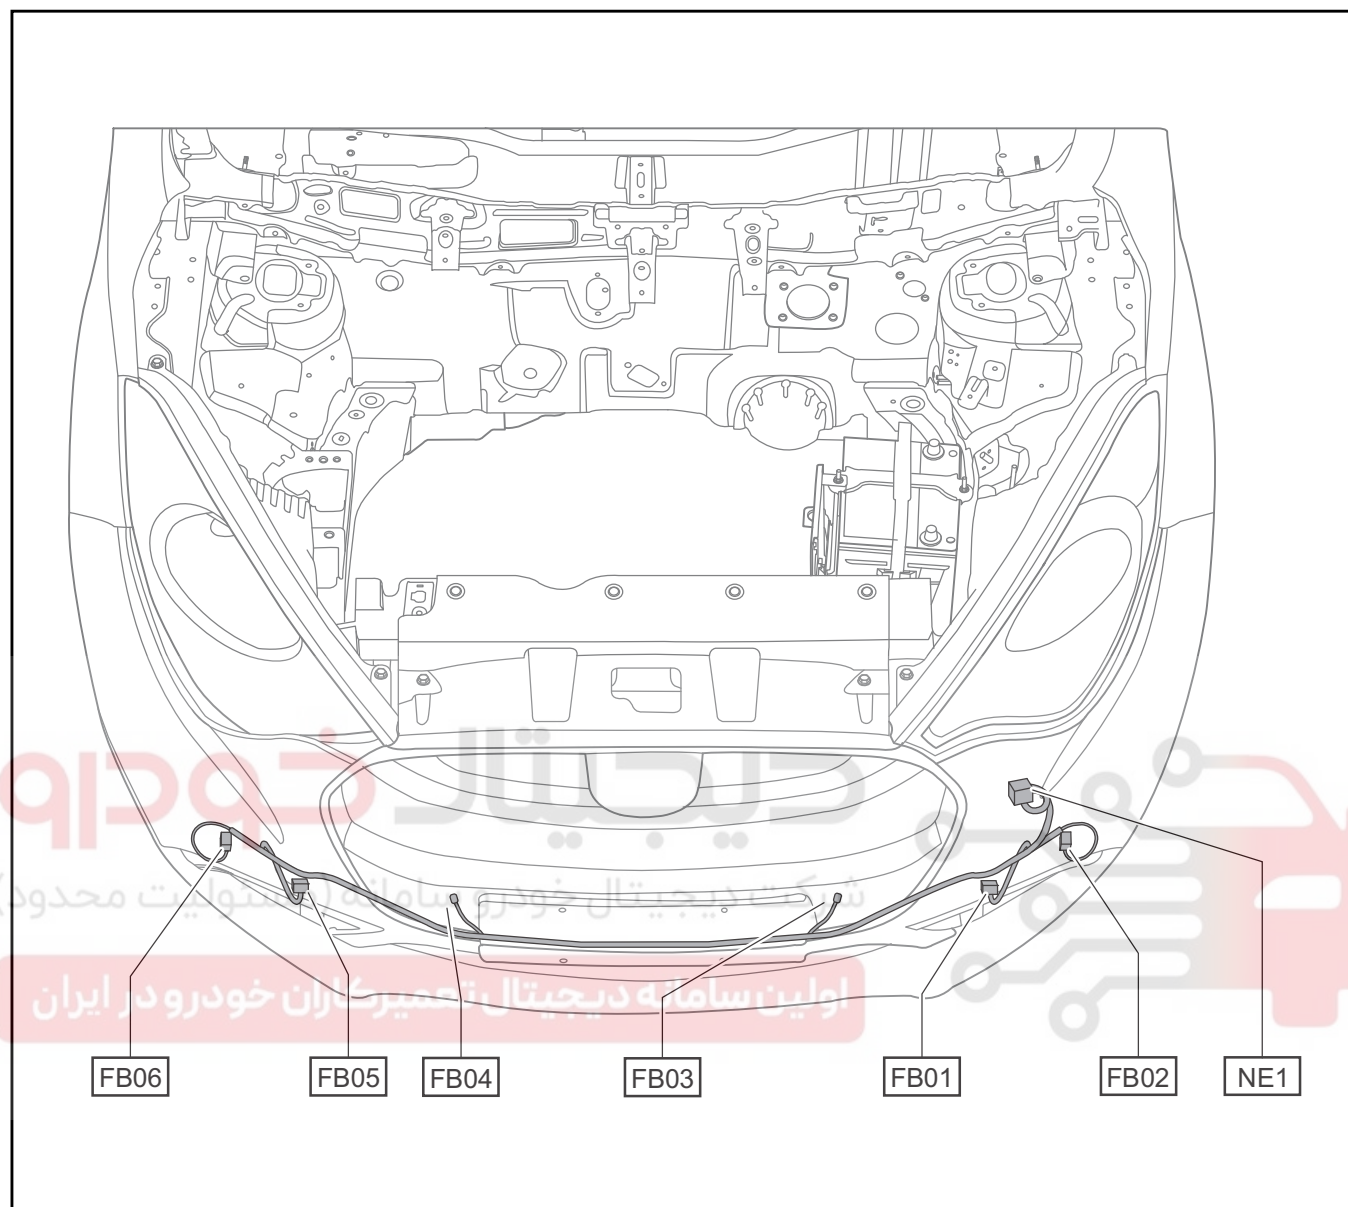

Front bumper harness connector list

Harness connector	Name	Harness connector	Name
FB01	Front-left foglight harness connector	FB05	Front-right radar probe harness connector
FB02	Front-left radar probe harness connector	FB06	Front-right foglight harness connector
FB03	Central-left radar probe harness connector	NE01	Front bumper harness connect engine harness
FB04	Central-right radar probe harness connector		

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




Front bumper harness connector terminal diagram


FB01 Front-left foglight harness connector

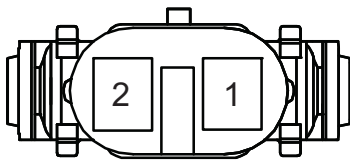


FB06 Front-right foglight harness connector

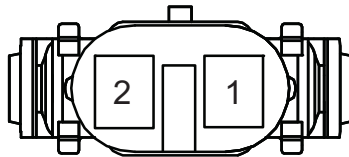


FB02 Front-left radar probe harness connector

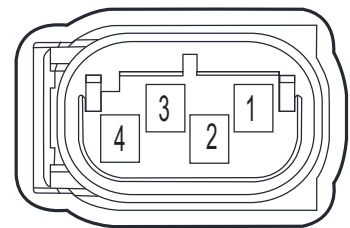


FB03 Central-left radar probe harness connector

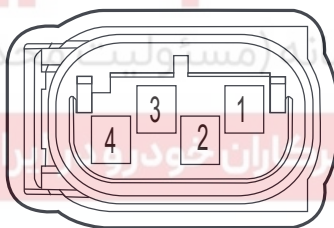


FB04 Central-right radar probe harness connector

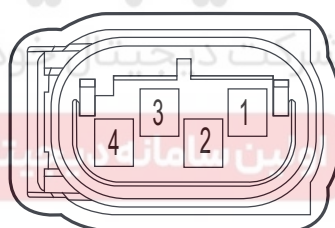


FB05 Front-right radar probe harness connector

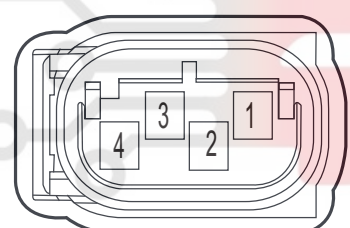


NE1 Front bumper harness connect engine harness

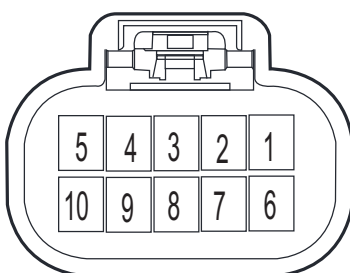

Body harness arrangement diagram

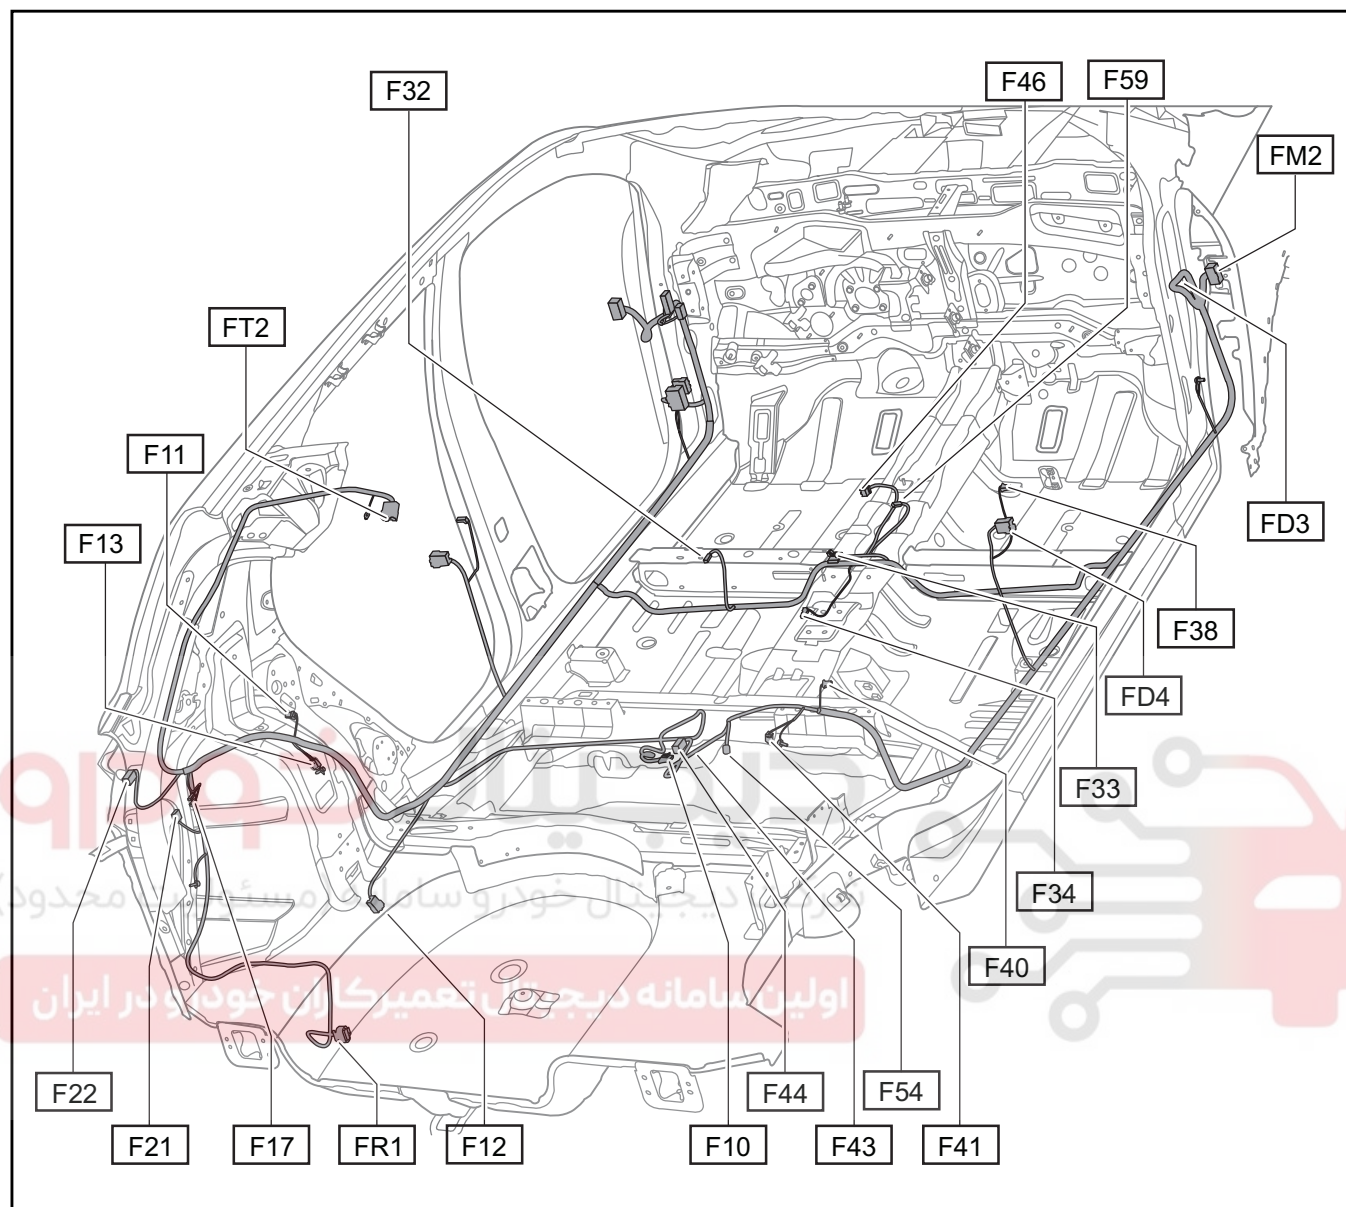

Body harness arrangement diagram (continue)

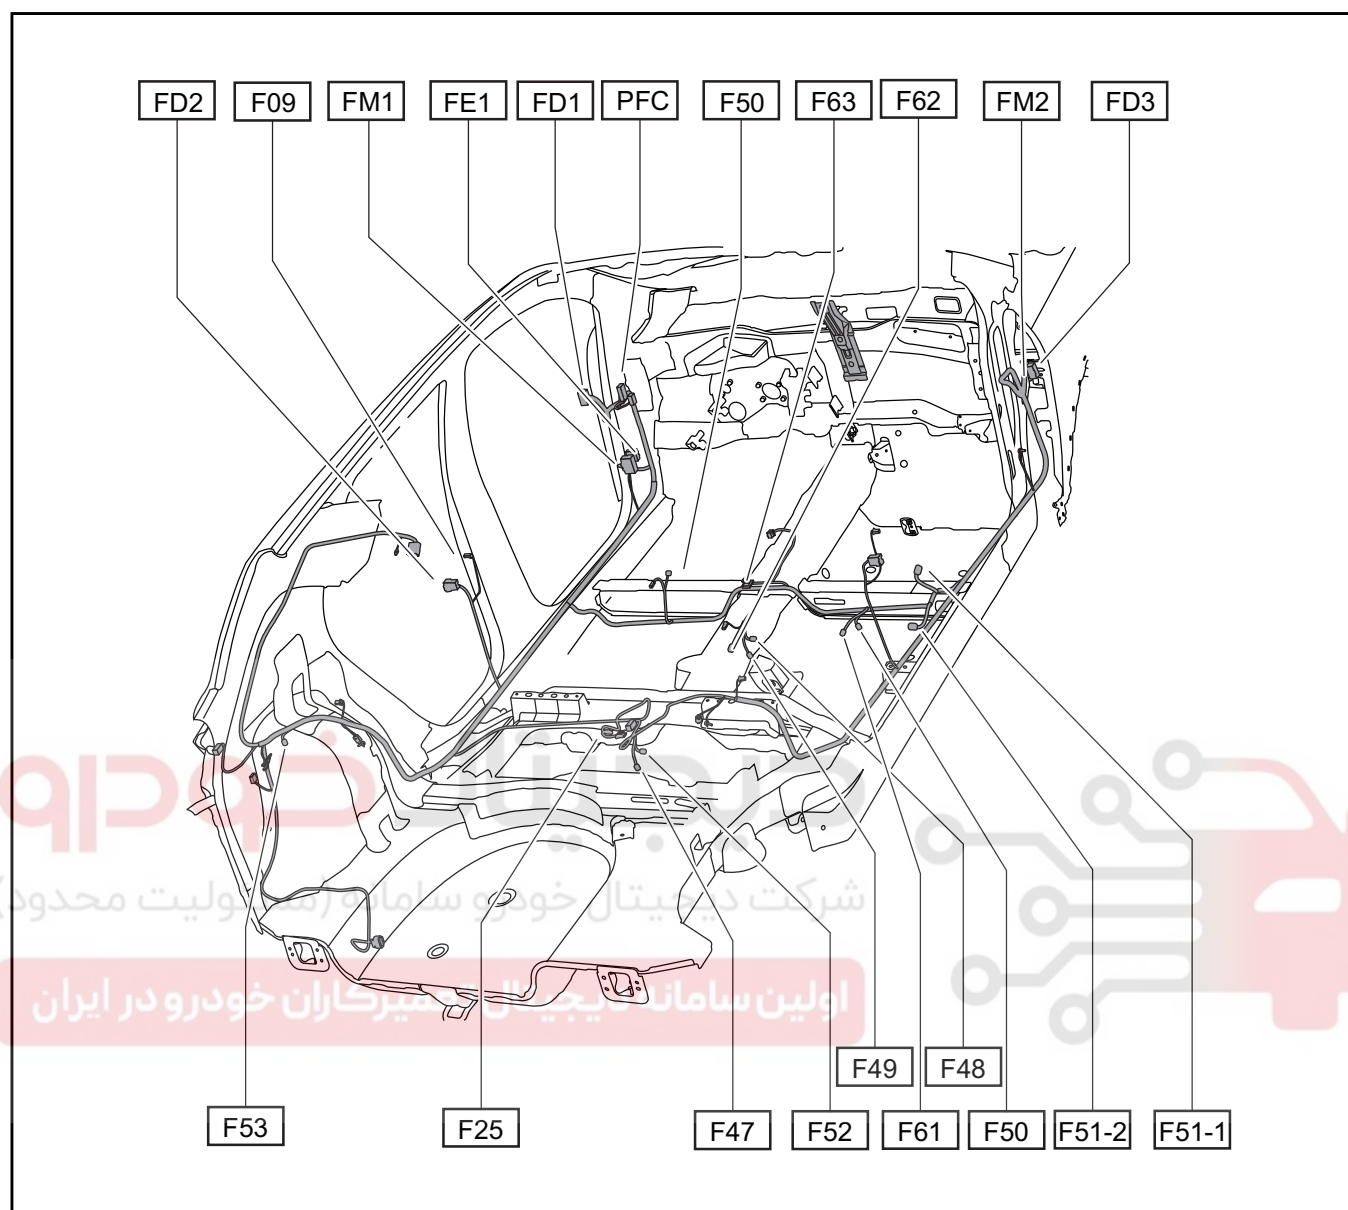


Body harness connector list


Harness connector	Name	Harness connector	Name
F10	Fuel pump harness connector	F11	Rear-left door control switch harness connector
F12	PEPS low-medium frequency antenna harness connector	F13	Wheel speed sensor harness connector
F21	Reversing radar controller harness connector	F22	Rear-left tail lamp harness connector
F25	Fuel filter harness connector	F32	Driver safety belt switch harness connector
F33	Rear oxygen sensor harness connector	F34	Handbrake switch harness connector
F38	Front-right door control switch harness connector	F40	Rear-left door control harness connector
F41	Wheel speed sensor harness connector	F42	Tire controller harness connector
F44	Rear-right tail lamp harness connector	F46	Gear-shifting handle harness connector
F47	Trunk 12V power harness connector	F48	Rear row USB charge plug harness connector
F49	Air purifier harness connector	F50	Seat sensor harness connector
F50-1	Driver seat heating harness connector	F51-1	Window anti-pinch module A harness connector
F51-2	Window anti-pinch module B harness connector	F52	Reversing radar buzzer harness connector
F53	CAN line connector 1 (left) harness connector	F54	CAN line connector 2 (left) harness connector
F59	Neutral gear harness connector	F61	Co-driver safety belt switch harness connector
F62	Transponder antenna harness connector	PFC	IP BOX.C harness connector
F17	Trunk lamp harness connector	FD01	Frame harness connect front-left door harness
FD03	Frame harness connect front-right door harness	FD04	Frame harness connect rear door harness
FE01	Frame harness connect engine harness	FM01	Frame harness connect main harness 1
FM02	Frame harness connect main harness 2	FT02	Frame harness connect tail gate harness
FR01	Frame harness connect radar harness	F04	Frame harness connect
F14	Earth point	F36	Frame harness connect
F42	Earth point	F45	Frame harness connect
F55	Earth point		

Body harness connector terminal diagram


PFC connect instrument electric box C harness connector

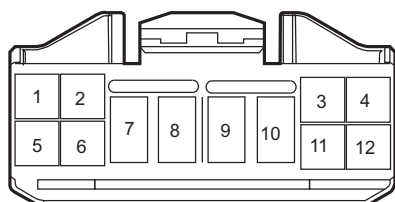


FD1 Frame harness connect front-left harness

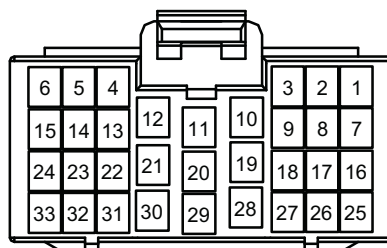


FM1 Frame harness connect main harness 1

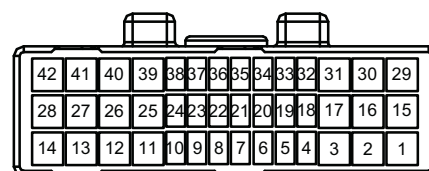


FE1 Frame harness connect engine harness 1

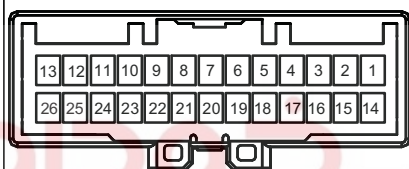


FD3 Frame harness connect front-right harness 1

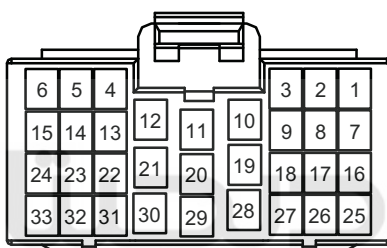


FM2 Frame harness connect main harness 2

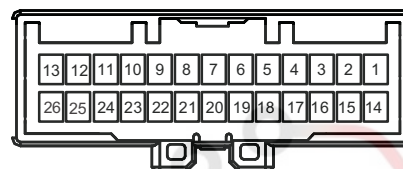


FR1 Frame harness connect reversing radar harness

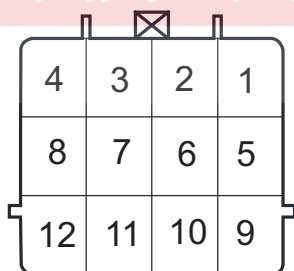


F46 Gear-shifting handle harness connector

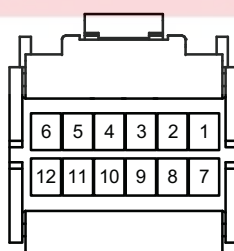


F59 Neutral gear sensor harness connector

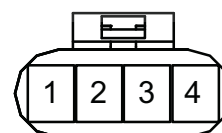


F33 Rear oxygen sensor harness connector

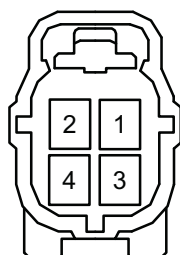

 F63 Rear oxygen sensor harness connector




F51-1 Window anti-pinch module A harness connector

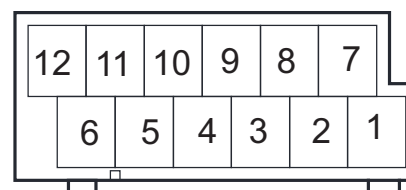


Body harness connector terminal diagram (continue 1)


F51-2 Window anti-pinch B harness connector

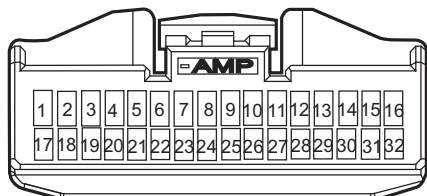


F50 Seat sensor harness connector

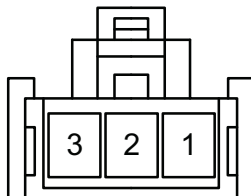


F61 Co-driver safety belt switch harness connector

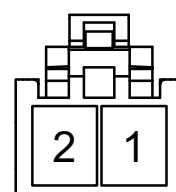


F62 Transponder antenna harness connector

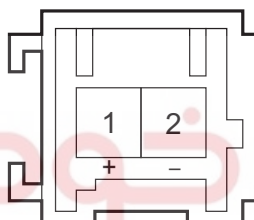


F34 Handbrake switch harness connector

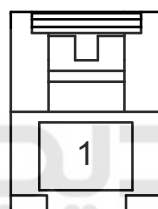


F48 RUS Rear row B charger plug harness connector

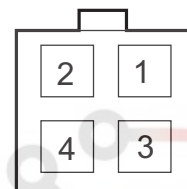


F49 Air purifier harness connector

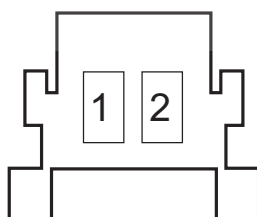


F32 Driver safety belt switch harness connector

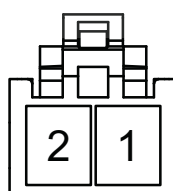


F50-1 Driver seat heating harness connector

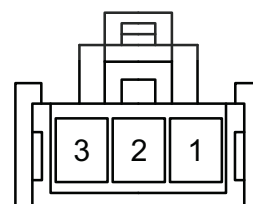


F09 Front-left door control switch harness connector

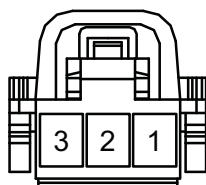

FD2 Frame harness connect rear-left harness connector

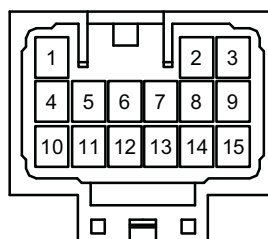


F25 Fuel filter harness connector


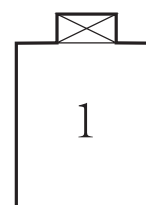


Body harness connector terminal diagram (continue 2)



F10 Fuel pump harness connector

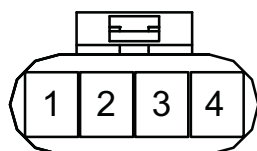


FD4 Frame harness connect rear-left door harness F38 Front-right door control switch harness connector

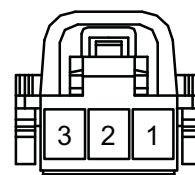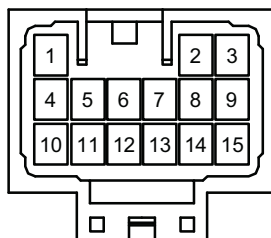


F12 PEPS Low-medium frequency harness connector F11 Rear-left door control switch harness connector

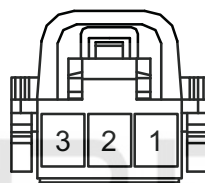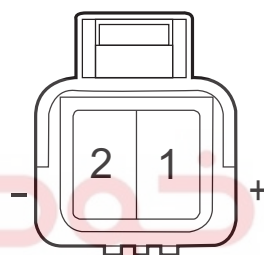


F13 Rear-left wheel speed sensor harness connector

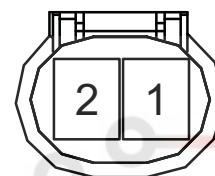


F53 CAN line connector 1 (left) harness connector

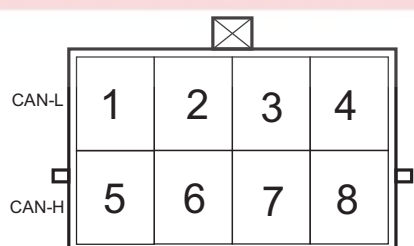


F22 Rear-left tail lamp harness connector

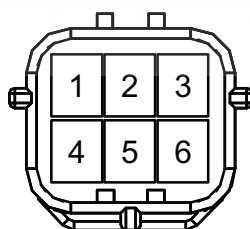


FT2 Frame harness connect tail gate harness

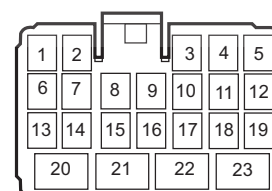


F40 Rear-right door control switch harness connector

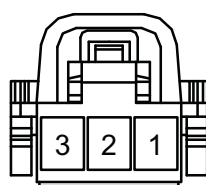

F41 Rear-right wheel speed sensor harness connector

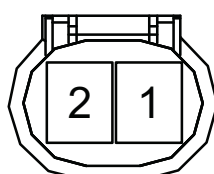


F54 CAN line connector 2 (left) harness connector

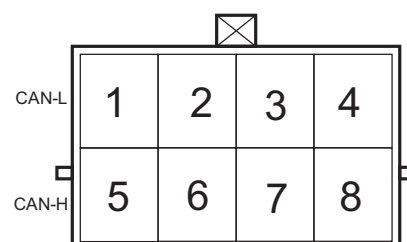


Body harness connector terminal diagram (continue 3)

F52 Reversing radar buzzer harness connector

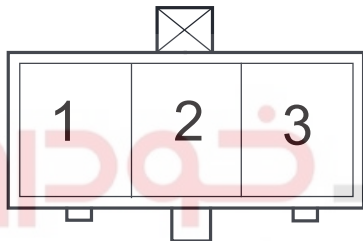


F43 Tire pressure controller harness connector

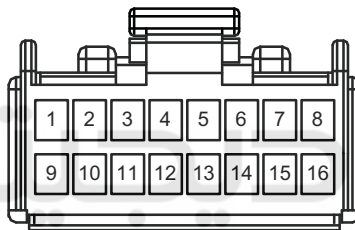


F47 Trunk lamp 12V power harness connector




F44 Rear-right tail lamp harness connector

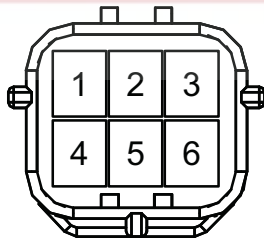


F21 Reversing radar controller harness connector

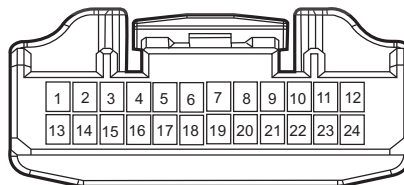


F17 Trunk lamp harness connector

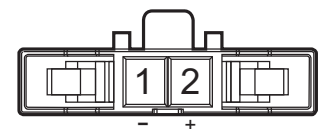


Left door harness arrangement diagram

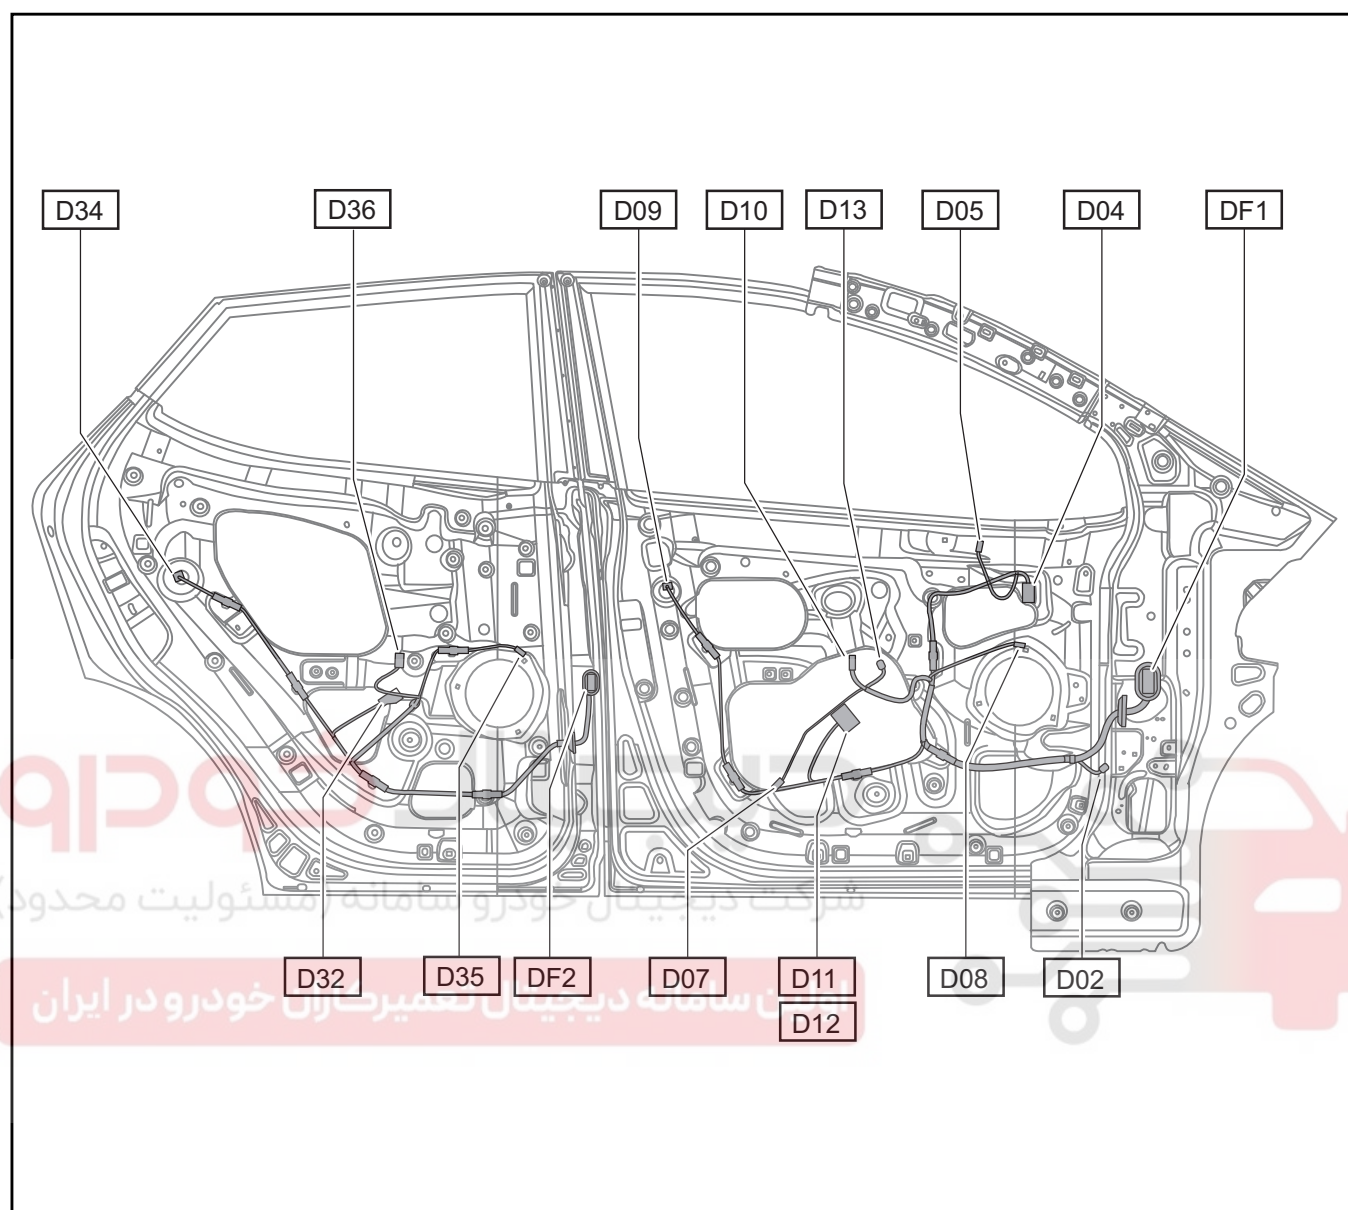

Right door harness arrangement diagram

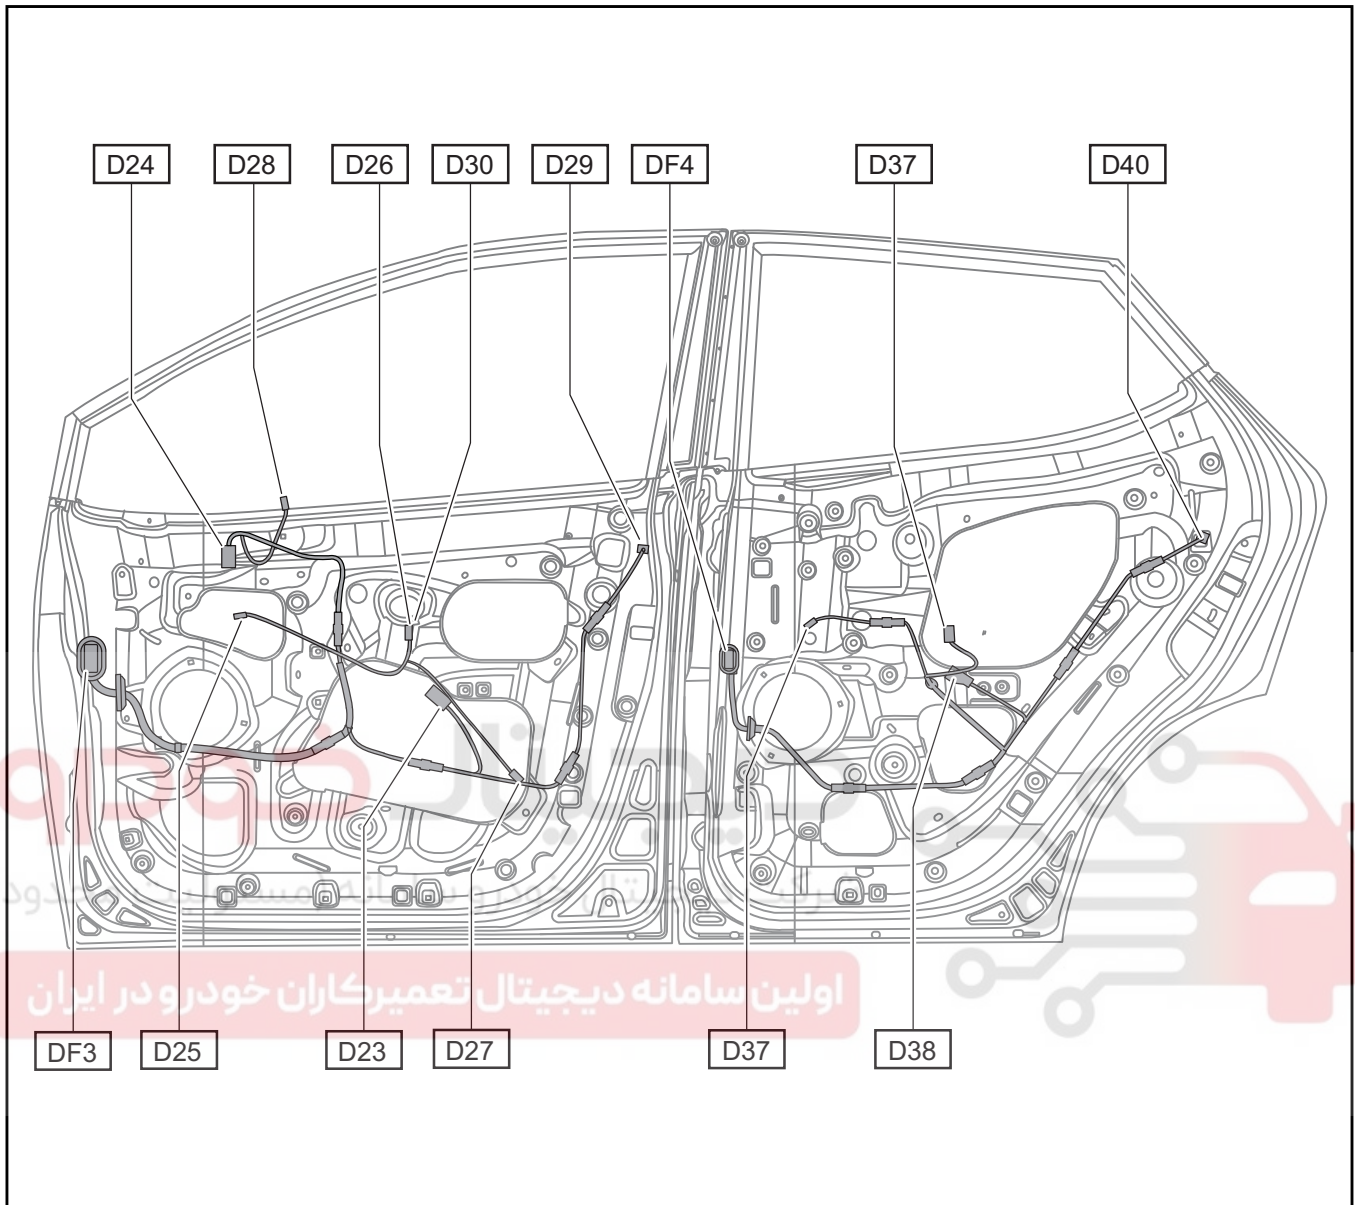

Tail door harness arrangement diagram

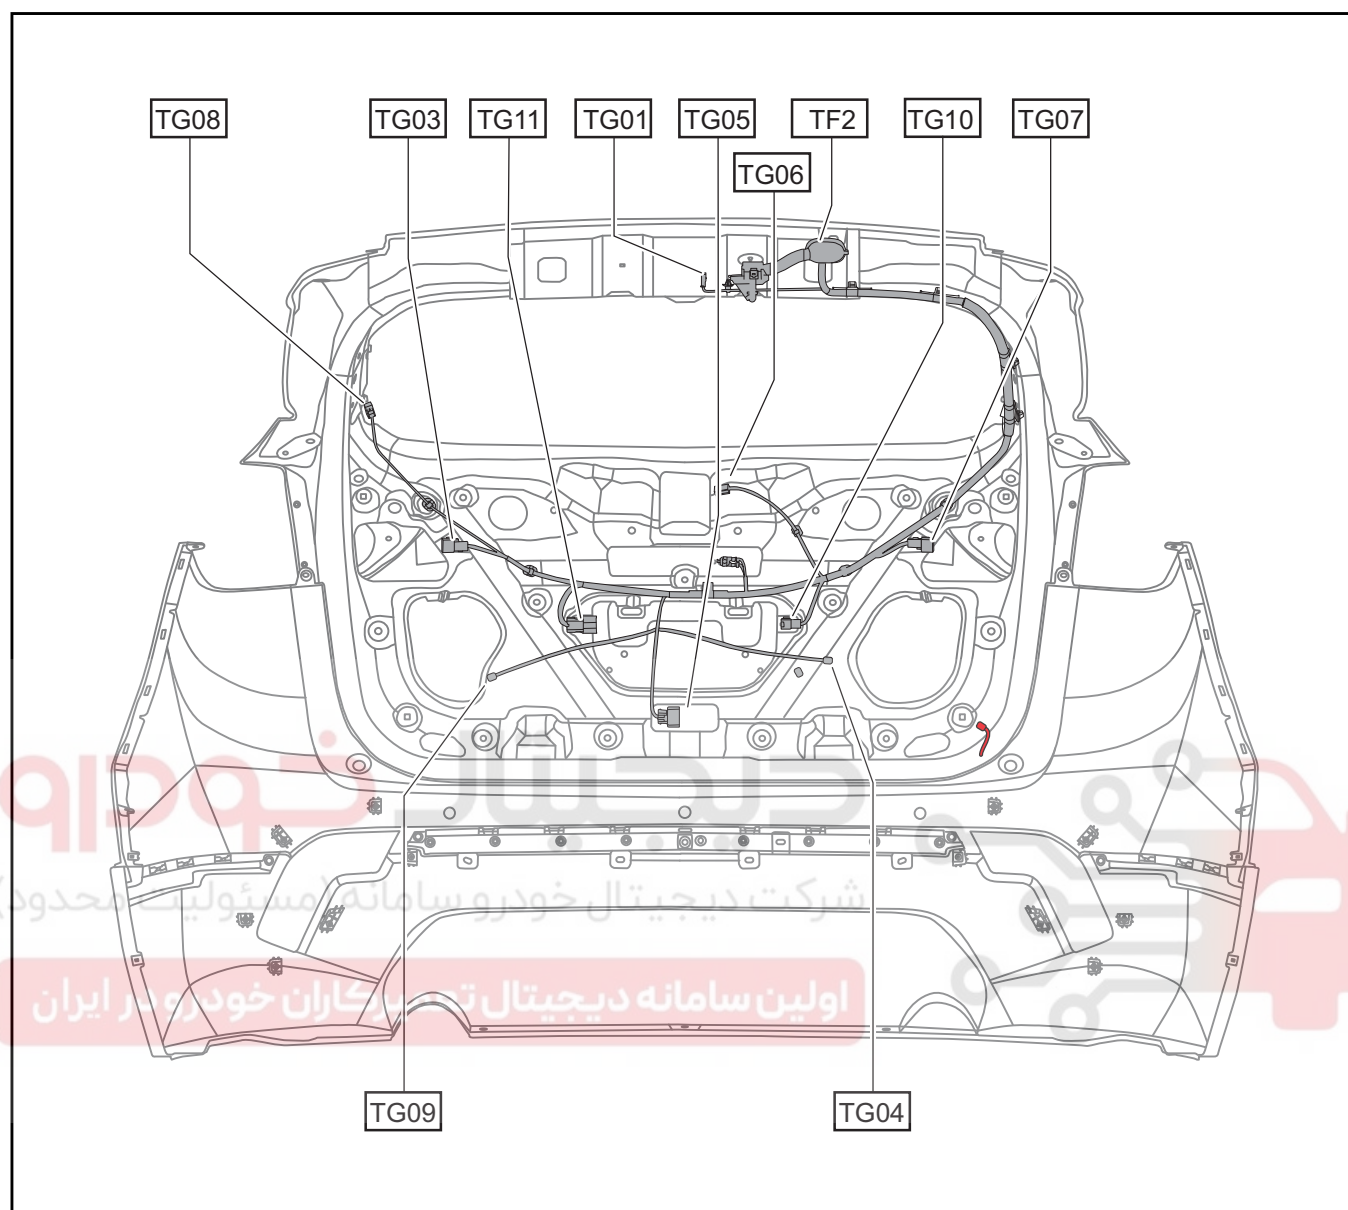

Door harness connector list

Harness connector	Name	Harness connector	Name
D02	Front-left doorknob switch unit harness connector	D04	Left electric rear view mirror harness connector
D05	Left high pitch loudspeaker harness connector	D07	Left door lamp harness connector
D08	Left loudspeaker harness connector	D09	Left door lock electric machine harness connector
D10	Window regulator switch (low equipment) harness connector	D11	Anti-pinch window electric machine(single door anti-pinch) harness connector
D12	Anti-pinch window electric machine(four door anti-pinch) harness connector	D13	Glass regulator switch (high equipment) harness connector
DF01	Front-left door harness connect body harness	D23	Right window electric machine harness connector
D24	Right electric rear view mirror harness connector	D25	Right loudspeaker harness connector
D26	Right electric window switch (low equipment) harness connector	D27	Right door lamp harness connector
D28	Right high pitch loudspeaker harness connector	D29	Right door lock electric machine harness connector
D30	Right electric window switch (high equipment) harness connector	DF02	Front-right harness connect body harness
D32	Window electric machine harness connector	D34	Door lock electric machine harness connector
D35	Loudspeaker harness connector	D36	Electric window switch (high equipment) harness connector
DF02	Rear harness connect body harness	TG01	Third brake harness connector
TG02	Rear-left position lamp connect body harness	TG03	Rear-right position lamp connect body harness
TG04	Rear-left license plate lamp harness connector	TG05	Tail door fastener harness connector
TG06	Rear wiper electric machine harness connector	TG07	Defroster positive pole harness connector
TG08	Defroster negative pole harness connector	TG09	Rear-right license plate lamp harness connector
TG10	Camera harness connector	TG11	Tail door switch harness connector
TF02	Tail door connect body harness	T01	Earth connection


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Door harness terminal diagram


DF1 Front-left door harness connect body connector FD1




D02 Front-left doorknob harness connector

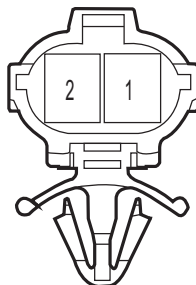


D08 Front-left low pinch loudspeaker harness connector

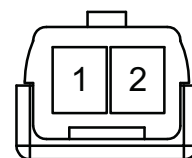


D04 Left electric rear view mirror harness connector

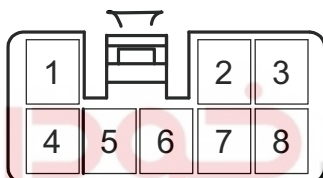


D05 Left high pinch loudspeaker harness connector

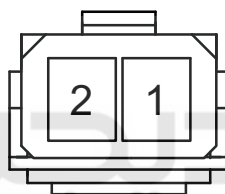


D07 Left door lamp harness connector

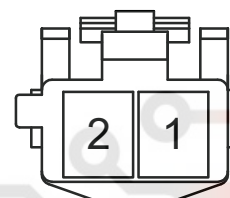


D10 Front-left electric window harness connector

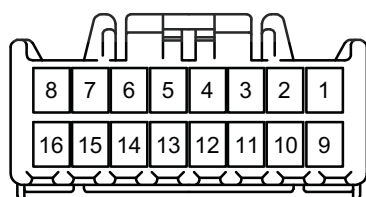


D13 Glass regulator switch (high equipment) harness connector

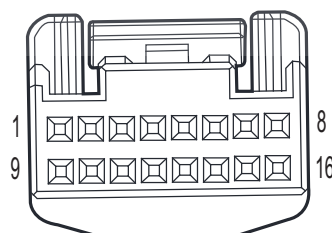


D11 Anti-pinch window electric machine(single door anti-pinch) harness connector

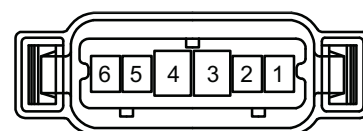

D12 Anti-pinch window electric machine(four door anti-pinch) harness connector

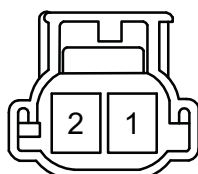


D09 Front-left door lock harness connector

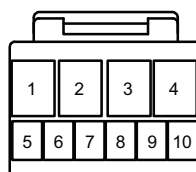


Door harness terminal diagram(continue 1)


DF2 Front-right door harness connect body harness FD3

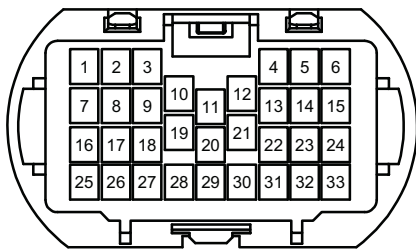


D25 Right loudspeaker harness connector

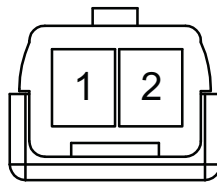


D24 Right electric rear view mirror harness connector

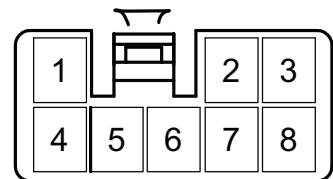


D28 Right high pitch loudspeaker harness connector

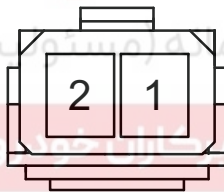


D30 Right electric window switch (high equipment) harness connector

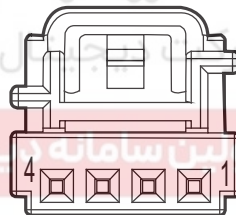


D26 Right electric window switch (low equipment) harness connector

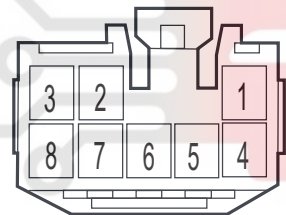


D27 Right door lamp harness connector

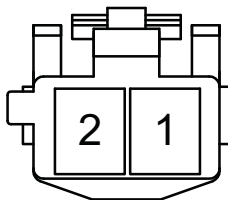

D23 Right window electric machine harness connector

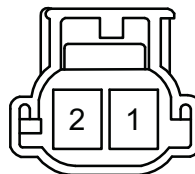


D29 Front-right door lock electric machine harness connector

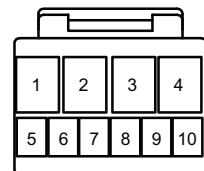


Door harness terminal diagram(continue 2)


DF2 Rear harness connect body harness

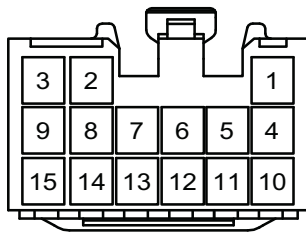

D35 Rear door loudspeaker harness speaker

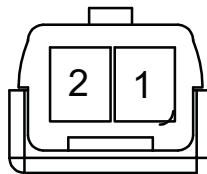


D36 Electric window switch (high equipment) harness connector

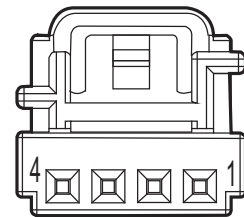


D32 Window electric machine harness connector




D34 Door lock electric machine harness connector

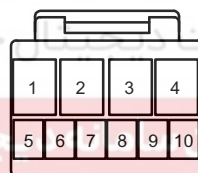


D37 Rear-right electric window switch (high equipment) harness connector

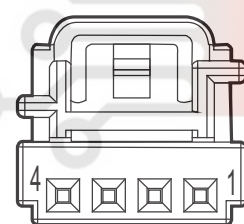


D38 Window electric machine harness connector

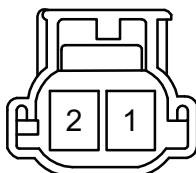

D39 Rear-right door loudspeaker harness connector

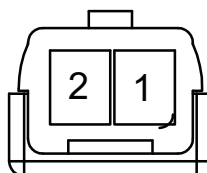


D40 Rear-right door lock electric machine harness connector

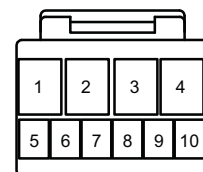


Tail door harness terminal diagram


TF2 Rear door harness connect body harness

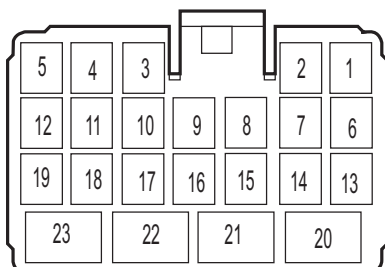


TG01 High-position brake harness connector

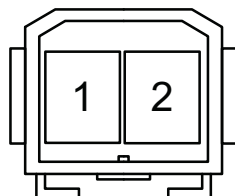


TG07 Defroster positive pole harness connector

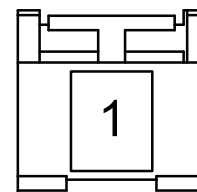


TG02 Rear-left position lamp harness connector

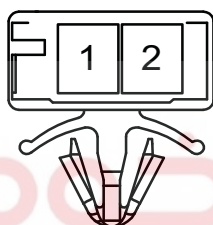


TG06 Rear wiper electric machine harness connector

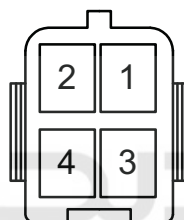


TG10 Camera harness connector

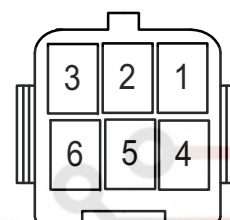


TG04 Rear-left license plate lamp harness connector

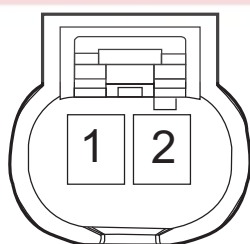


TG05 Tail door fastener harness connector

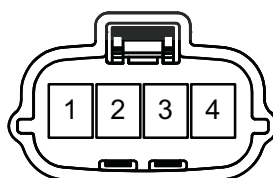


TG09 Rear-right license plate lamp harness connector

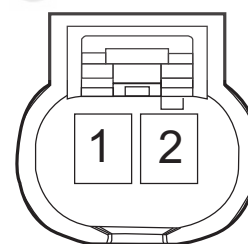


TG11 Tail door switch harness connector

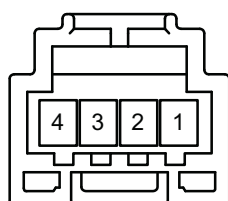


TG03 Rear-right position lamp harness connector

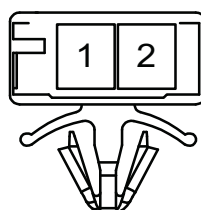


TG08 Defroster negative pole harness connector

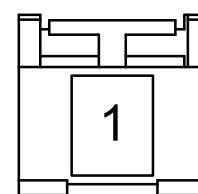


Power wiring harness grounding point layout

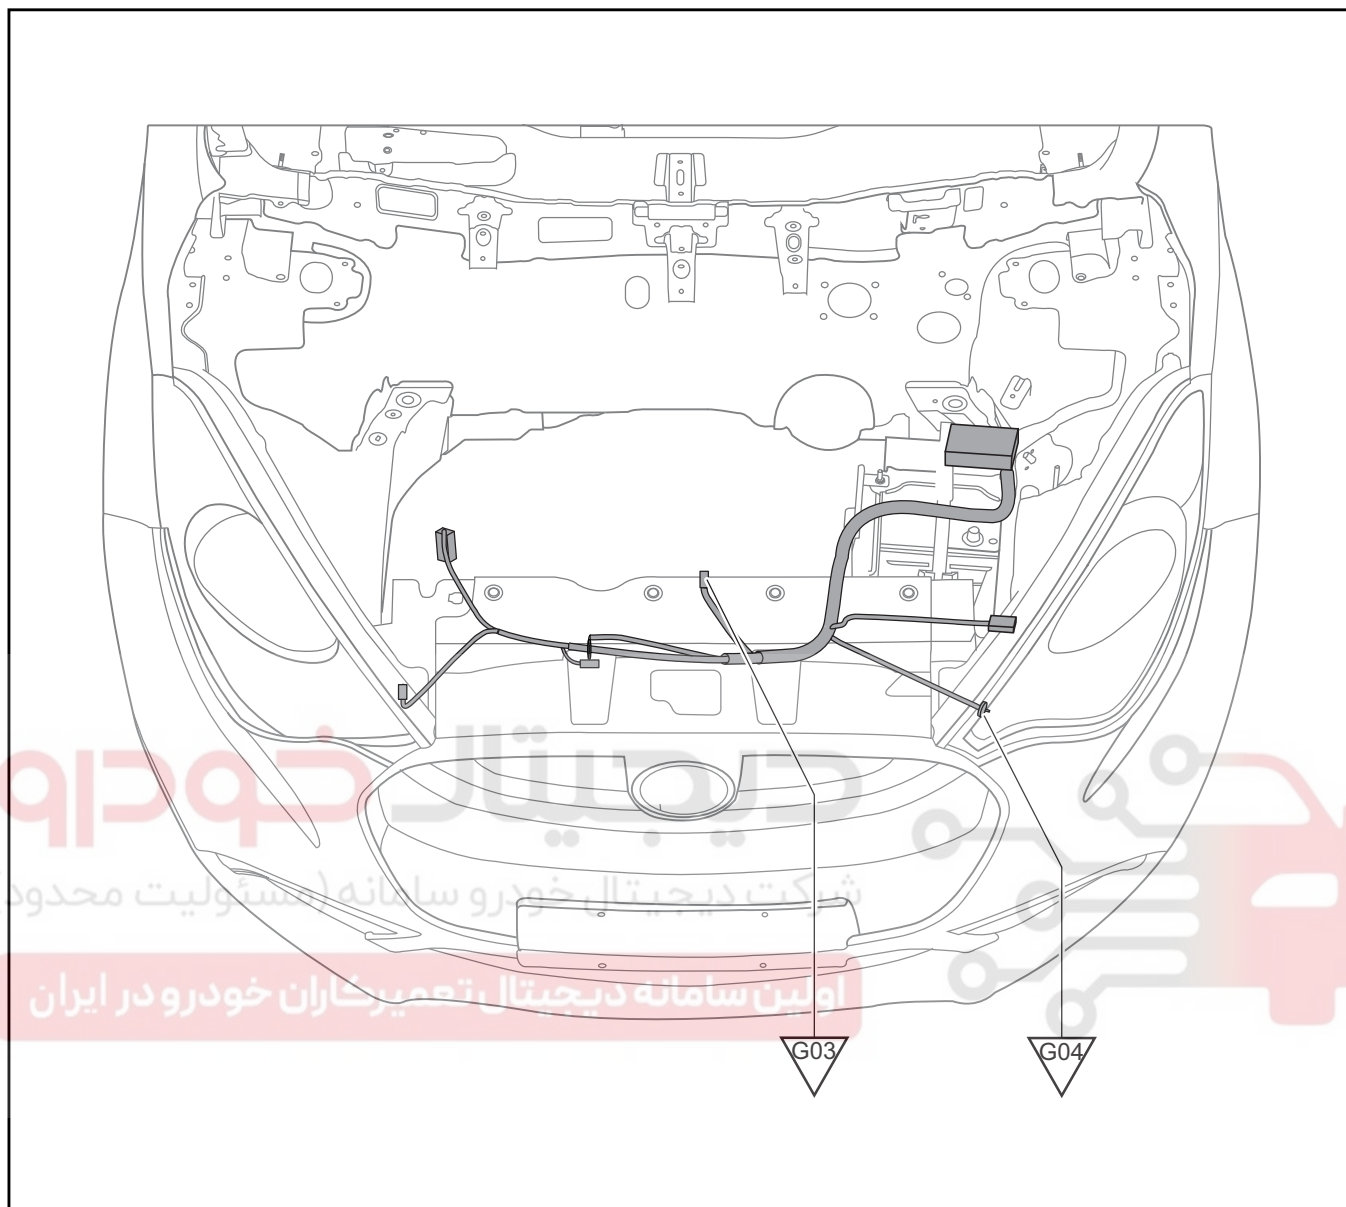


Engine wiring harness grounding point layout

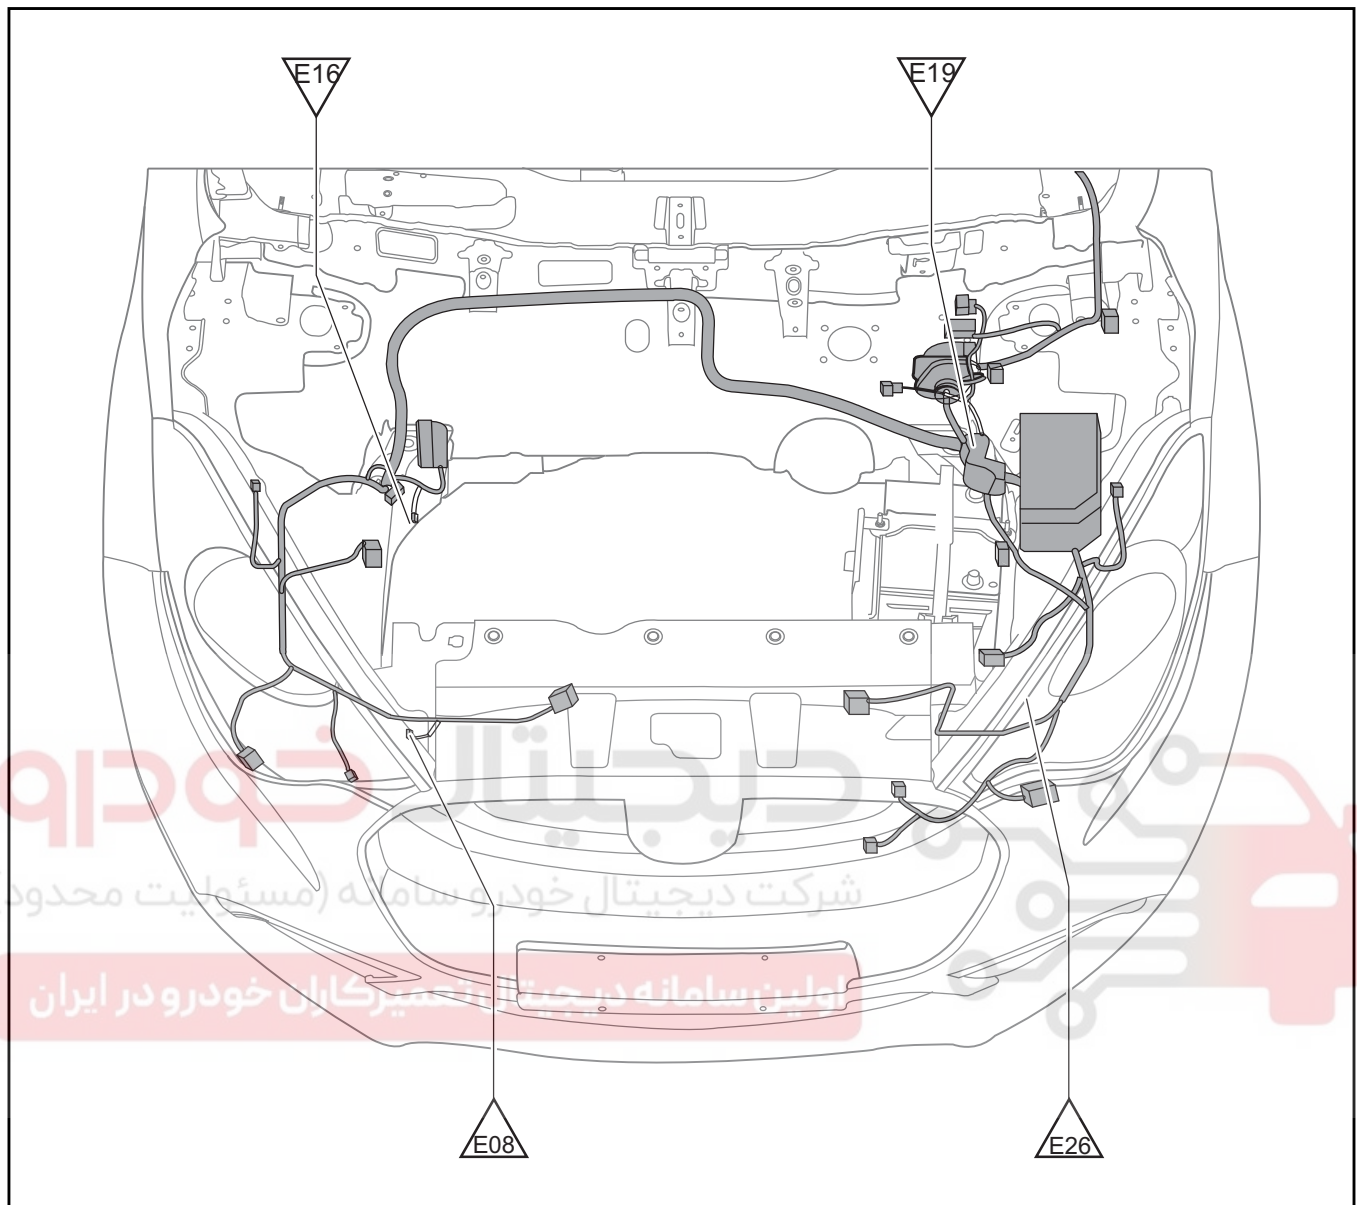


Engine wiring harness grounding point layout

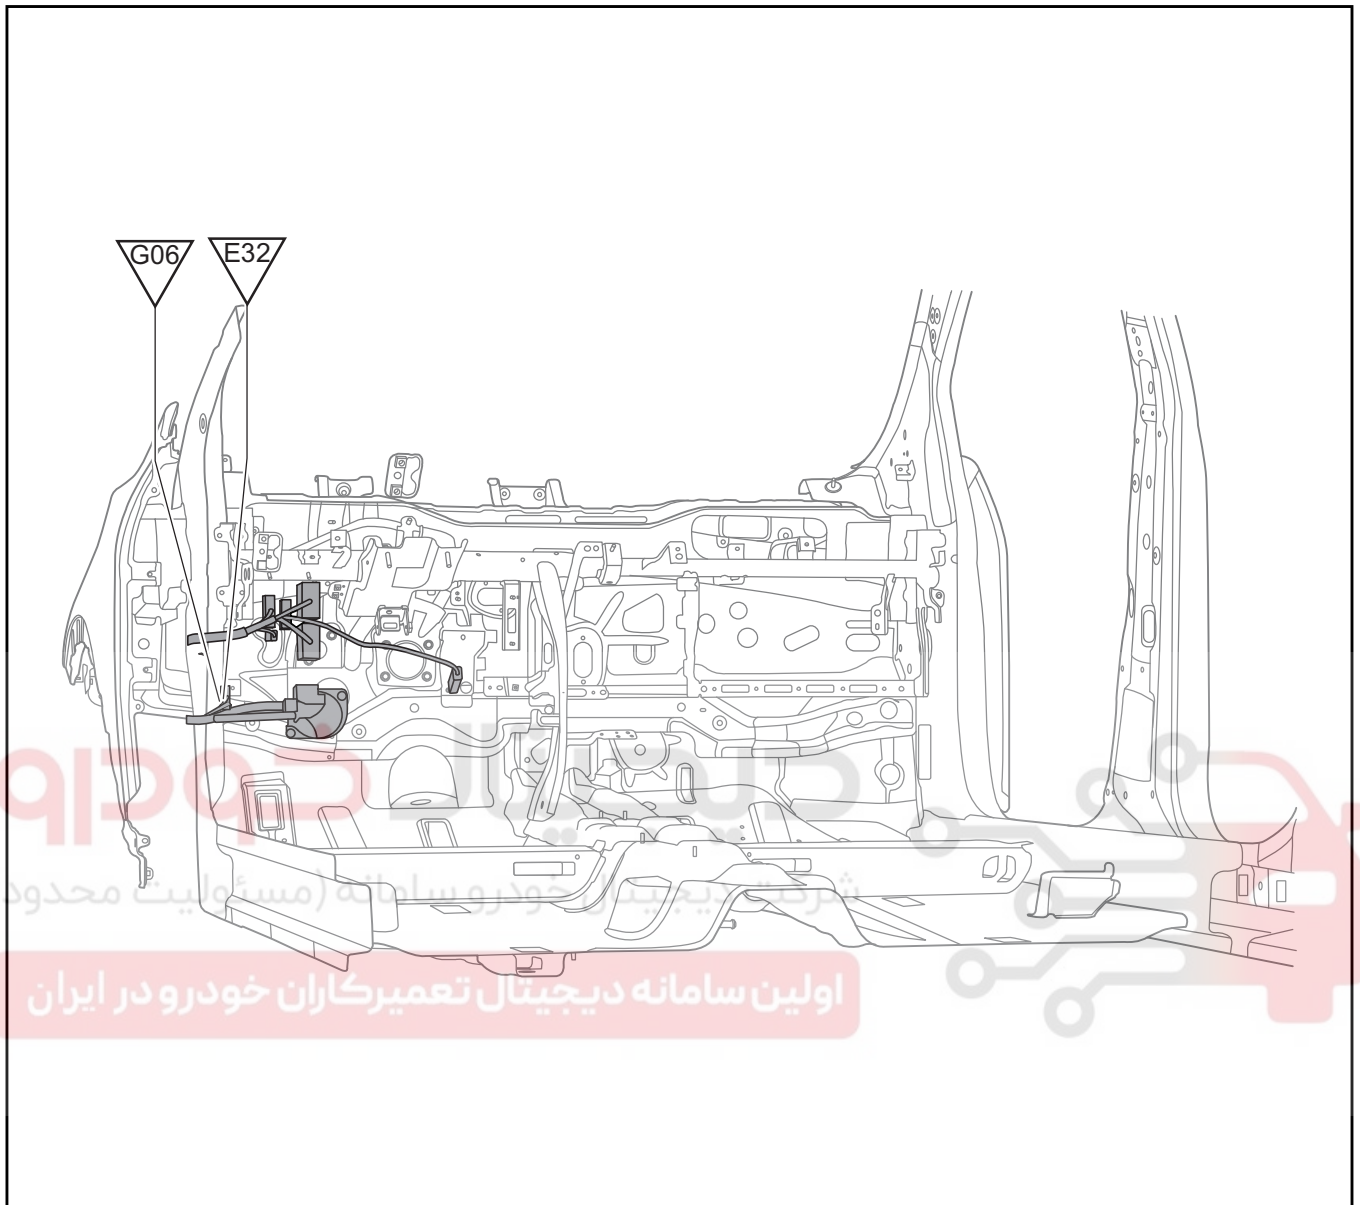


Main wiring harness grounding point layout

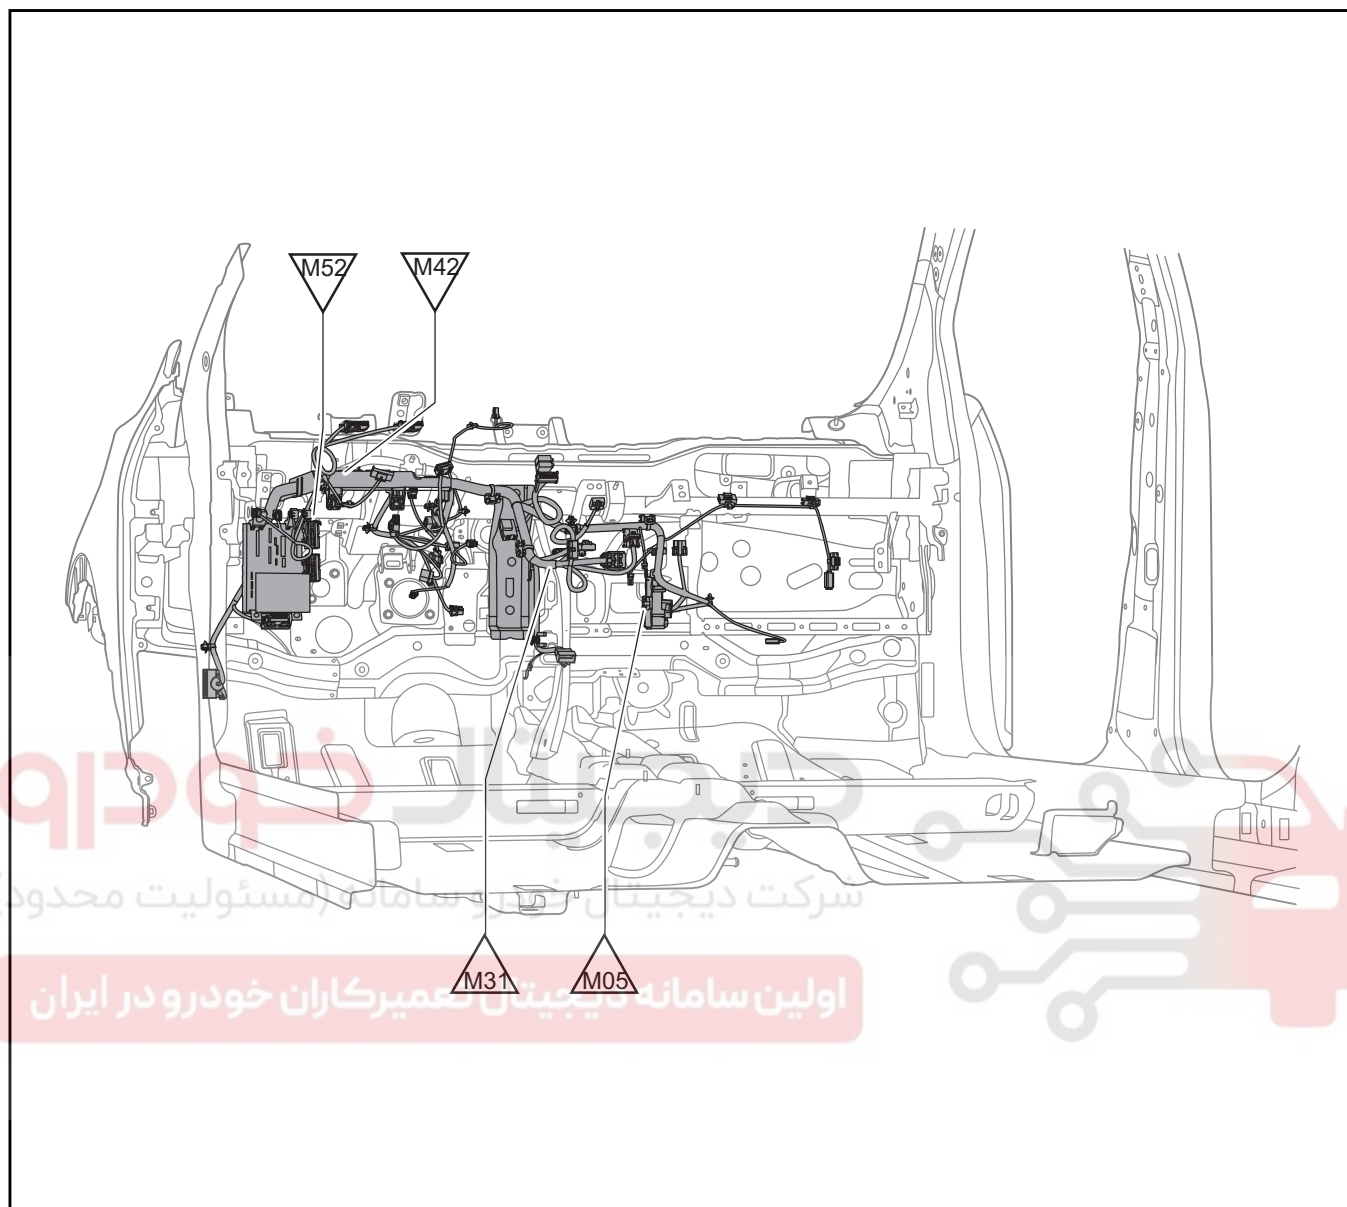

Frame wiring harness grounding point layout

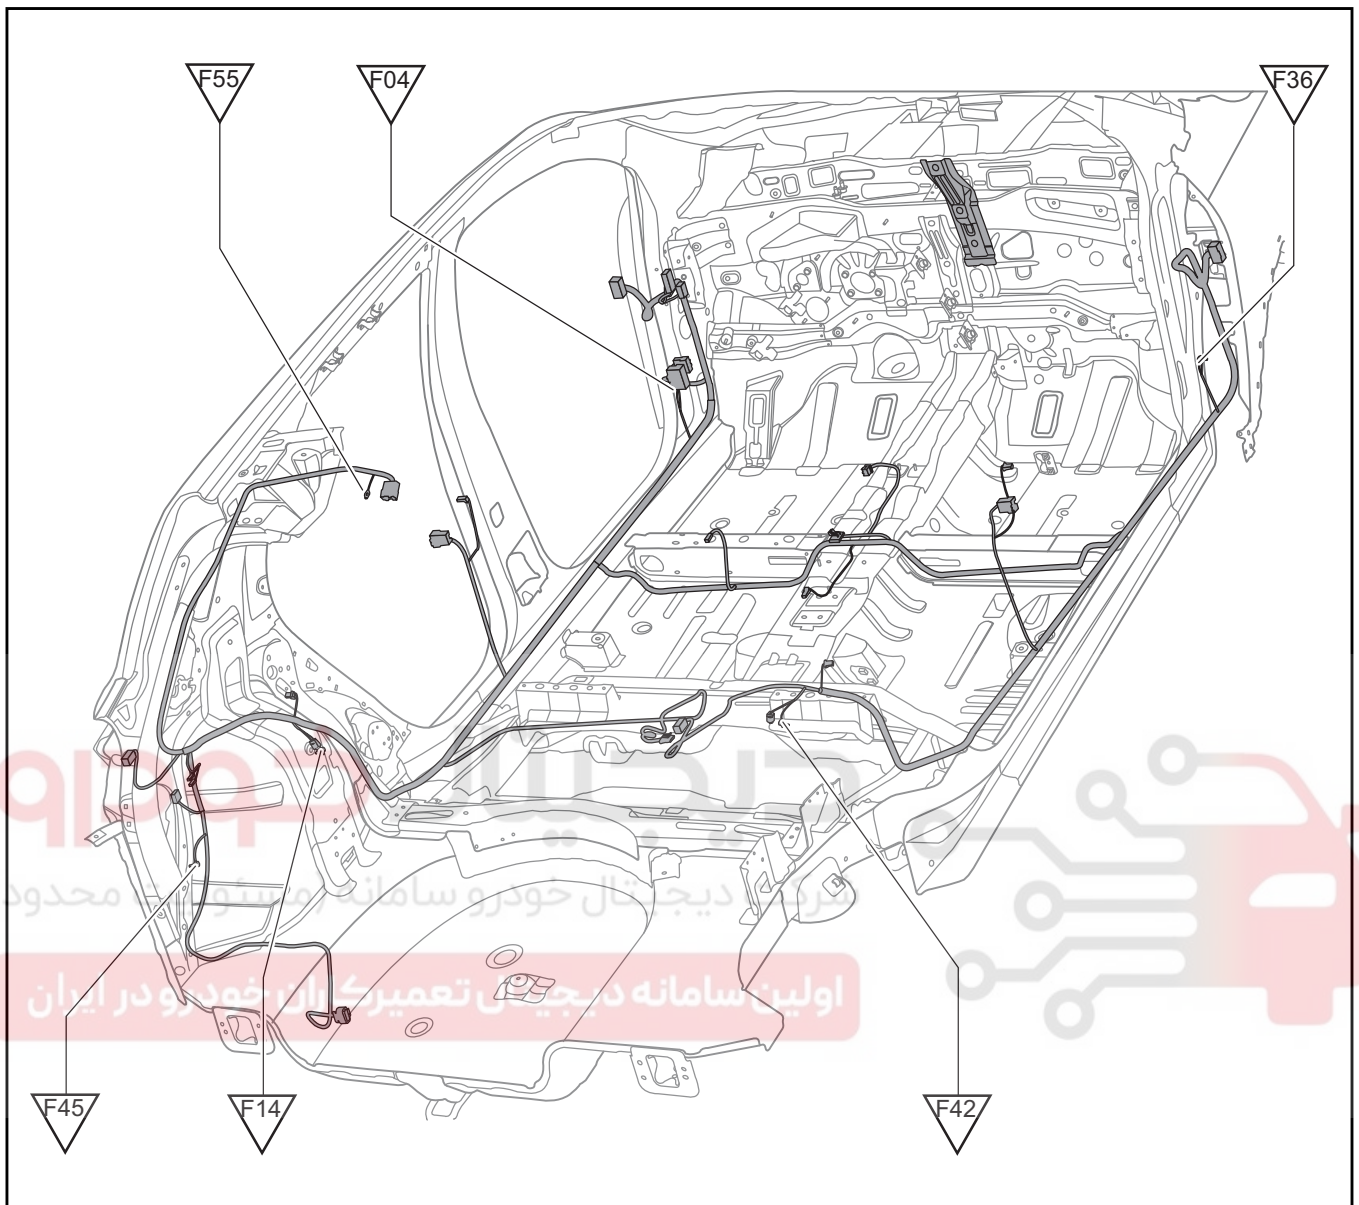

Rear gate wiring harness grounding point layout

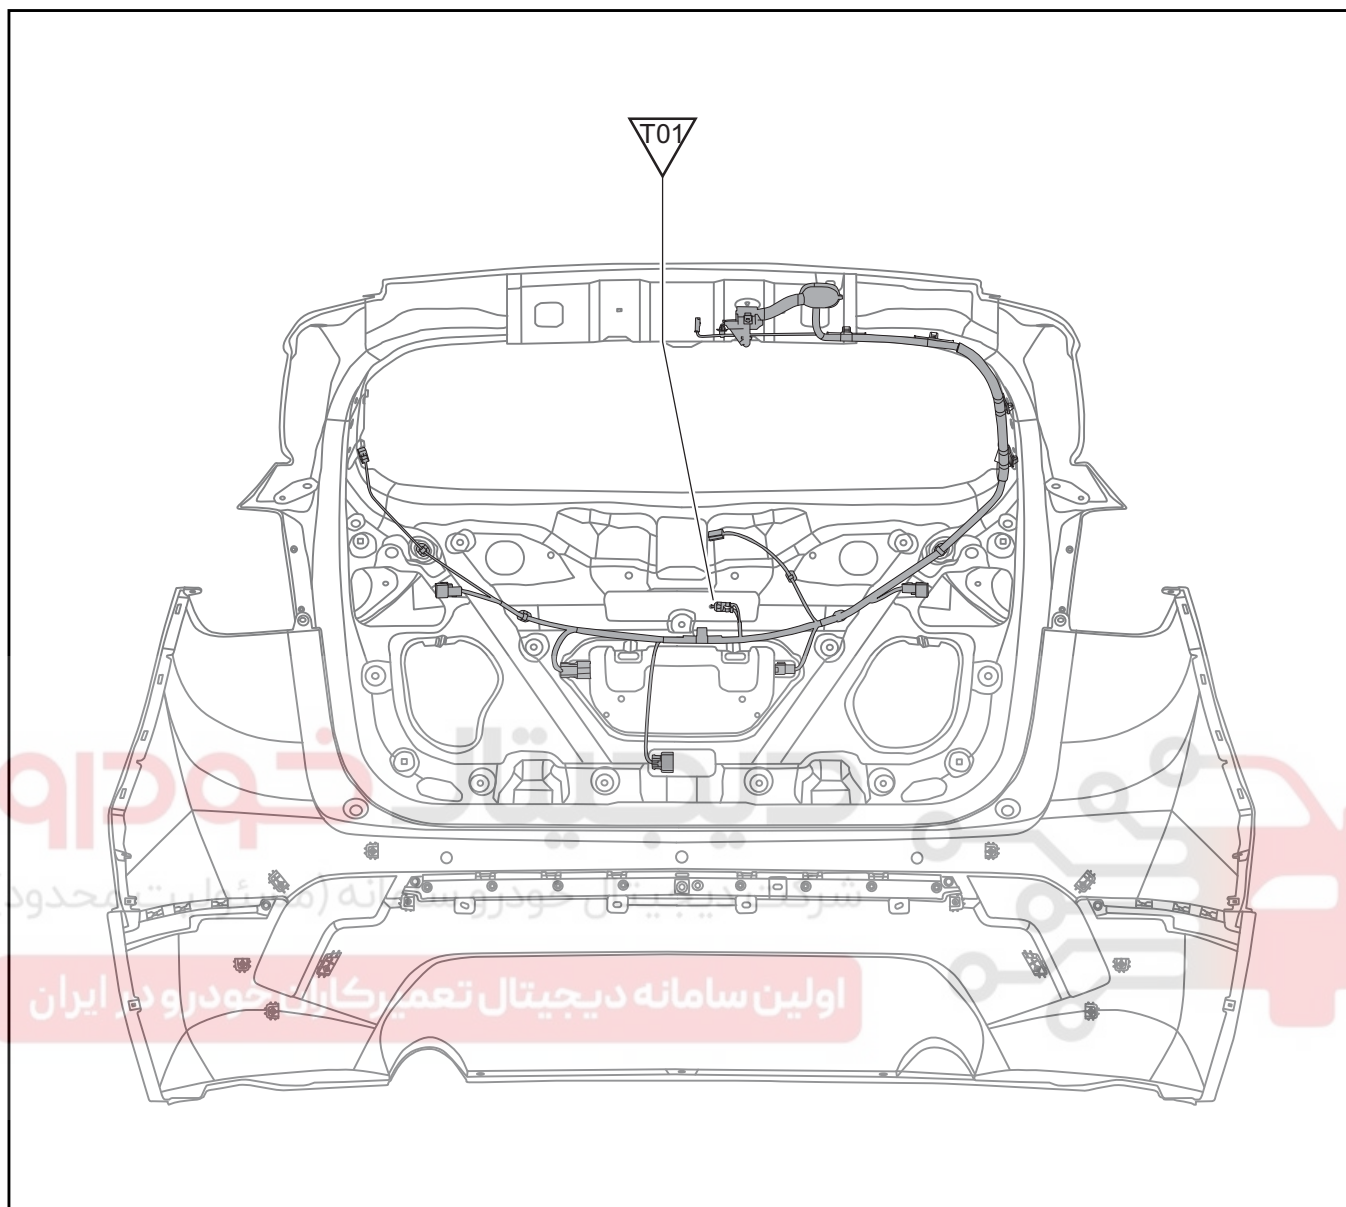

Air bag wiring harness grounding point layout

