



13.4 Fuse & Relay

13.4.1. Engine Compartment Fuse & Relay

Engine Compartment Fuse and Relay Box

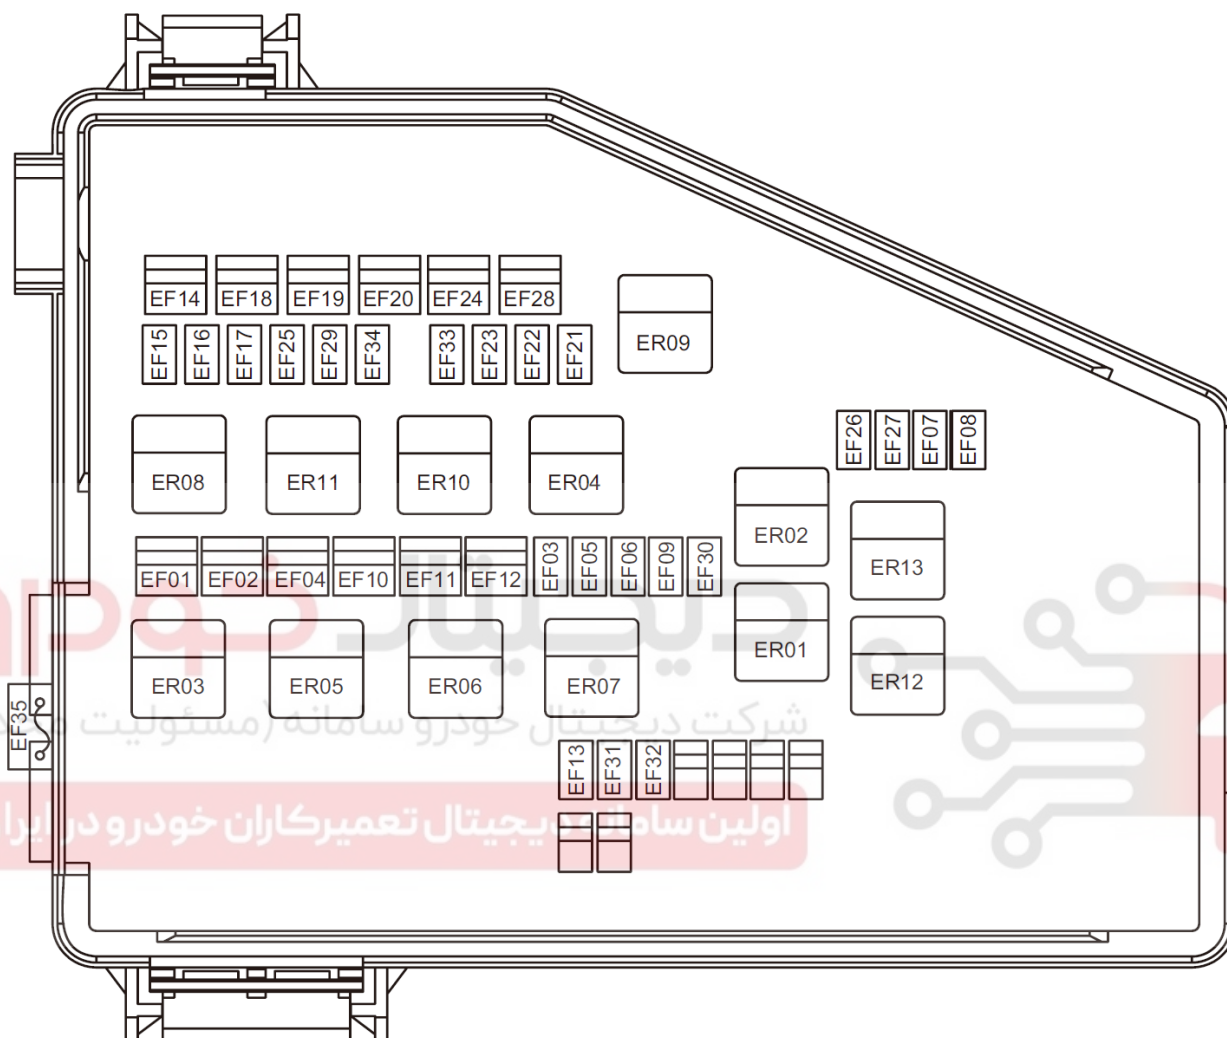


Main fuse **EF40**

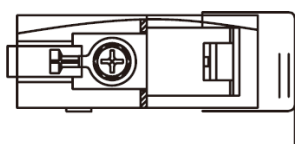


NL13-04006

Internal Wiring Diagram of Engine Compartment Fuse, Relay Box

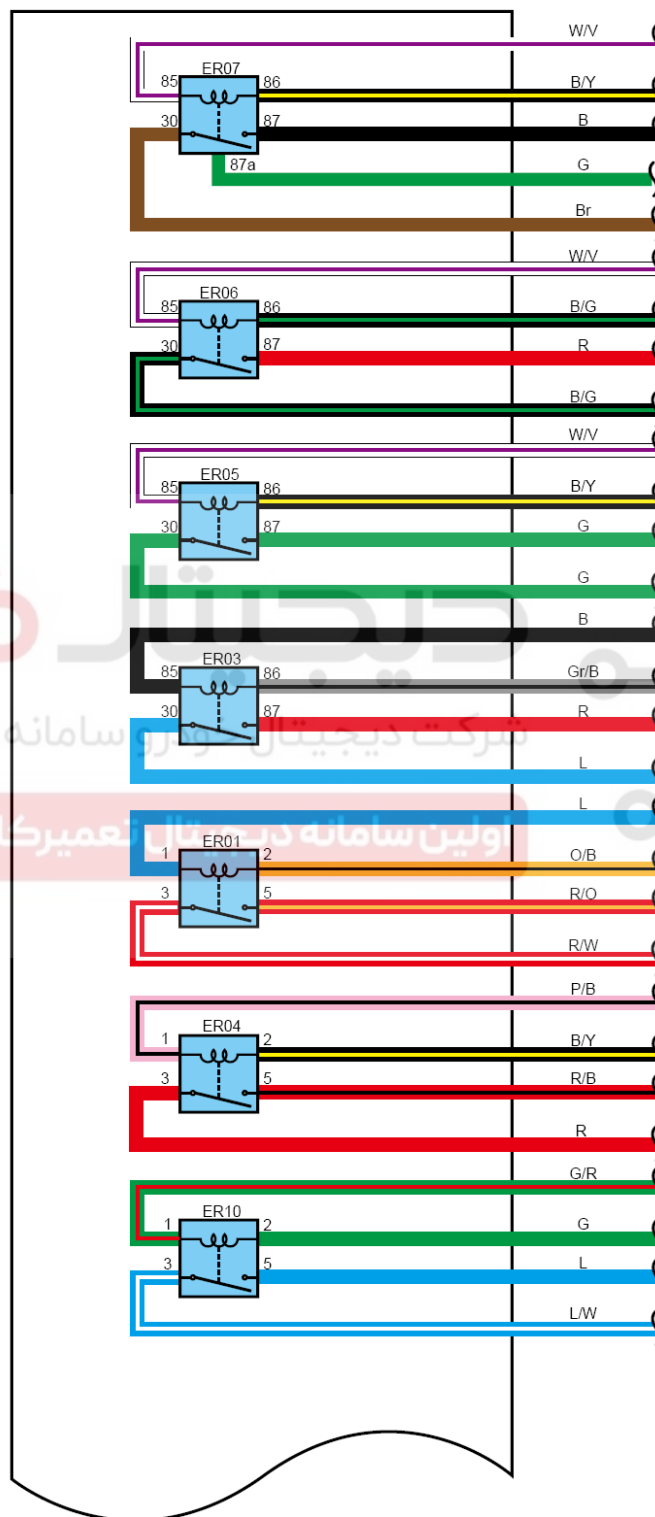


NL13-04001

Internal Wiring Diagram of Engine Compartment Fuse, Relay Box (Continued 1)

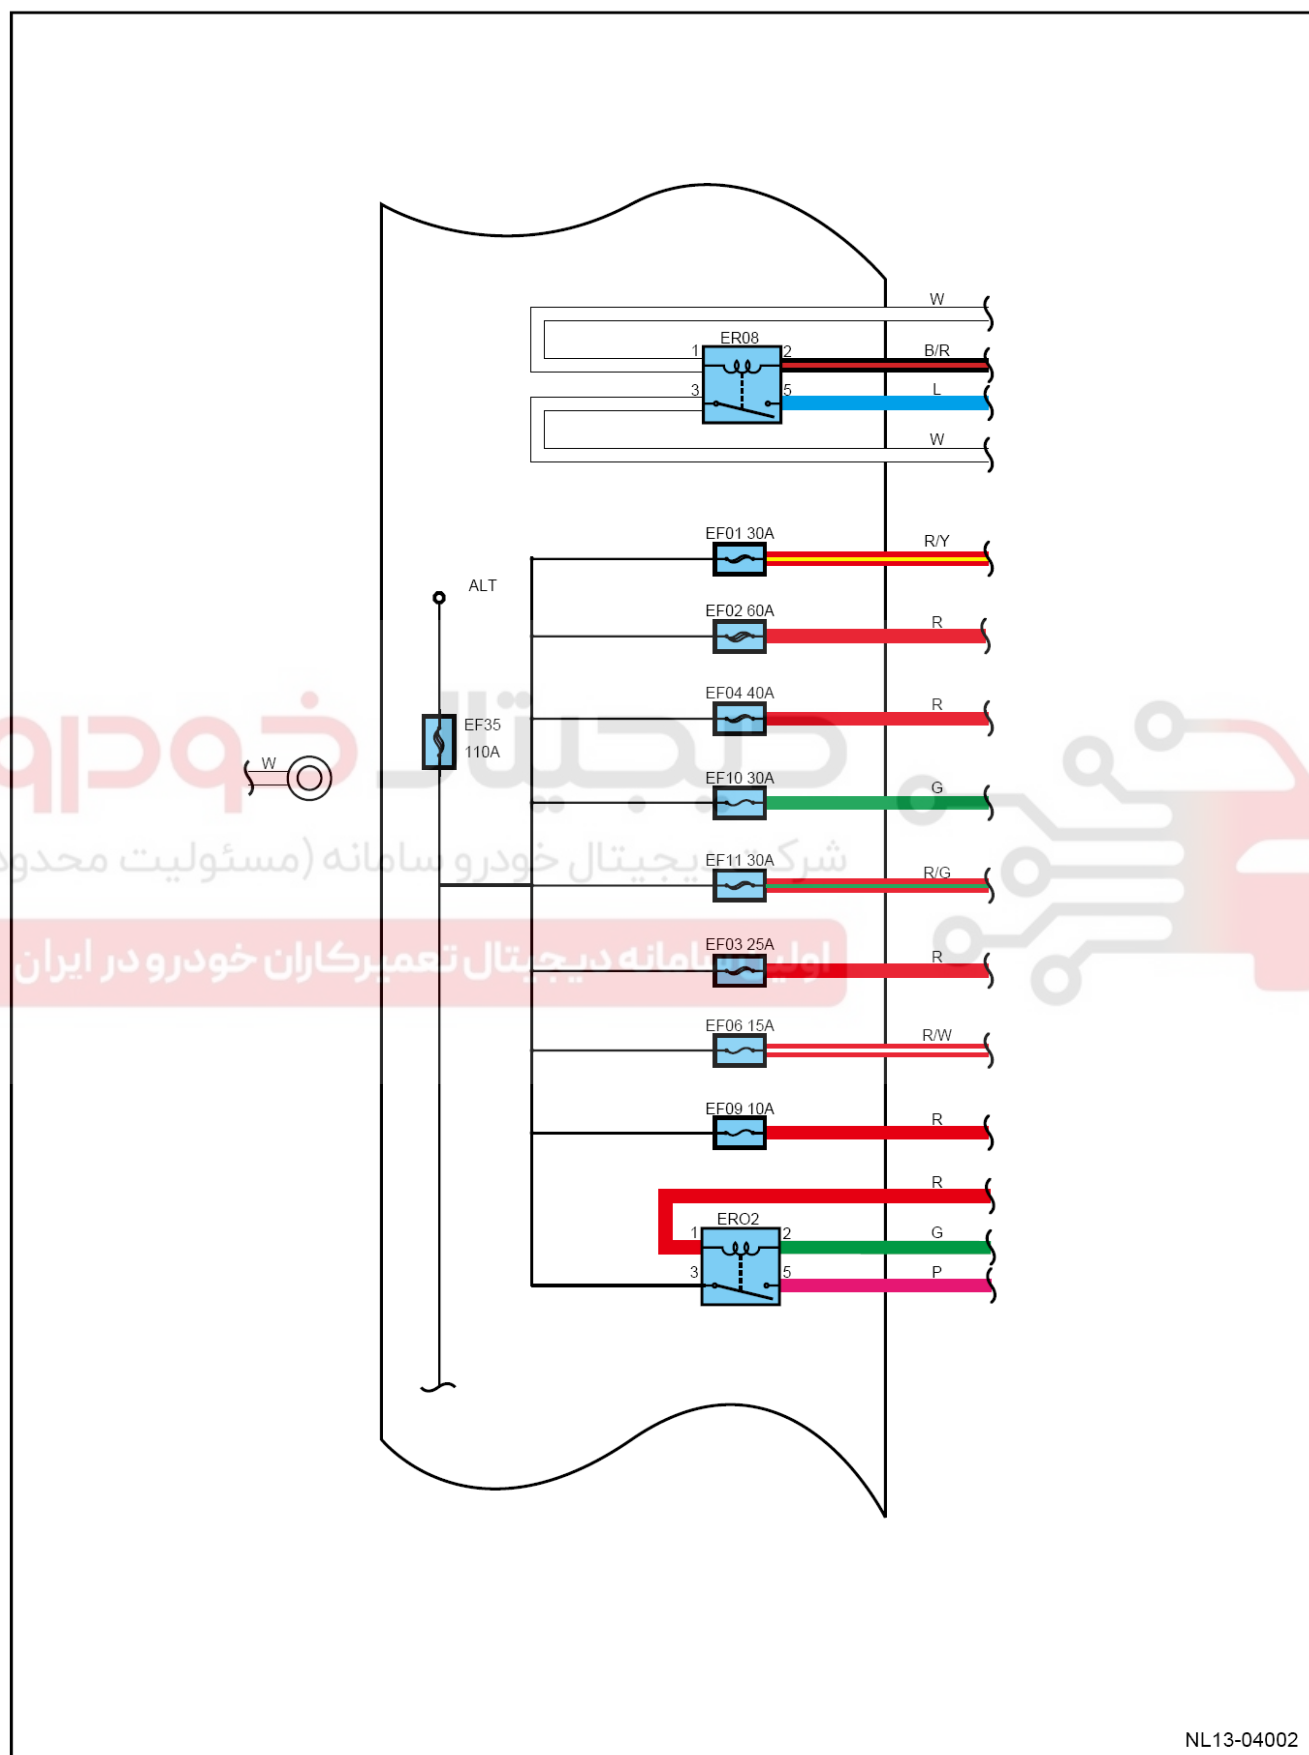

NL13-04002

Internal Wiring Diagram of Engine Compartment Fuse, Relay Box (Continued 2)

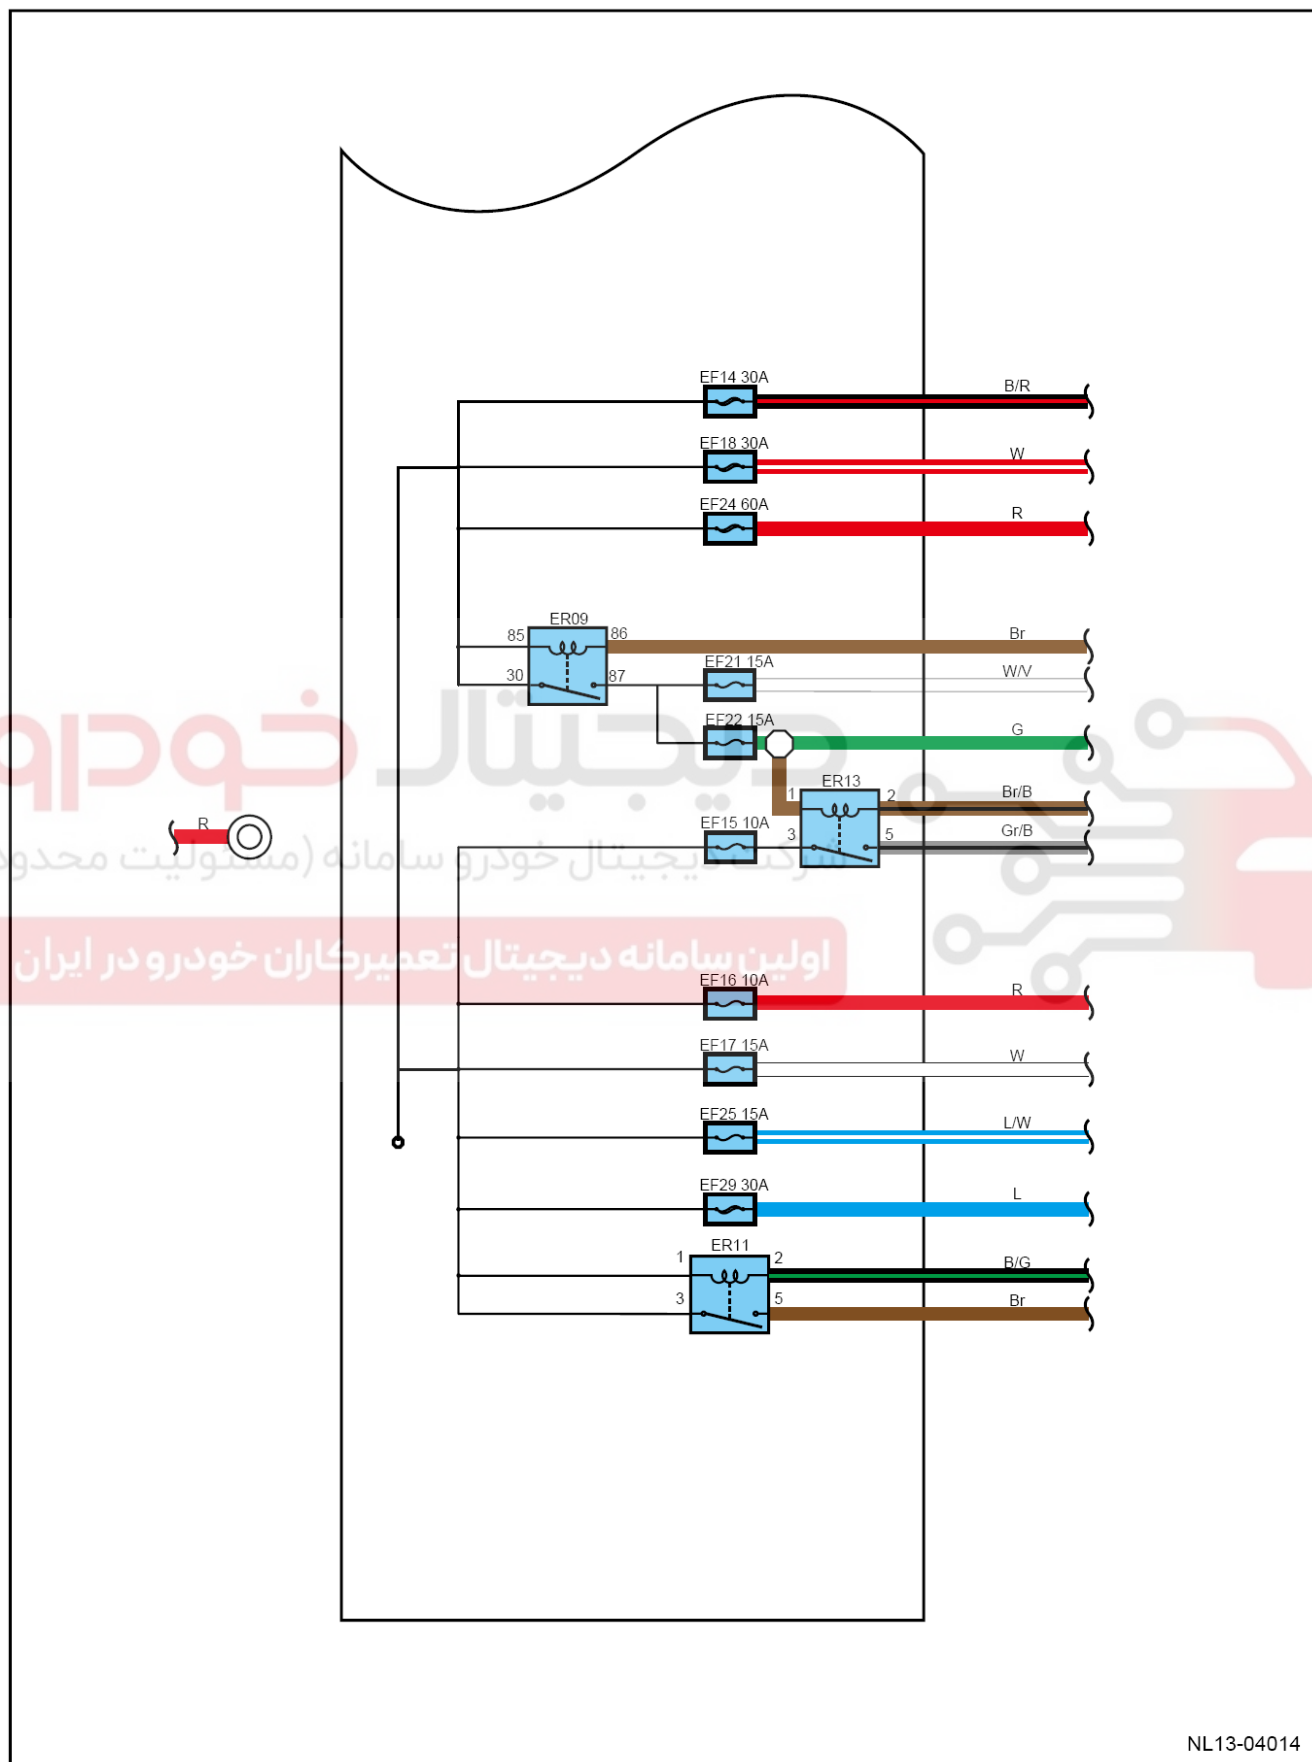

Fuse List of Engine Compartment

NO.	Description	Rated current(A)	Descriptions
EF40	Main fuse of battery	100A	
EF01	Fuse of power seat	30A	
EF02	Fuse of alternator	60A	
EF03	ABS fuse	25A	
EF04	ABS fuse	40A	
EF06	Fuse of front fog lamp	15A	
EF07	Fuse of FL high beam lamp	10A	
EF08	Fuse of FR high beam lamp	10A	
EF09	Fuse of A/C	10A	
EF10	Fuse of cooling fan-high	30A	
EF11	Fuse of cooling fan-low	30A	
EF14	Ignition switch of AM2 fuse	30A	DSI model
EF15	Fuse of vacuum pump	10A	
EF16	ECM fuse	10A	
EF17	Fuse of horn	15A	
EF18	Ignition switch of AM1 fuse	30A	
EF21	Fuse of ignition coil	15A	
EF22	Fuse of engine injecting nozzle	15A	
EF24	Main fuse of battery	30A	
EF25	Fuse of oil pump	15A	
EF26	FR low beam lamp	10A	
EF27	FL low beam lamp	10A	
EF29	Fuse of starter	30A	
EF35	Main fuse	110A	

Relay List of Engine Compartment

NO.	Description	Descriptions
ER01	Front fog lamp relay	/
ER02	High beam lamp relay	/
ER03	Start relay	/
ER04	A/C relay	/
ER05	Cooling fan relay-high speed	Cooling fan relay-high speed
ER06	Cooling fan relay-low speed	Cooling fan relay-low speed
ER07	Cooling fan relay-low speed 2	Cooling fan relay-low speed
ER08	Horn relay	/
ER09	Engine main relay	/
ER10	Fuel pump relay	/
ER11	Low beam lamp relay	/
ER13	Vacuum pump relay	DSI model
ER14	Rear wiper relay	It is under the interior panel of back door

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

