


SQR484F Engine Management System

Circuit Diagram (Page 1 of 8)

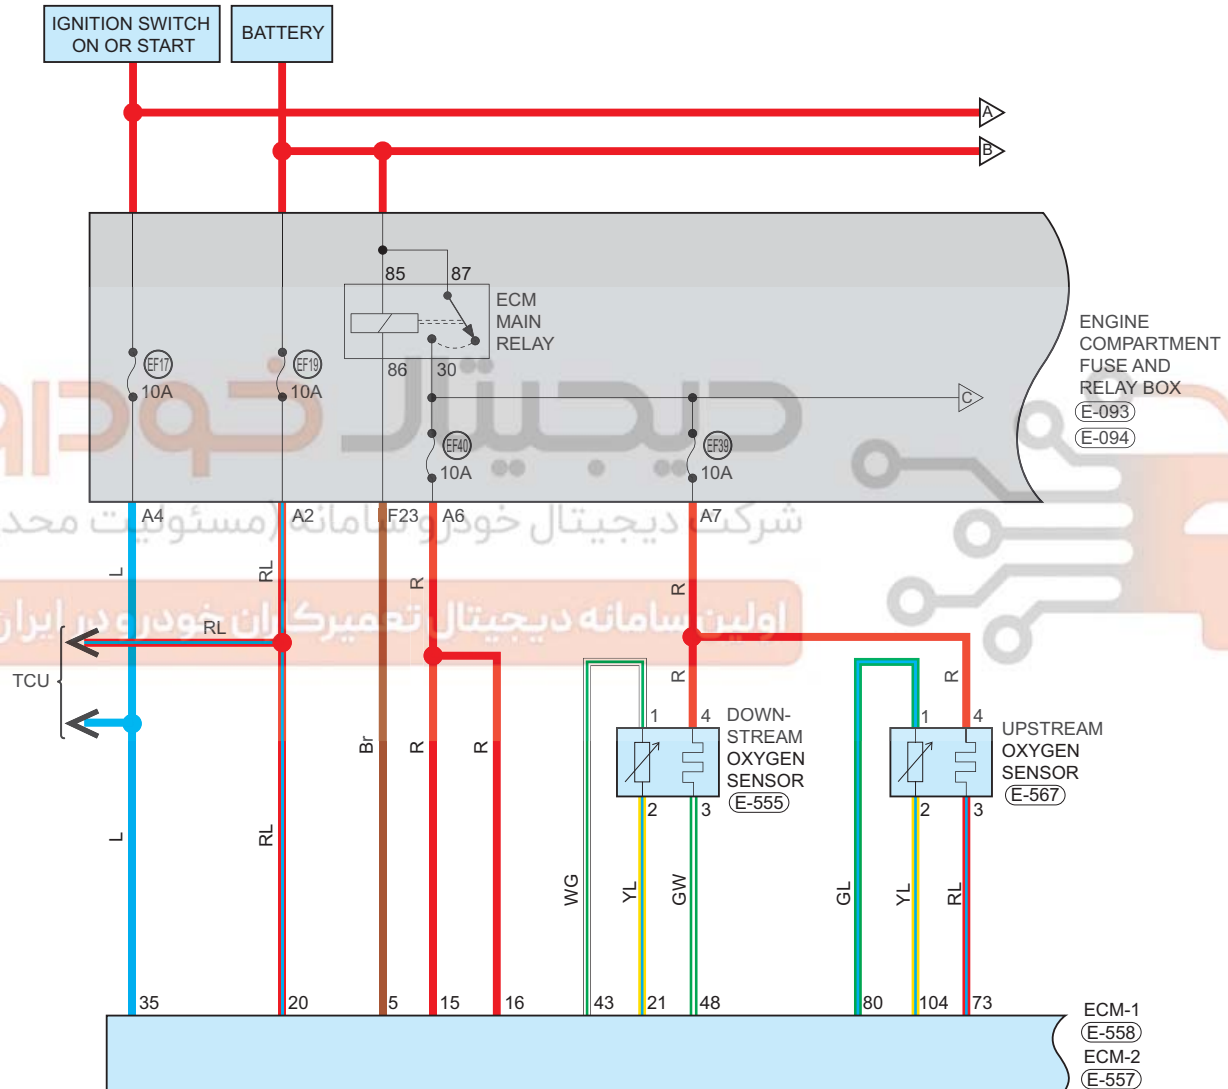

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-093	08-10	E-094	08-10	E-555	08-10
E-567	08-10	E-558	08-10	E-557	08-10

Fuse and Relay


Fuse/Relay	See Page	Fuse and Relay Box
EF17	06-5	Engine Compartment Fuse and Relay Box
EF19	06-5	Engine Compartment Fuse and Relay Box
EF40	06-5	Engine Compartment Fuse and Relay Box
EF39	06-5	Engine Compartment Fuse and Relay Box
ECM Main Relay	06-5	Engine Compartment Fuse and Relay Box

Form of Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-093	12-5	E-094	12-6	E-555	12-7
E-567	12-8	E-558	12-7	E-557	12-7

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

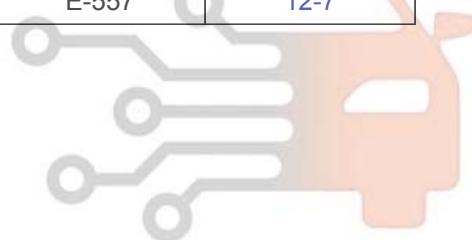

Circuit Diagram (Page 2 of 8)

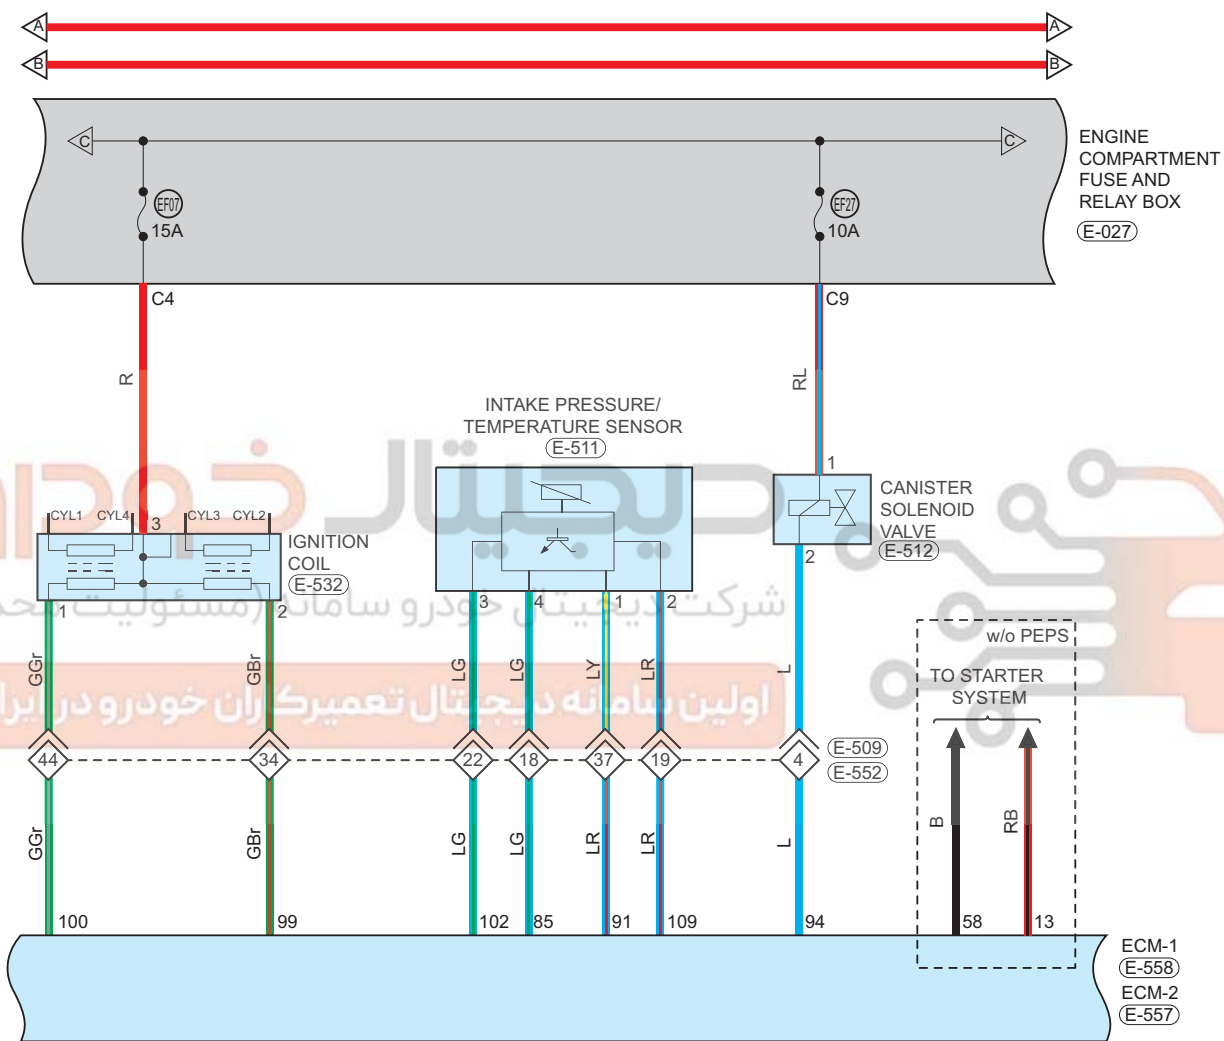

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-027	08-5	E-532	08-5	E-511	08-5
E-512	08-5	E-558	08-10	E-557	08-10

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF07	06-5	Engine Compartment Fuse and Relay Box
EF27	06-5	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-509, E-552	08-5, 08-10				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-027	12-2	E-532	12-7	E-511	12-6
E-512	12-6	E-558	12-7	E-557	12-7
E-509, E-552	12-6				

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 3 of 8)

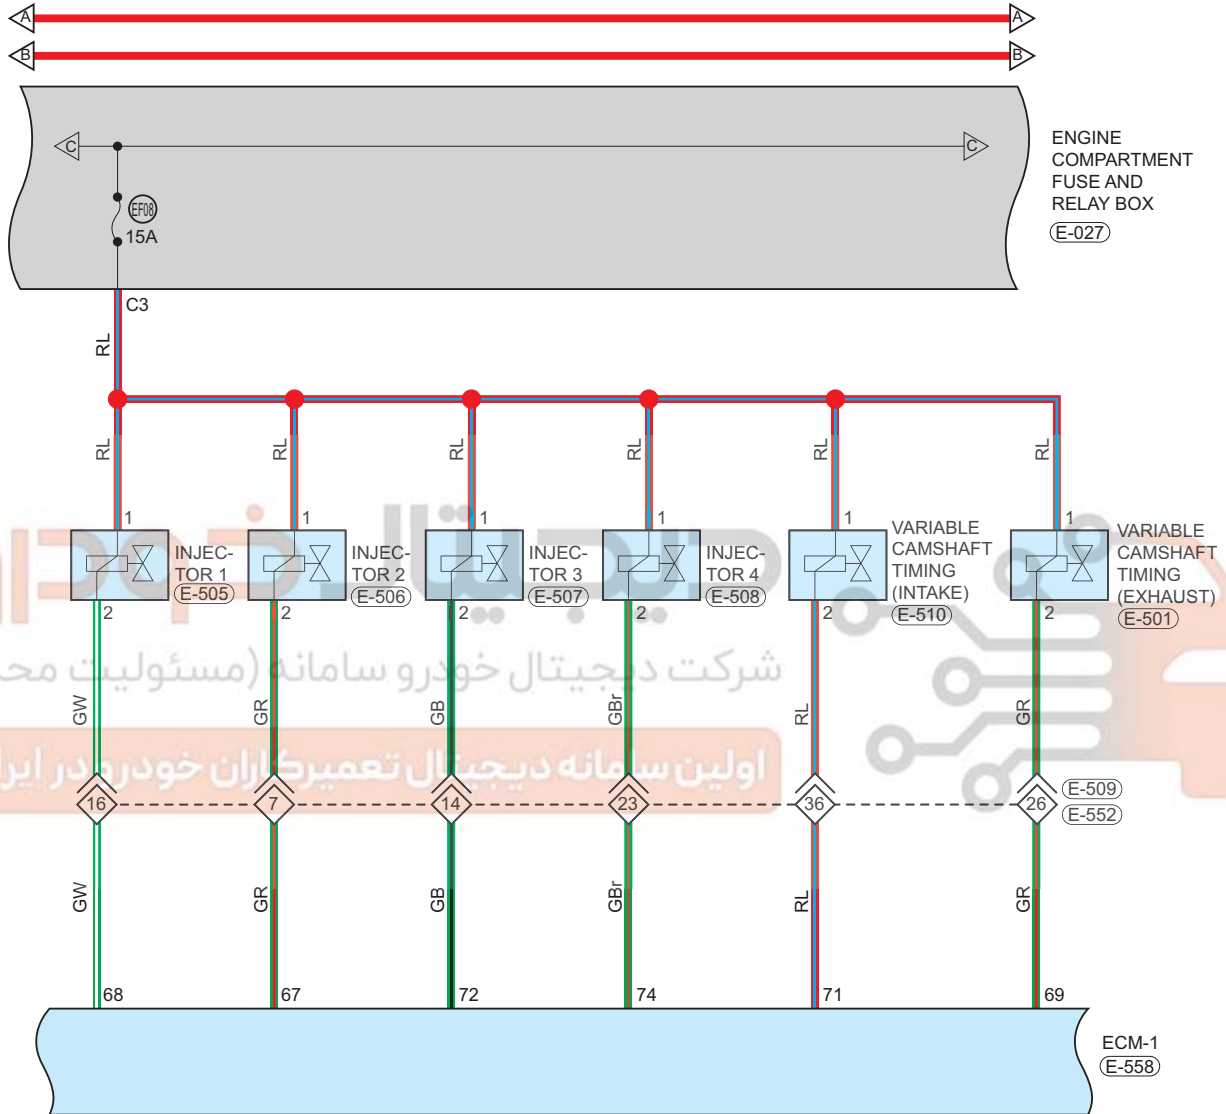

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-027	08-5	E-505	08-5	E-506	08-5
E-507	08-5	E-508	08-5	E-510	08-5
E-501	08-5	E-558	08-10		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF08	06-5	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-509, E-552	08-5, 08-10				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-027	12-2	E-505	12-6	E-506	12-6
E-507	12-6	E-508	12-6	E-510	12-6
E-501	12-6	E-558	12-7	E-509, E-552	12-6

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 4 of 8)

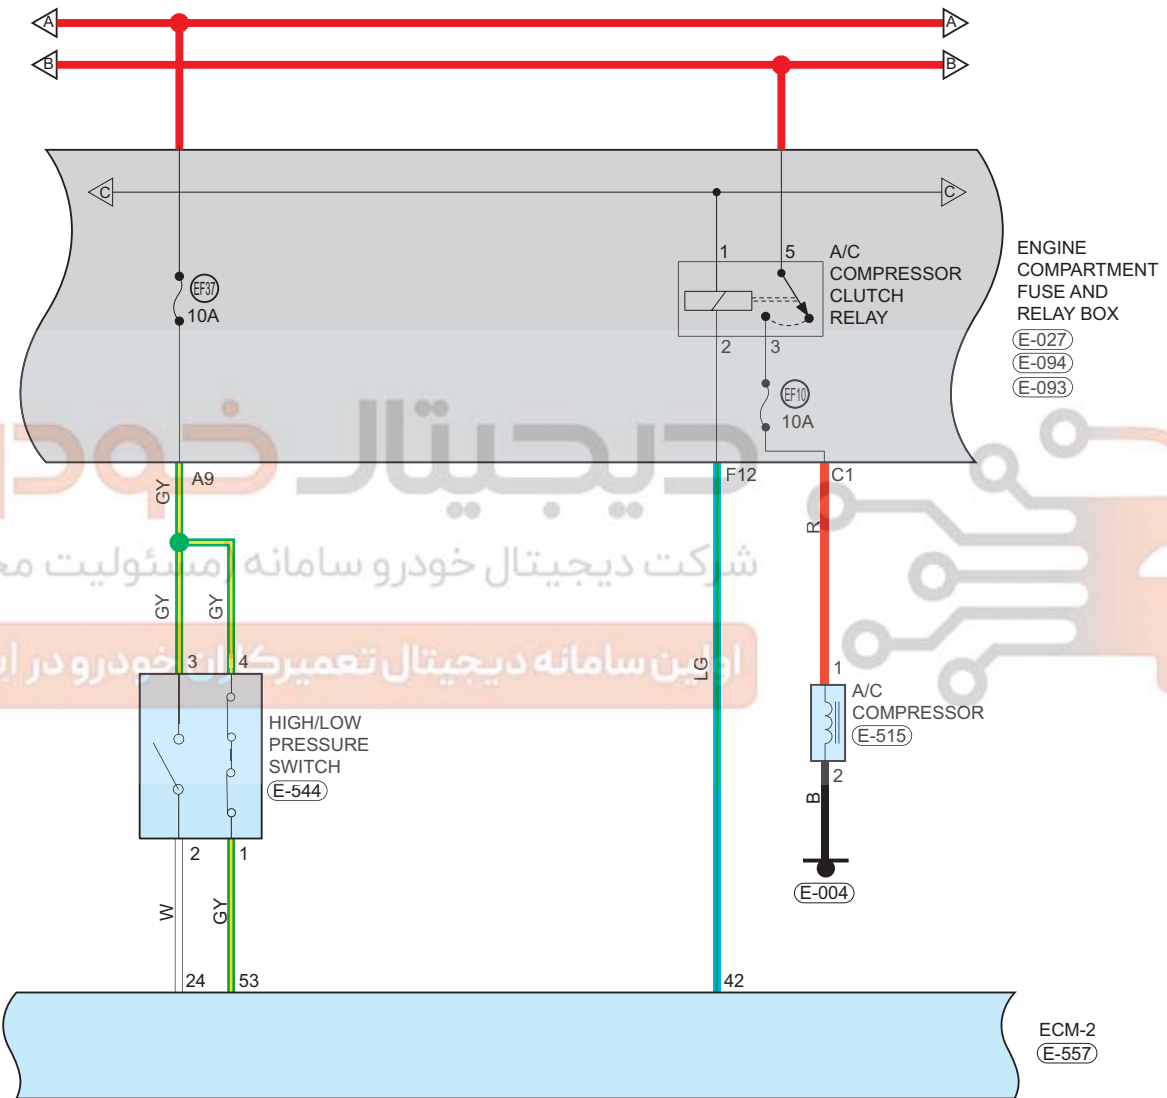

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-027	08-5	E-094	08-10	E-093	08-10
E-544	08-10	E-557	08-10	E-515	08-5
E-004	08-5				

Fuse and Relay


Fuse/Relay	See Page	Fuse and Relay Box
EF37	06-5	Engine Compartment Fuse and Relay Box
EF10	06-5	Engine Compartment Fuse and Relay Box
A/C Compressor Clutch Relay	06-5	Engine Compartment Fuse and Relay Box

Form of Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-027	12-2	E-094	12-6	E-093	12-5
E-544	12-7	E-557	12-7	E-515	12-6
E-004	12-2				

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

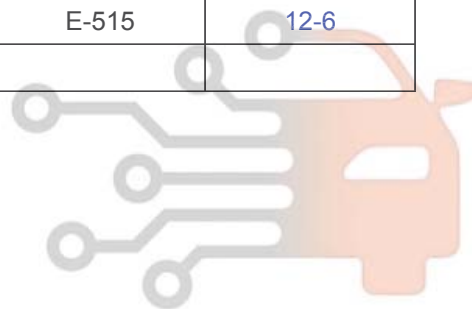

Circuit Diagram (Page 5 of 8)

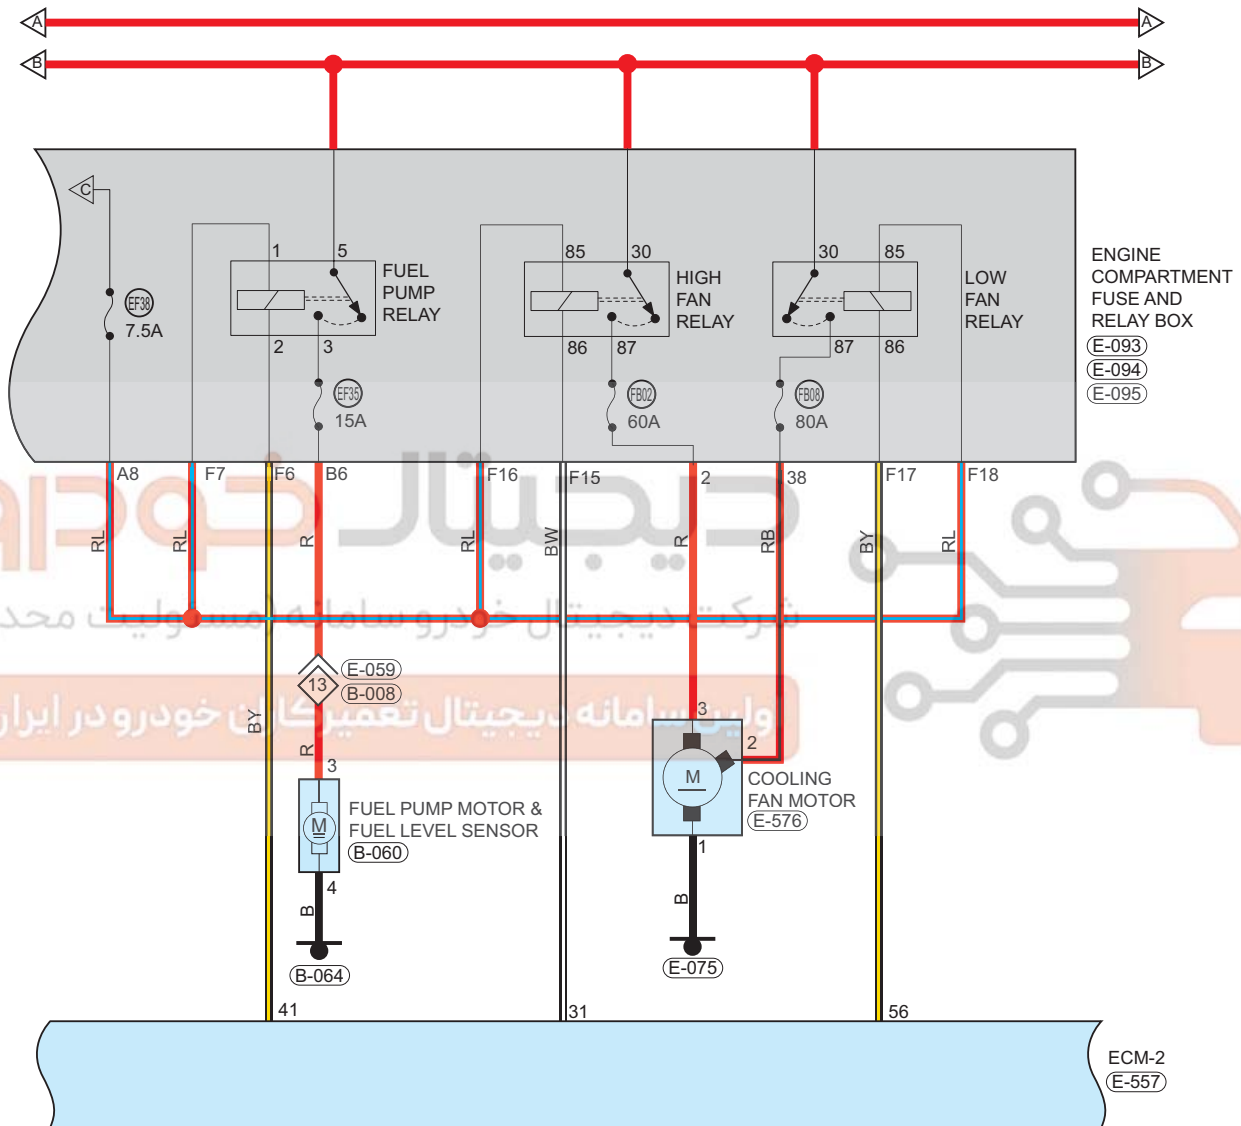

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-093	08-10	E-094	08-10	E-095	08-10
E-576	08-10	E-075	08-10	E-557	08-10
B-060	08-16	B-064	08-16		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF38	06-5	Engine Compartment Fuse and Relay Box
EF35	06-5	Engine Compartment Fuse and Relay Box
FB02	06-2	Power Fuse Box
FB08	06-2	Power Fuse Box
Fuel Pump Relay	06-5	Engine Compartment Fuse and Relay Box
High Fan Relay	06-5	Engine Compartment Fuse and Relay Box
Low Fan Relay	06-5	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-059, B-008	08-10, 08-16				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-093	12-5	E-094	12-6	E-095	12-6
E-576	12-8	E-075	12-5	E-557	12-7
B-060	12-14	B-064	12-14	E-059, B-008	12-4

Circuit Diagram (Page 6 of 8)

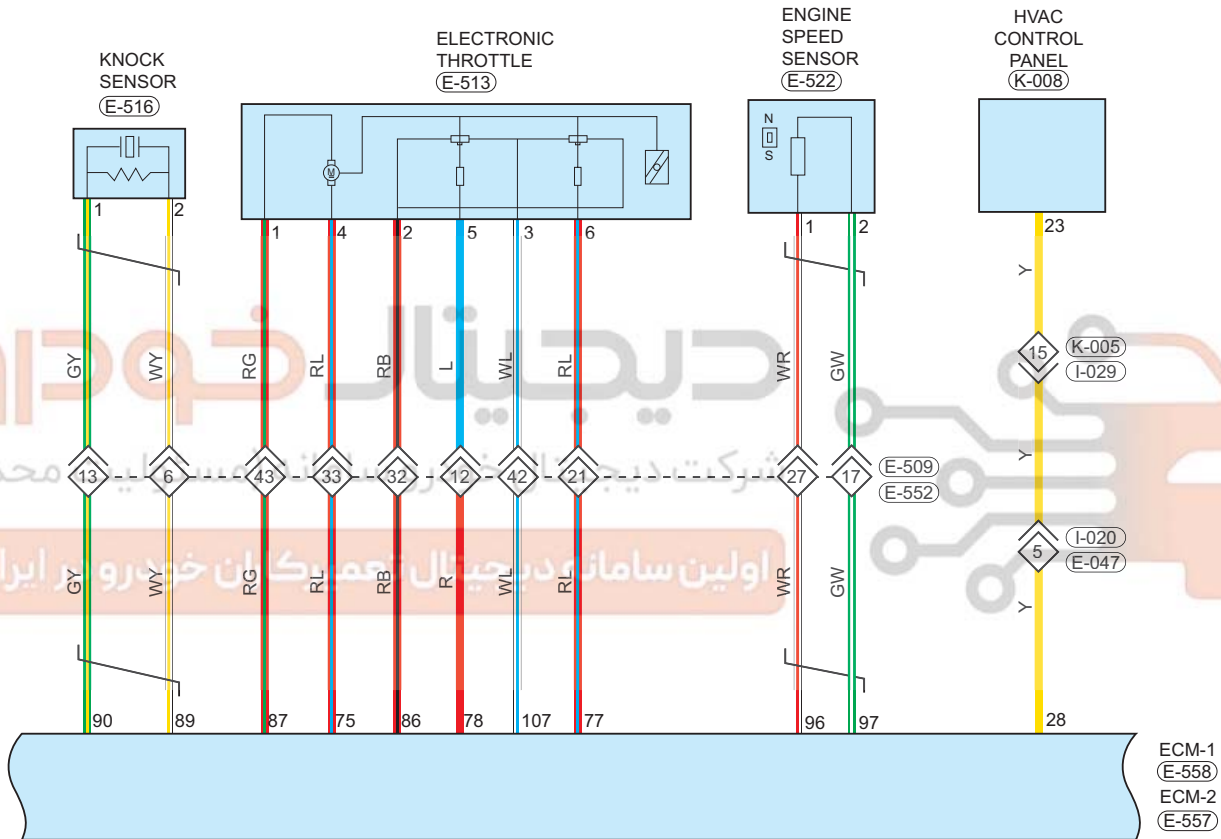

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-516	08-5	E-513	08-5	E-522	08-5
K-008	08-25	E-558	08-10	E-557	08-10

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-509, E-552	08-5, 08-10	K-005, I-029	08-25, 08-13	I-020, E-047	08-13, 08-10

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-516	12-6	E-513	12-6	E-522	12-7
K-008	12-16	E-558	12-7	E-557	12-7
E-509, E-552	12-6	K-005, I-029	12-16	I-020, E-047	12-9


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 7 of 8)

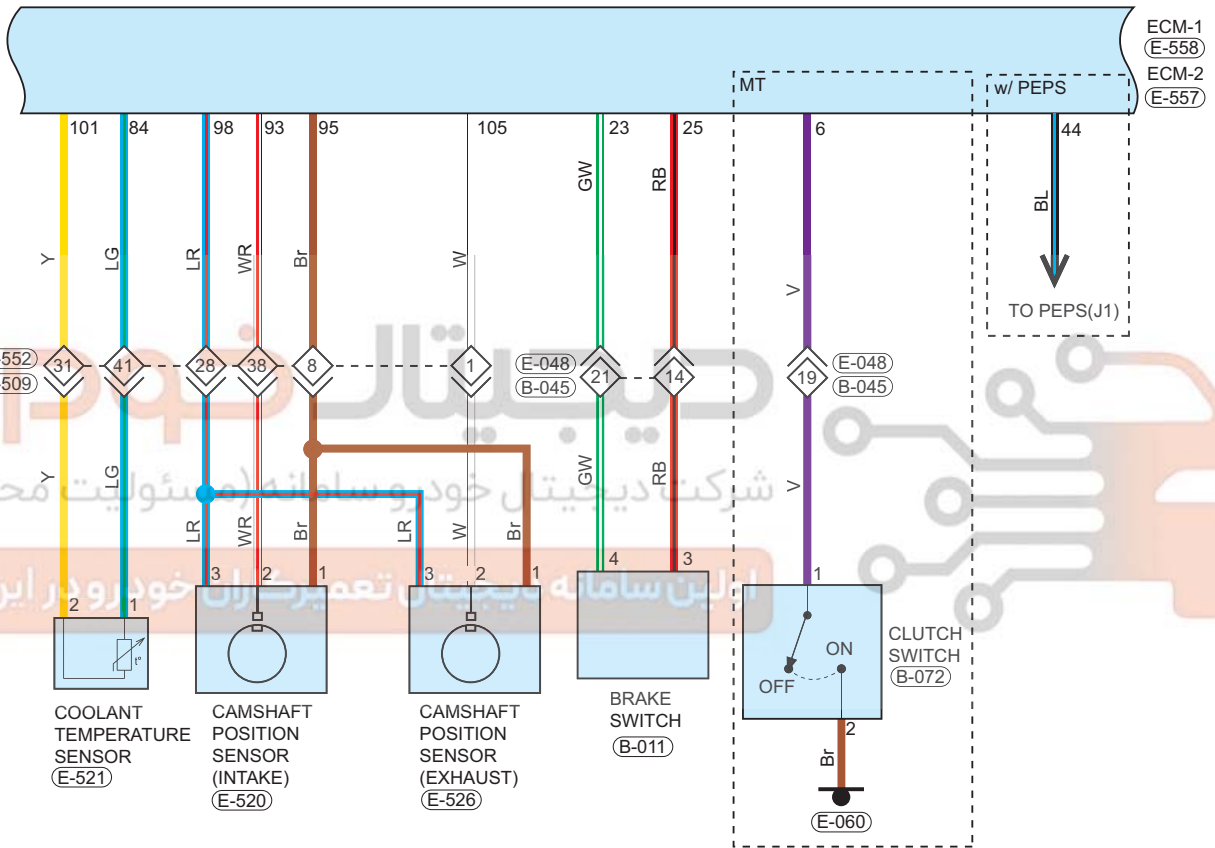

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-558	08-10	E-557	08-10	E-521	08-5
E-520	08-5	E-526	08-5	B-011	08-19
B-072	08-19	E-060	08-10		

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-552, E-509	08-10, 08-5	E-048, B-045	08-10, 08-19		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-558	12-7	E-557	12-7	E-521	12-6
E-520	12-6	E-526	12-7	B-011	12-11
B-072	12-15	E-060	12-4	E-048, B-045	12-3
E-552, E-509	12-7				

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

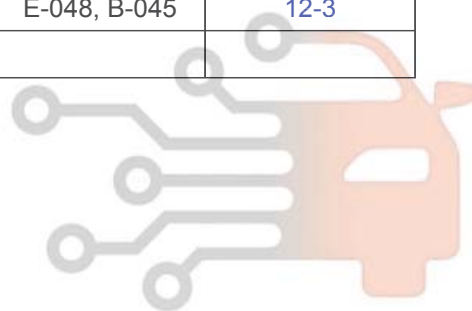

Circuit Diagram (Page 8 of 8)

