


Passive Entry & Passive Start (PEPS) System

Circuit Diagram (Page 1 of 8)

FOR 2.0L CVT

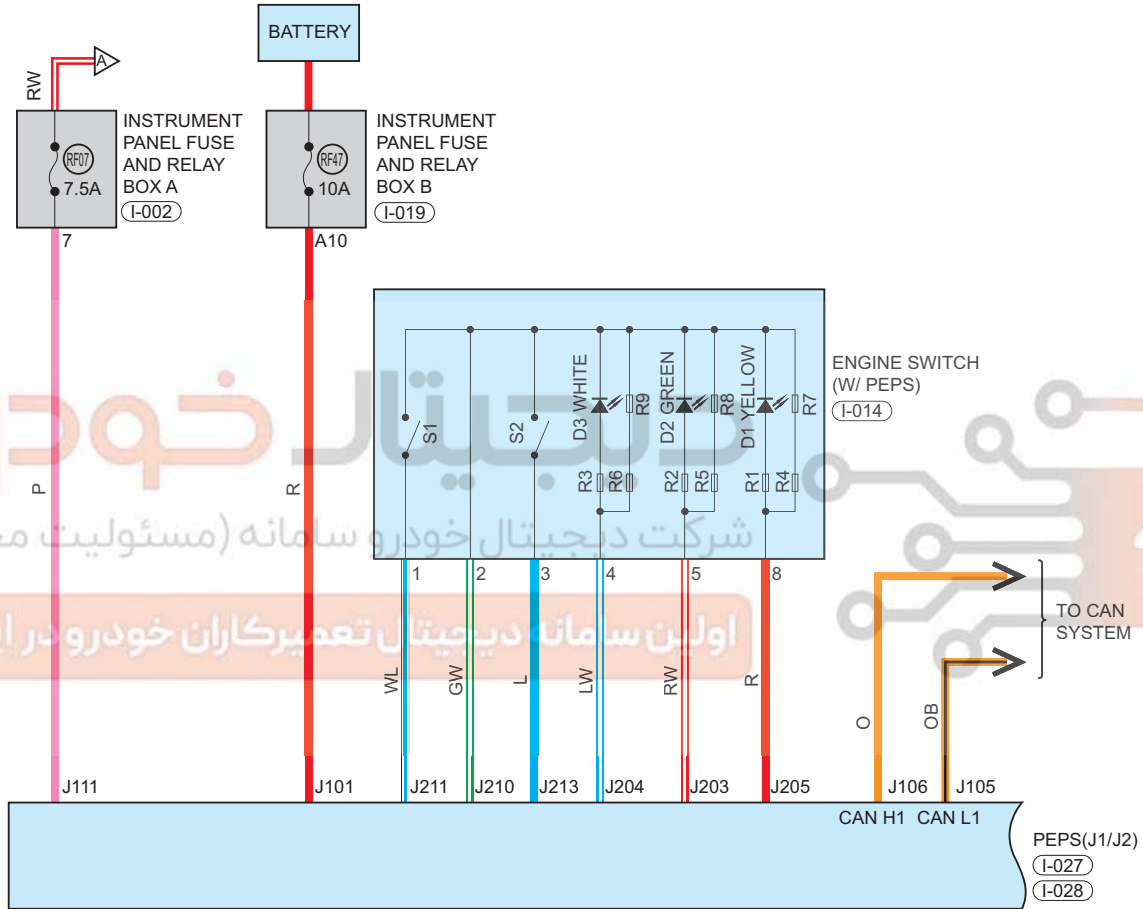

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-002	08-13	I-019	08-13	I-014	08-13
I-027	08-13	I-028	08-13		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF07	06-13	Instrument Panel Fuse and Relay Box A
RF47	06-18	Instrument Panel Fuse and Relay Box B

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-002	12-9	I-019	12-9	I-014	12-9
I-027	12-10	I-028	12-10		

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 2 of 8)

FOR 2.0L CVT

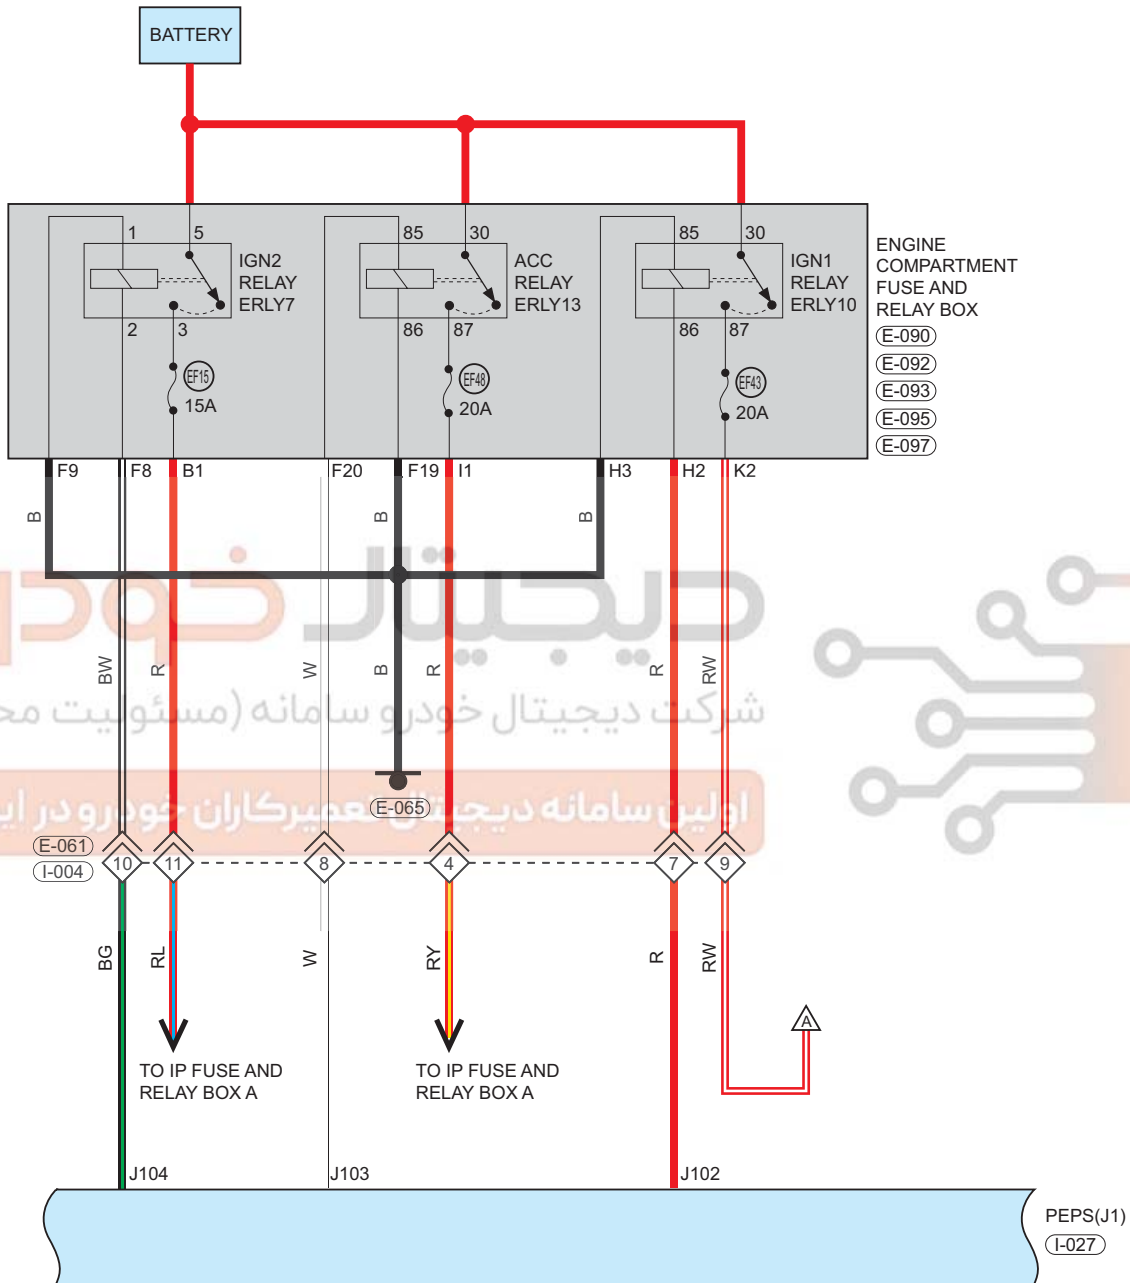

ET21090740

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-090	08-10	E-092	08-10	E-093	08-10
E-095	08-10	E-097	08-10	E-065	08-10
I-027	08-13				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF15	06-5	Engine Compartment Fuse and Relay Box
EF48	06-5	Engine Compartment Fuse and Relay Box
EF43	06-5	Engine Compartment Fuse and Relay Box
IGN2 Relay	06-5	Engine Compartment Fuse and Relay Box
ACC Relay	06-5	Engine Compartment Fuse and Relay Box
IGN1 Relay	06-5	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-061, I-004	08-10, 08-13				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-090	12-5	E-092	12-5	E-093	12-5
E-095	12-6	E-097	12-6	E-065	12-5
I-027	12-10	E-061, I-004	12-5		

Circuit Diagram (Page 3 of 8)

FOR 2.0L CVT

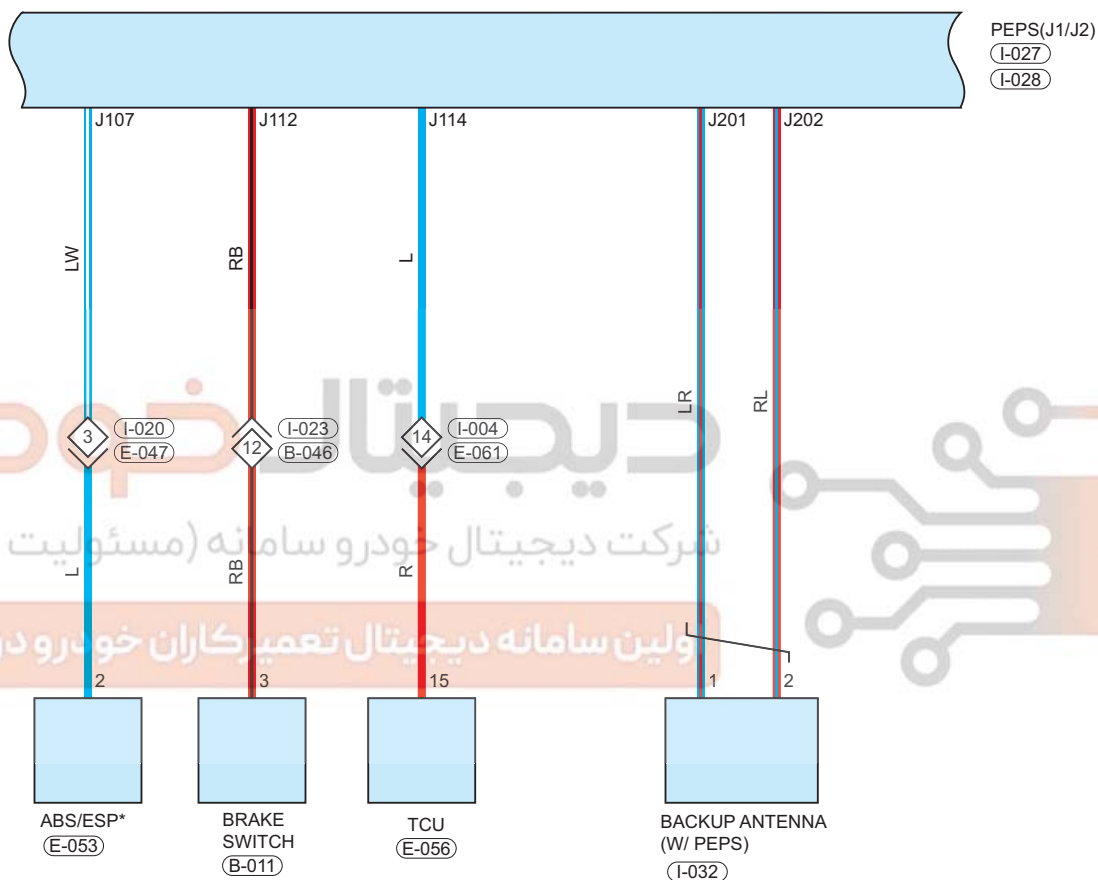

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-027	08-13	I-028	08-13	E-053	08-10
B-011	08-19	E-056	08-10	I-032	08-13

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-020, E-047	08-13, 08-10	I-023, B-046	08-13, 08-19	I-004, E-061	08-13, 08-10

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-027	12-10	I-028	12-10	E-053	12-4
B-011	12-11	E-056	12-4	I-032	12-10
I-020, E-047	12-9	I-023, B-046	12-10	I-004, E-061	12-9

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 4 of 8)

FOR 2.0L CVT

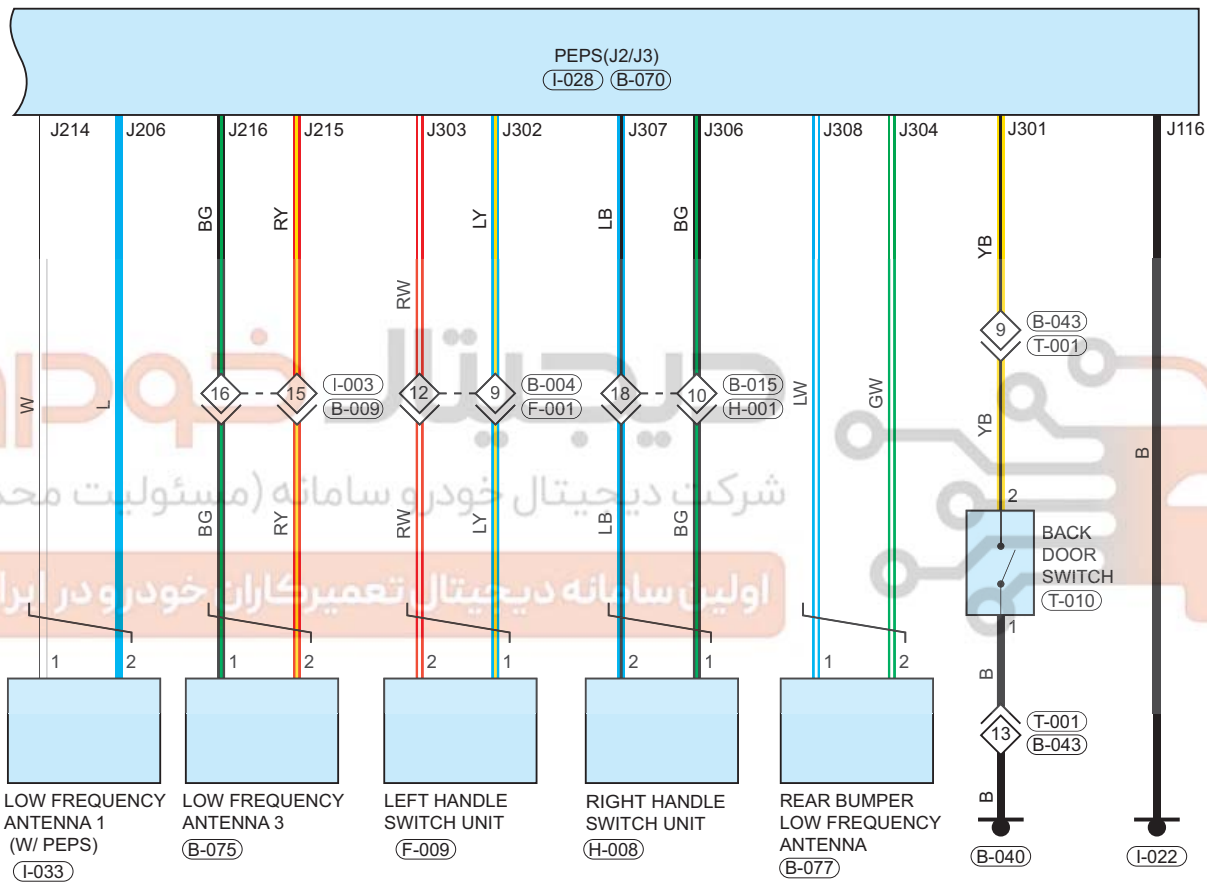

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-028	08-13	B-070	08-19	I-033	08-13
B-075	08-19	F-009	08-20	H-008	08-21
B-077	08-19	B-040	08-16	I-022	08-13
T-010	08-24				

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-003, B-009	08-13, 08-16	B-004, F-001	08-16, 08-20	B-015, H-001	08-16, 08-21
B-043, T-001	08-16, 08-24				


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-028	12-10	B-070	12-15	I-033	12-10
B-075	12-15	F-009	12-17	H-008	12-17
B-077	12-15	B-040	12-13	I-022	12-10
T-010	12-19	I-003, B-009	12-9	B-004, F-001	12-11
B-015, H-001	12-12	B-043, T-001	12-13		

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 5 of 8)

FOR 2.0L MT
FOR 1.5T MT
FOR 1.5T CVT

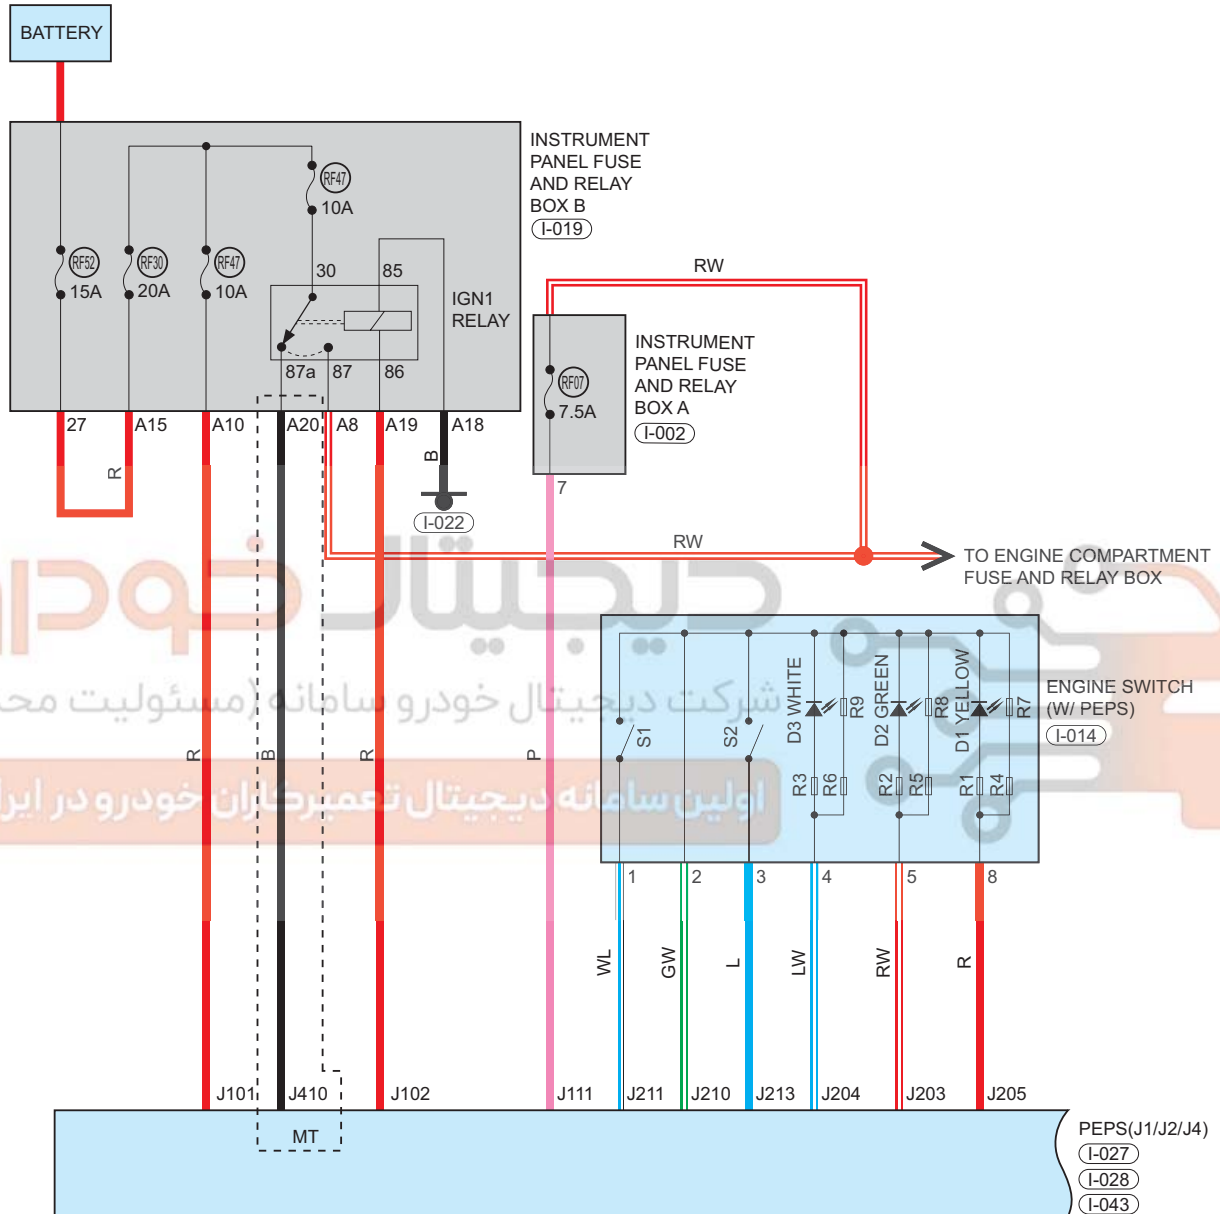

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-019	08-13	I-022	08-13	I-002	08-13
I-014	08-13	I-027	08-13	I-028	08-13
I-043	08-13				

Fuse and Relay


Fuse/Relay	See Page	Fuse and Relay Box
RF52	06-13	Instrument Panel Fuse and Relay Box A
RF30	06-18	Instrument Panel Fuse and Relay Box B
RF47	06-18	Instrument Panel Fuse and Relay Box B
RF07	06-13	Instrument Panel Fuse and Relay Box A
IGN1 Relay	06-13	Instrument Panel Fuse and Relay Box A

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-019	12-9	I-022	12-10	I-002	12-9
I-014	12-9	I-027	12-10	I-028	12-10
I-043	12-10				

Circuit Diagram (Page 6 of 8)

FOR 2.0L MT
FOR 1.5T MT
FOR 1.5T CVT

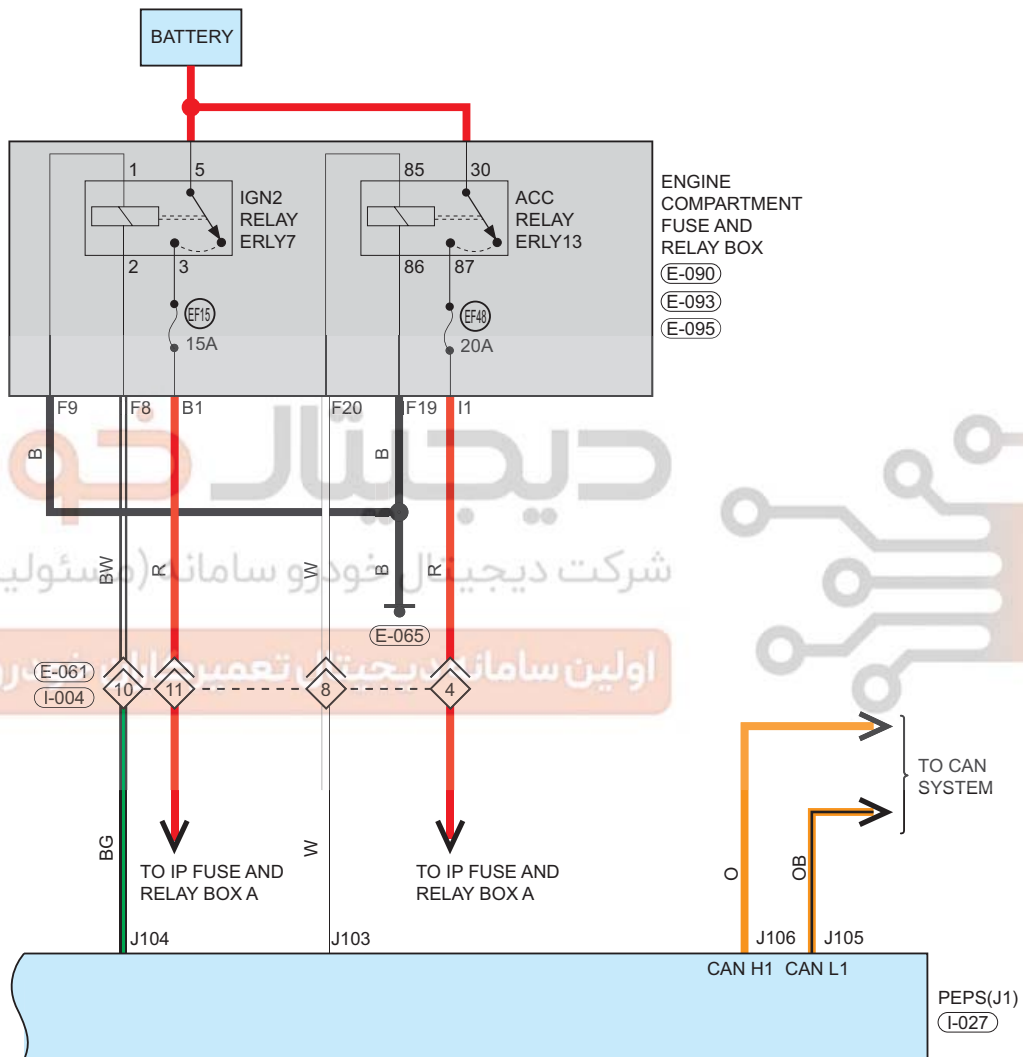

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-090	08-7	E-093	08-7	E-095	08-7
E-065	08-7	I-027	08-13		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF15	06-3	Engine Compartment Fuse and Relay Box
EF48	06-3	Engine Compartment Fuse and Relay Box
IGN2 Relay	06-3	Engine Compartment Fuse and Relay Box
ACC Relay	06-3	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-061, I-004	08-7, 08-13				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-090	12-5	E-093	12-5	E-095	12-6
E-065	12-5	I-027	12-10	E-061, I-004	12-5

Circuit Diagram (Page 7 of 8)

FOR 2.0L MT
FOR 1.5T MT
FOR 1.5T CVT

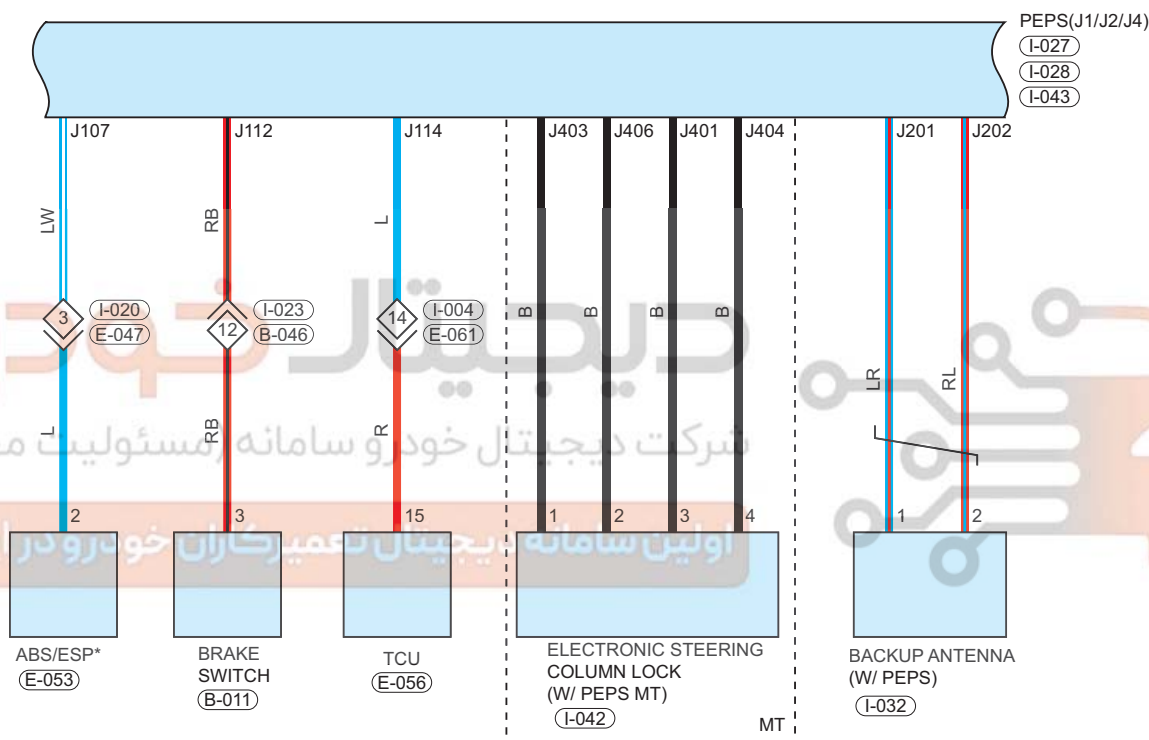

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-027	08-13	I-028	08-13	I-043	08-13
I-032	08-13	I-042	08-13	E-056	08-7
B-011	08-19	E-053	08-7		

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004, E-061	08-13, 08-7	I-020, E-047	08-13, 08-7	I-023, B-046	08-13, 08-19

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-027	12-10	I-028	12-10	I-043	12-10
I-032	12-10	I-042	12-10	E-056	12-4
B-011	12-11	E-053	12-4	I-023, B-046	12-10
I-004, E-061	12-9	I-020, E-047	12-9		

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

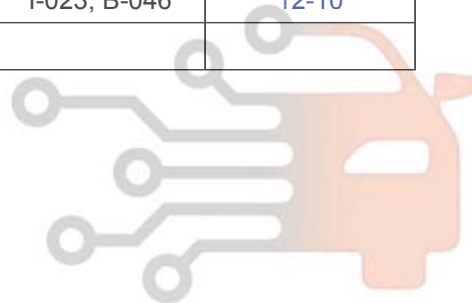

Circuit Diagram (Page 8 of 8)

FOR 2.0L MT
FOR 1.5T MT
FOR 1.5T CVT

