

Direction Indicators/Side Repeaters/Hazard Warning Lamps

item code	description	information
0004	null	/ instrument panel
1032	null	electrical supplies protection and management unit
2300	null	hazard warning switch
2407	null	front left lamp unit
2408	null	front right lamp unit
2630	null	rear left lamp on body
2635	null	rear right lamp on body
6410	null	left-hand electric and heated exterior mirror
6415	null	right-hand electric and heated exterior mirror
AE00	null	electric steering lock
BB00	null	ancillaries battery
BSI1	null	built-in systems interface
CA00	null	ignition switch
CV00	null	control under the steering wheel
E917A	null	crimp one information (or equipotential 917A) wire
E918A	null	crimp one information (or equipotential 918A) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E953	null	crimp one information (or equipotential 953) wire
EM16	null	crimp earth (earth point number 16)
EM20A	null	crimp earth (earth point number 20A)
EM30A	null	crimp earth (earth point number 30A)
EM40A	null	crimp earth (earth point number 40A)
EM40C	null	crimp earth (earth point number 40C)
EM51B	null	crimp earth (earth point number 51B)
EM53	null	crimp earth (earth point number 53)
EM70	null	crimp earth (earth point number 70)
EM71	null	crimp earth (earth point number 71)
MC10	null	body earth point number 10
MC16B	null	body earth point number 16B
MC30B	null	body earth point number 30B
MC40B	null	body earth point number 40
MC40C	null	body earth point 40C
MC53B	null	body earth point number 53B
MM01	null	engine earth point number 01
PSF1	null	engine compartment connection board-fuse box