



A/C System Power Supply, Grounding, Signal - Manual A/C

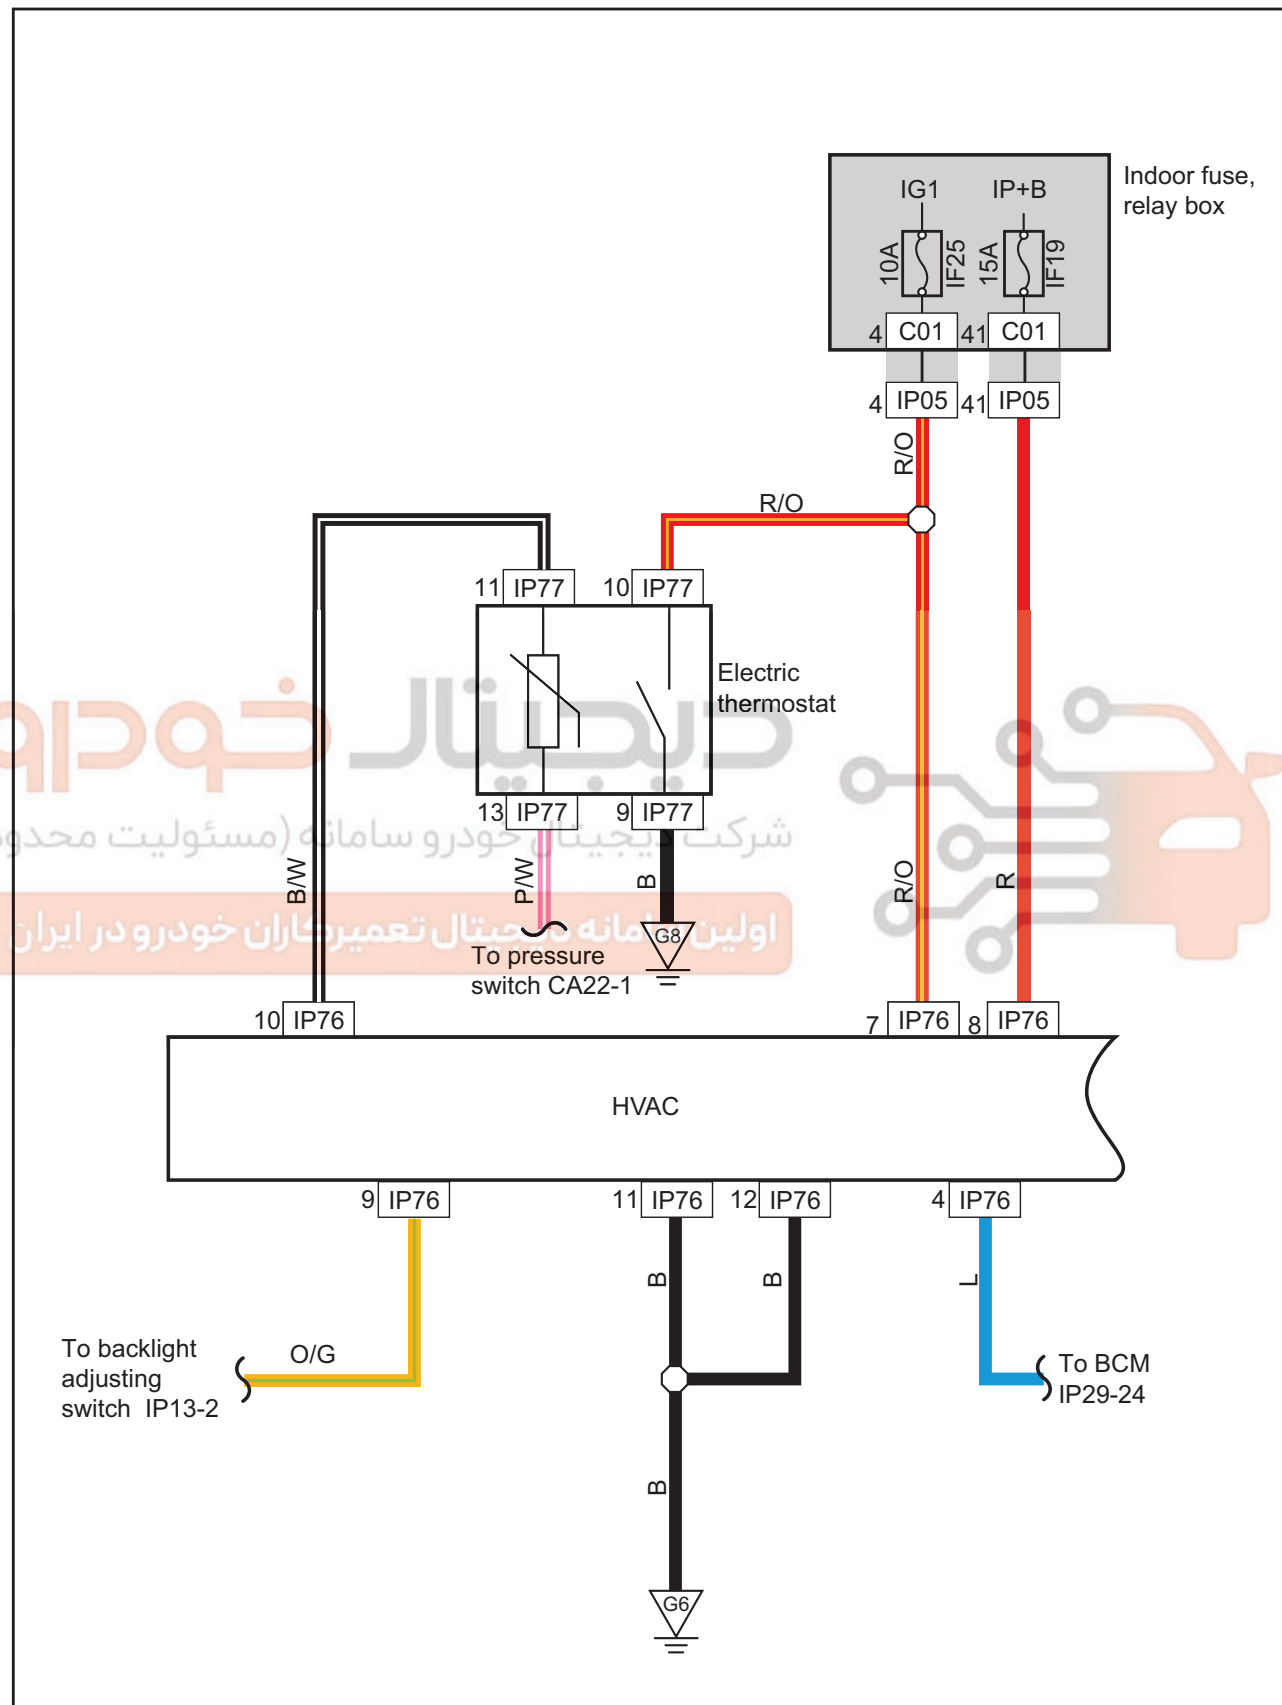

A/C System Power Supply, Grounding, Signal - Auto A/C

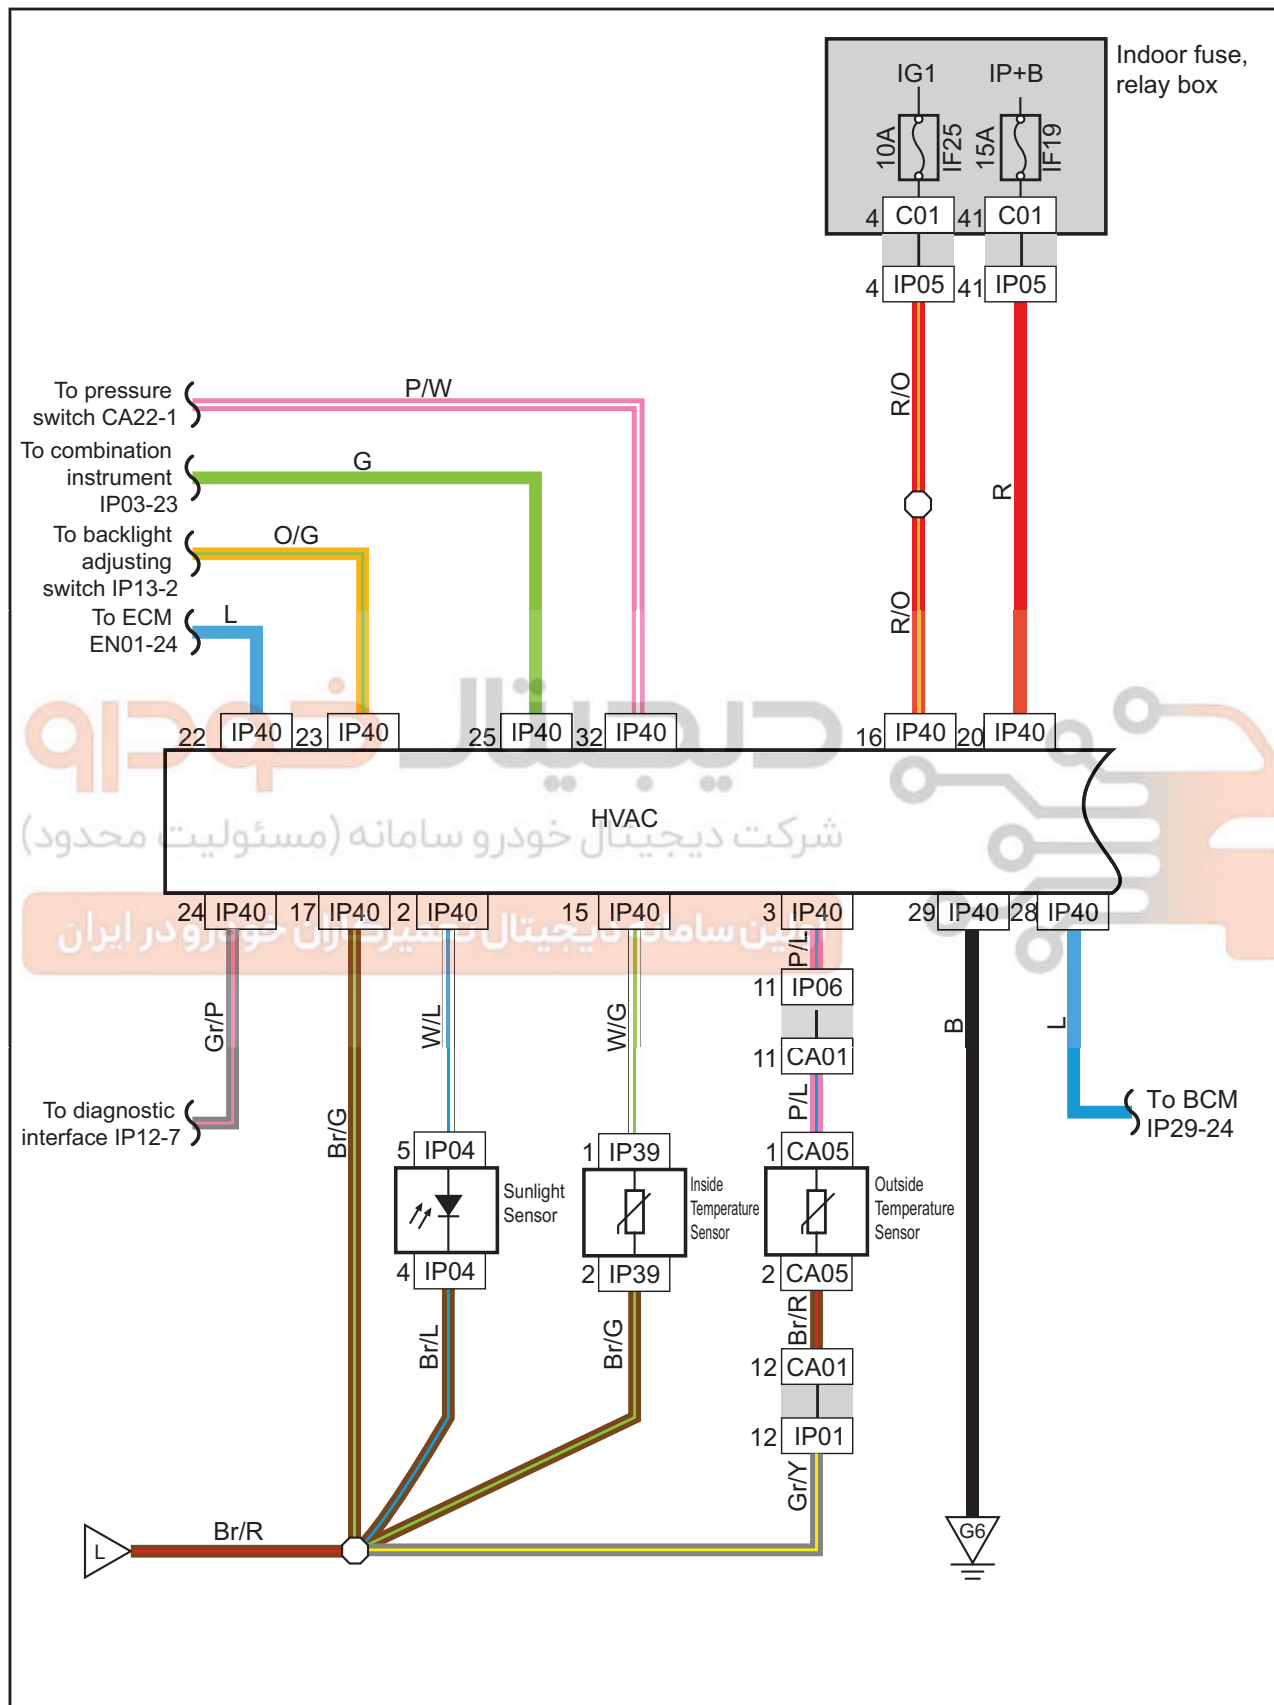

Harness connector	Name	Pages
C01	Rear Connector of Indoor Fuse Box	17
CA01	To harness connector of instrument harness	22
CA05	To harness connector of engine compartment fuse & relay box	23
IP01	Multi-functional instrument harness connector	80
IP04	Sunlight sensor harness connector	80
IP05	To harness connector of indoor fuse & relay box	80
IP06	To engine compartment harness connector	80
IP39	Inside Temperature Sensor	80
IP40	A/C control module harness connector	80
IP76	Manual A/C control module harness connector	89
IP77	Manual A/C actuator harness connector	89
G6	INSTRUMENT PANEL GROUNDING	125

Connection point	Name	Pages
IP40-22	To ECM EN01-24	447
IP40-23	To backlight adjusting switch IP13-2	517
IP76-9		518
IP40-24	To diagnostic interface IP12-7	548
IP40-25	To combination instrument IP03-23	524/522
IP76-4	To BCM IP29-24	447/449
IP40-28		447/449
IP77-13	To pressure switch CA22-1	368/372/374
IP40-32		364/366/368 370/372/374 376/378/380
L	Internal low reference circuit from sensor to module	385