


Door Lock

Circuit Diagram (Page 1 of 3)

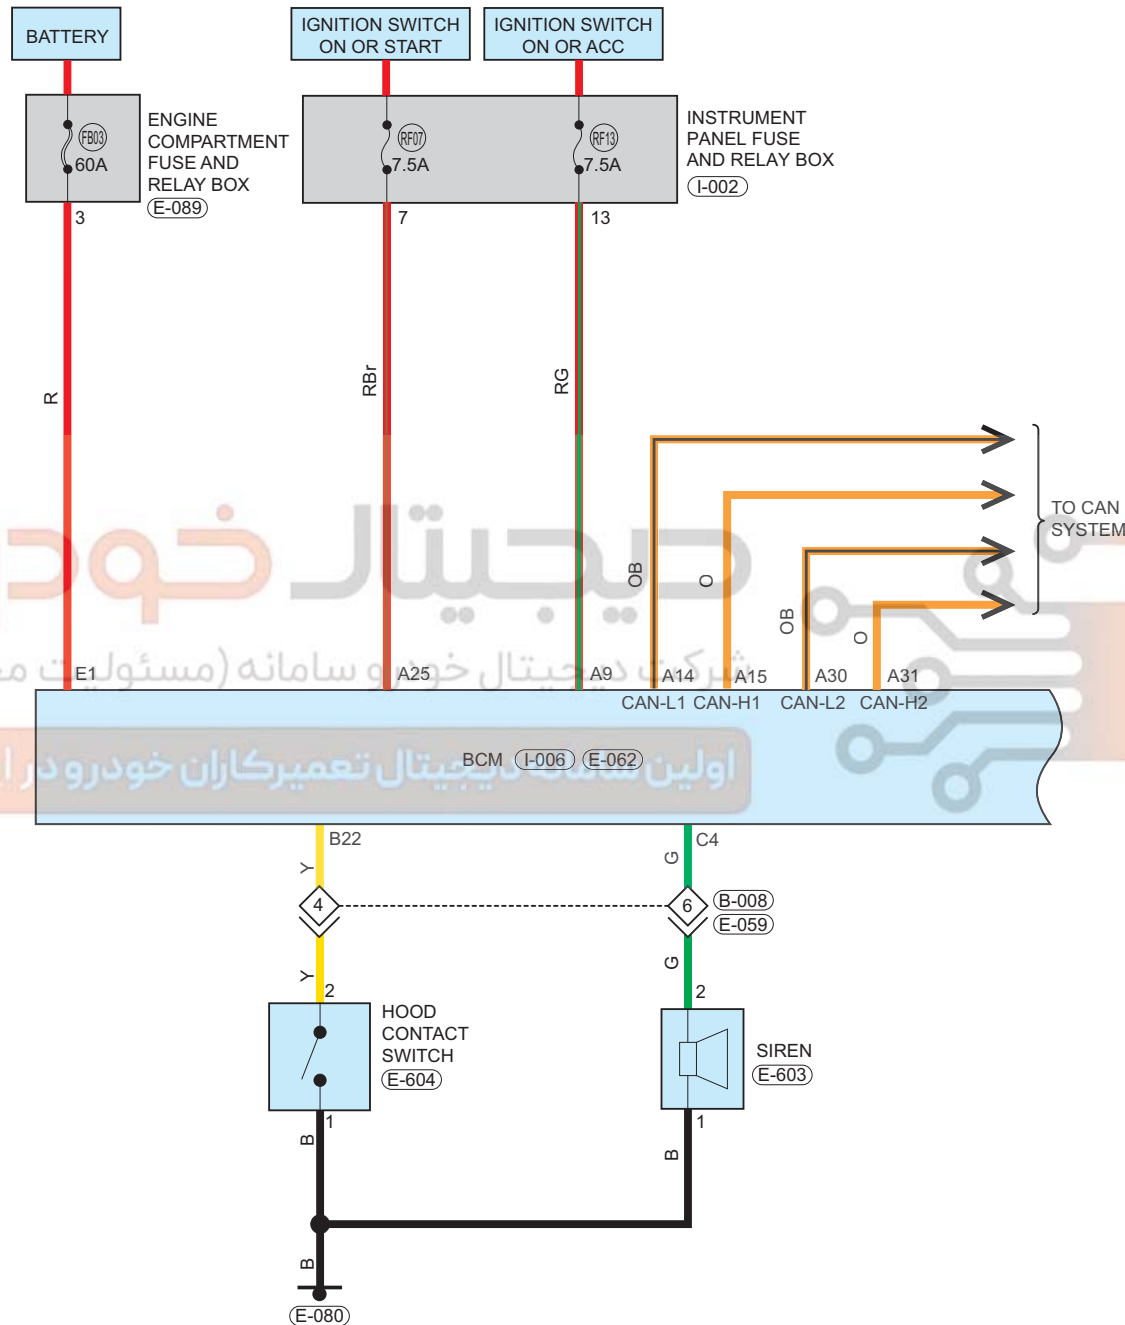

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-089	08-7	I-002	08-13	I-006	08-13
E-062	08-7				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
FB03	06-2	Power Fuse Box
RF07	06-13	Instrument Panel Fuse and Relay Box A
RF13	06-13	Instrument Panel Fuse and Relay Box A

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-089	12-5	I-002	12-9	I-006	12-9
E-062	12-5				


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 2 of 3)

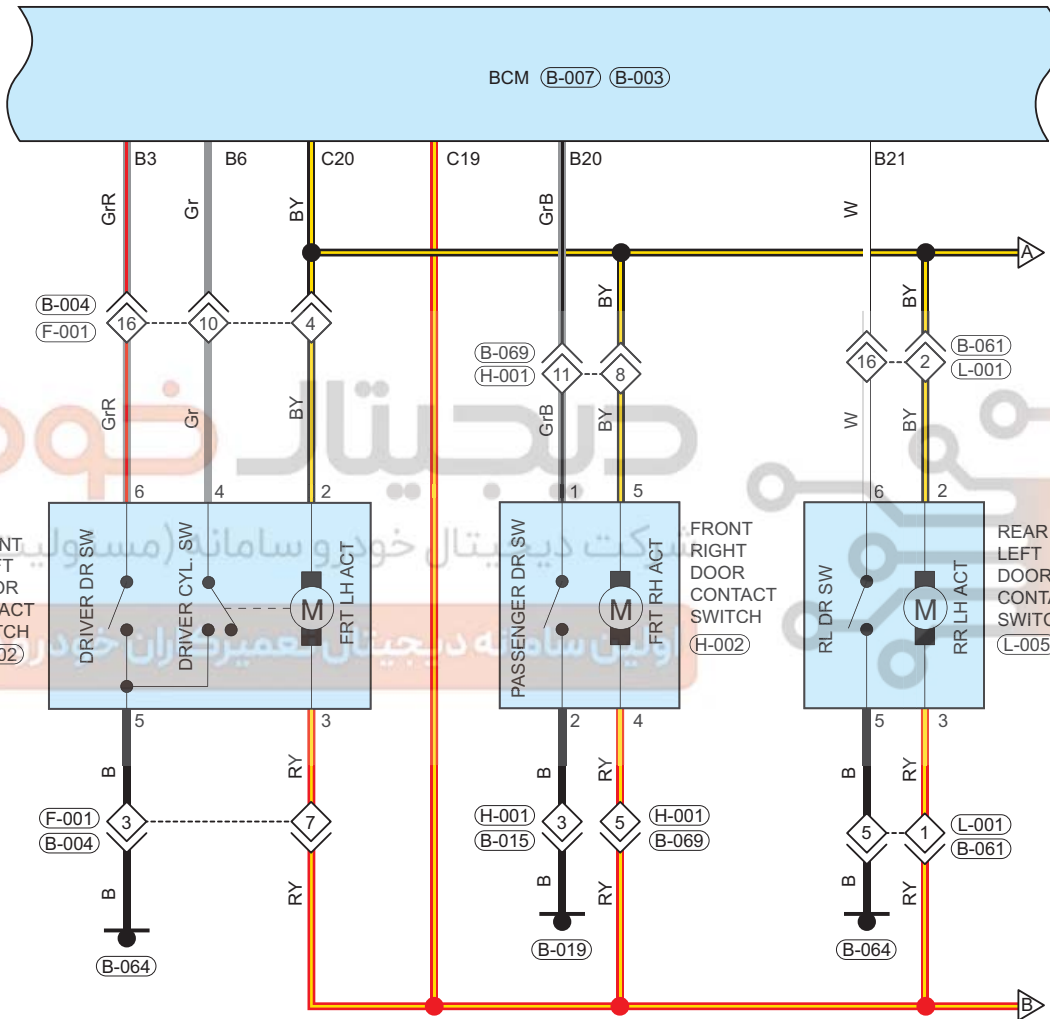

ET21091060

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-007	08-16	B-003	08-16	F-002	08-20
B-064	08-16	B-019	08-16	L-005	08-22
H-002	08-21				

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-004, F-001	08-16, 08-20	B-069, H-001	08-16, 08-21	H-001, B-015	08-21, 08-16
B-061, L-001	08-16, 08-22				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-007	12-11	B-003	12-11	F-002	12-17
B-064	12-14	B-019	12-12	L-005	12-18
H-002	12-17	B-061, L-001	12-14	H-001, B-015	12-17
B-004, F-001	12-11	B-069, H-001	12-15		

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

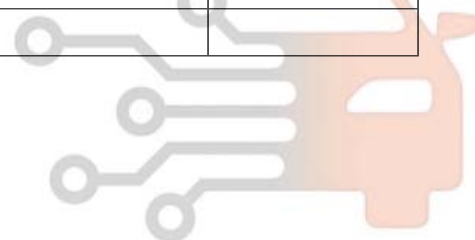

Circuit Diagram (Page 3 of 3)

