


Position lamp (Hatch)

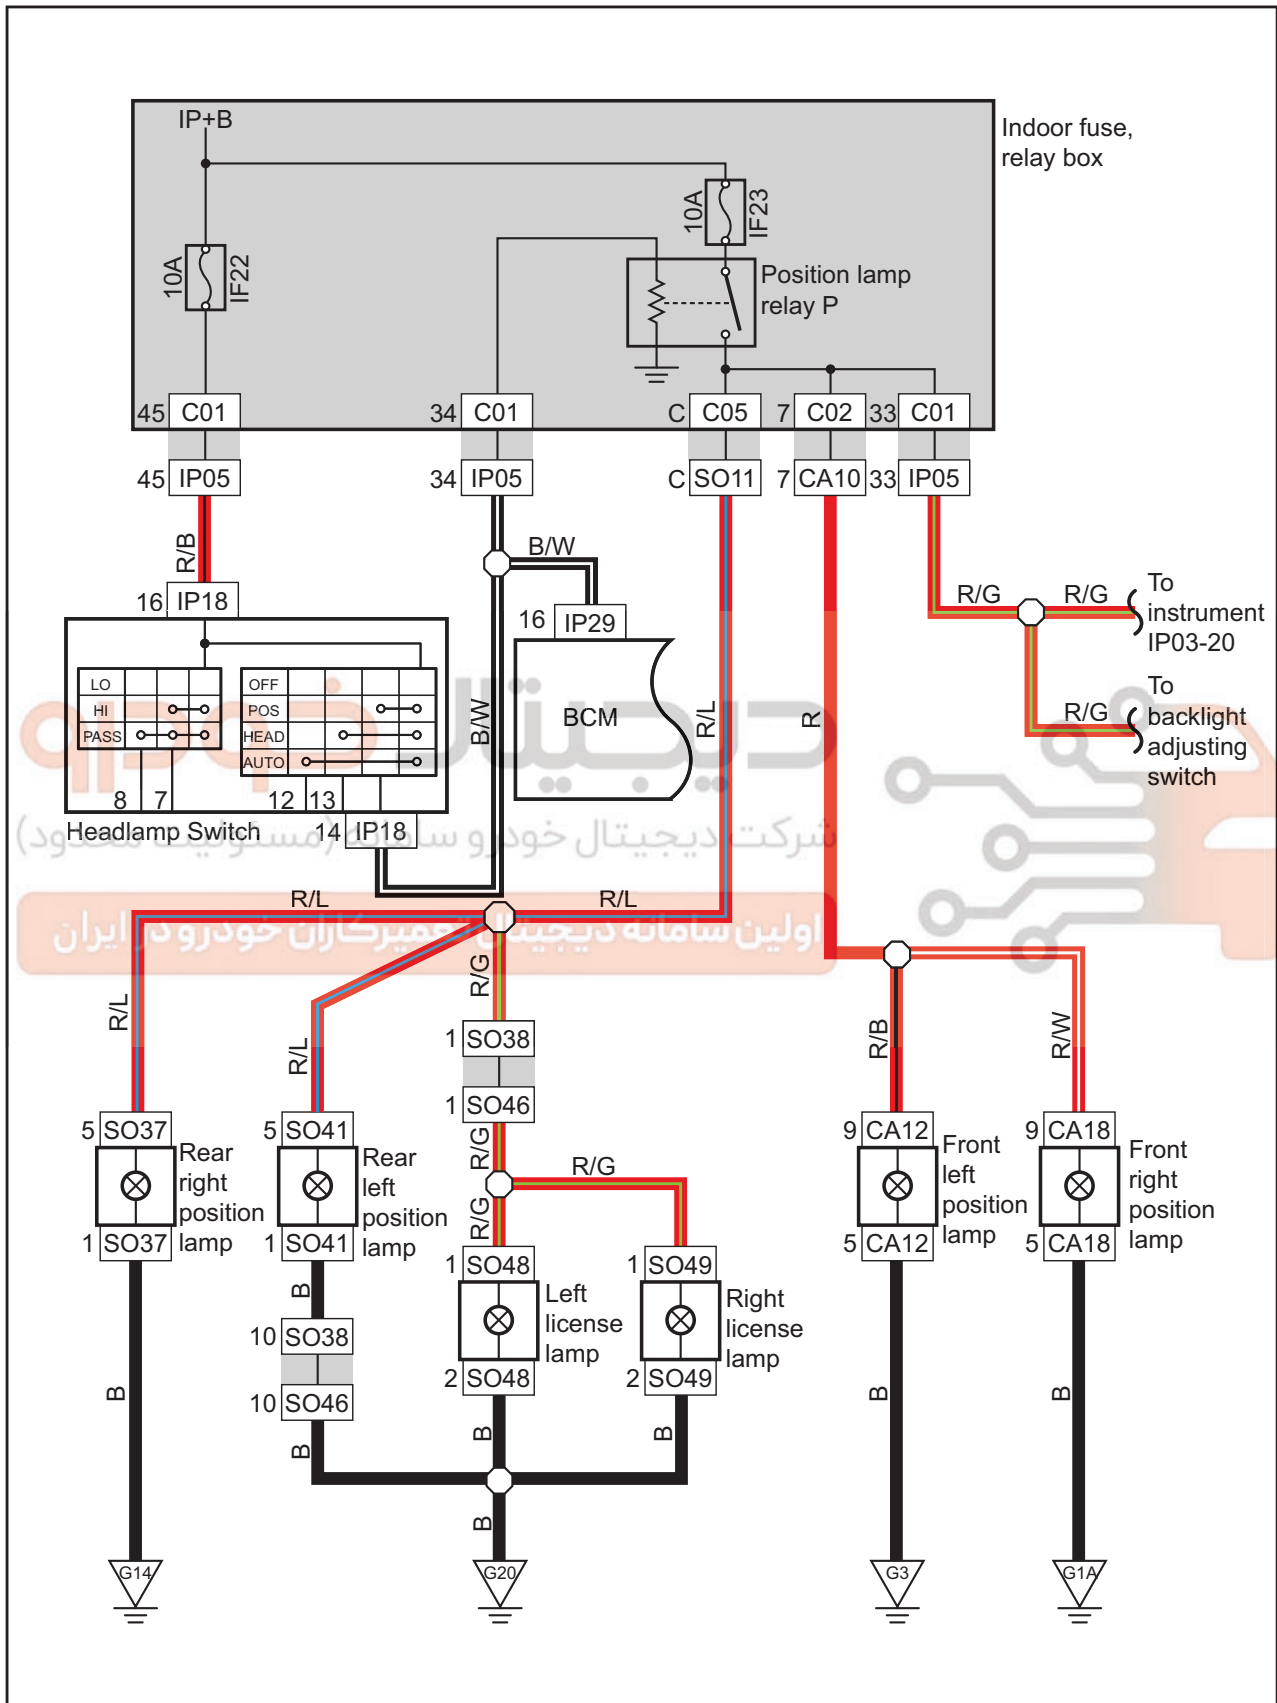

Harness connector	Name	Pages
C01	Rear Connector of Indoor Fuse Box	17
C02	Rear Connector of Indoor Fuse Box	17
C05	Rear Connector of Indoor Fuse Box	17
CA10	To harness connector 3 of engine compartment fuse & relay box	22
CA12(hatch)	Harness connector of front left combination headlamp	23
CA18 (hatch)	Harness connector of front right combination headlamp	23
IP05	To harness connector of indoor fuse & relay box	80
IP18	Headlamp combination switch harness connector	80
IP29	Harness connector of body control module 1	80
SO11	To harness connector of indoor fuse & relay box	97/106
SO37	Harness connector of rear right combination tail lamp	97/106
SO38 (Hatch)	To harness connector of tail door	106
SO41 (Hatch)	Harness connector of rear left combination tail lamp	106
SO46 (Hatch)	To body harness connector	107
SO48 (Hatch)	Harness connector of left license lamp	107
SO49(Hatch)	Harness connector of right license lamp	107
G1A	Engine compartment grounding	121
G3	Engine compartment grounding	121
G14	Body harness grounding (Hatch)	128
G20	Backdoor grounding (Hatch)	129

Connection point	Descriptions	Pages
IP05-33	To backlight adjusting switch	517
IP05-33	To instrument IP03-20	528