


# Door Lock

Circuit Diagram (Page 1 of 3)

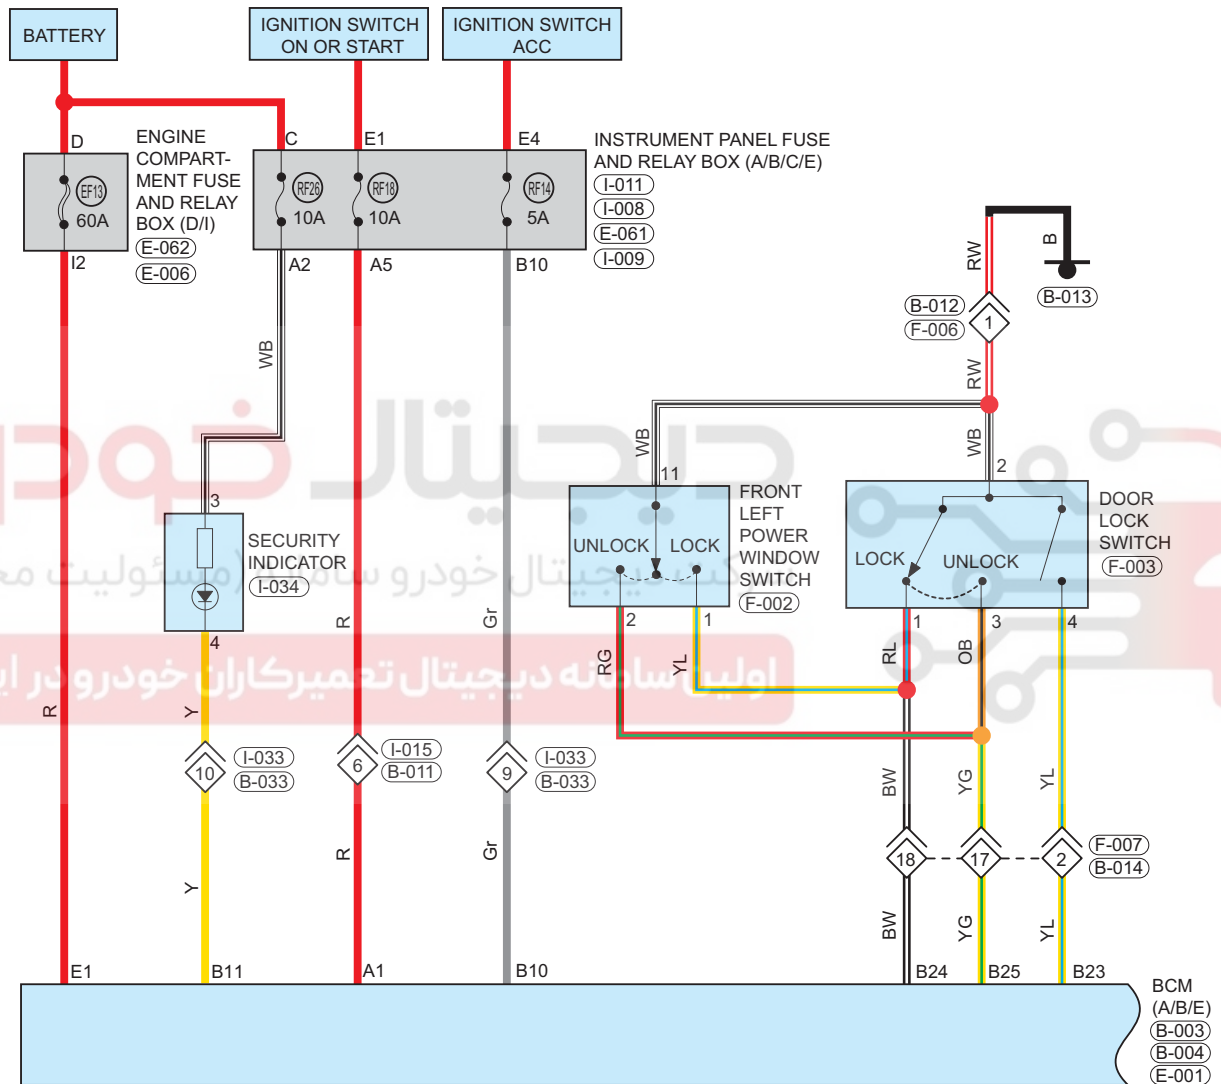

09

ET11090590

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	08-4 (MT)	E-006	08-4 (MT)	E-061	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
E-001	08-4 (MT)	I-011	08-12	I-009	08-12
	08-7 (CVT)				
I-034	08-12	B-013	08-17	F-002	08-19
F-003	08-19	B-003	08-17	B-004	08-17
I-008	08-12				

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF13	06-5	Engine Compartment Fuse and Relay Box
RF14	06-12	Instrument Panel Fuse and Relay Box
RF18	06-12	Instrument Panel Fuse and Relay Box
RF26	06-12	Instrument Panel Fuse and Relay Box


## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-033, B-033	08-12, 08-17	I-015, B-011	08-12, 08-17	B-012, F-006	08-17, 08-19
F-007, B-014	08-19, 08-17				

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	12-4	E-006	12-2	I-011	12-8
I-008	12-8	E-061	12-4	I-009	12-8
I-034	12-10	B-013	12-13	F-002	12-16
F-003	12-16	B-003	12-12	B-004	12-12
E-001	12-2	I-033, B-033	12-10	I-015, B-011	12-9
B-012, F-006	12-13	F-007, B-014	12-16		

Circuit Diagram (Page 2 of 3)

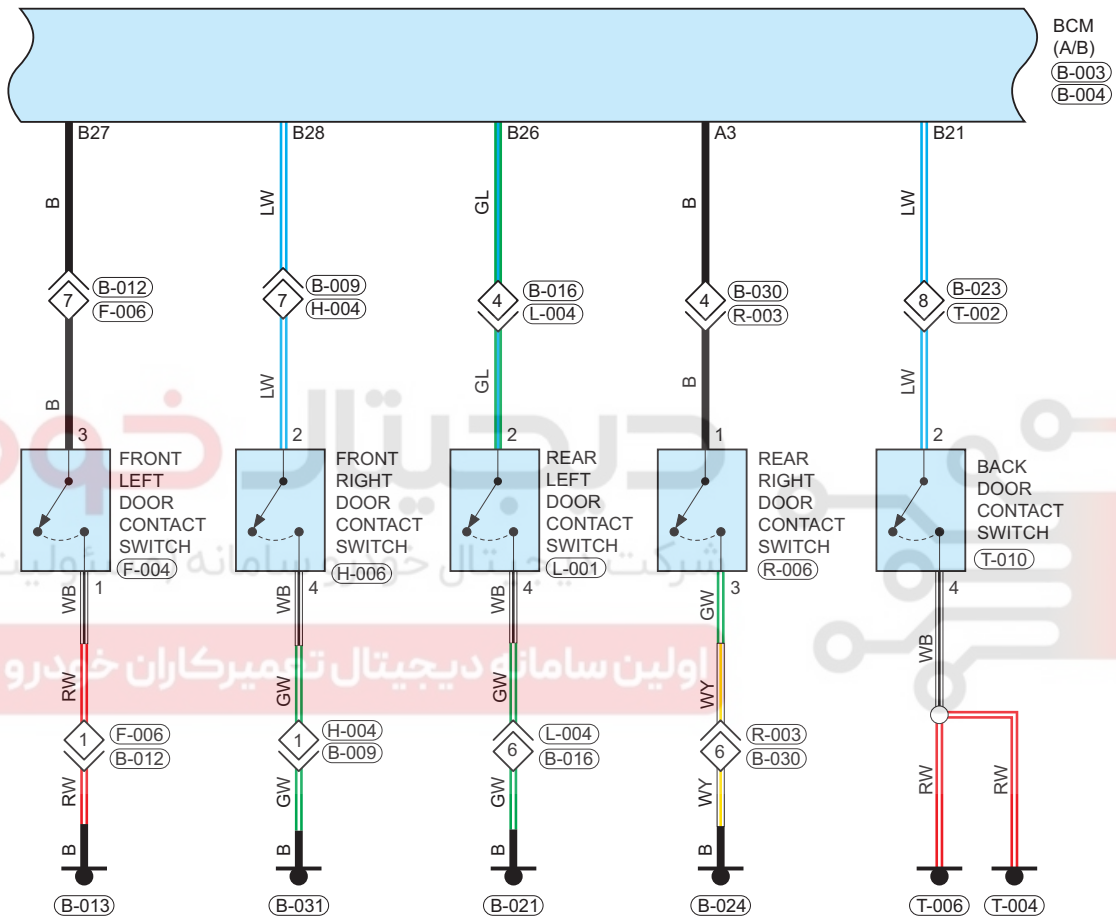

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

ET11090600

**Parts Location**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-003	08-17	B-004	08-17	F-004	08-19
H-006	08-20	L-001	08-21	R-006	08-22
T-010	08-23	B-013	08-17	B-031	08-17
B-021	08-17	B-024	08-17	T-006	08-23
T-004	08-23				


**Location of Junction Connector**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-012, F-006	08-17, 08-19	B-009, H-004	08-17, 08-20	B-016, L-004	08-17, 08-21
B-030, R-003	08-17, 08-22	B-023, T-002	08-17, 08-23		

**Form of Connector**

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-003	12-12	B-004	12-12	F-004	12-16
H-006	12-17	L-001	12-18	R-006	12-18
T-010	12-19	B-013	12-13	B-031	12-14
B-021	12-14	B-024	12-14	T-006	12-19
T-004	12-19	B-012, F-006	12-13	B-009, H-004	12-13
B-016, L-004	12-13	B-030, R-003	12-14	B-023, T-002	12-14

Circuit Diagram (Page 3 of 3)

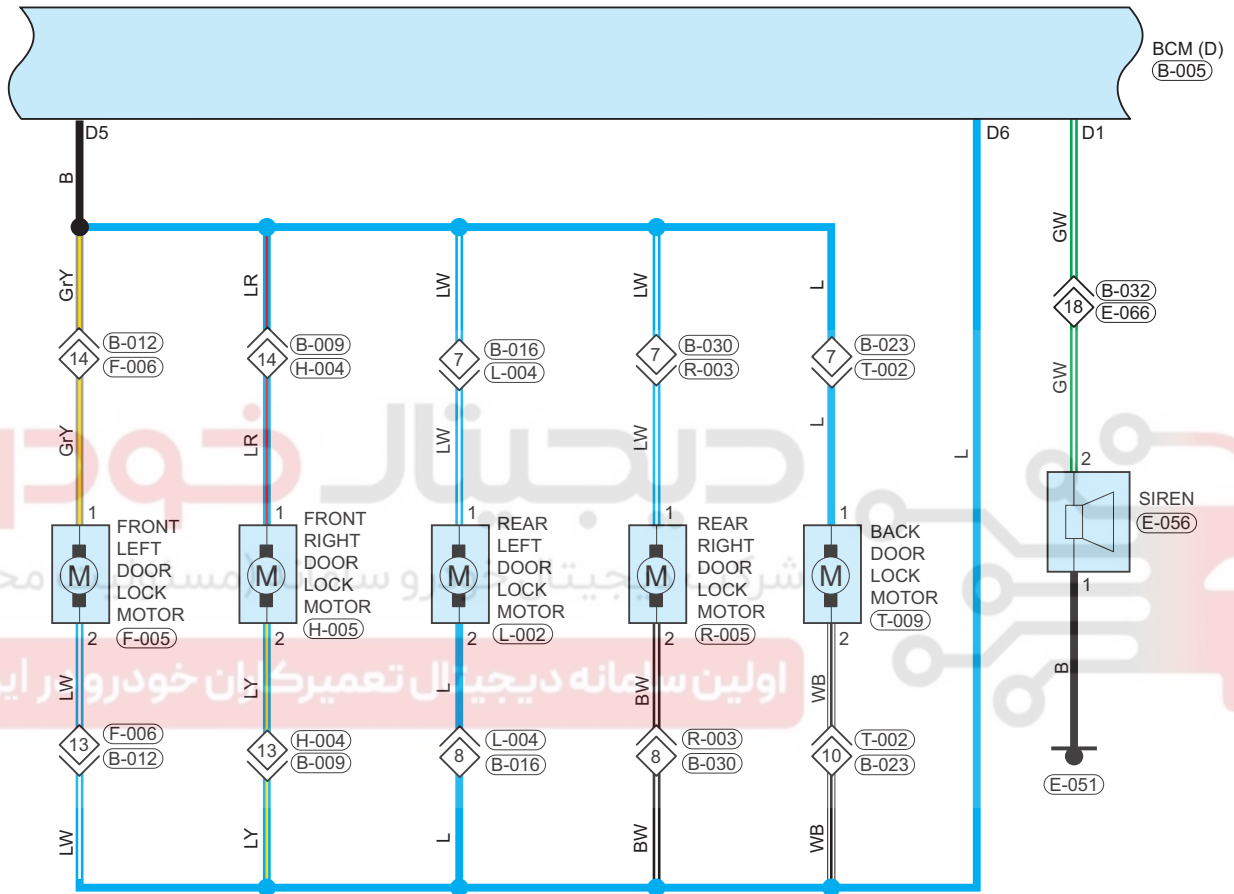

09

ET11090610