



## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	E-063	08-5 (MT) 08-7 (AT)	I-032	08-10
E-028	08-5 (MT) 08-7 (AT)	I-033	08-10	I-004	08-10
I-034	08-10	I-016	08-10	B-004	08-12
I-011	08-10				

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
MF05	06-2	Engine Compartment Fuse and Relay Box
RF15	06-10	IP Fuse and Relay Box



## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-019, I-002	08-12, 08-10				

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	E-063	12-5	I-032	12-9
E-028	12-3	I-033	12-9	I-004	12-7
I-034	12-9	I-016	12-7	B-004	12-10
I-011	12-7	B-019, I-002	12-11		

Circuit Diagram (Page 2 of 2)

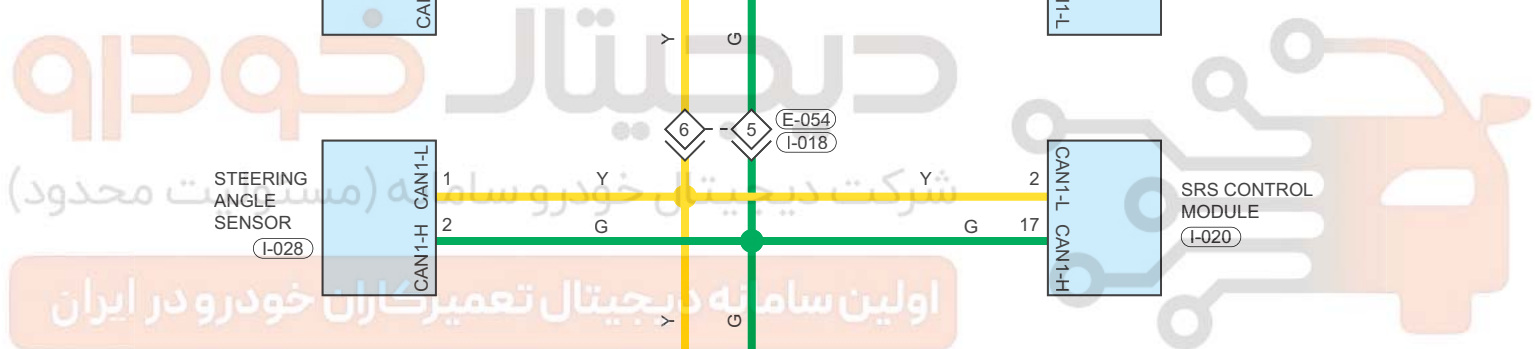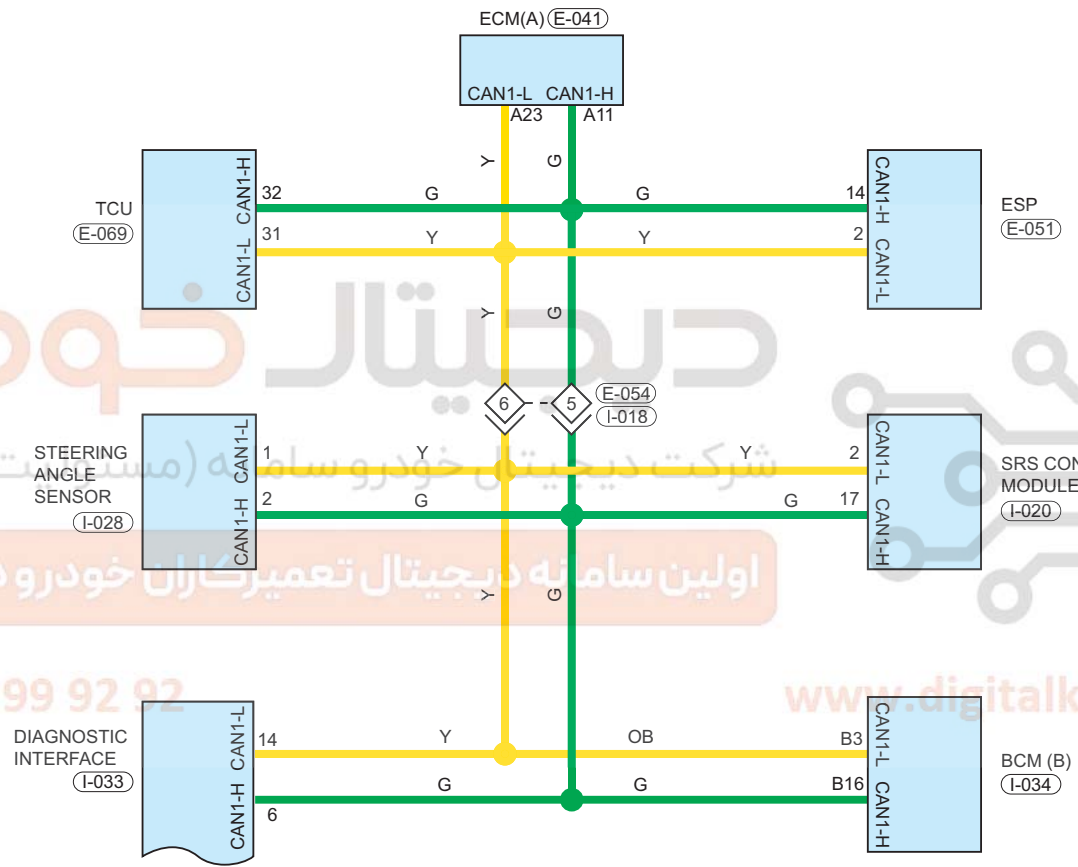

02 09

www.digitalkhodro.com

EA13T090770