



Instrument Panel Fuse and Relay Box

Location of Instrument Panel Fuse and Relay Box

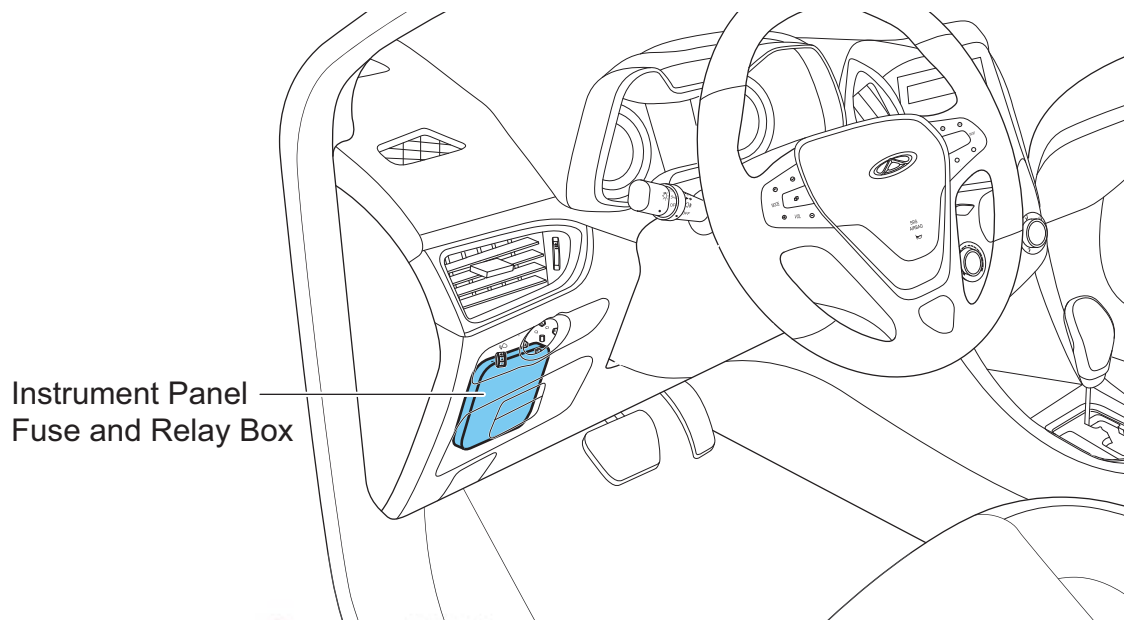

EM1A060040

Fuse Layout in Instrument Panel Fuse and Relay Box

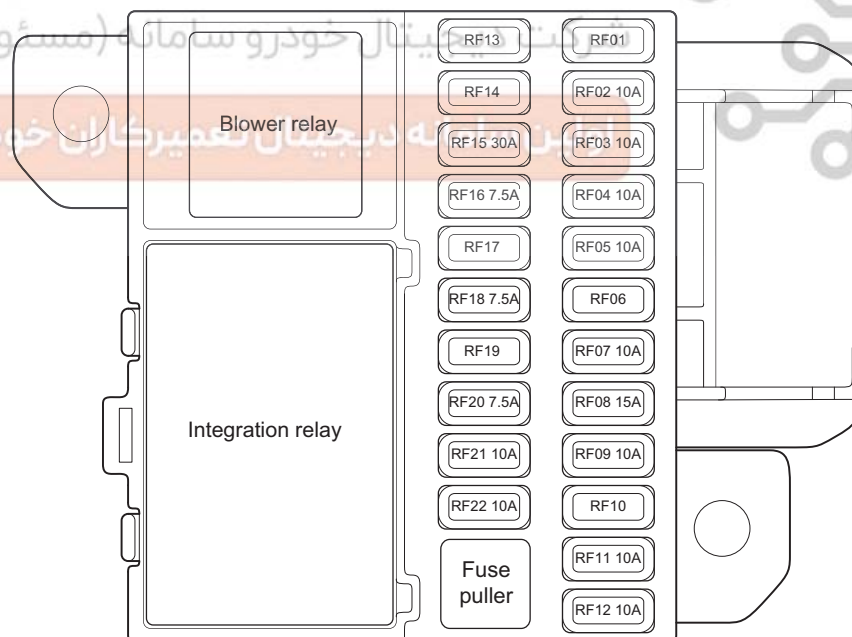

EM1A060050

06 - FUSE AND RELAY

Instrument Panel Fuse Description

No.	Description	No.	Description	No.	Description
RF01	-	RF09	A/C system/Outside rear view mirror/ Blower relay	RF17	-
RF02	ABS/ESP/SAS	RF10	-	RF18	Rear defroster indicator
RF03	Instrument cluster	RF11	A/C system/Audio system/Headlight leveling dial	RF19	-
RF04	Airbag	RF12	ECM/TCU/PEPS	RF20	Diagnosis interface/Key reminder switch
RF05	BCM	RF13	-	RF21	Instrument cluster
RF06	-	RF14	-	RF22	Audio system
RF07	Audio system/BCM	RF15	Rear defroster		
RF08	Cigarette lighter	RF16	Rear defroster relay		

06

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



View of Instrument Panel Fuse and Relay Box

Front View

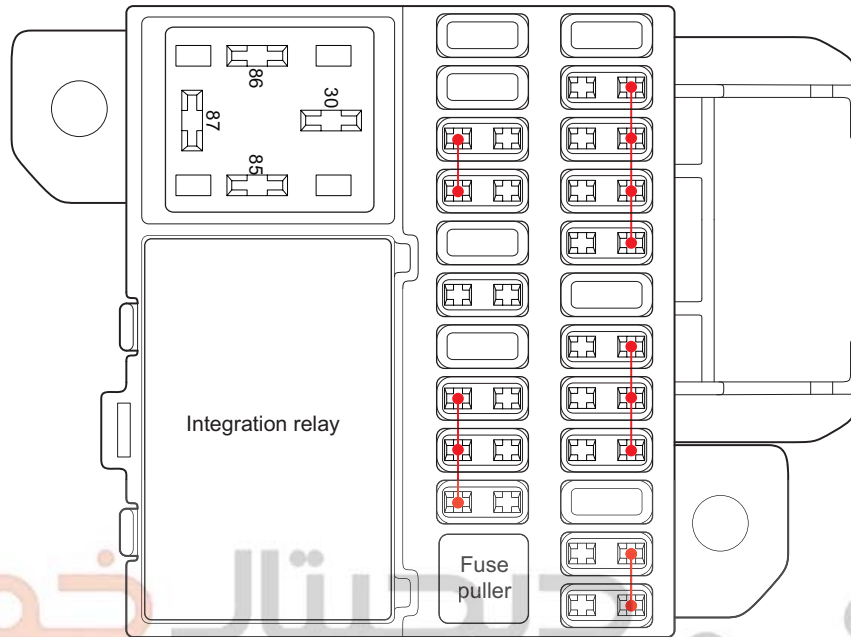


06

EM1A060051

شرکت دیجیتال خودرو (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Instrument Panel Fuse and Relay Box Inner Circuit


Circuit Diagram (Page 1 of 2)

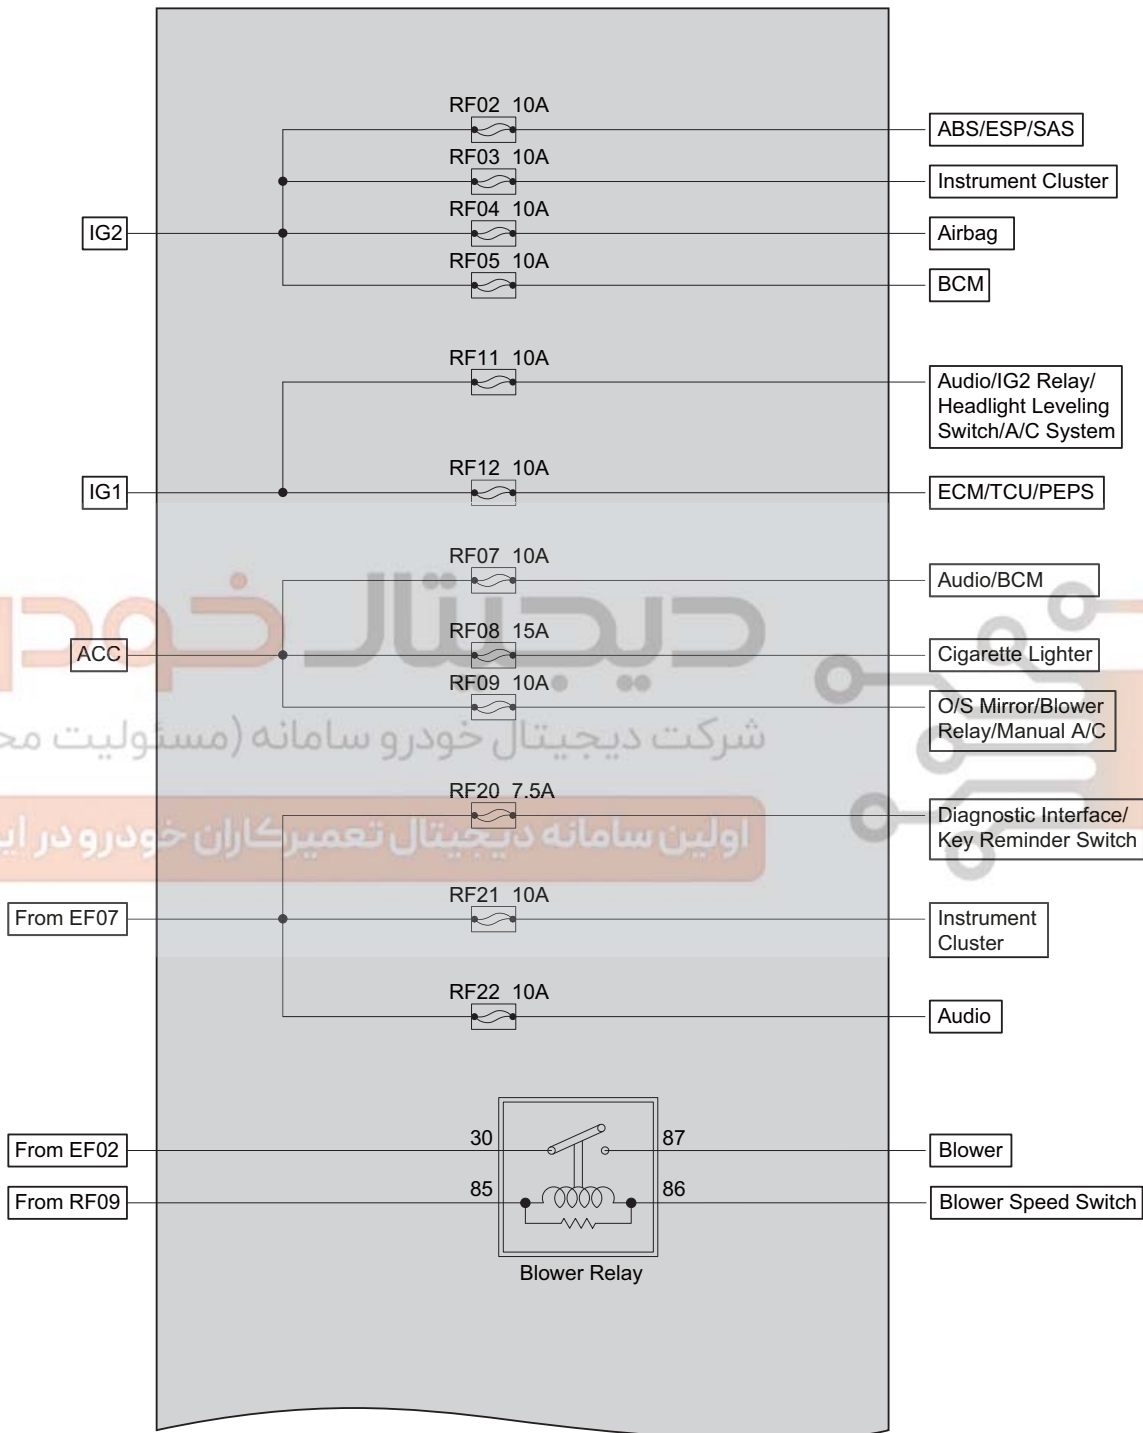

06

EM1A060038

Circuit Diagram (Page 2 of 2)

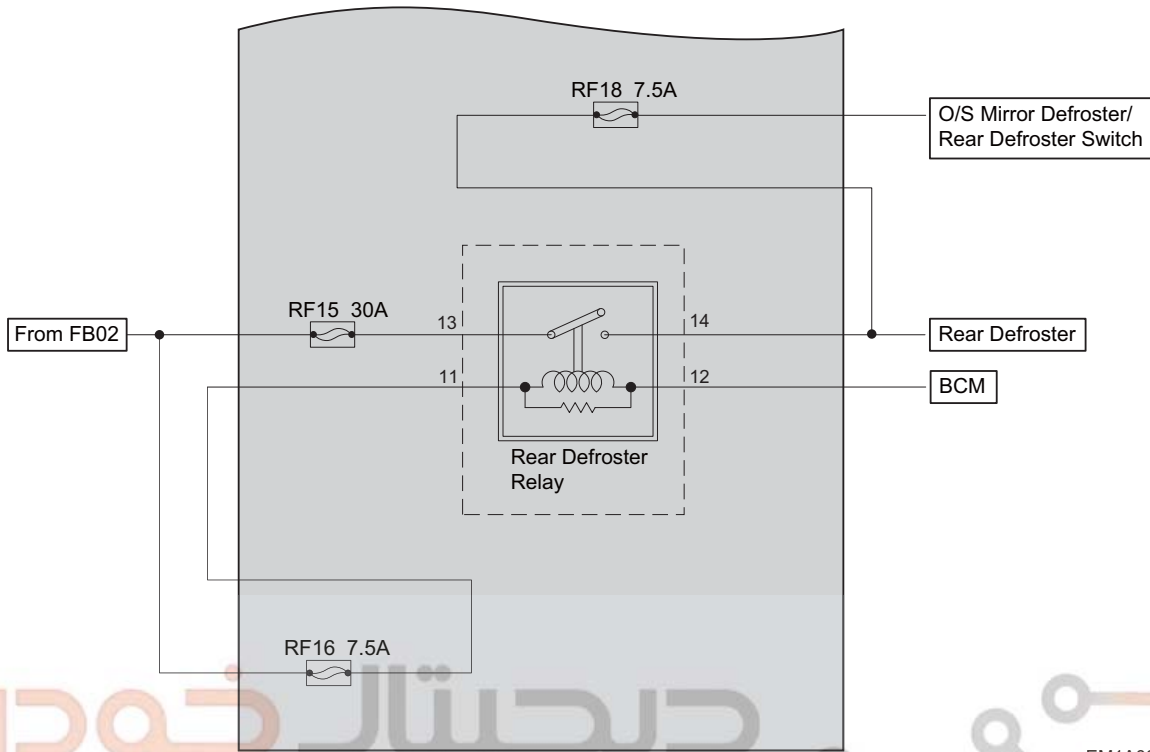

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

