



Power window (with anti-clamp) 1

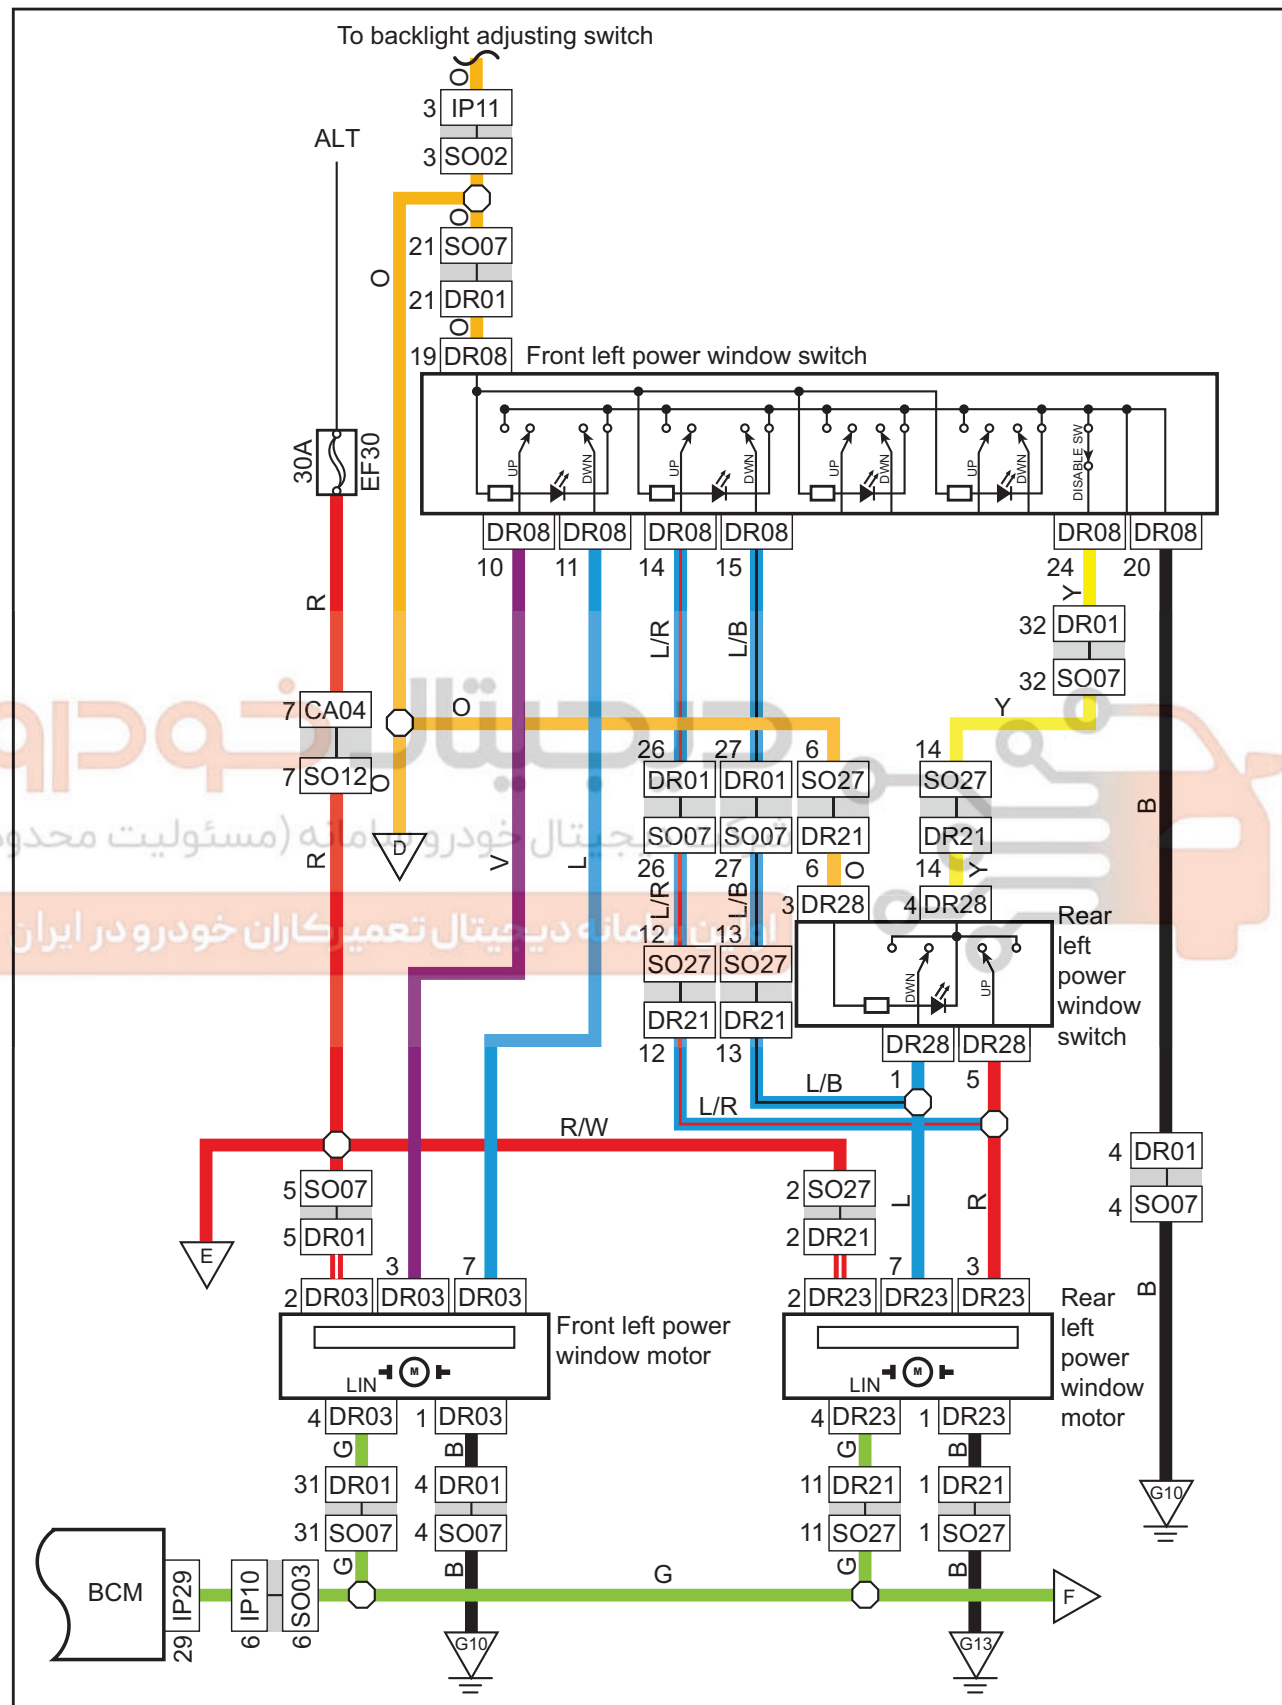

Harness connector	Name	Pages
DR01	Front left door connected to body harness connector	114
DR03	Harness connector of front left power window motor	114
DR08	Harness connector of front left power window switch	114
DR21	To body harness connector	118
DR23	Harness connector of rear left power window motor	118
DR28	Harness connector of rear left power window switch	118
IP10	To body harness connector	80
IP11	To body harness connector	80
IP29	Harness connector of body control module 1	80
SO03	To instrument harness connector	97/106
SO07	To front left door harness connector	97/106
SO12	To engine compartment harness connector	97/106
SO27	To rear left door harness connector	97/106
CA04	To body harness connector	22
G10	Body harness grounding	126/127/128
G13	Body harness grounding	126/127/128

Connection point	Descriptions	Pages
D	Backlight adjusting switch adjusting power supply	431
E	Working power supply of power window motor	431
F	LIN Bus	431

Power window (with anti-clamp) 2

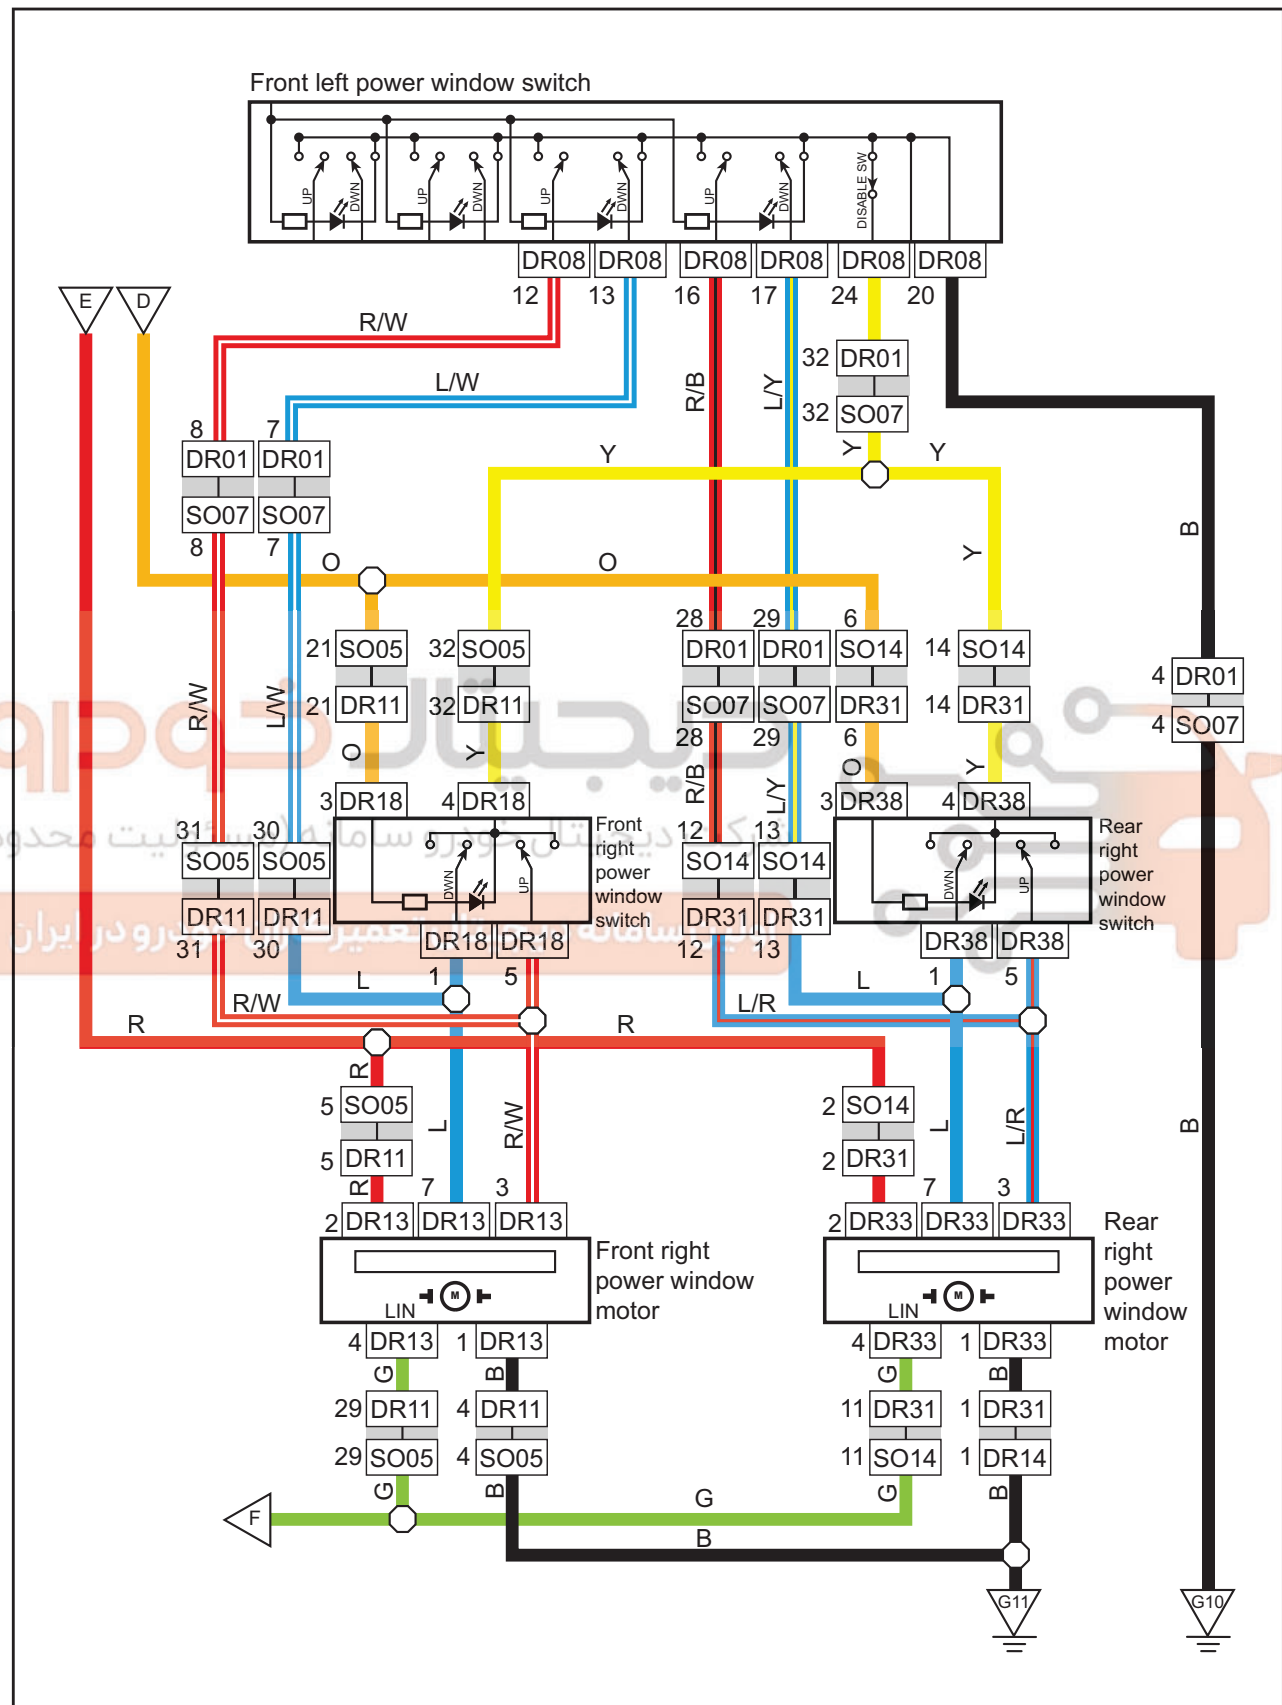

Harness connector	Name	Pages
DR01	Front left door connected to body harness connector	114
DR08	Harness connector of front left power window switch	114
DR11	Front right door connected to body harness connector	114
DR13	Harness connector of front right power window motor	114
DR18	Harness connector of front right power window switch	114
DR31	To body harness connector	118
DR33	Harness connector of rear right power window motor	118
DR38	Harness connector of rear right power window switch	118
SO05	To front right door harness connector	97/106
SO07	To front left door harness connector	97/106
SO14	To rear right door harness connector	97/106
SO27	To rear left door harness connector	97/106
G10	Body harness grounding	126/127/128
G11	Body harness grounding	126/127/128

Connection point	Descriptions	Pages
D	Backlight adjusting switch adjusting power supply	429
E	Working power supply of power window motor	429
F	LIN Bus	429

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران