


ABS/ESP

Circuit Diagram (Page 1 of 3)

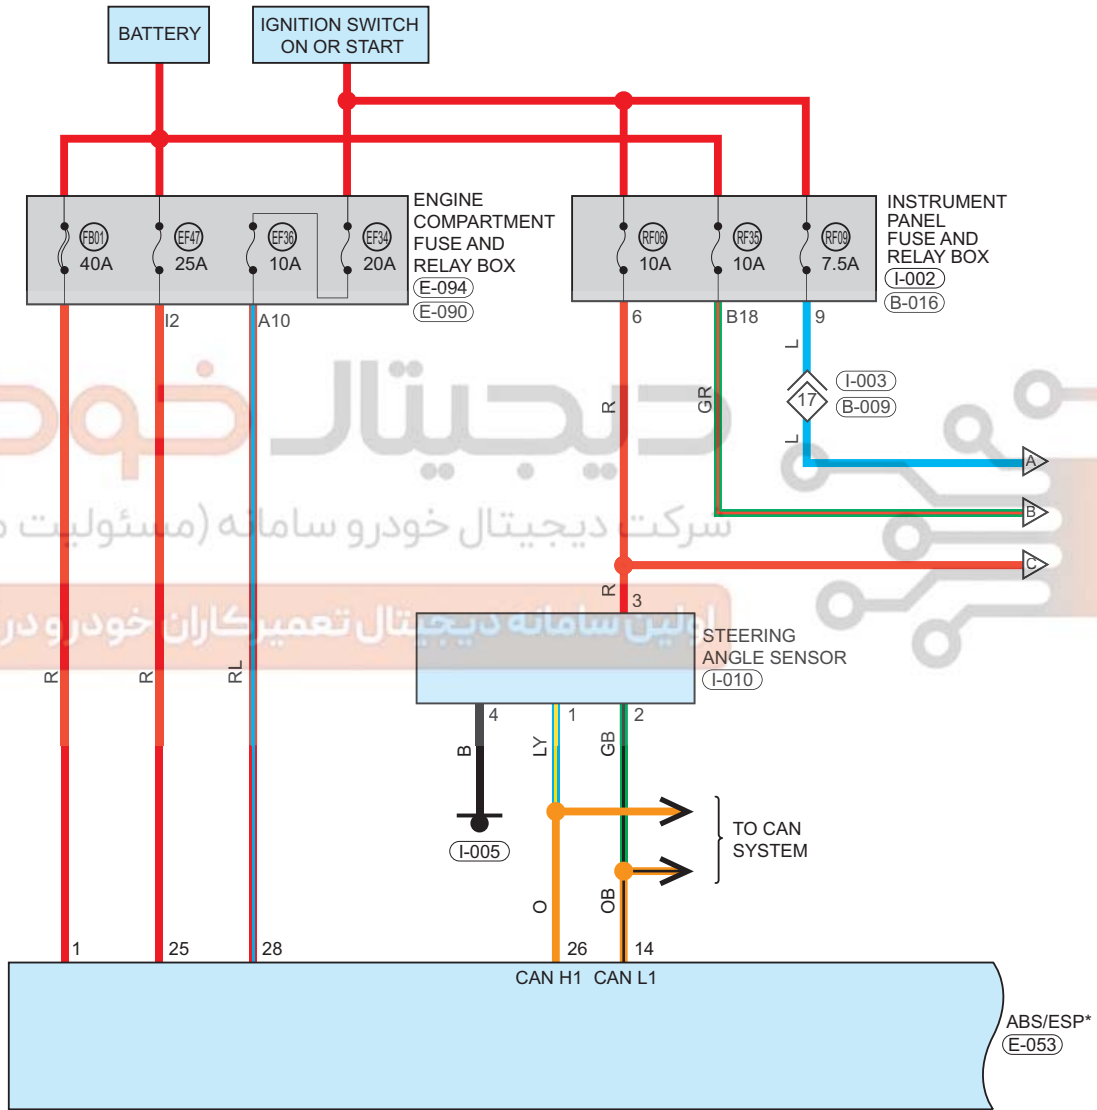

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-090	08-7	E-094	08-7	I-002	08-13
B-016	08-16	I-010	08-13	I-005	08-13
E-053	08-7				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF06	06-13	Instrument Panel Fuse and Relay Box A
RF35	06-18	Instrument Panel Fuse and Relay Box B
RF09	06-13	Instrument Panel Fuse and Relay Box A
FB01	06-2	Power Fuse Box
EF47	06-3	Engine Compartment Fuse and Relay Box
EF36	06-3	Engine Compartment Fuse and Relay Box
EF34	06-3	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-003, B-009	08-13, 08-16				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-090	12-5	E-094	12-6	I-002	12-9
B-016	12-12	I-010	12-9	I-005	12-9
E-053	12-4	I-003, B-009	12-9		

Circuit Diagram (Page 2 of 3)

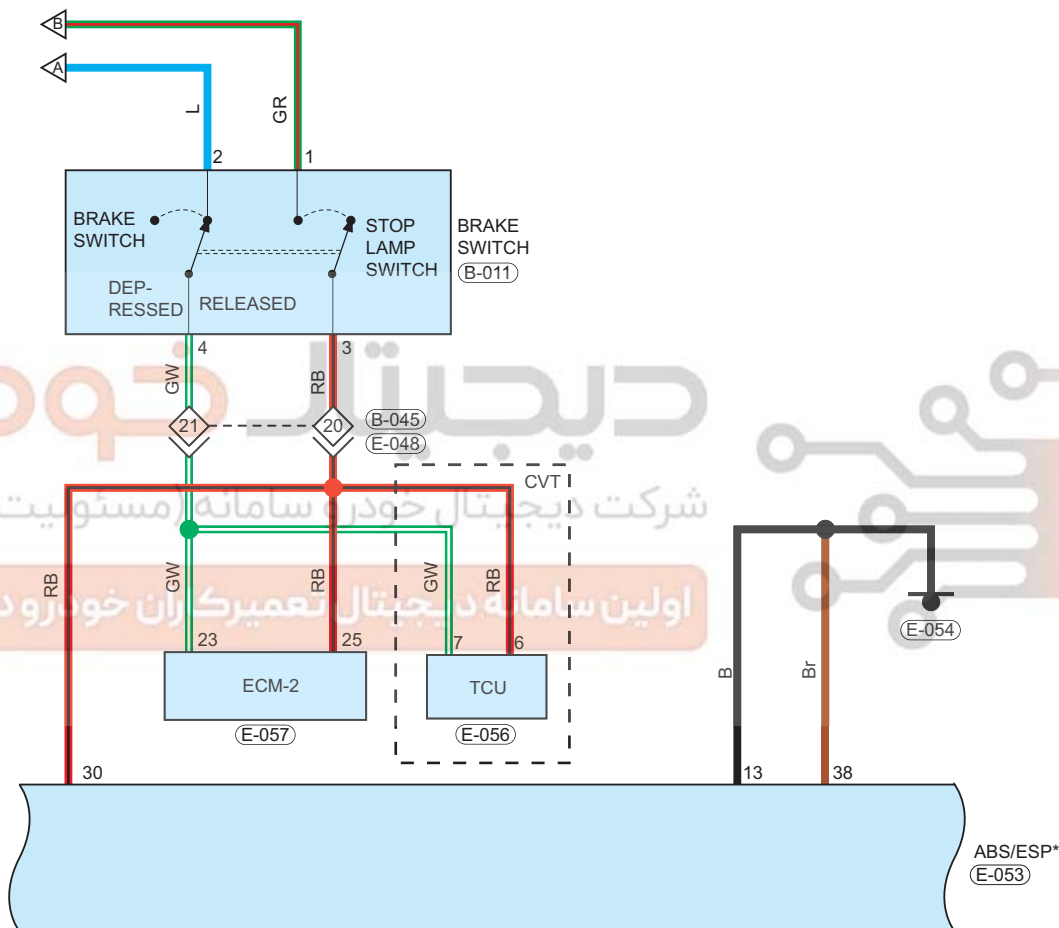

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-011	08-19	E-056	08-7	E-057	08-7
E-054	08-7	E-053	08-7		

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-045, E-048	08-19, 08-7				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-011	12-11	E-056	12-4	E-057	12-4
E-054	12-4	E-053	12-4	B-045, E-048	12-13

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 3 of 3)

