


Engine Management System (DCT)

Circuit Diagram (Page 1 of 9)

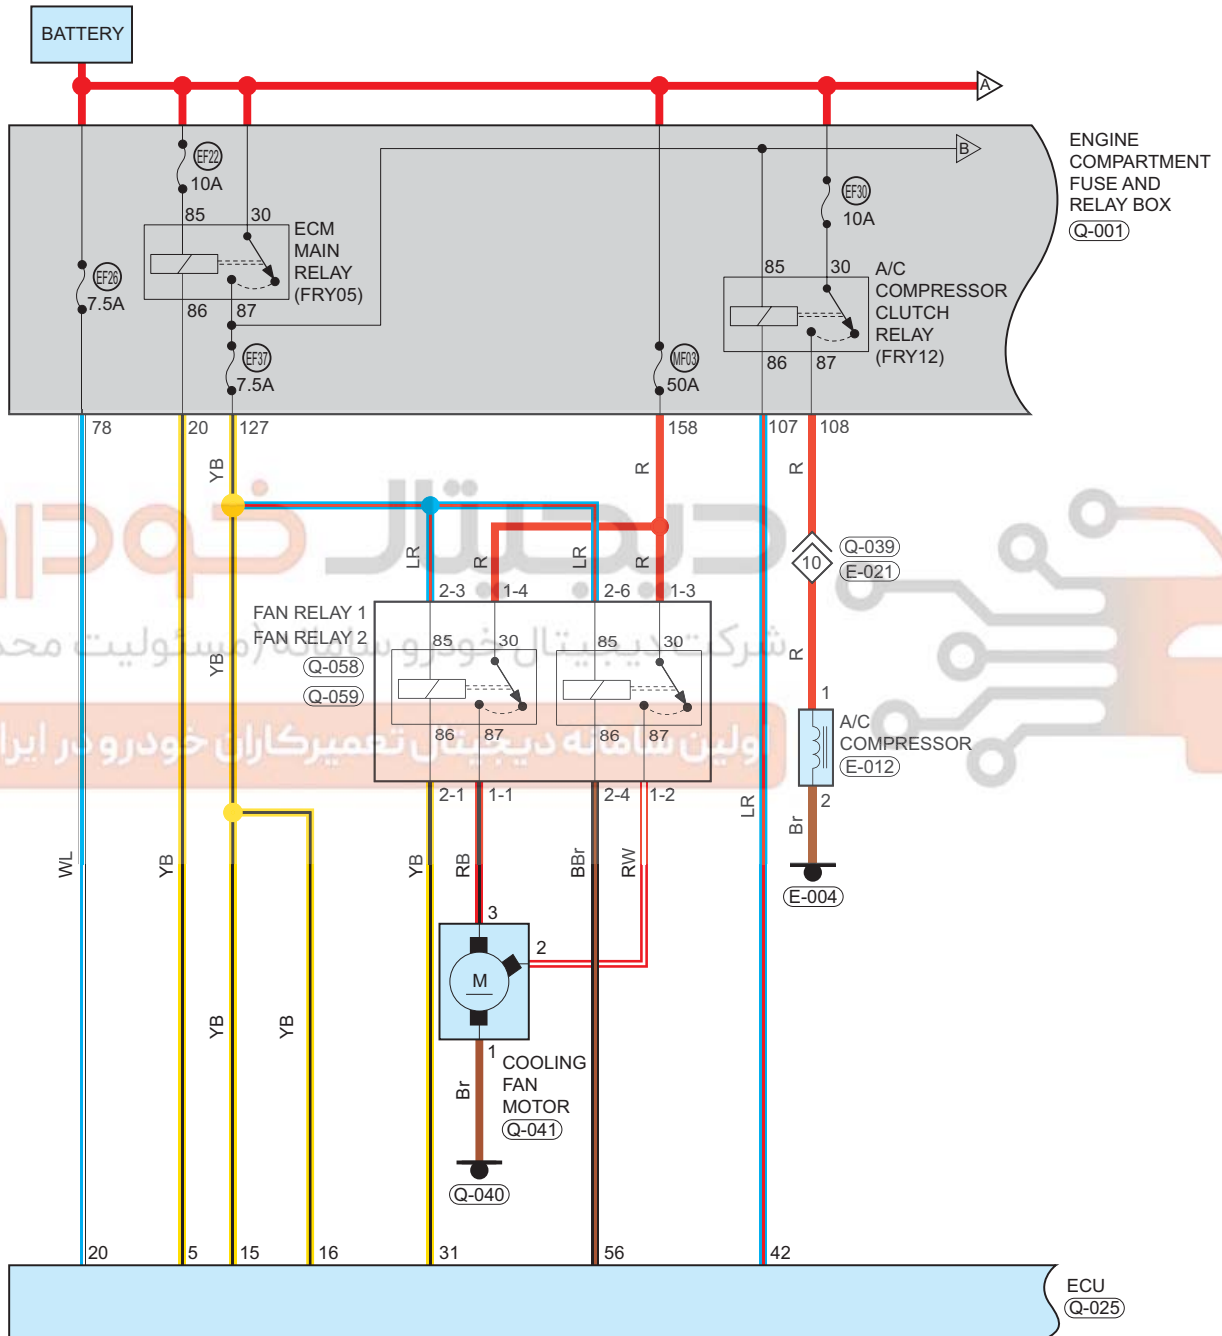

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	Q-058	08-10	Q-059	08-10
Q-040	08-10	Q-041	08-10	E-004	08-3
E-012	08-3	Q-025	08-10		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF22	06-2	Engine Compartment Fuse And Relay Box
EF26	06-2	Engine Compartment Fuse And Relay Box
EF37	06-2	Engine Compartment Fuse And Relay Box
EF30	06-2	Engine Compartment Fuse And Relay Box
MF03	06-2	Engine Compartment Fuse And Relay Box
ECM MAIN RELAY (FRY05)	06-2	Engine Compartment Fuse And Relay Box
A/C COMPRESSOR CLUTCH RELAY (FRY12)	06-2	Engine Compartment Fuse And Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-039, E-021	08-10, 08-3				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	Q-058	12-17	Q-059	12-17
Q-040	12-17	Q-041	12-17	E-004	12-2
E-012	12-2	Q-025	12-17	Q-039, E-021	12-17, 12-2

Circuit Diagram (Page 2 of 9)

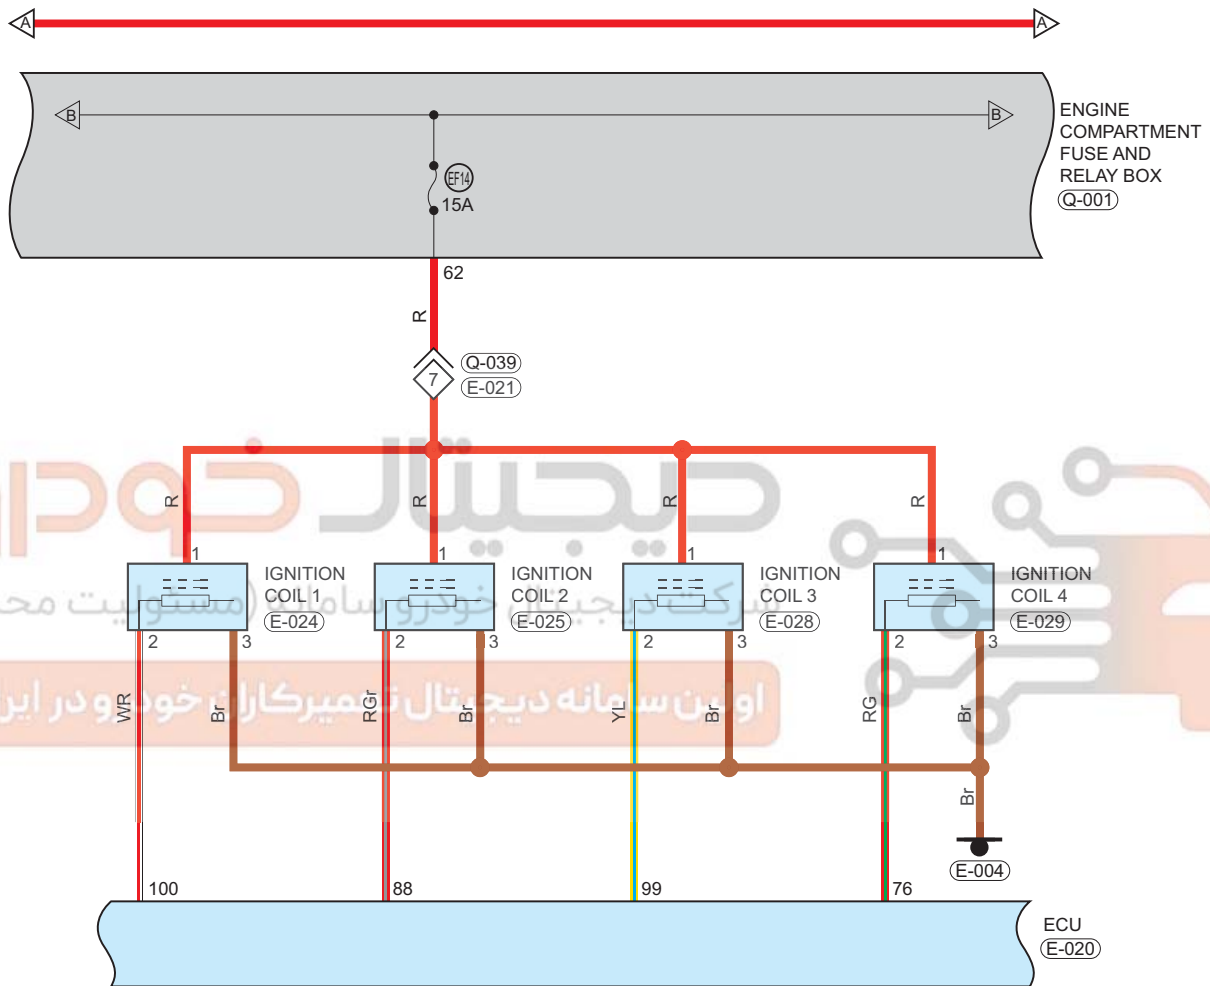

09

ESE002001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	E-020	08-3	E-024	08-3
E-025	08-3	E-028	08-3	E-029	08-3
E-004	08-3				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF14	06-2	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-039, E-021	08-10, 08-3				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	E-020	12-2	E-024	12-2
E-025	12-2	E-028	12-2	E-029	12-2
E-004	12-2	Q-039, E-021	12-17, 12-2		

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 3 of 9)

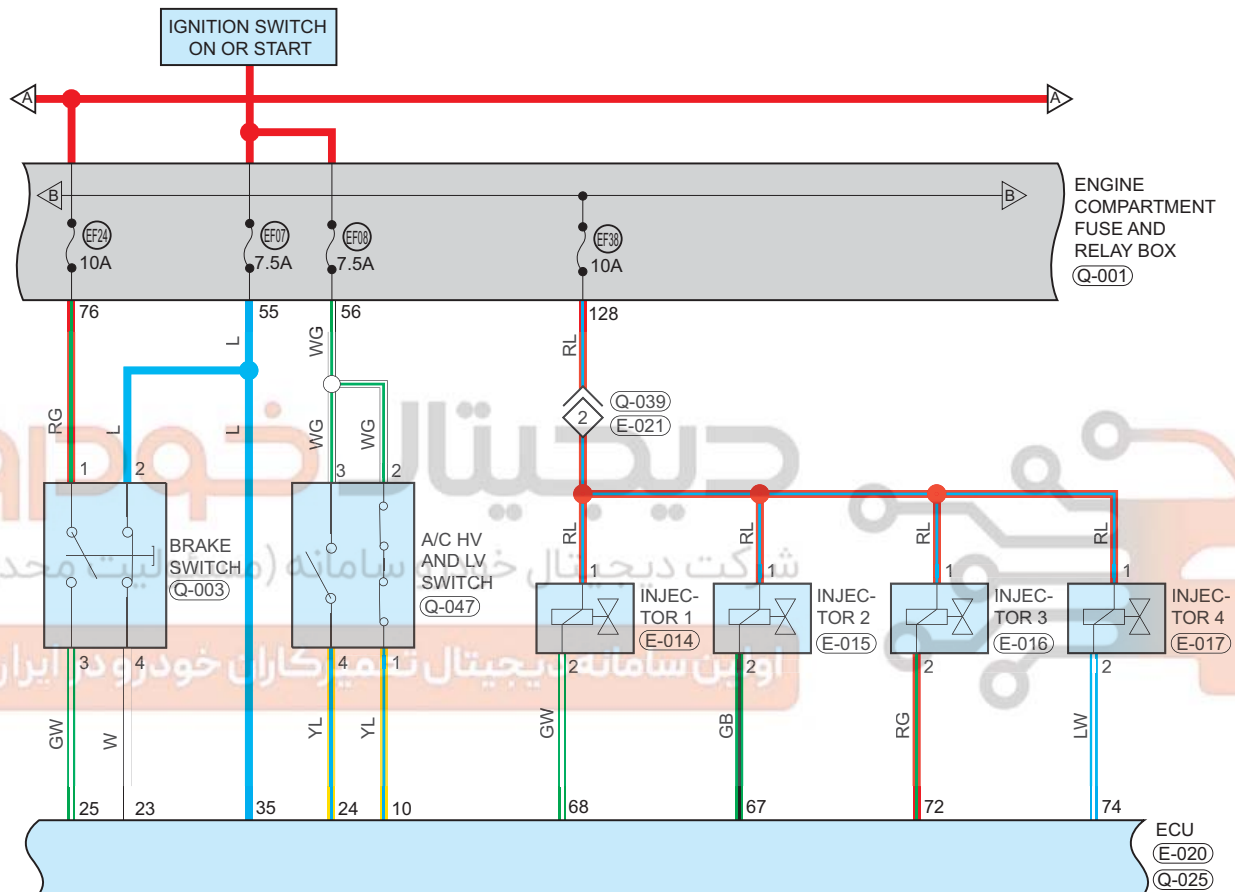

09

ESE003001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	Q-003	08-10	Q-047	08-10
E-014	08-3	E-015	08-3	E-016	08-3
E-017	08-3	E-020	08-3	Q-025	08-10

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF07	06-2	Engine Compartment Fuse and Relay Box
EF08	06-2	Engine Compartment Fuse and Relay Box
EF24	06-2	Engine Compartment Fuse and Relay Box
EF38	06-2	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-039, E-021	08-10, 08-3				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	Q-003	12-17	Q-047	12-17
E-014	12-2	E-015	12-2	E-016	12-2
E-017	12-2	E-020	12-2	Q-025	12-17
Q-039, E-021	12-17, 12-2				

Circuit Diagram (Page 4 of 9)

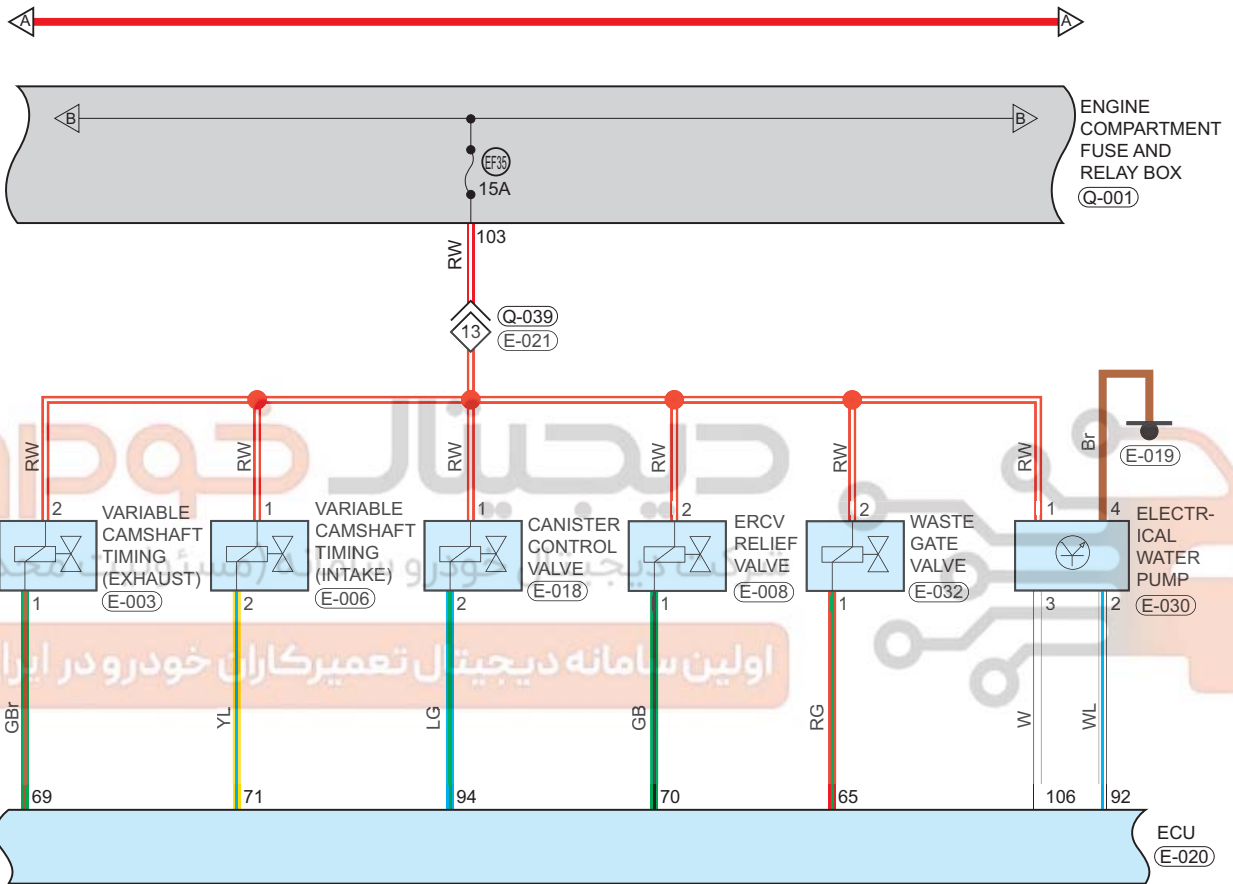

09

ESE004001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	E-003	08-3	E-006	08-3
E-018	08-3	E-008	08-3	E-032	08-3
E-030	08-3	E-020	08-3		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF35	06-2	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-039, E-021	08-10, 08-3				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	E-003	08-3	E-006	08-3
E-018	08-3	E-008	08-3	E-032	08-3
E-030	08-3	E-020	08-3	Q-039, E-021	08-10, 08-3

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 5 of 9)

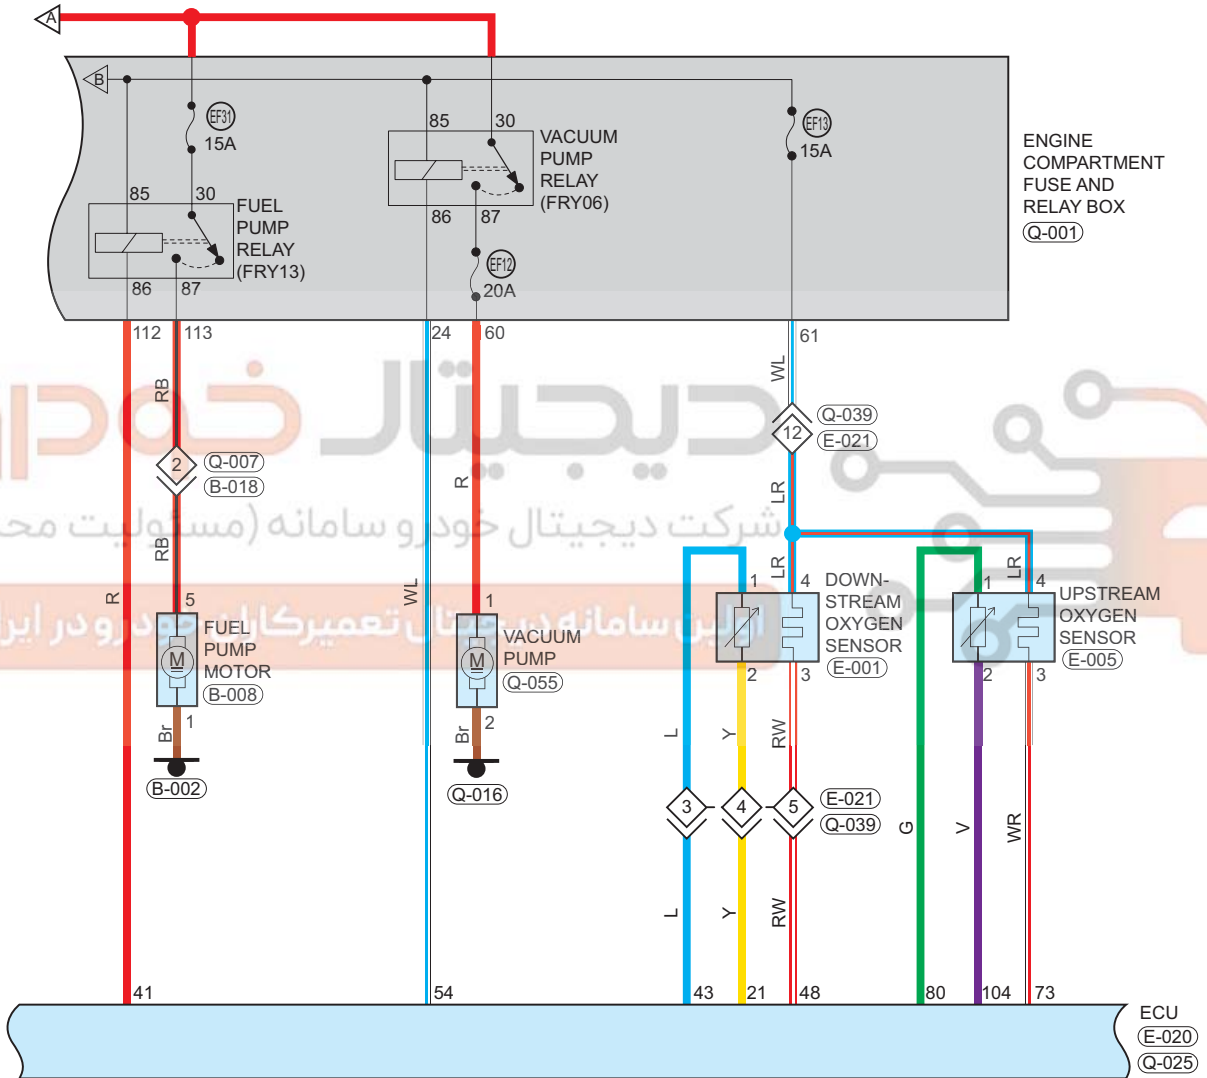

ESE005001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	B-008	08-36	Q-055	08-10
E-001	08-3	E-005	08-3	E-020	08-3
Q-025	08-10	B-002	08-36	Q-016	08-10

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF12	06-2	Engine Compartment Fuse and Relay Box
EF13	06-2	Engine Compartment Fuse and Relay Box
EF31	06-2	Engine Compartment Fuse and Relay Box
FUEL PUMP RELAY (FRY13)	06-2	Engine Compartment Fuse and Relay Box
VACUUM PUMP RELAY (FRY06)	06-2	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-039, E-021	08-10, 08-3	Q-007, B-018	08-10, 08-36		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	B-008	12-8	Q-055	12-17
E-001	12-2	E-005	12-2	E-020	12-2
Q-025	12-17	B-002	12-8	Q-016	12-17
Q-039, E-021	12-17, 12-2	Q-007, B-018	12-17, 12-8		

Circuit Diagram (Page 6 of 9)

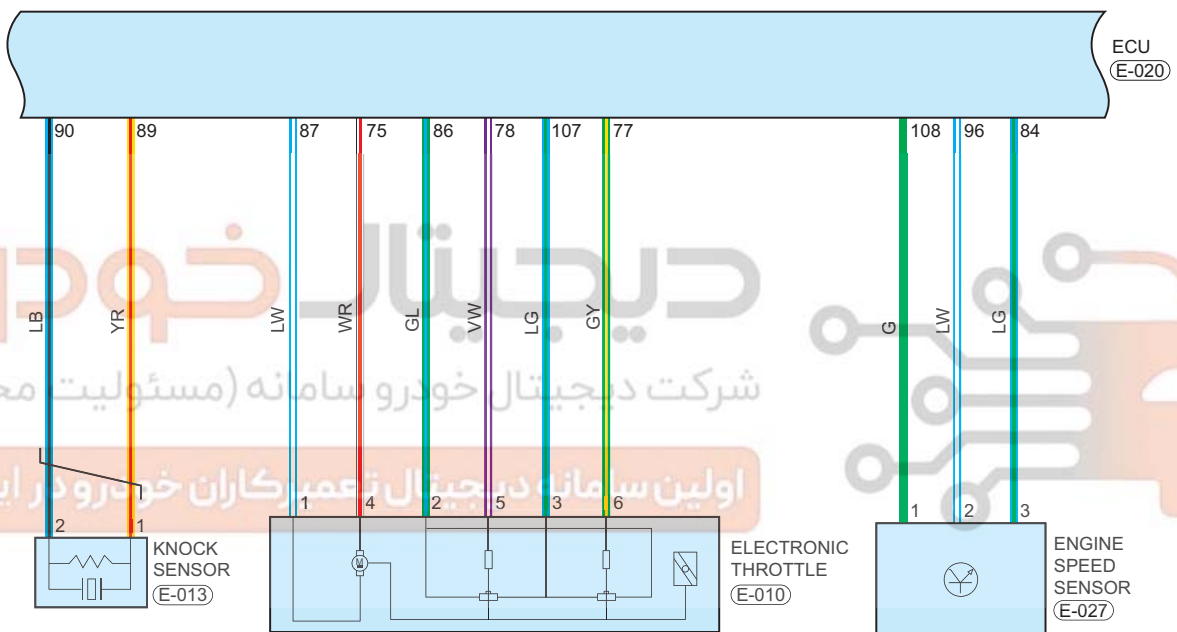

09

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

ESE006001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-020	08-3	E-013	08-3	E-010	08-3
E-027	08-3				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-020	12-2	E-013	12-2	E-010	12-2
E-027	12-2				


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 7 of 9)

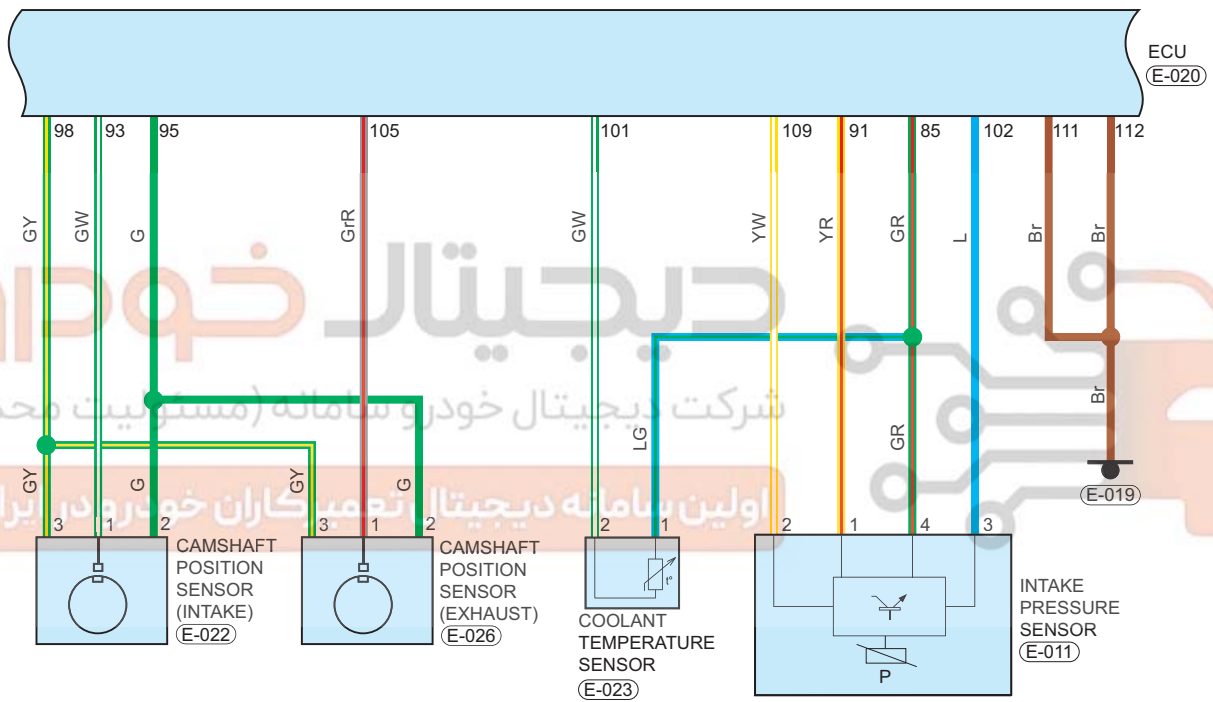

09

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مستقریت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

ESE007001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-020	08-3	E-022	08-3	E-026	08-3
E-023	08-3	E-011	08-3	E-019	08-3

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-020	12-2	E-022	12-2	E-026	12-2
E-023	12-2	E-011	12-2	E-019	12-2


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 8 of 9)

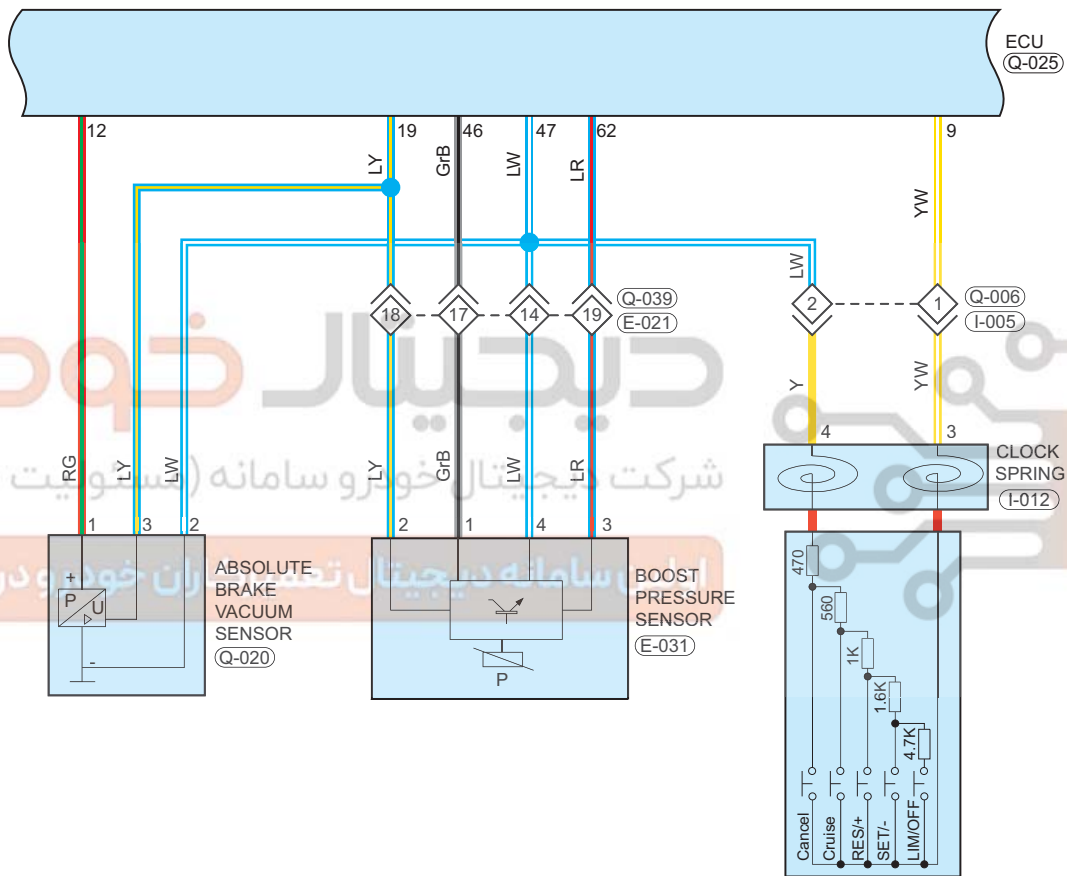

دیجی تار خودرو
 شرکت دیجیتال خودرو سامانه (استواریت محدود)
 سامانه دیجیتال خودرو در ایران

09

ESE008001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-025	08-10	Q-020	08-10	E-031	08-3
I-012	08-23				

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-039, E-021	08-10, 08-3	Q-006, I-005	08-10, 08-23		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-025	12-17	Q-020	12-17	E-031	12-2
I-012	12-4	Q-039, E-021	12-17, 12-2	Q-006, I-005	12-17, 12-4


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 9 of 9)

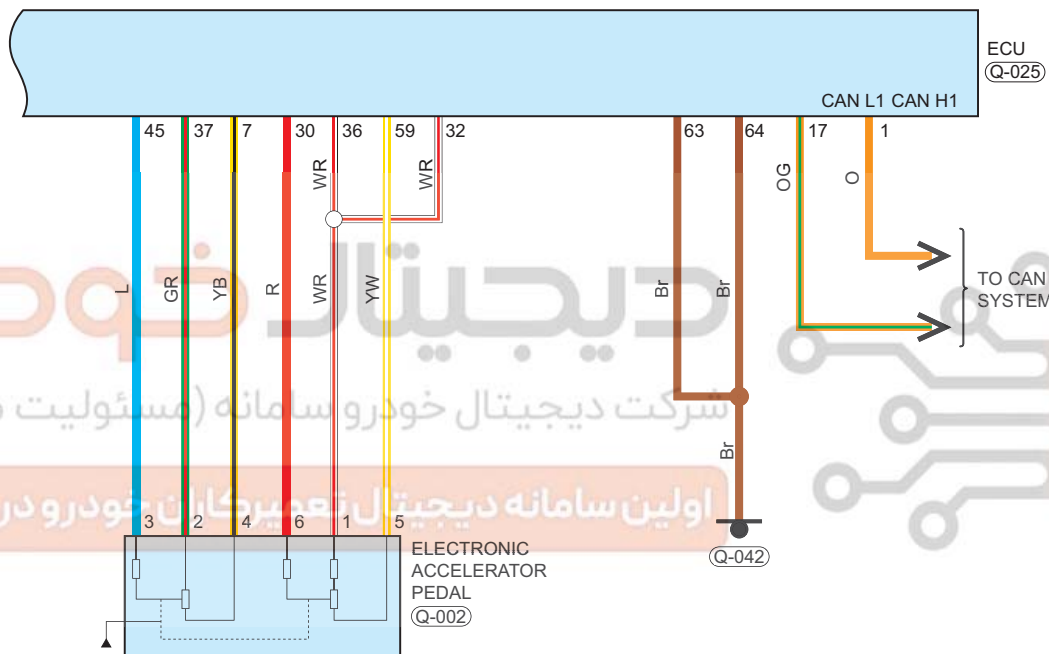

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

ESE009001