


# Radar System

Circuit Diagram (Page 1 of 4)

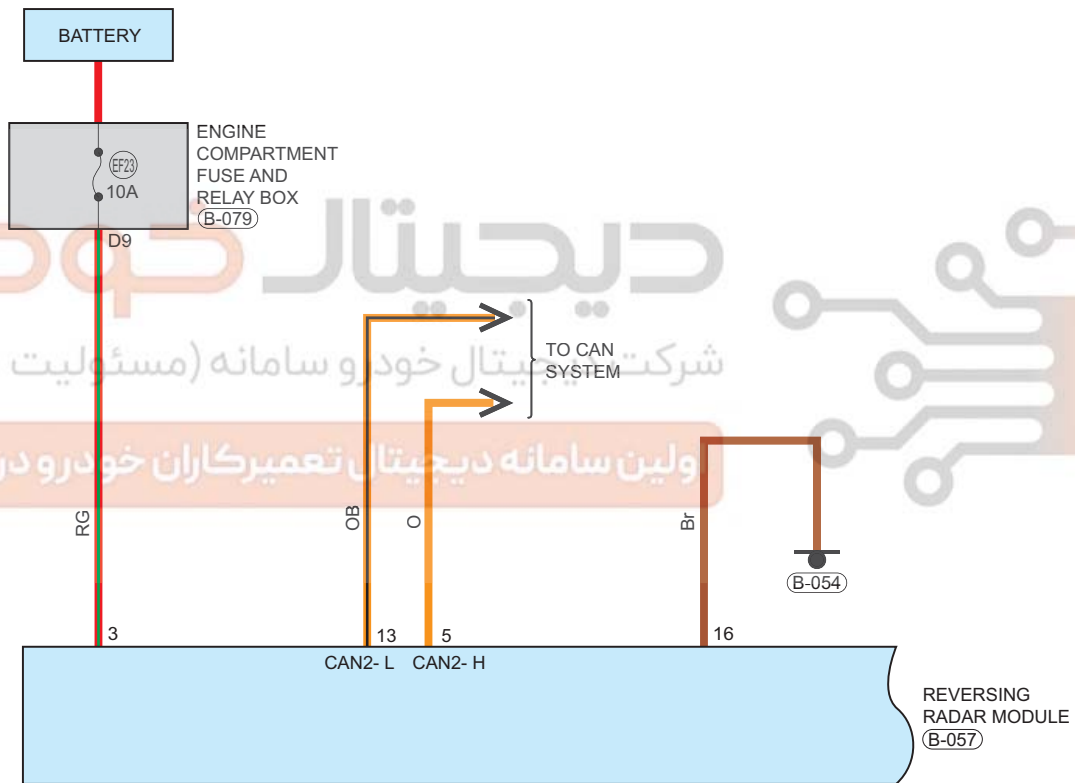

## 09 - SYSTEM CIRCUITS

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-079	08-12	B-057	08-12	B-054	08-12

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF23	06-2	Engine Compartment Fuse and Relay Box

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-079	12-7	B-057	12-7	B-054	12-7


# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 2 of 4)

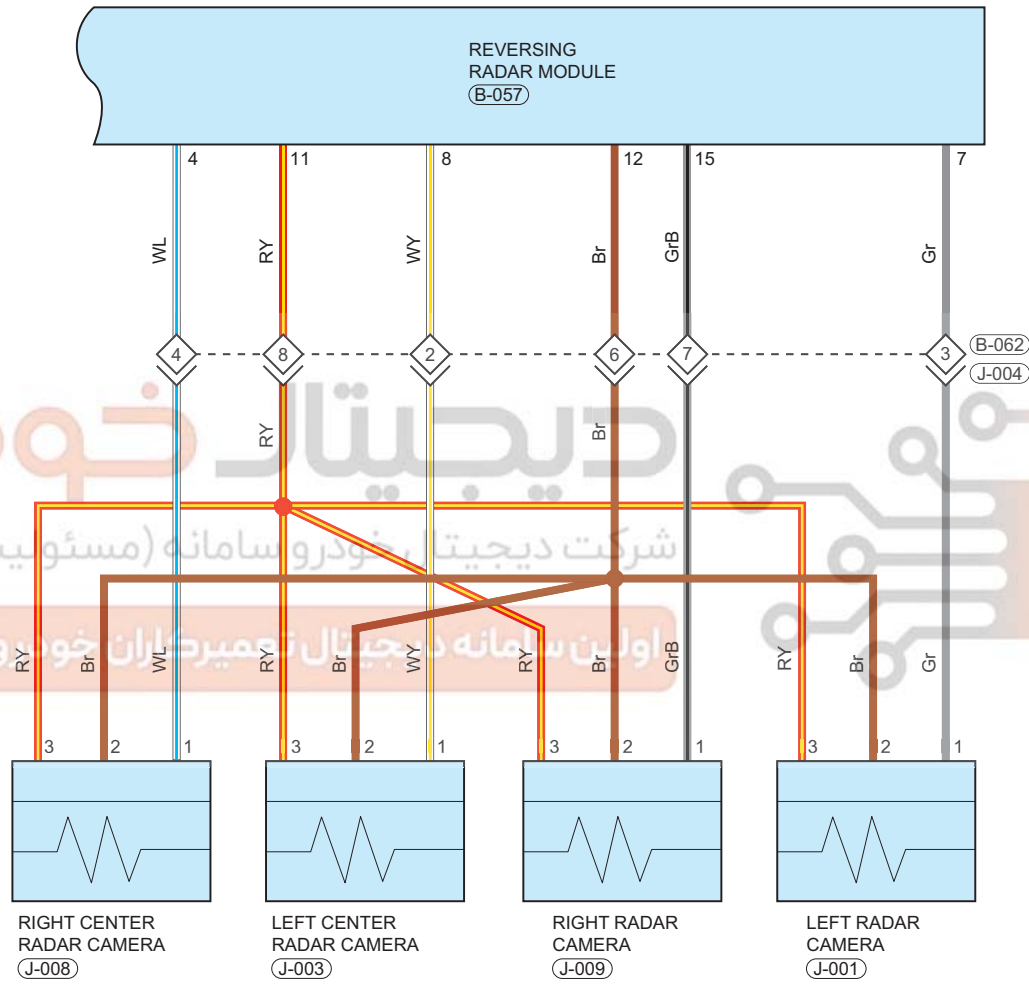

## 09 - SYSTEM CIRCUITS

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-057	08-12	J-008	08-31	J-003	08-31
J-009	08-31	J-001	08-31		

## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
J-004, B-062	08-31				

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-057	12-7	J-008	12-18	J-003	12-18
J-009	12-18	J-001	12-18	J-004, B-062	12-18


# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 3 of 4)

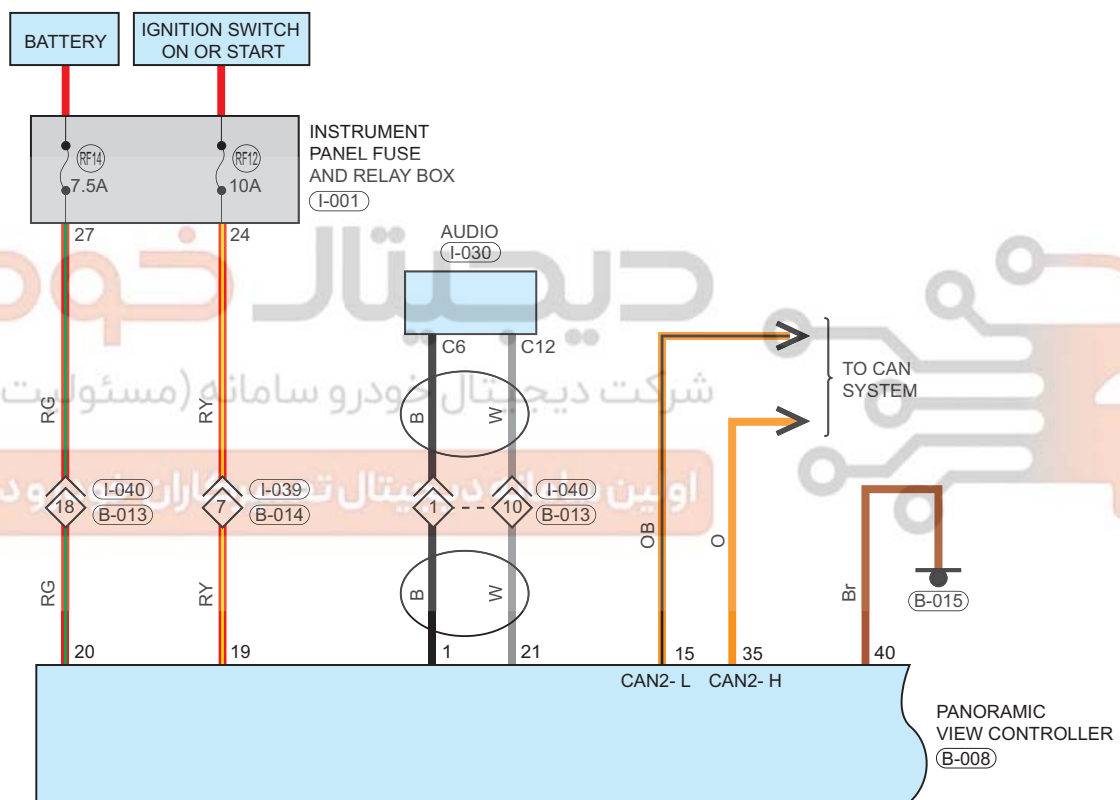

## 09 - SYSTEM CIRCUITS

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-8	I-030	08-8	B-008	08-12
B-015	08-12				

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF14	06-9	Instrument Panel Fuse And Relay Box
RF12	06-9	Instrument Panel Fuse And Relay Box

## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-040, B-013	08-8	I-039, B-014	08-8		

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	I-030	12-4	B-008	12-7
B-015	12-7	I-040, B-013	12-4	I-039, B-014	12-4

Circuit Diagram (Page 4 of 4)

