


ECM sensor (JL4G18-D+electronic system)

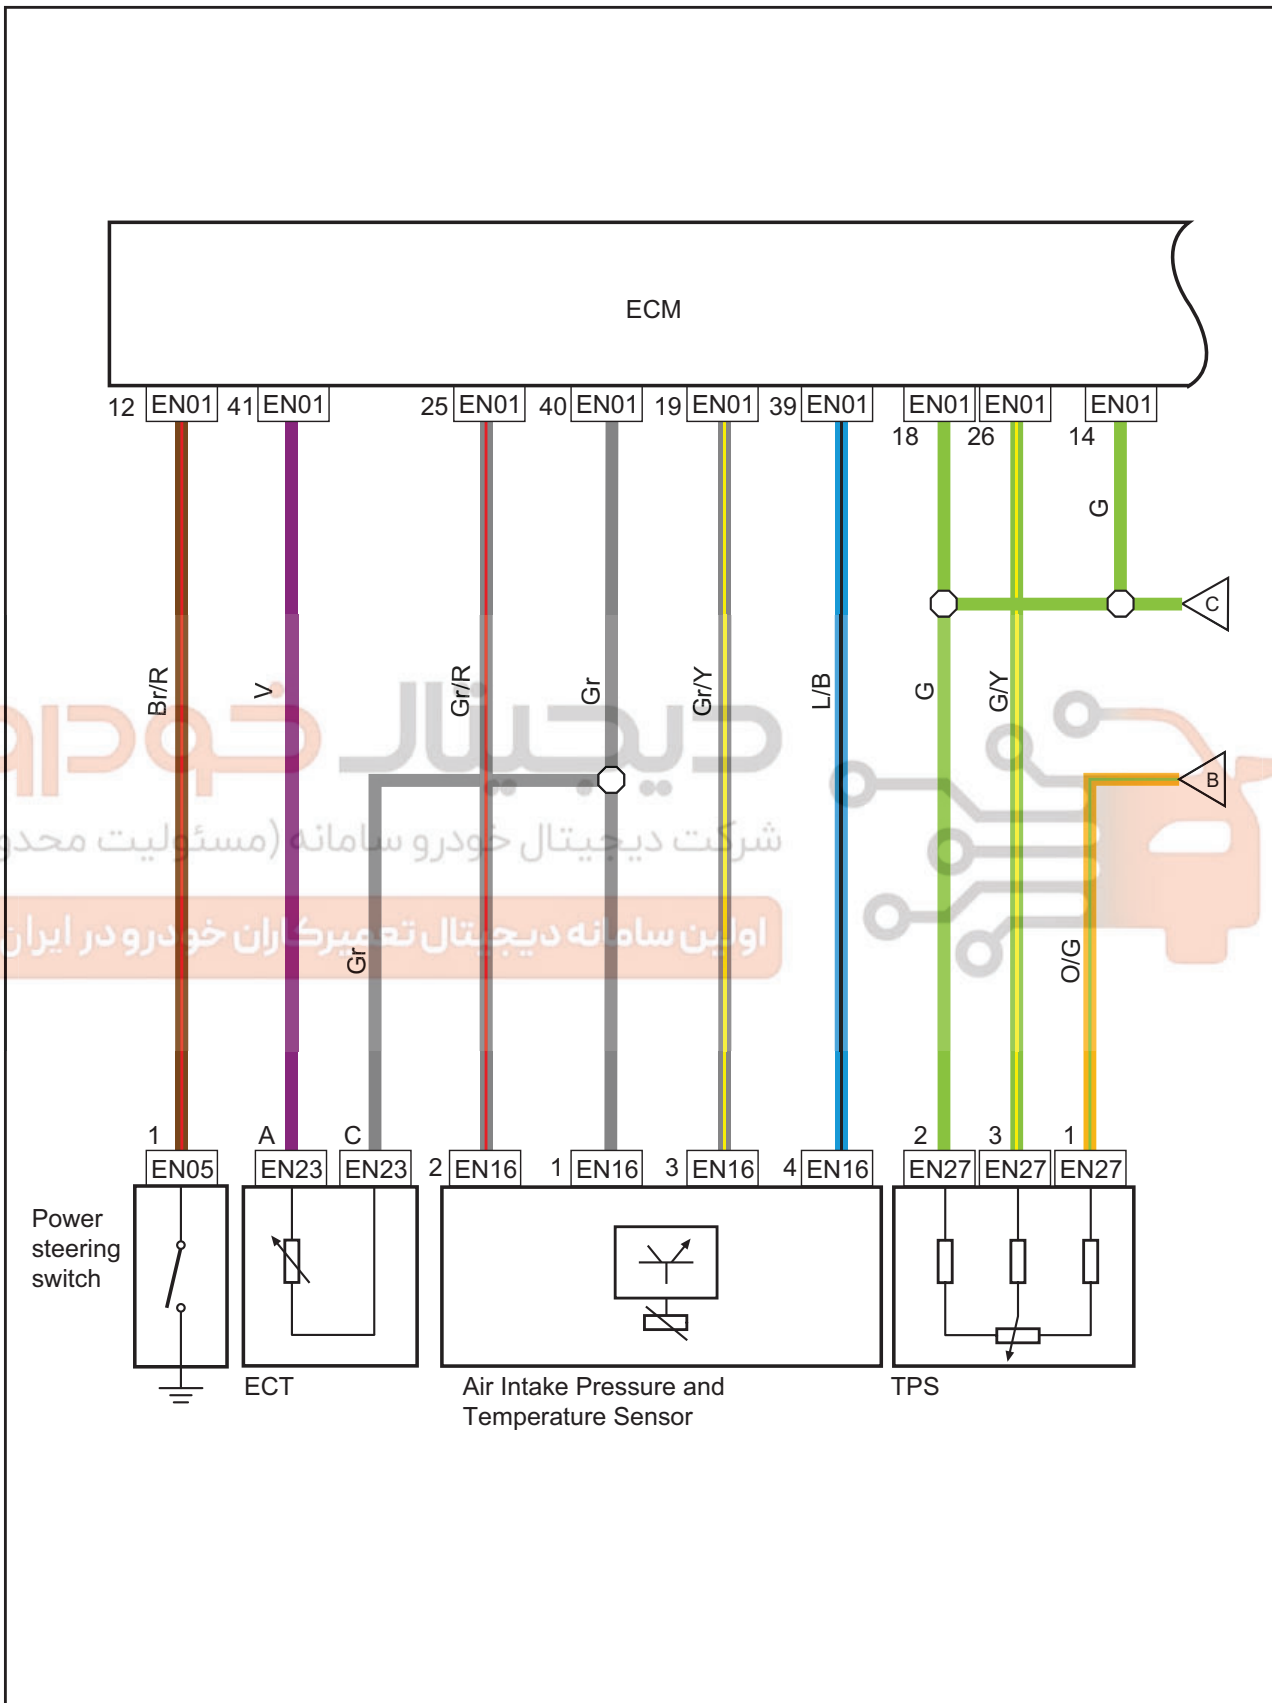

Harness connector	Name	Pages
EN01	Harness connector of engine control module	28
EN05	Harness connector of power steering switch	29
EN16	Harness connector of air intake pressure temperature sensor	29
EN23	Engine coolant sensor harness connector	29
EN27	Harness connector of throttle position sensor	29

Connection point	Descriptions	Pages
B	Internal low reference circuit from sensor to ECM	264
C	5Vreference power supply of sensor	264


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



ECM sensor, electric throttle (JL4G18-D+Delphi system)

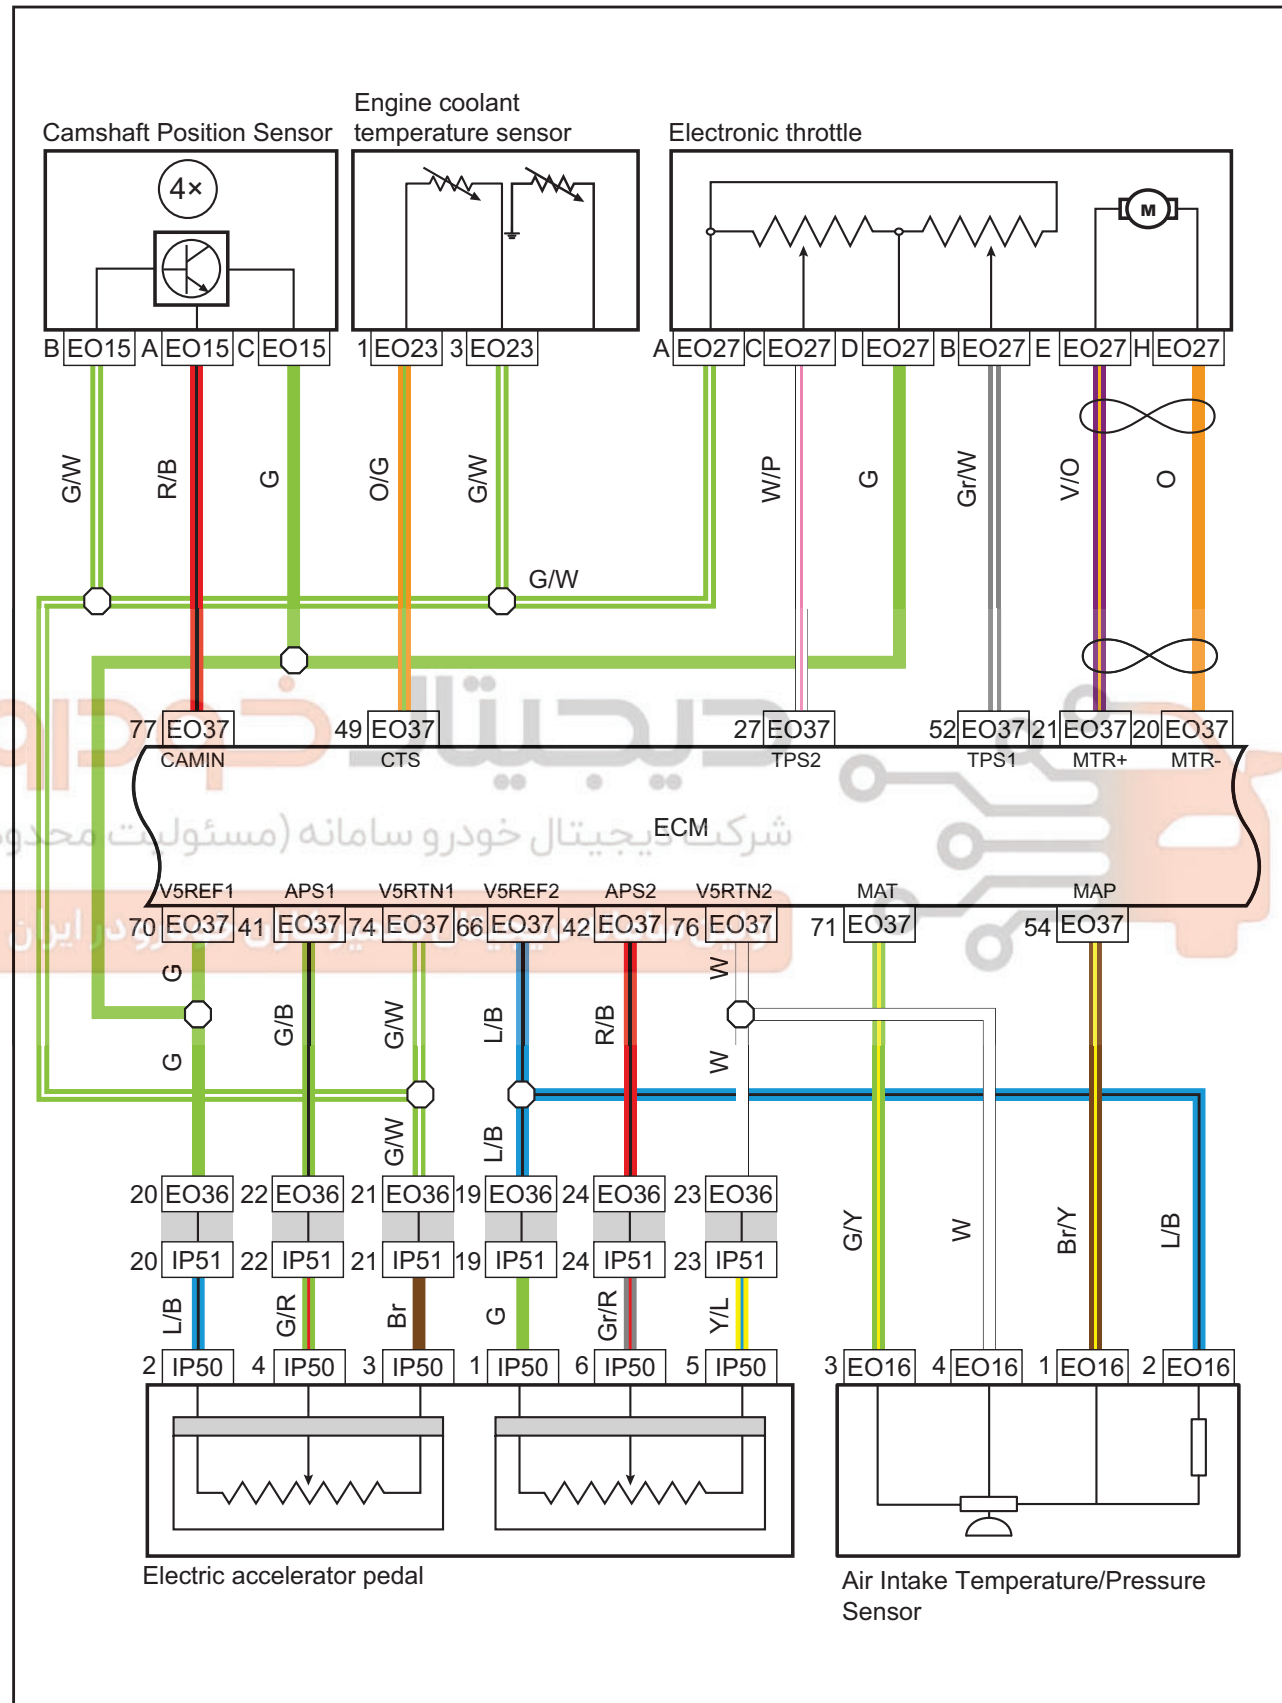

Harness connector	Name	Pages
EO37	ECM harness connector(JL4G18-D+Delphi system)	36
EO15	Camshaft Position Sensor	35
EO23	Engine coolant temperature harness sensor	37
EO27	Harness sensor of electric throttle	35
EO16	Harness connector of air intake pressure and temperature sensor (JL4G15-G)	35
EO23	Harness connector of coolant temperature sensor (JL4G15-G)	37
EO36	To instrument harness connector (2)(JL4G15-G)	34
IP50	Electronic accelerator pedal harness sensor	86
IP51	To engine harness(JL4G15-G)	86

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

