




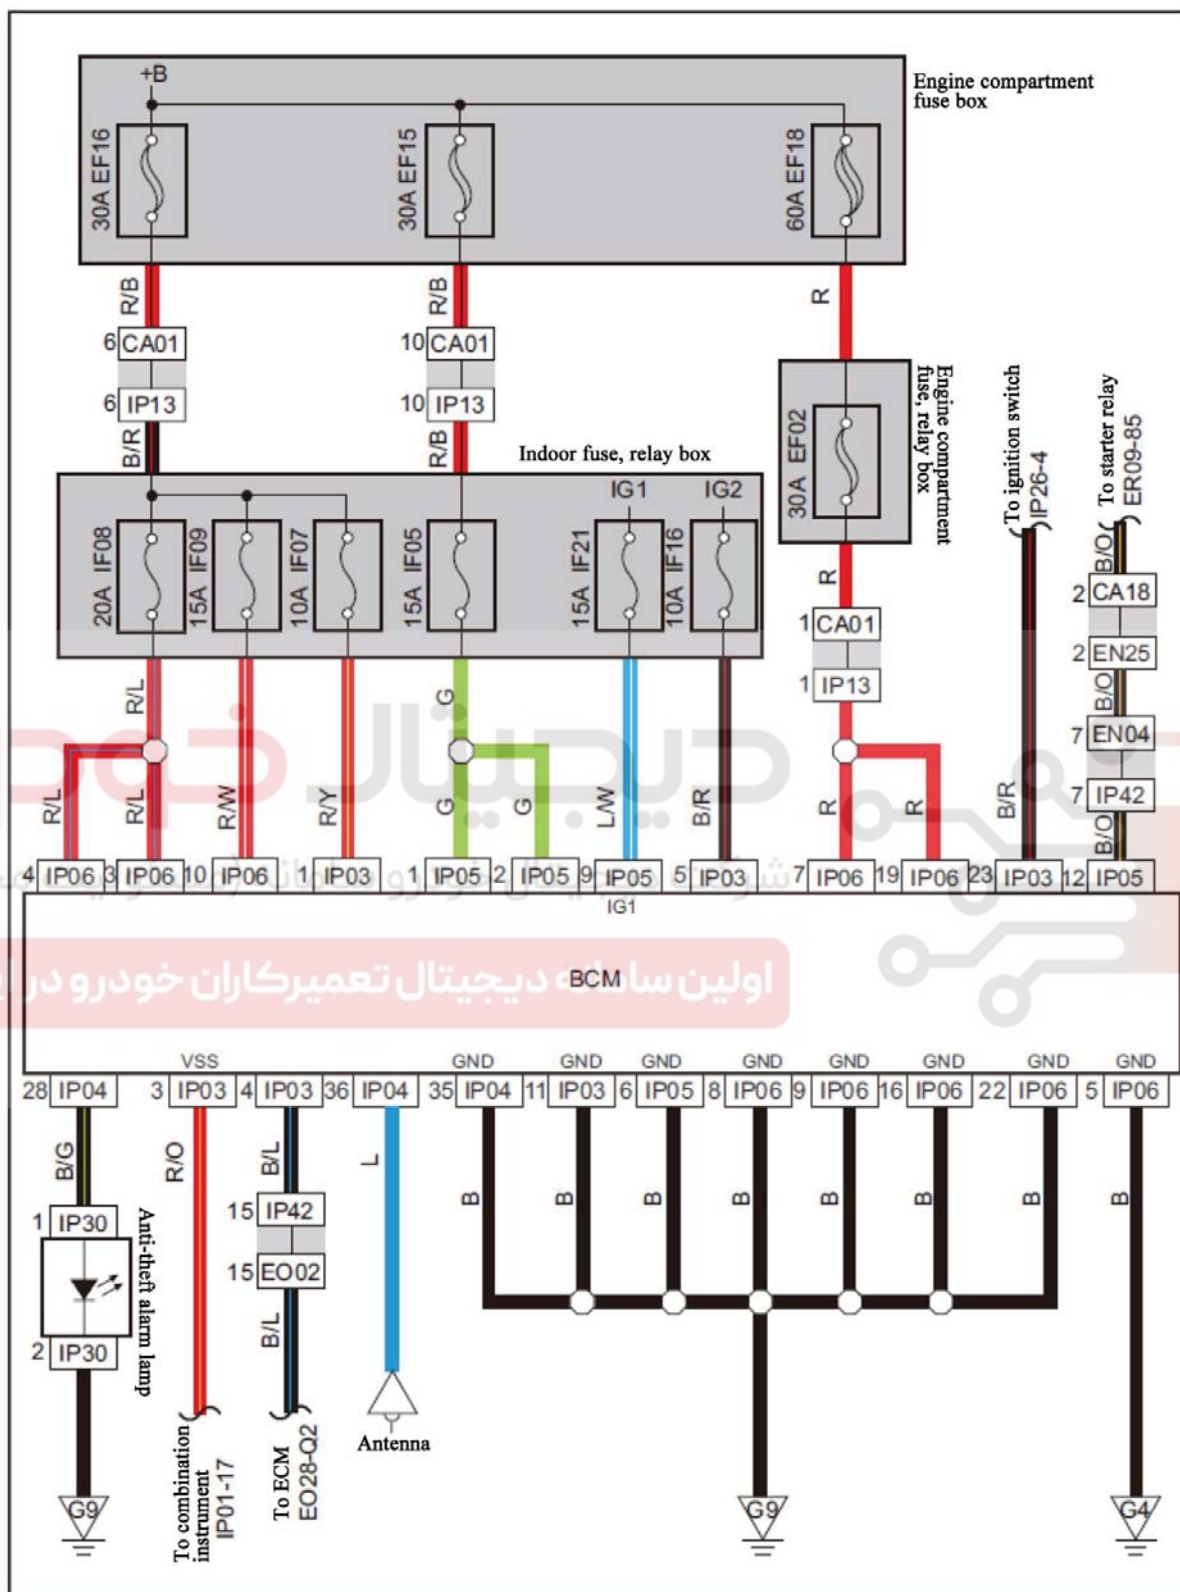

ECM power supply, grounding, data line (GC6/New King Kong 2016)

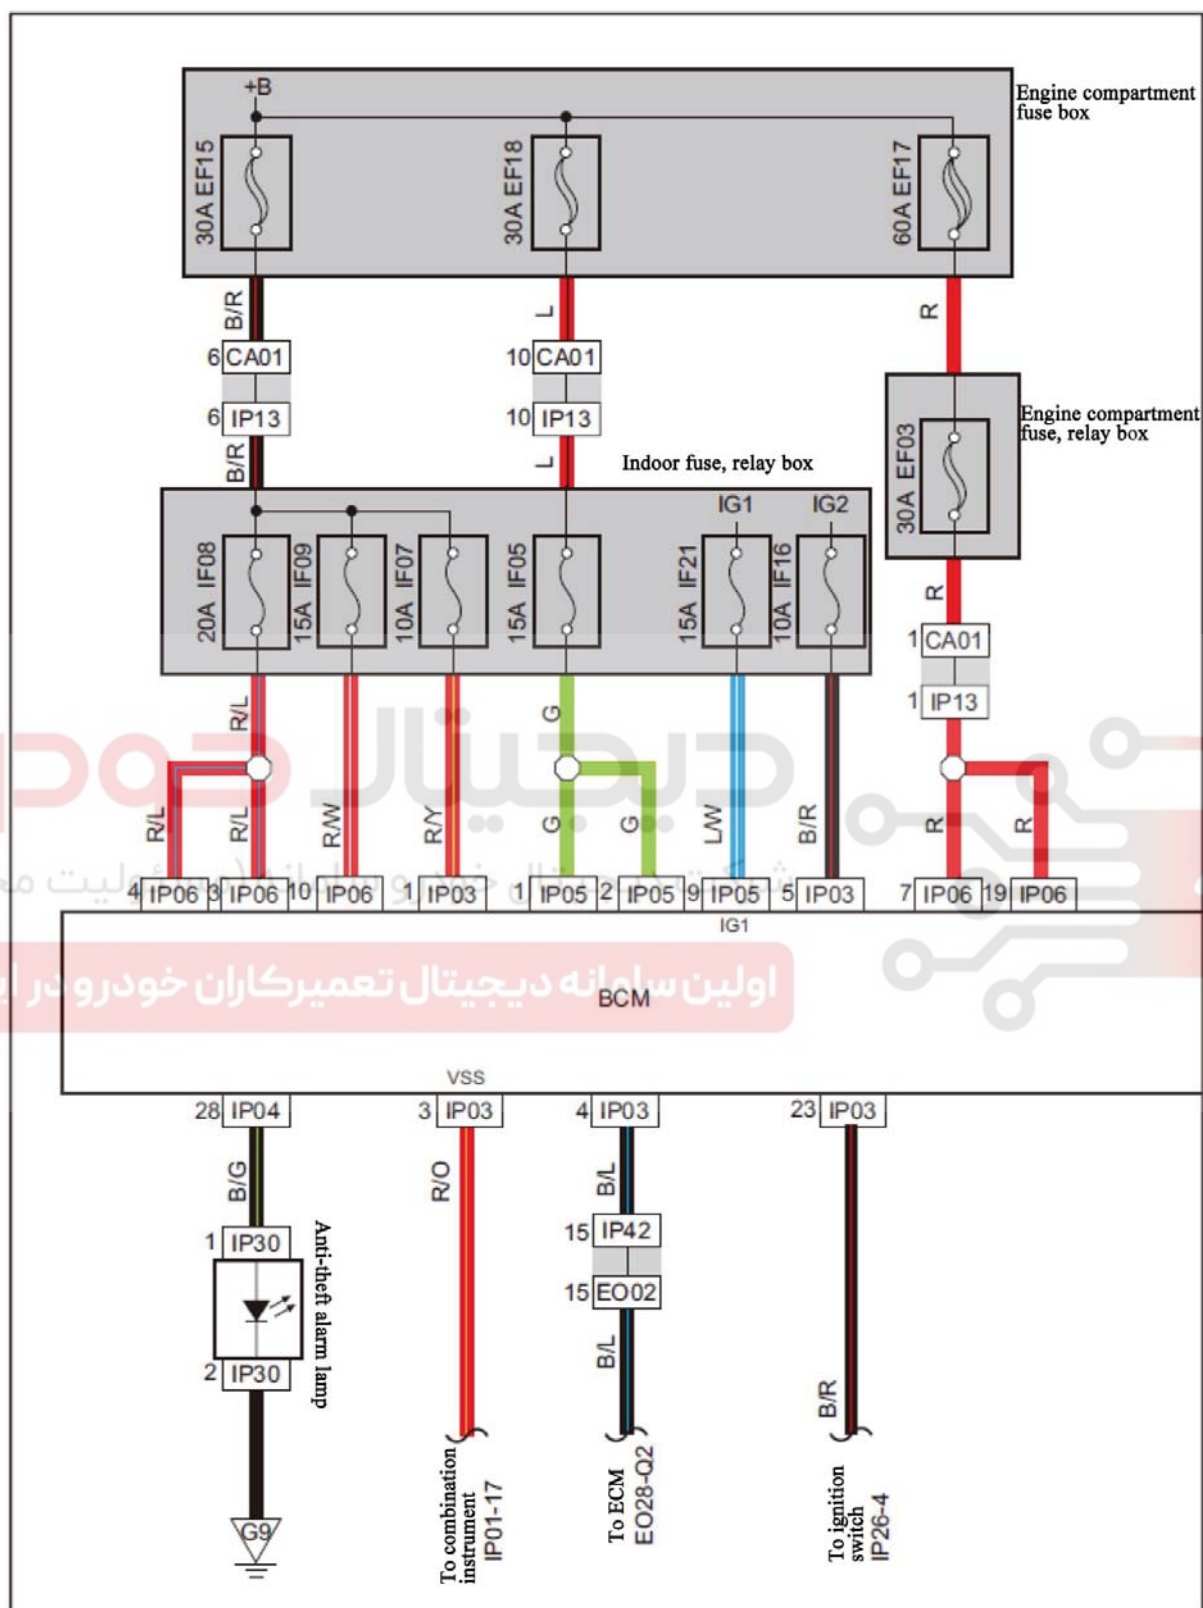

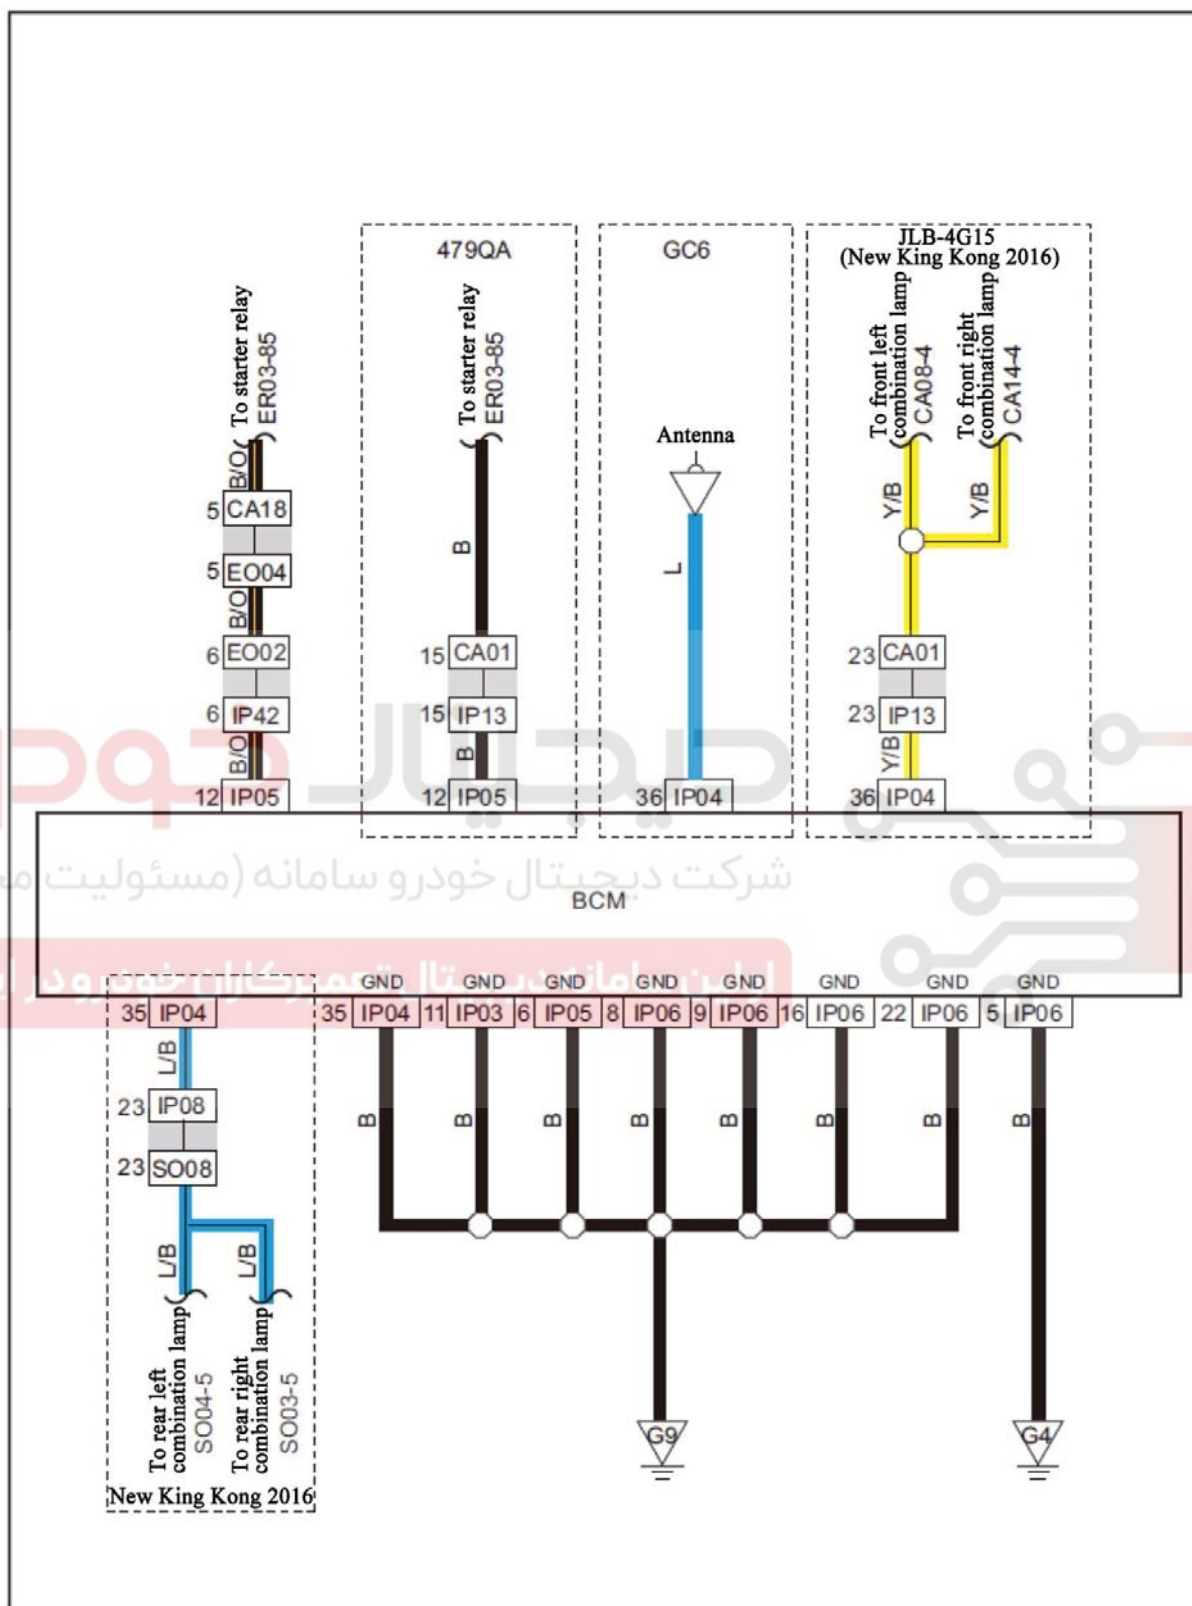

Harness connector	Name	Page
CA01	To instrument harness connector	33
CA18	To engine harness connector	32
EN04	To instrument harness connector	39
EN25	To engine compartment harness connector	38
EO02	To instrument harness connector	44
EO04	To engine compartment harness connector	43
IP03	BCM harness connector A1	54
IP04	Antenna harness connector	54
IP05	BCM harness connector B	54
IP06	BCM harness connector C	54
IP08	To floor harness connector B	54
IP13	To engine compartment harness connector	49
IP30	Anti-theft alarm lamp harness connector	54
IP42	To engine harness connector	49
SO08	To instrument harness connector B	60
G9	Instrument grounding	84
G4	Instrument grounding	84

Connection point	Description	Page
IP03-4	To ECM EN01-9	129
IP03-4	To ECM EO28-Q2	154
IP04-35	To rear left combination lamp SO04-5	246
	To rear right combination lamp SO03-5	246
IP04-36	To front left combination lamp CA08-4	246
	To front right combination lamp CA14-4	246
IP05-12	To starter relay ER09-85	120/124
IP05-12	To starter relay ER03-85 (GC6)	111
IP04-23	To ignition switch IP26-4	120/124
IP03-3	To combination instrument IP01-17	192