


Back-up Light

Circuit Diagram (Page 1 of 2)

For CVT

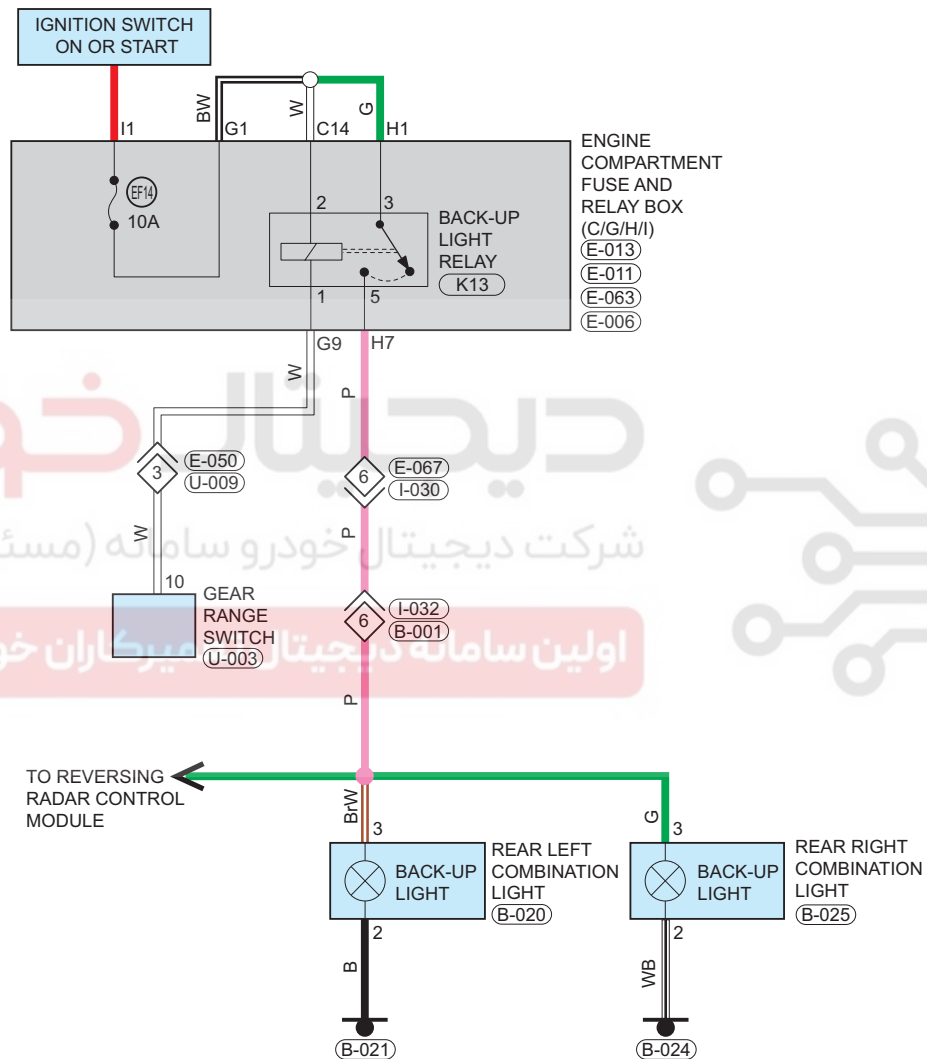

دیجیتال خودرو
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
 اولین سامانه دیجیتال ایرانیان



09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-013	08-7	E-011	08-7	E-063	08-7
E-006	08-7	U-003	08-10	B-020	08-17
B-021	08-17	B-025	08-17	B-024	08-17

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF14	06-5	Engine Compartment Fuse and Relay Box
Back-up Light Relay	06-5	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067, I-030	08-7, 08-12	E-050, U-009	08-7, 08-10	I-032, B-001	08-12, 08-17

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-013	12-2	E-011	12-2	E-063	12-4
E-006	12-2	U-003	12-6	B-020	12-14
B-021	12-14	B-025	12-14	B-024	12-14
E-050, U-009	12-4	E-067, I-030	12-5	I-032, B-001	12-10

Circuit Diagram (Page 2 of 2)

For MT

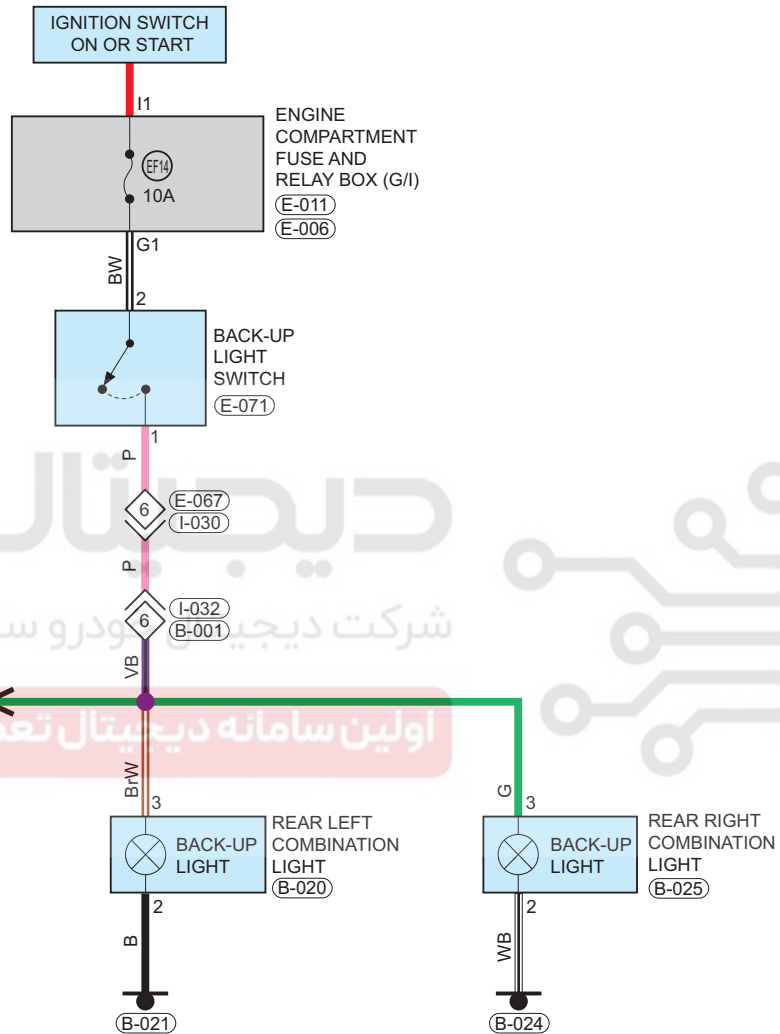

دیجیتال خودرو
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعویض خودرو در ایران



09

ET11090520