


Audio System

Circuit Diagram (Page 1 of 5)

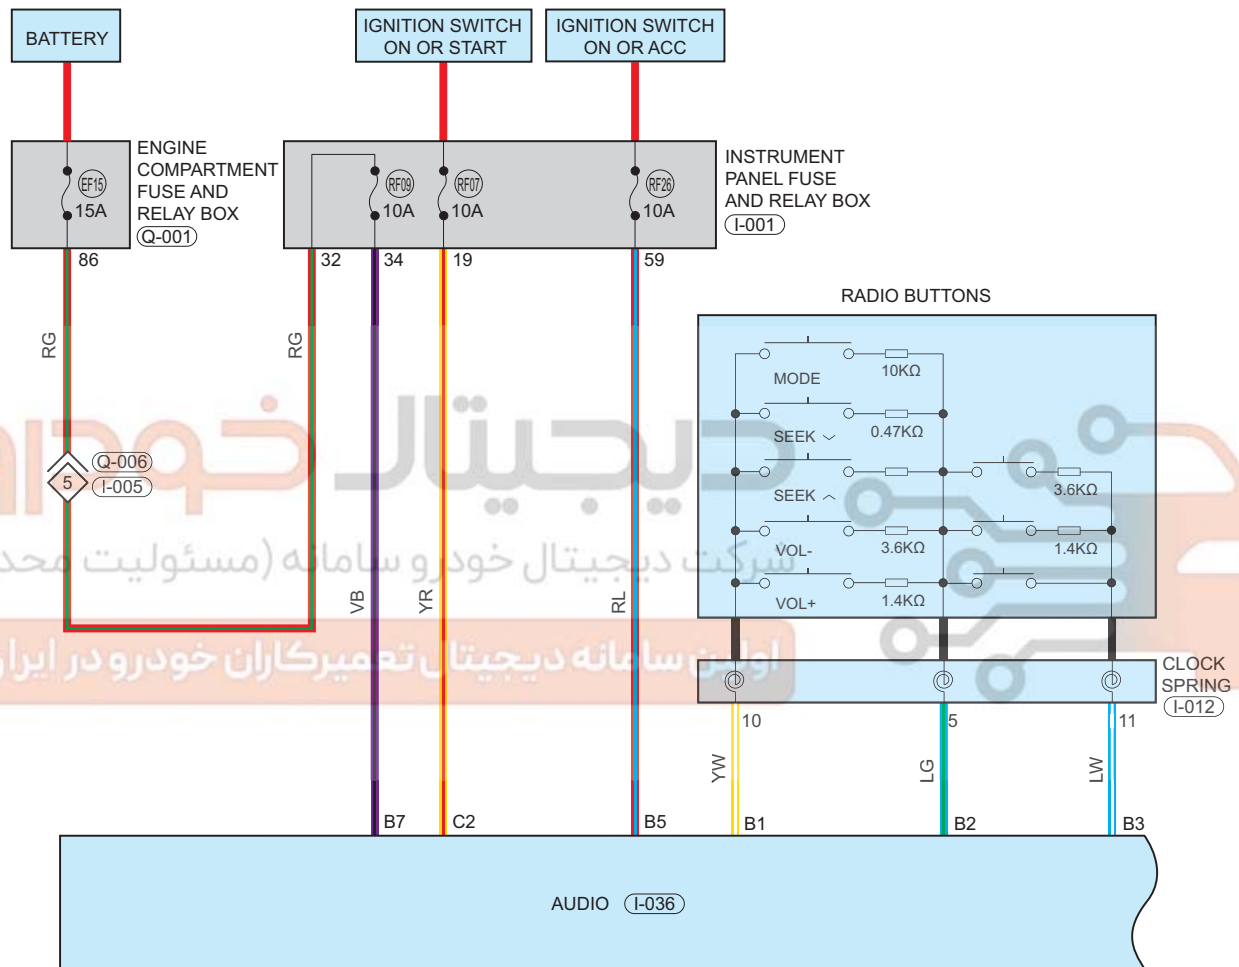

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-6	I-001	08-12	I-012	08-12
I-036	08-12				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF15	06-2	Engine Compartment Fuse and Relay Box
RF09	06-8	Instrument Panel Fuse and Relay Box
RF07	06-8	Instrument Panel Fuse and Relay Box
RF26	06-8	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-005, Q-006	08-12				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-16	I-001	12-4	I-012	12-4
I-036	12-4	I-005, Q-006	12-4		

Circuit Diagram (Page 2 of 5)

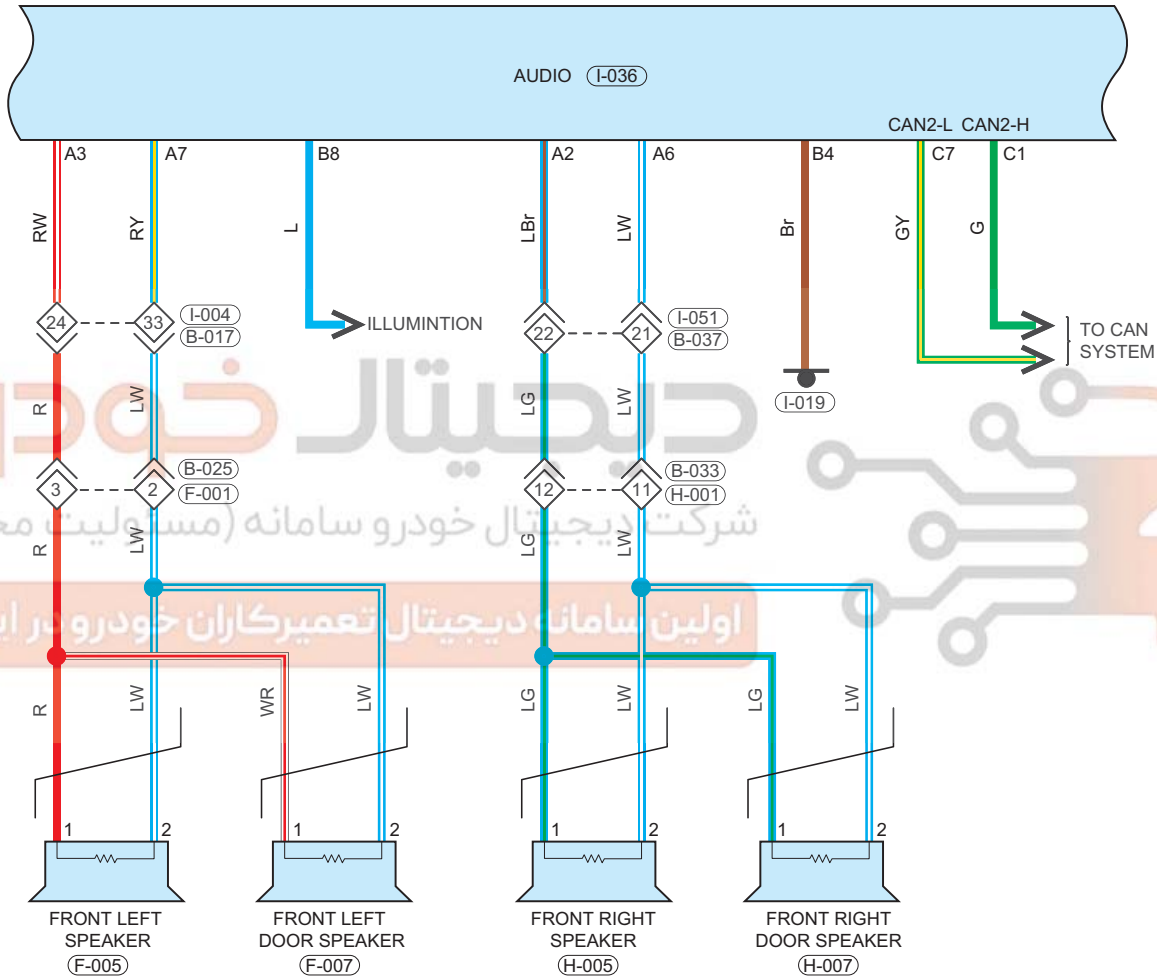

09

AEE002001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	08-12	I-019	08-12	F-005	08-25
F-007	08-25	H-005	08-26	H-007	08-26

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-017, I-004	08-16	B-037, I-051	08-16	B-025, F-001	08-16
B-033, H-001	08-16				

Form of Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	12-4	I-019	12-4	F-005	12-13
F-007	12-13	H-005	12-13	H-007	12-13
B-017, I-004	12-8	B-037, I-051	12-8	B-025, F-001	12-8
B-033, H-001	12-8				

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

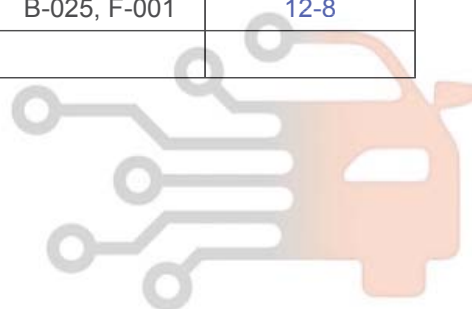

Circuit Diagram (Page 3 of 5)

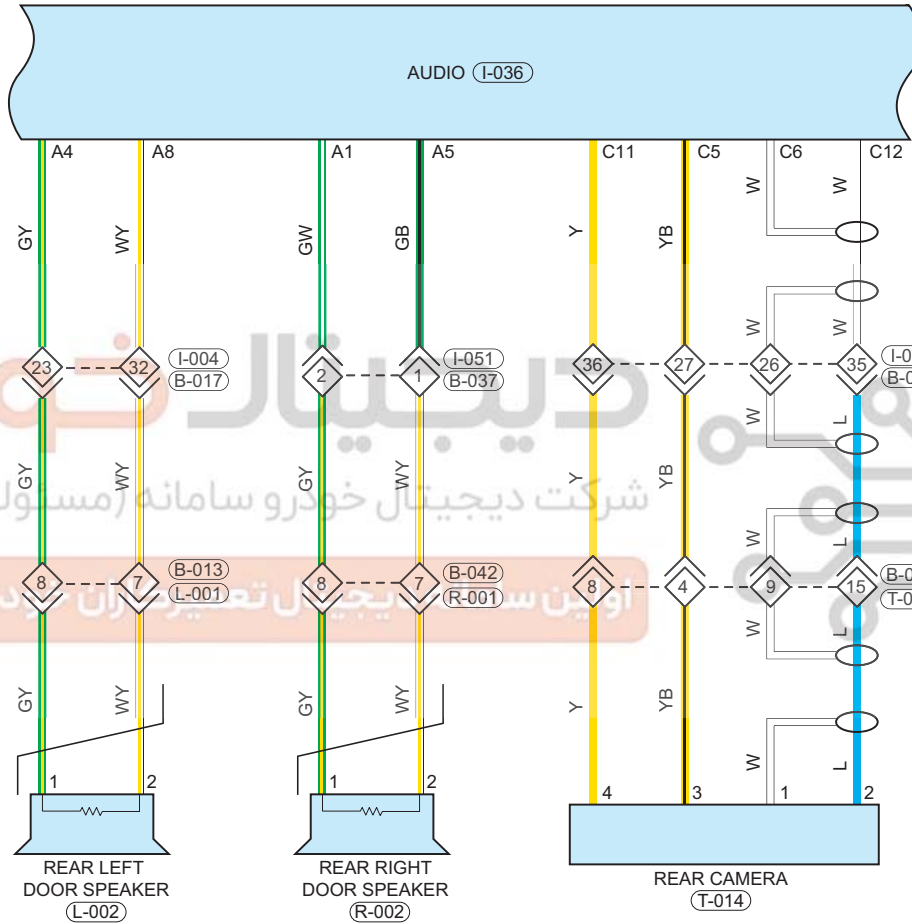

09

AEE003001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	08-12	L-002	08-27	R-002	08-28
T-014	08-29				

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-017, I-004	08-16	B-037, I-051	08-16	B-013, L-001	08-16
B-042, R-001	08-16	B-005, T-001	08-16		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	12-4	L-002	12-14	R-002	12-14
T-014	12-15	B-042, R-001	12-8	B-005, T-001	12-8
B-017, I-004	12-8	B-037, I-051	12-8	B-013, L-001	12-8


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 4 of 5)

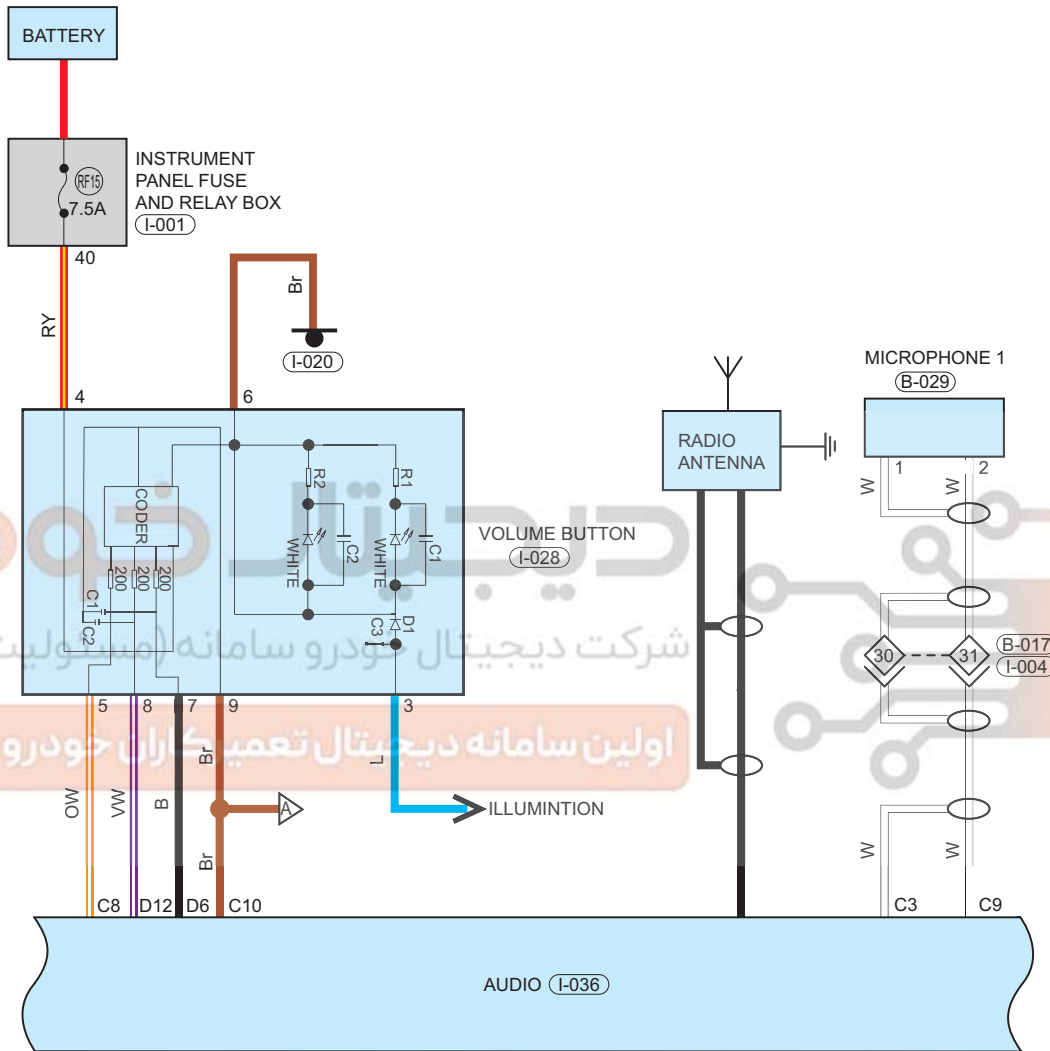

09

AEE004001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-12	I-028	08-12	I-020	08-12
I-036	08-12	B-029	08-16		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF15	06-8	Instrument Panel Fuse and Relay Box

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-017, I-004	08-16				


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	I-028	12-4	I-020	12-4
I-036	12-4	B-029	12-8	B-017, I-004	12-8

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 5 of 5)

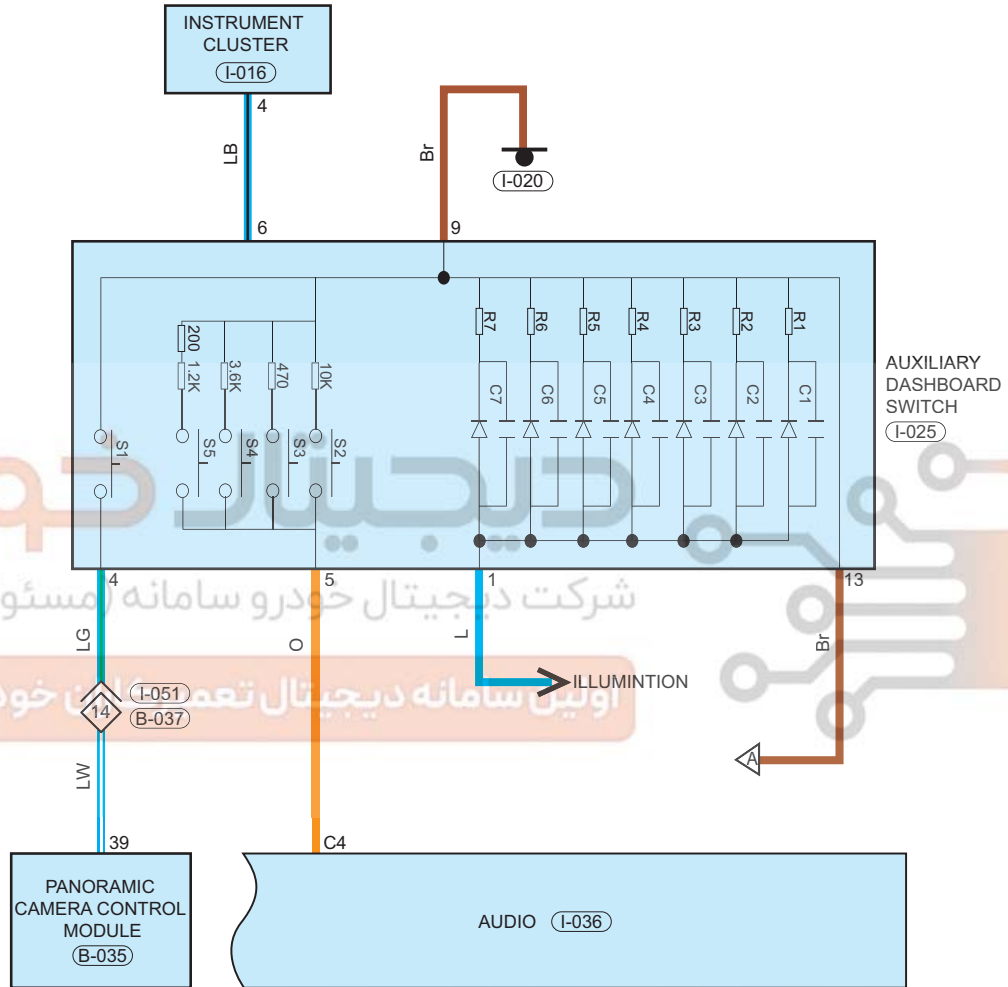

09

AEE005001