


# Lighting System

## High/Low Beam Light

### Circuit Diagram (Page 1 of 2)

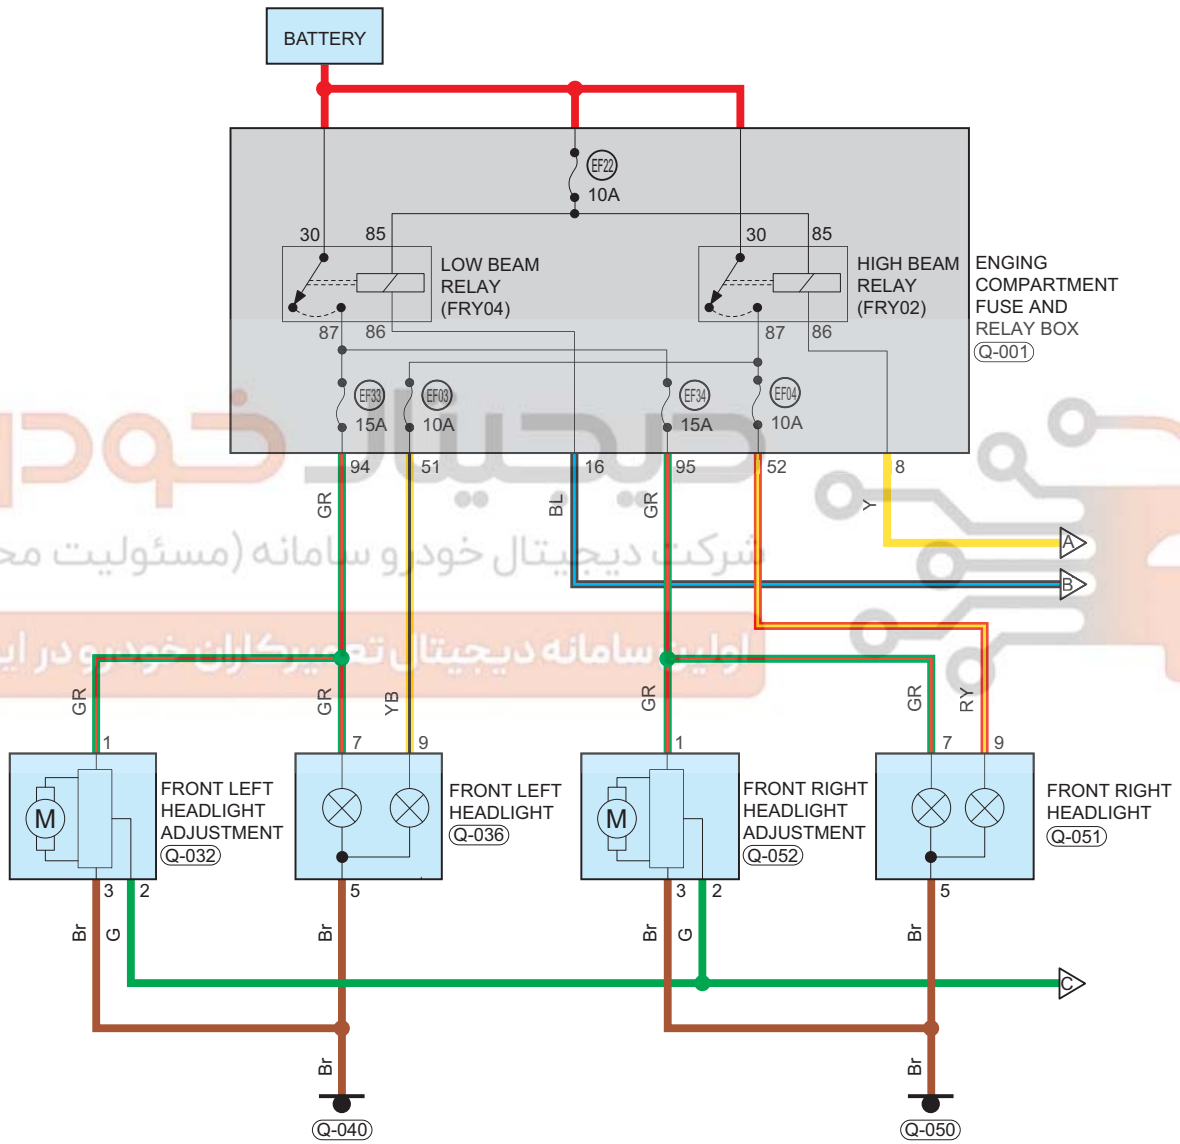

09

LIE008001

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-6	Q-032	08-6	Q-036	08-6
Q-052	08-6	Q-051	08-6	Q-040	08-6
Q-050	08-6				


## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF22	06-2	Engine Compartment Fuse and Relay Box
EF33	06-2	Engine Compartment Fuse and Relay Box
EF03	06-2	Engine Compartment Fuse and Relay Box
EF34	06-2	Engine Compartment Fuse and Relay Box
EF04	06-2	Engine Compartment Fuse and Relay Box
High Beam Relay (FRY02)	06-2	Engine Compartment Fuse and Relay Box
Low Beam Relay (FRY04)	06-2	Engine Compartment Fuse and Relay Box

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-16	Q-032	12-16	Q-036	12-16
Q-052	12-16	Q-051	12-16	Q-040	12-16
Q-050	12-16				

Circuit Diagram (Page 2 of 2)

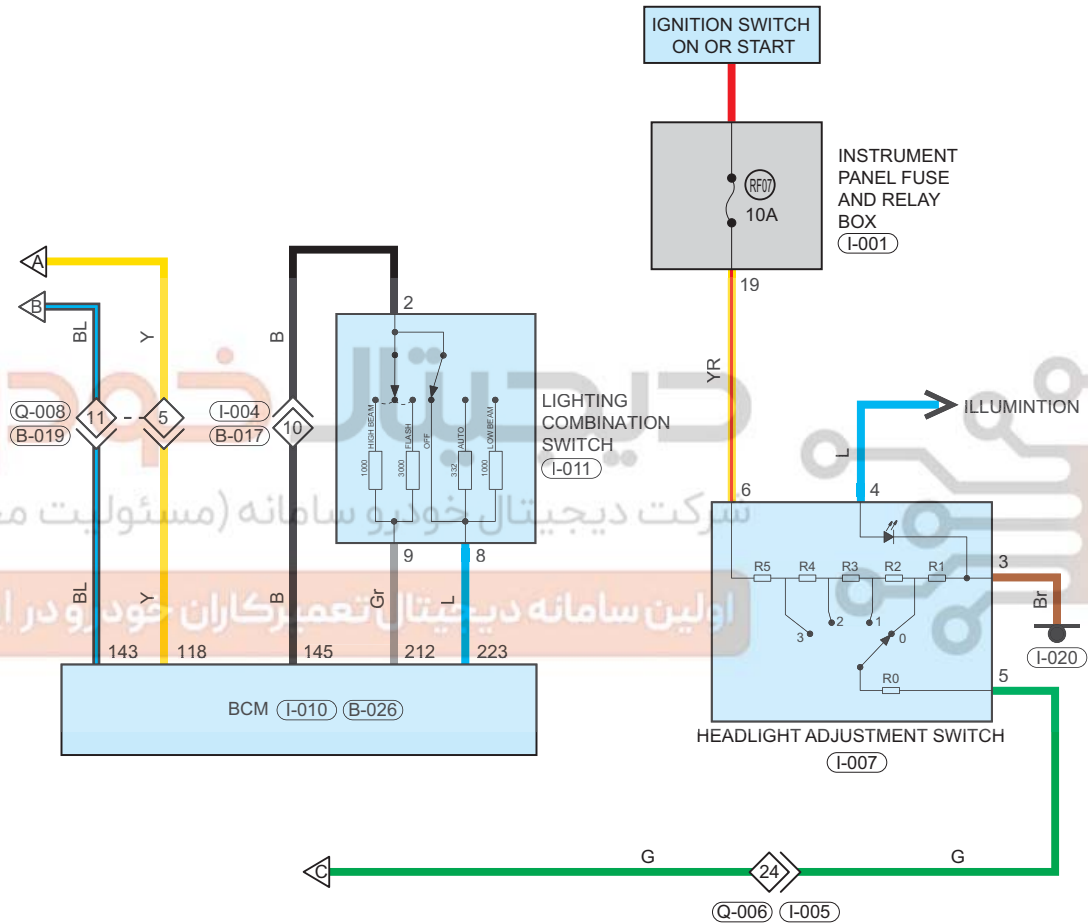

09

LIE009001