



Fog lamp (Hatch) (individual)

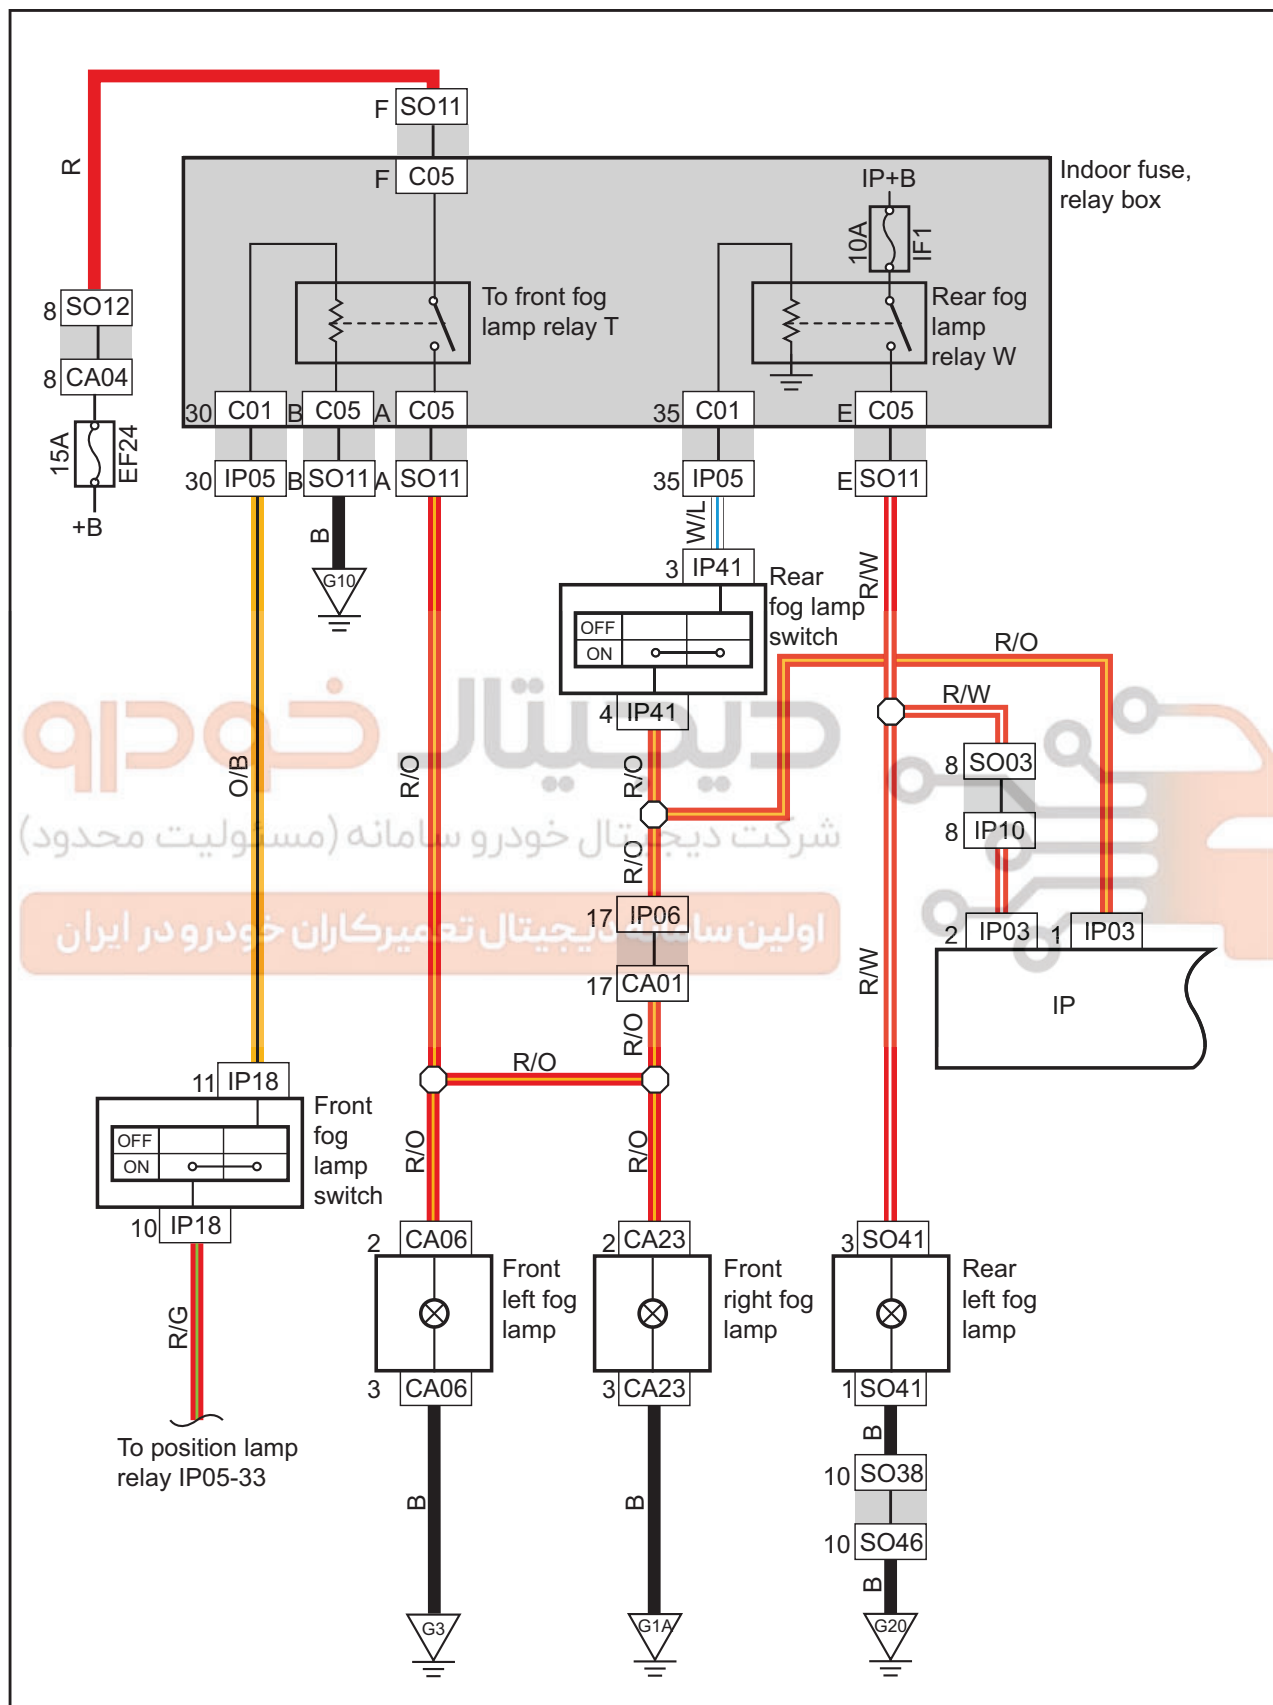

Fog lamp (Hatch) (integrated)

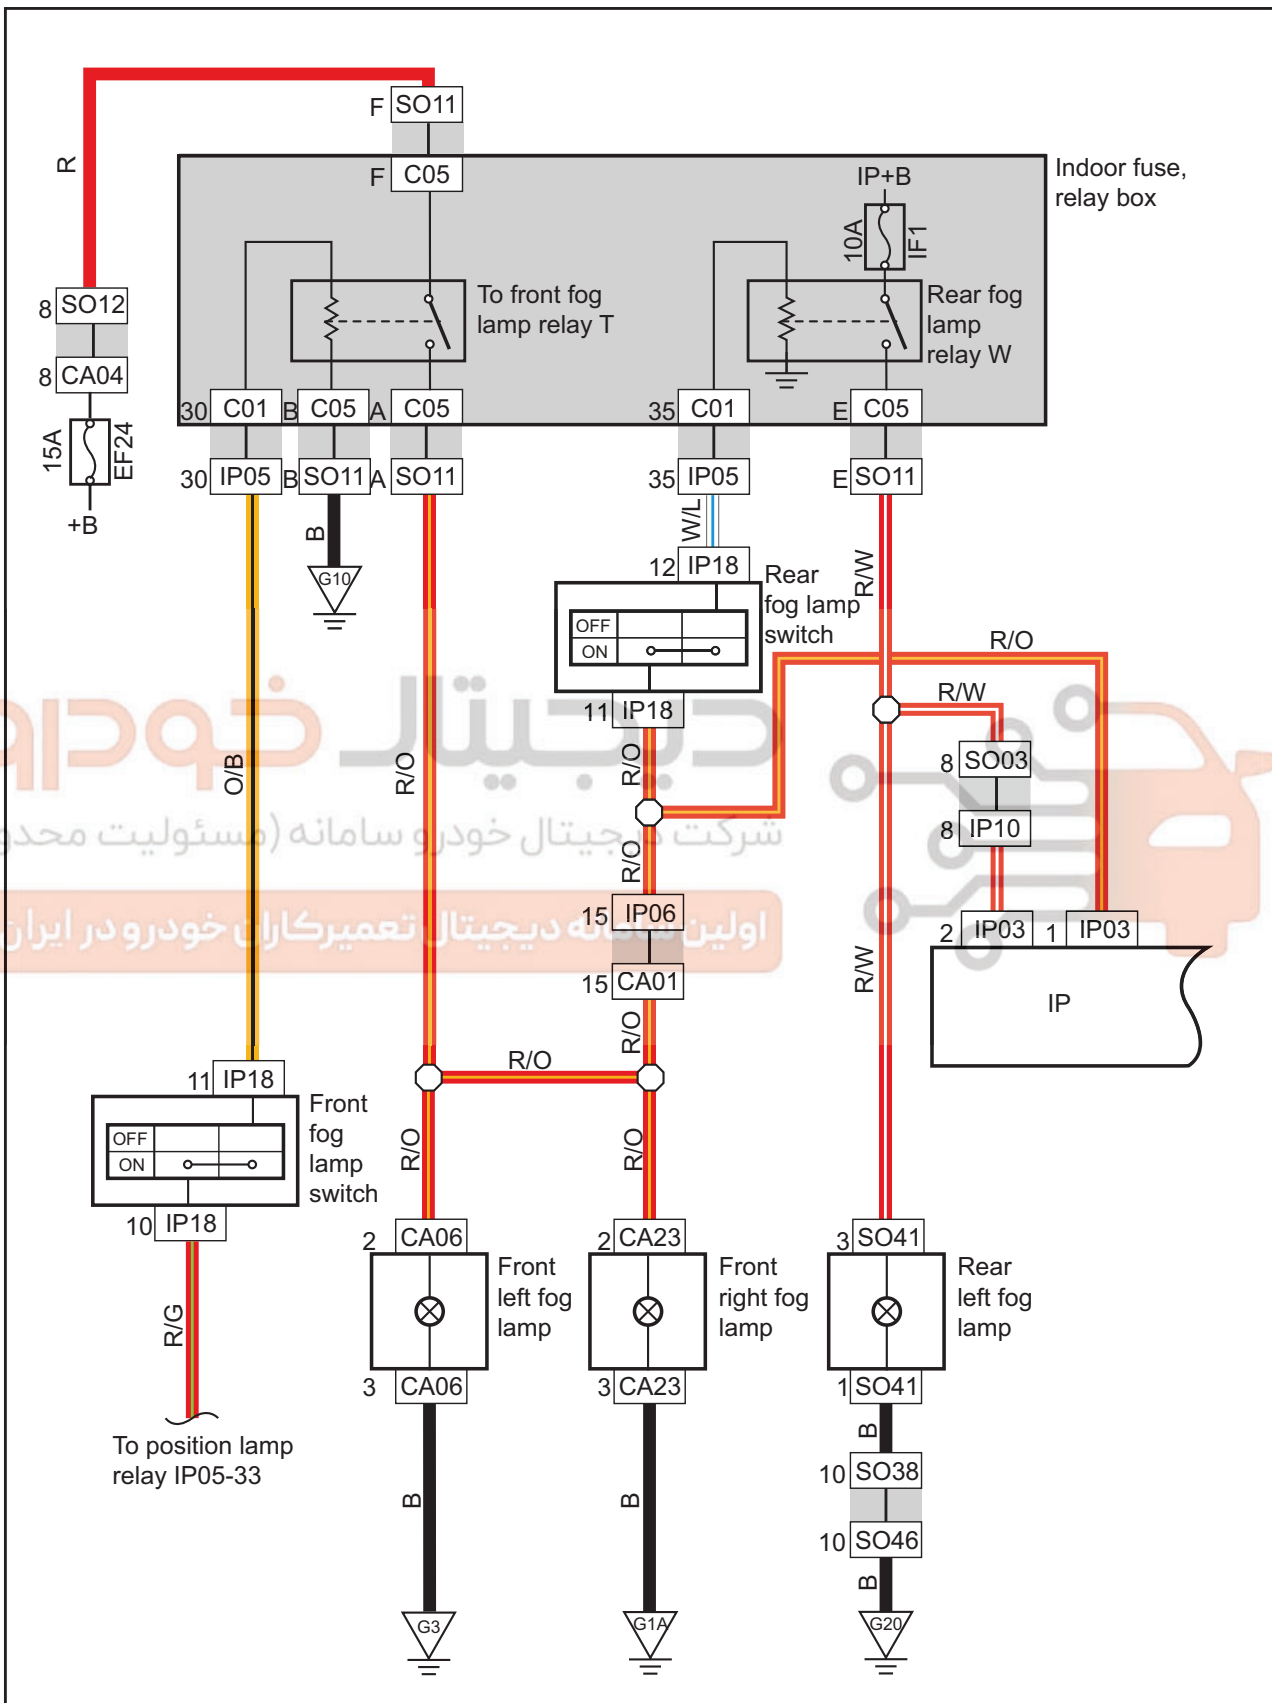

Harness connector	Name	Pages
C01	Rear Connector of Indoor Fuse Box	17
C05	Rear Connector of Indoor Fuse Box	17
CA01	To harness connector of instrument harness 1	22
CA04	To body harness connector	22
IP03	Combination instrument harness connector	80
IP05	To harness connector of indoor fuse & relay box	80
IP06	To engine compartment harness connector	80
IP10	To body harness connector	80
IP18	Headlamp combination switch harness connector	80
IP41	Rear fog lamp switch	80
SO03 (Hatch)	To instrument harness connector	106
SO11 (Hatch)	To harness connector of indoor fuse & relay box	106
SO38 (Hatch)	To harness connector of tail door	106
SO41 (Hatch)	Harness connector of rear left combination tail lamp	106
SO46 (Hatch)	To body harness connector	107
SO12	To engine compartment harness connector	97/106
G1A	Engine compartment grounding	121
G3	Engine compartment grounding	121
G7	Instrument panel grounding	125
G20 (Hatch)	Backdoor grounding	129

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Connection point	Descriptions	Pages
IP18-10	To position lamp relay IP05-33	470/472