


Lighting System

High/Low Beam Light

Circuit Diagram (Page 1 of 2)

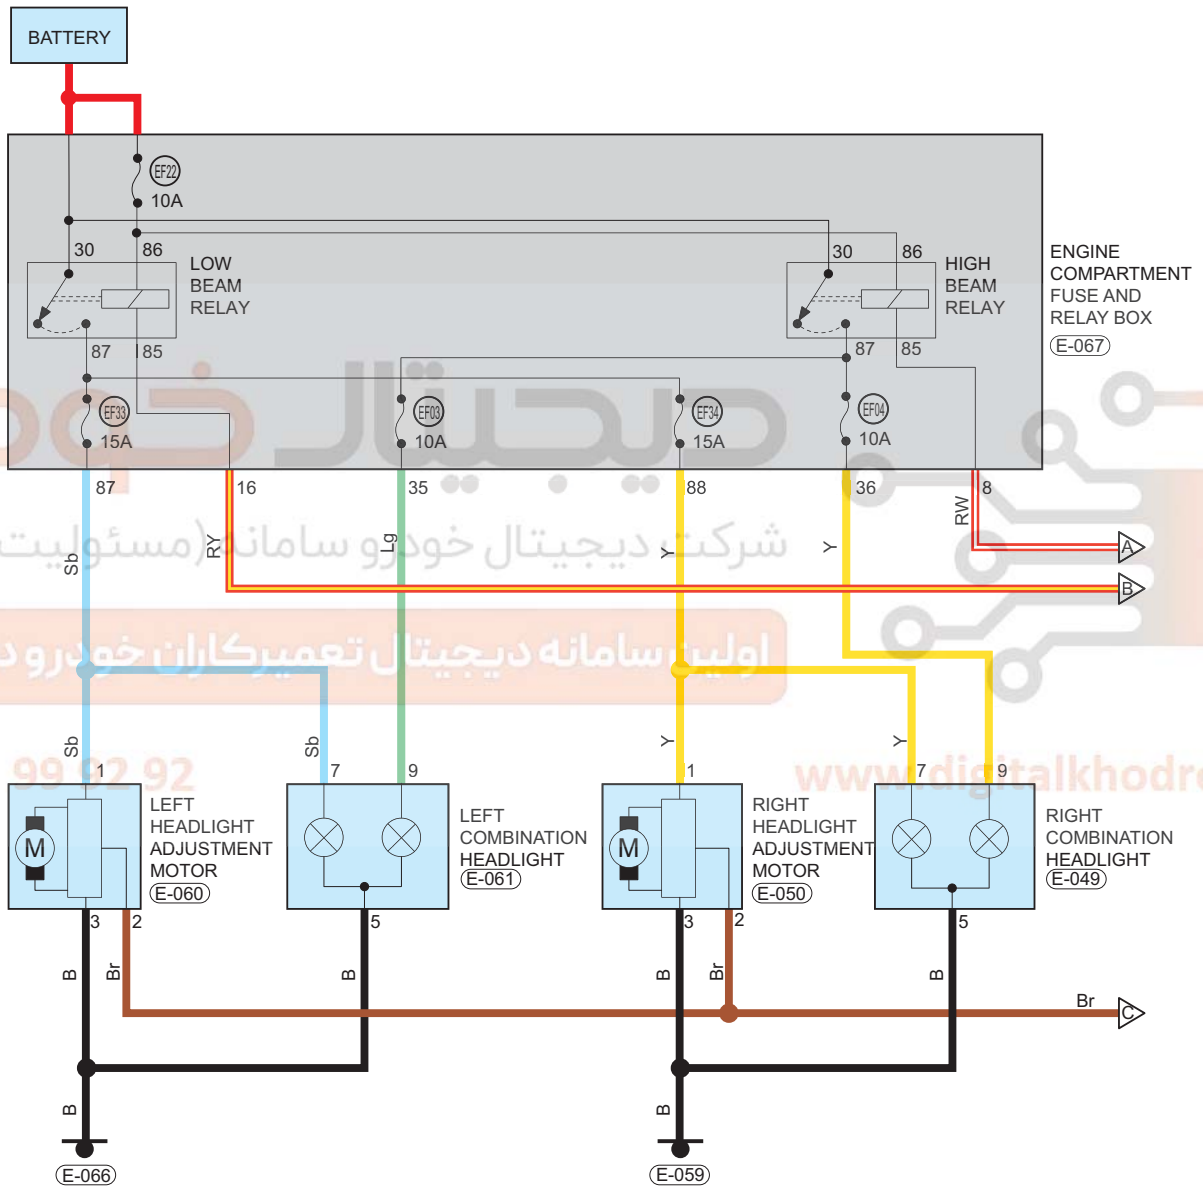

دیجیتال خودرو (مسئولیت محدود)
 شرکت دیجیتال خودرو سامانه
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

02 09

www.digitalkhodro.com

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	E-060	08-5 (MT) 08-7 (AT)	E-061	08-5 (MT) 08-7 (AT)
E-050	08-5 (MT) 08-7 (AT)	E-049	08-5 (MT) 08-7 (AT)	E-066	08-5 (MT) 08-7 (AT)
E-059	08-5 (MT) 08-7 (AT)				


Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF03	06-2	Engine Compartment Fuse and Relay Box
EF04	06-2	Engine Compartment Fuse and Relay Box
EF22	06-2	Engine Compartment Fuse and Relay Box
EF33	06-2	Engine Compartment Fuse and Relay Box
EF34	06-2	Engine Compartment Fuse and Relay Box
Low Beam Relay	06-2	Engine Compartment Fuse and Relay Box
High Beam Relay	06-2	Engine Compartment Fuse and Relay Box

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	E-060	12-5	E-061	12-5
E-050	12-5	E-049	12-4	E-066	12-5
E-059	12-5				

Circuit Diagram (Page 2 of 2)

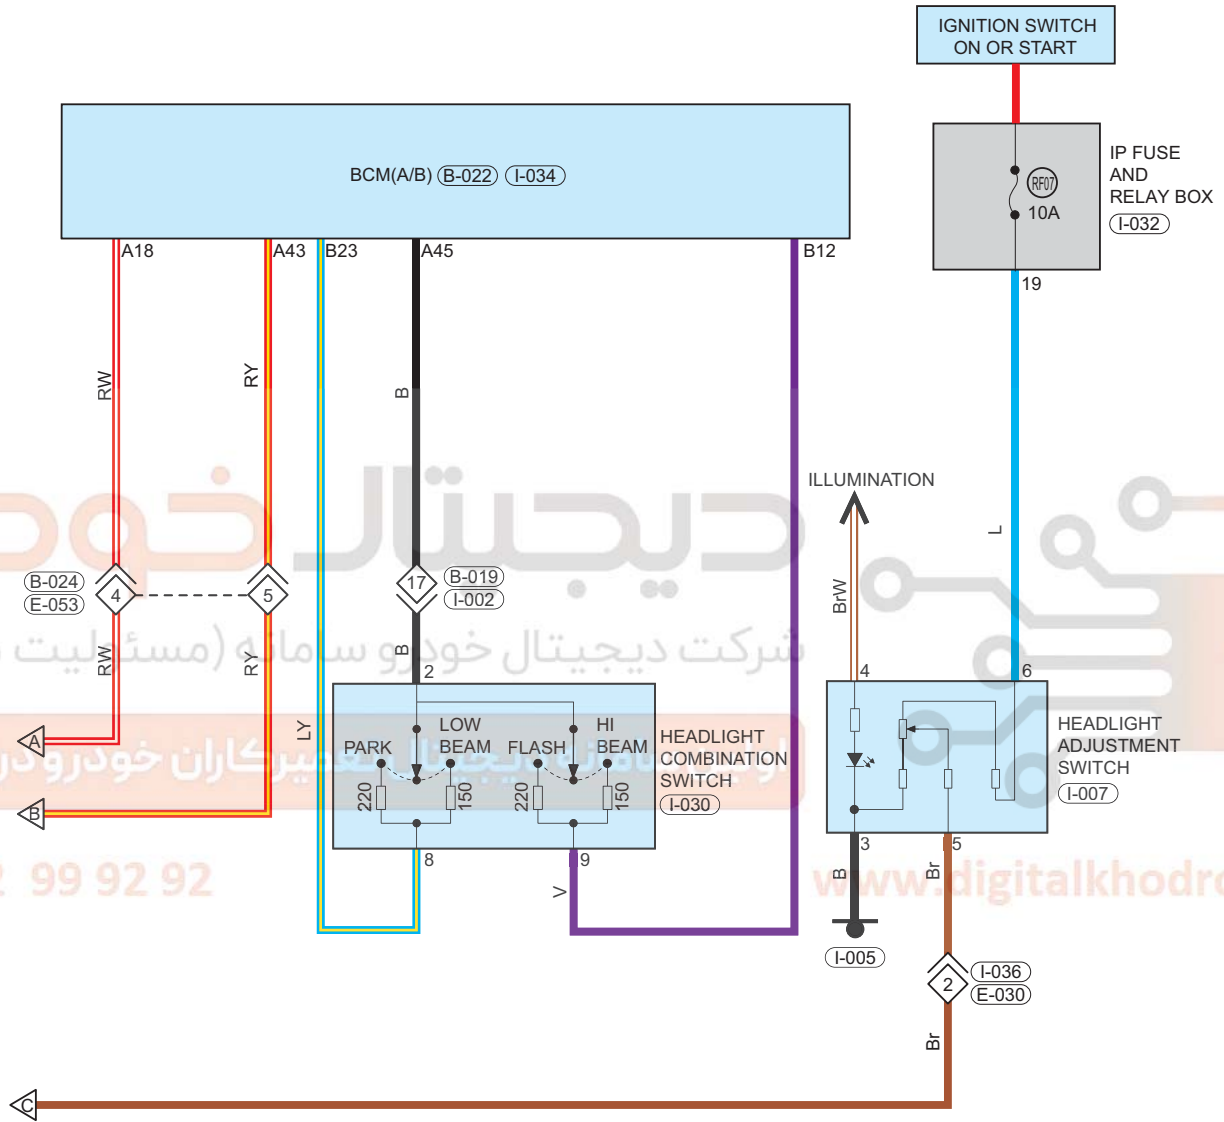

02 09 52 99 92 92

www.digitalkhodro.com

EA13T090430