


Brake Control System

Circuit Diagram (Page 1 of 3)

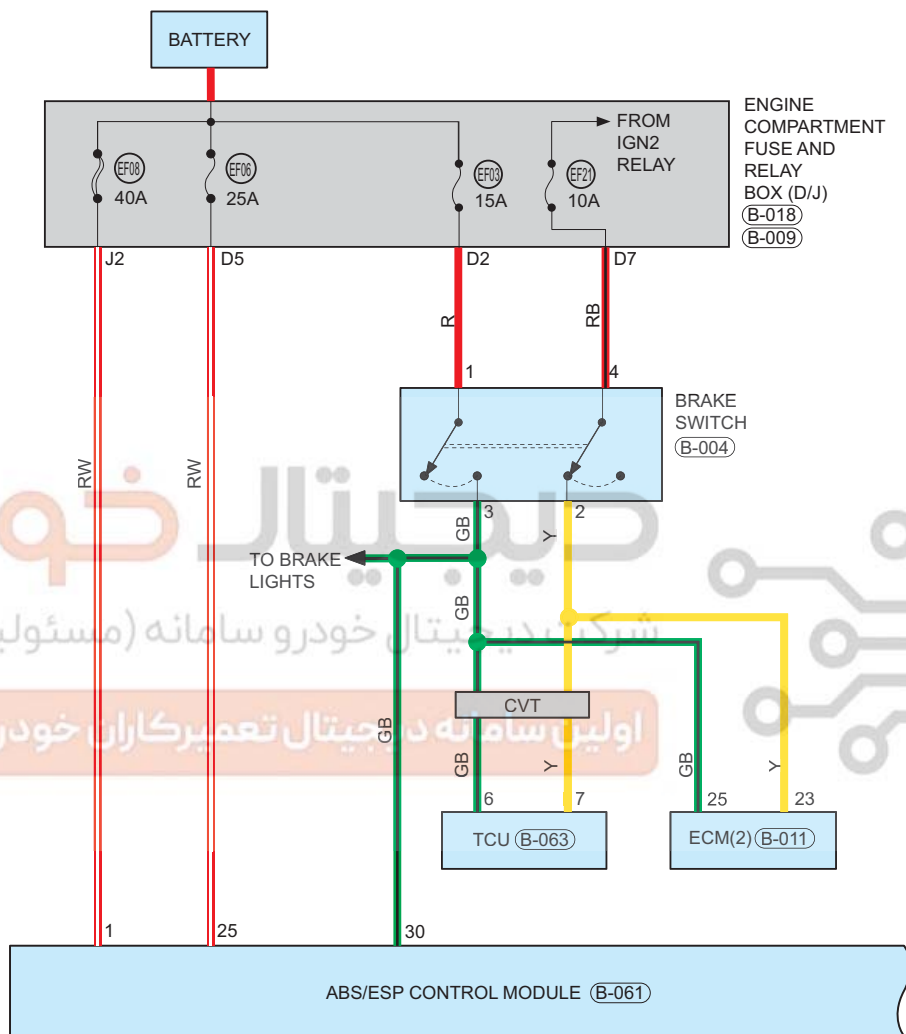

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-018	08-11	B-009	08-11	B-004	08-11
B-011	08-11	B-063	08-11	B-061	08-11

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF03	06-4	Engine Compartment Fuse and Relay Box
EF06	06-4	Engine Compartment Fuse and Relay Box
EF08	06-4	Engine Compartment Fuse and Relay Box
EF21	06-4	Engine Compartment Fuse and Relay Box


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-018	12-6	B-009	12-6	B-004	12-6
B-011	12-6	B-063	12-8	B-061	12-8

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

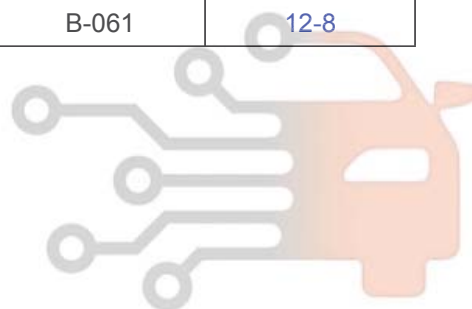

Circuit Diagram (Page 2 of 3)

*1: W/ PEPS

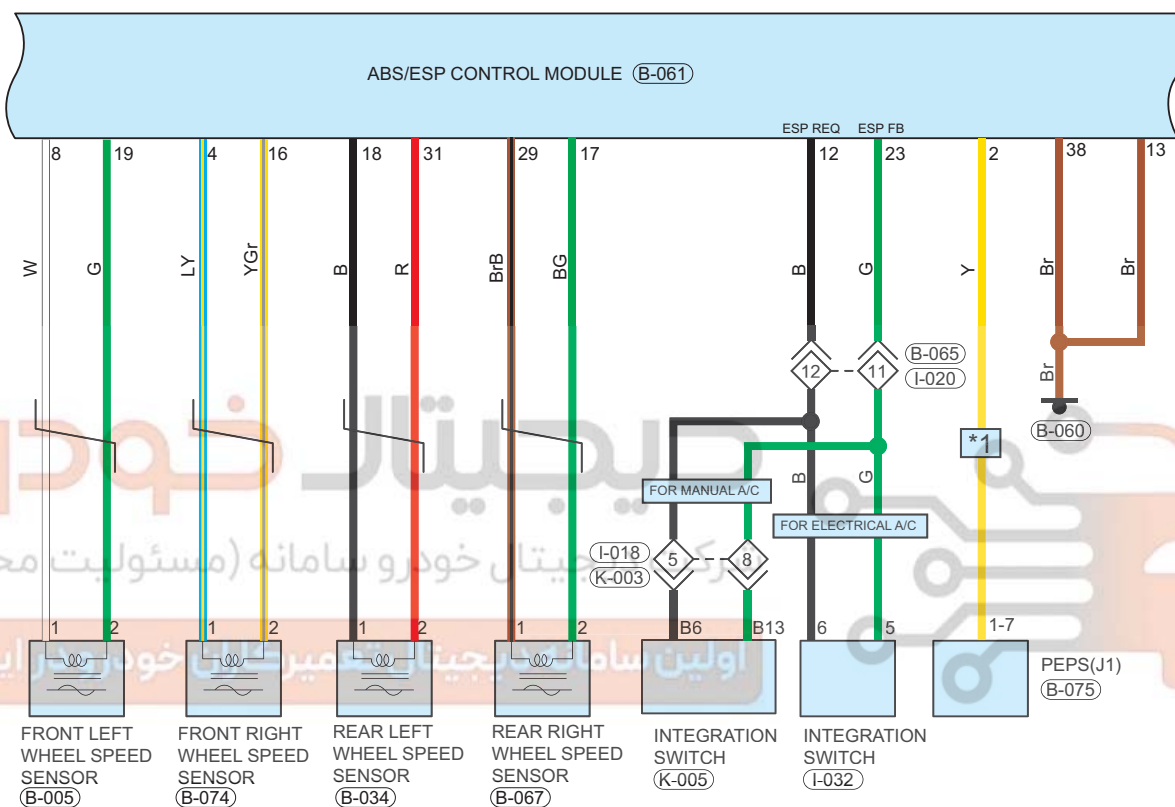

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-061	08-11	B-005	08-11	B-074	08-11
B-067	08-11	B-034	08-11	B-075	08-11
I-032	08-8	K-005	08-10		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-065, I-020	08-11, 08-8	K-003, I-018	08-10, 08-8		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-061	12-8	B-005	12-6	B-074	12-9
B-067	12-9	B-034	12-7	B-075	12-9
I-032	12-5	K-005	12-12	B-065, I-020	12-9, 12-5
K-003, I-018	12-12, 12-5				

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 3 of 3)

