

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-063	08-4 (MT)	E-011	08-4 (MT)	E-005	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
E-004	08-4 (MT)	I-009	08-12	I-011	08-12
	08-7 (CVT)				
U-006	08-10	U-010	08-10		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF17	06-12	Instrument Panel Fuse and Relay Box
EF10	06-5	Engine Compartment Fuse and Relay Box
EF27	06-5	Engine Compartment Fuse and Relay Box
TCU Relay	06-5	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-030, E-067	08-12, 08-4 (MT)	E-050, U-009	08-7, 08-10		
	08-12, 08-7 (CVT)				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-011	12-8	I-009	12-8	E-005	12-2
E-004	12-2	E-011	12-2	E-063	12-4
U-006	12-6	U-010	12-6	I-030, E-067	12-9
E-050, U-009	12-4				

Circuit Diagram (Page 2 of 5)

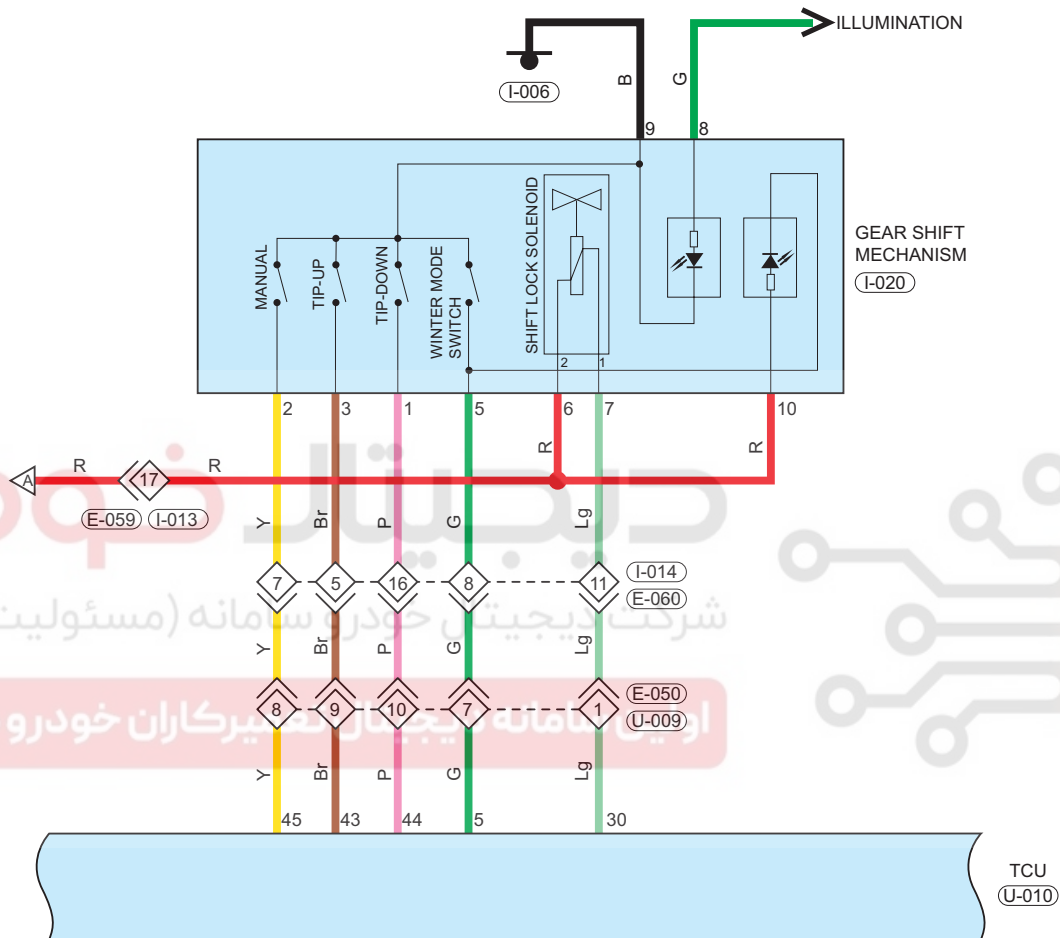

09

ET11090210

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-006	08-12	I-020	08-12	U-010	08-10

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-059, I-013	08-4, 08-12 (MT)	I-014, E-060	08-12, 08-4 (MT)	E-050, U-009	08-7, 08-10
	08-7, 08-12 (CVT)		08-12, 08-7 (CVT)		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-006	12-8	I-020	12-9	U-010	12-6
E-059, I-013	12-4	I-014, E-060	12-8	E-050, U-009	12-4


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 3 of 5)

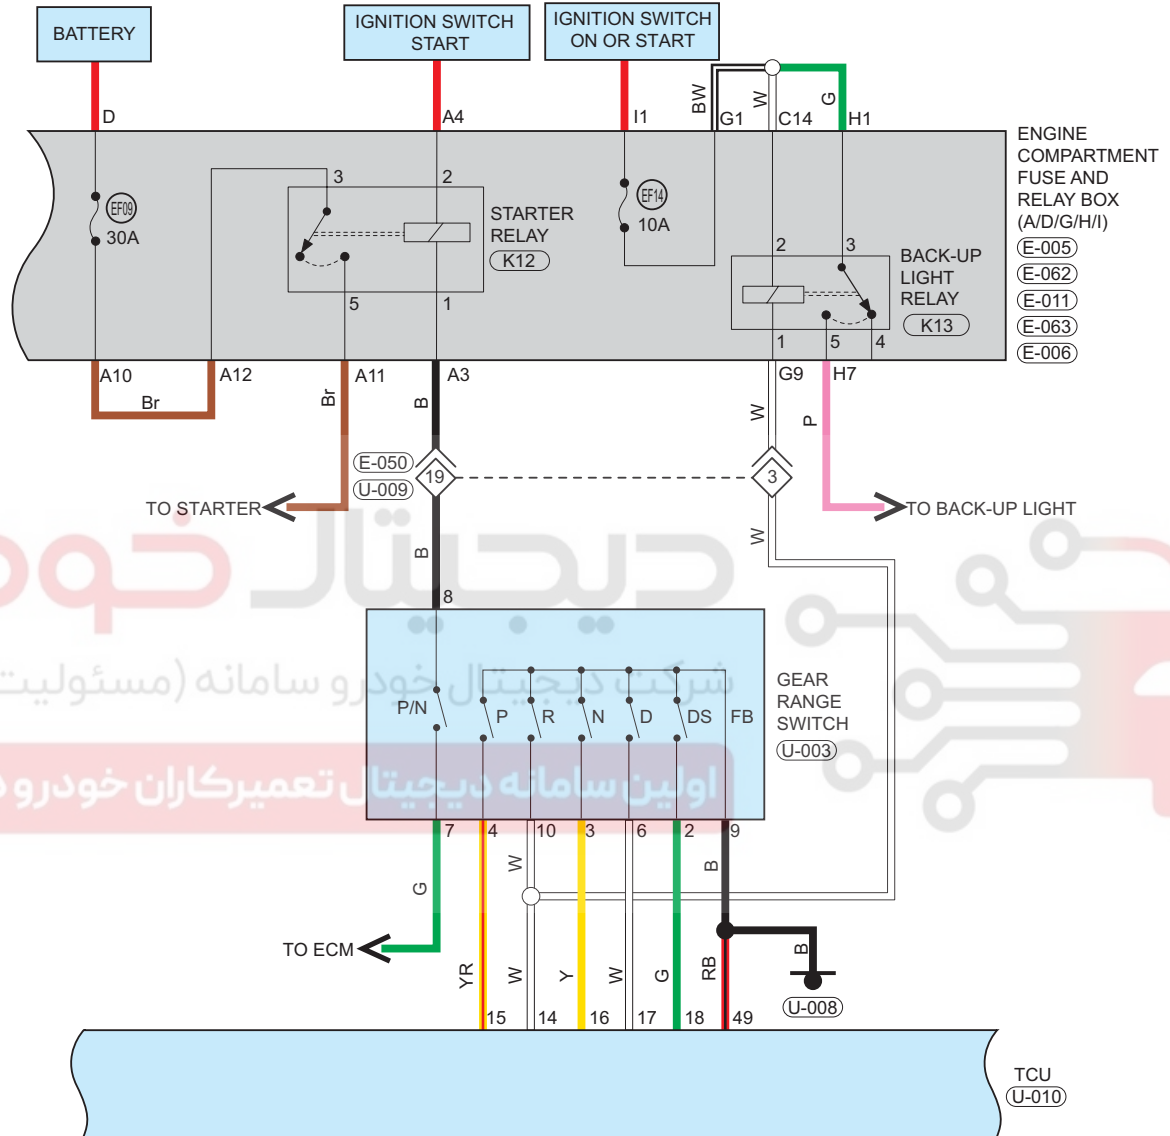

دیجیتال خودرو
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-005	08-4 (MT)	E-062	08-4 (MT)	E-011	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
E-063	08-4 (MT)	E-006	08-4 (MT)	U-003	08-10
	08-7 (CVT)		08-7 (CVT)		
U-008	08-10	U-010	08-10		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF09	06-5	Engine Compartment Fuse and Relay Box
EF14	06-5	Engine Compartment Fuse and Relay Box
Starter Relay	06-5	Engine Compartment Fuse and Relay Box
Back-up Light Relay	06-5	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-050, U-009	08-7, 08-10				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-005	12-2	E-062	12-4	E-011	12-2
E-063	12-4	E-006	12-2	U-003	12-6
U-008	12-6	U-010	12-6	E-050, U-009	12-4

Circuit Diagram (Page 4 of 5)

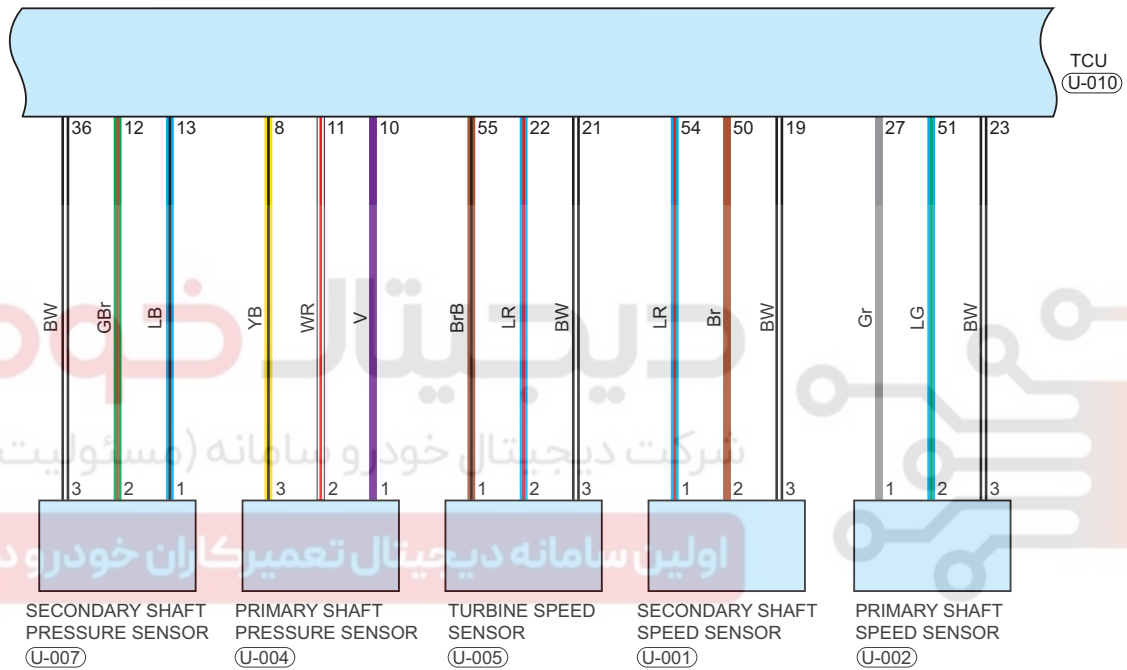

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
U-010	08-10	U-007	08-10	U-004	08-10
U-005	08-10	U-001	08-10	U-002	08-10

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
U-010	12-6	U-007	12-6	U-004	12-6
U-005	12-6	U-001	12-6	U-002	12-6


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 5 of 5)

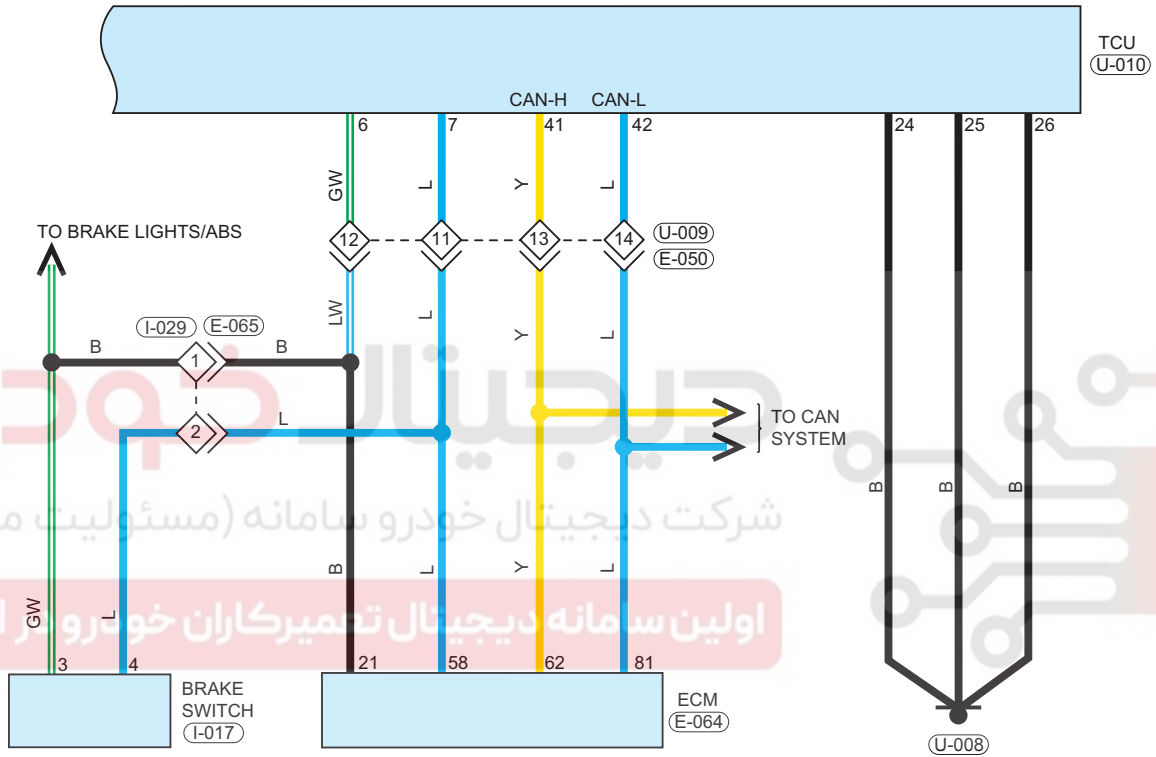

09

ET11090240