


# SQR484F Fuel Supply System

Circuit Diagram (Page 1 of 2)

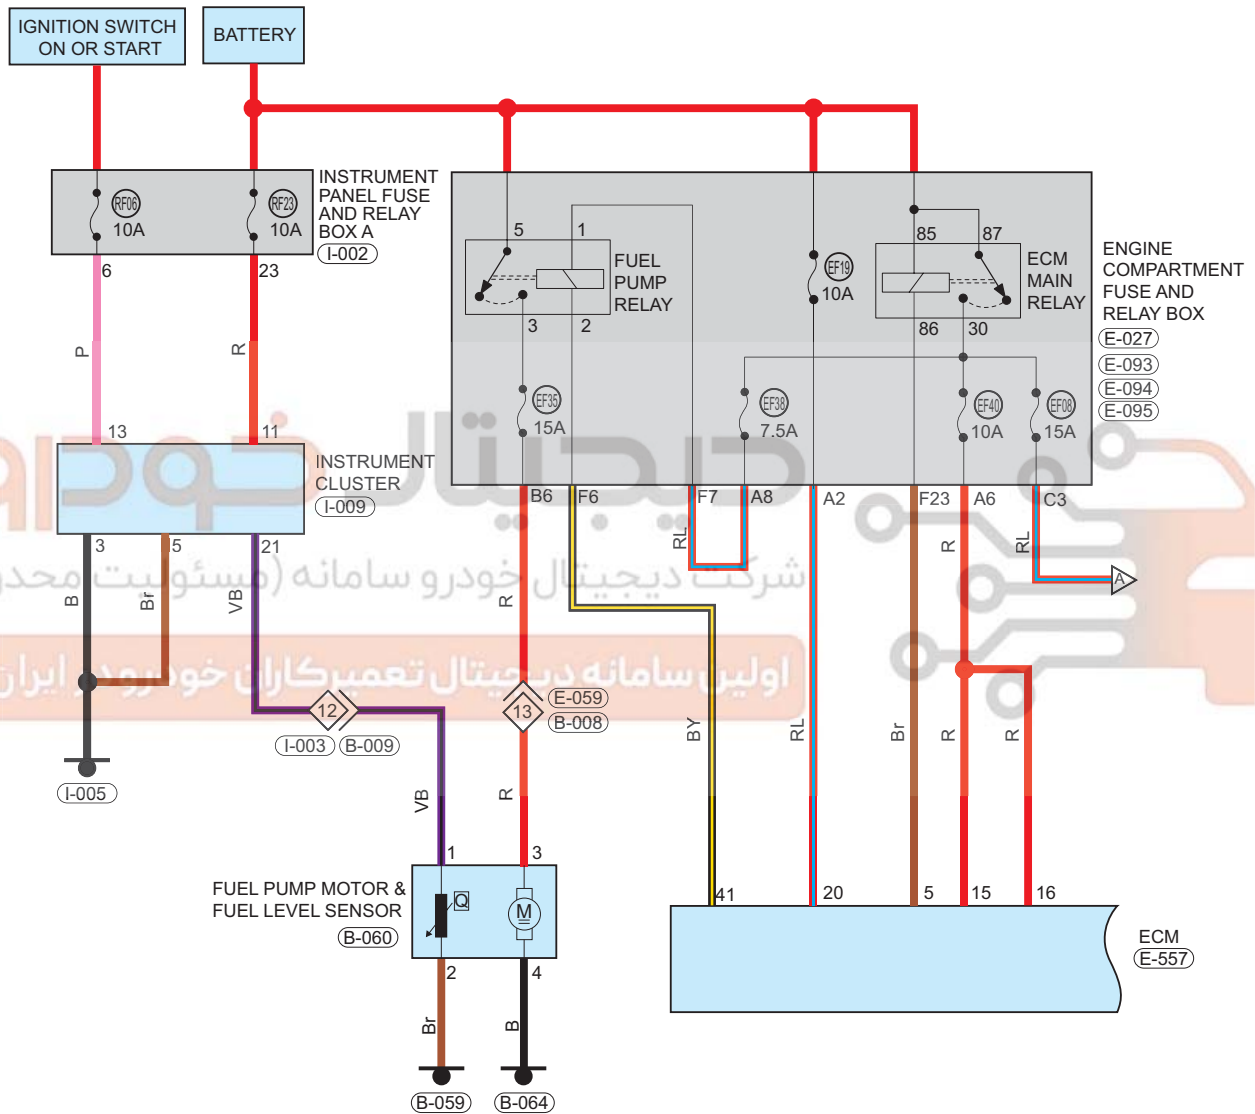

## 09 - SYSTEM CIRCUITS

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-002	08-13	I-009	08-13	I-005	08-13
B-060	08-16	B-064	08-16	B-059	08-16
E-027	08-5	E-093	08-10	E-094	08-10
E-095	08-10	E-557	08-10		

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF06	06-13	Instrument Panel Fuse and Relay Box A
RF23	06-13	Instrument Panel Fuse and Relay Box A
EF35	06-5	Engine Compartment Fuse and Relay Box
EF38	06-5	Engine Compartment Fuse and Relay Box
EF40	06-5	Engine Compartment Fuse and Relay Box
EF08	06-5	Engine Compartment Fuse and Relay Box
EF19	06-5	Engine Compartment Fuse and Relay Box
Fuel Pump Relay	06-5	Engine Compartment Fuse and Relay Box
ECM Main Relay	06-5	Engine Compartment Fuse and Relay Box

## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-003, B-009	08-13, 08-16	E-059, B-008	08-10, 08-16		

09

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-002	12-9	I-009	12-9	I-005	12-9
B-060	12-14	B-064	12-14	B-059	12-14
E-027	12-2	E-093	12-5	E-094	12-6
E-095	12-6	E-557	12-7	I-003, B-009	12-9
E-059, B-008	12-4				

Circuit Diagram (Page 2 of 2)

