


Windshield/Window Glass

Circuit Diagram (Page 1 of 5)

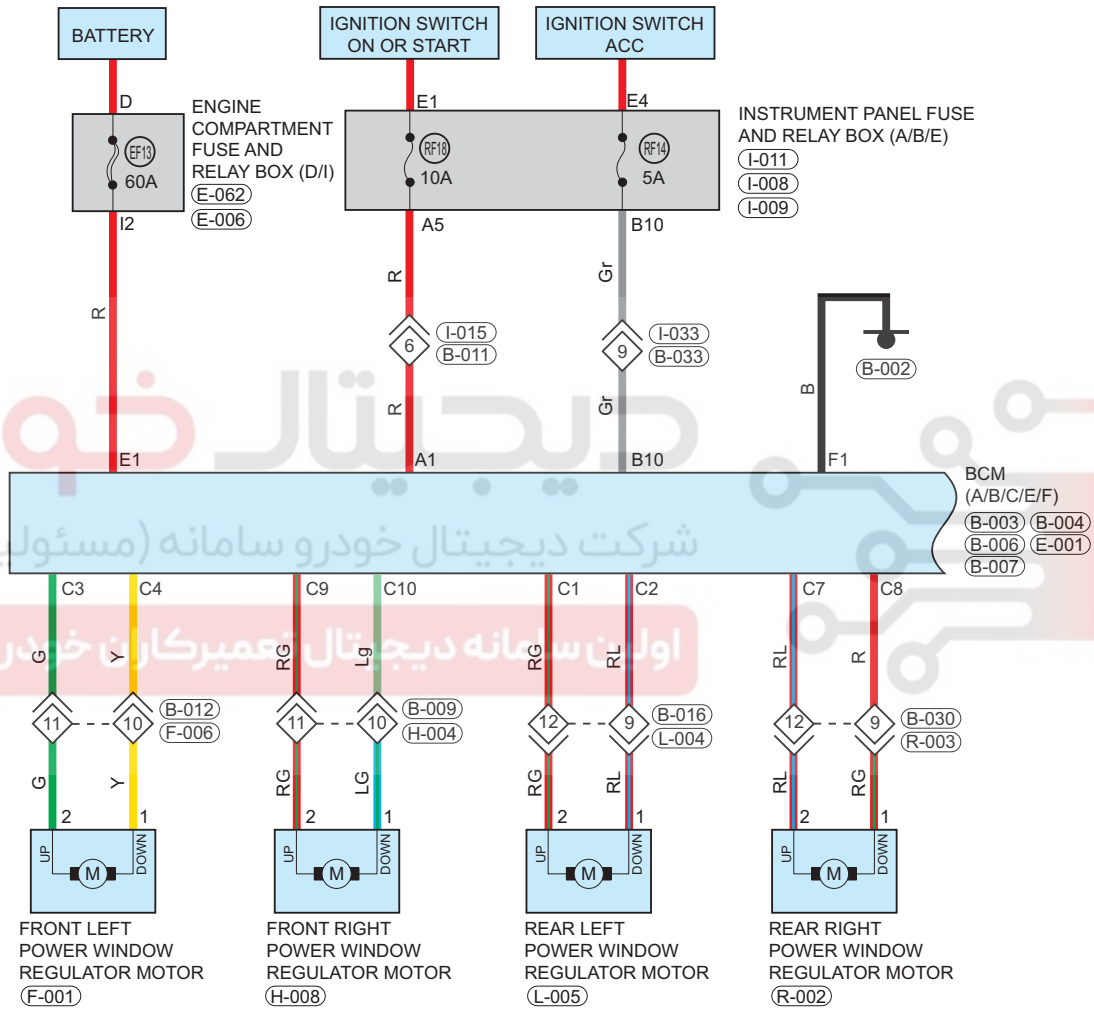

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	08-4 (MT)	E-006	08-4 (MT)	E-001	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
I-008	08-12	I-009	08-12	B-002	08-17
B-003	08-17	B-004	08-17	B-006	08-17
I-011	08-12	B-007	08-17	F-001	08-19
H-008	08-20	L-005	08-21	R-002	08-22

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF14	06-12	Instrument Panel Fuse and Relay Box
RF18	06-12	Instrument Panel Fuse and Relay Box
EF13	06-5	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-015, B-011	08-12, 08-17	I-033, B-033	08-12, 08-17	B-012, F-006	08-17, 08-19
B-009, H-004	08-17, 08-20	B-016, L-004	08-17, 08-21	B-030, R-003	08-17, 08-22

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	12-4	E-006	12-2	I-011	12-8
I-008	12-8	I-009	12-8	B-002	12-12
B-003	12-12	B-004	12-12	B-006	12-12
E-001	12-2	B-007	12-12	F-001	12-16
H-008	12-17	L-005	12-18	R-002	12-18
I-015, B-011	12-9	I-033, B-033	12-10	B-012, F-006	12-13
B-009, H-004	12-13	B-016, L-004	12-13	B-030, R-003	12-14

Circuit Diagram (Page 2 of 5)

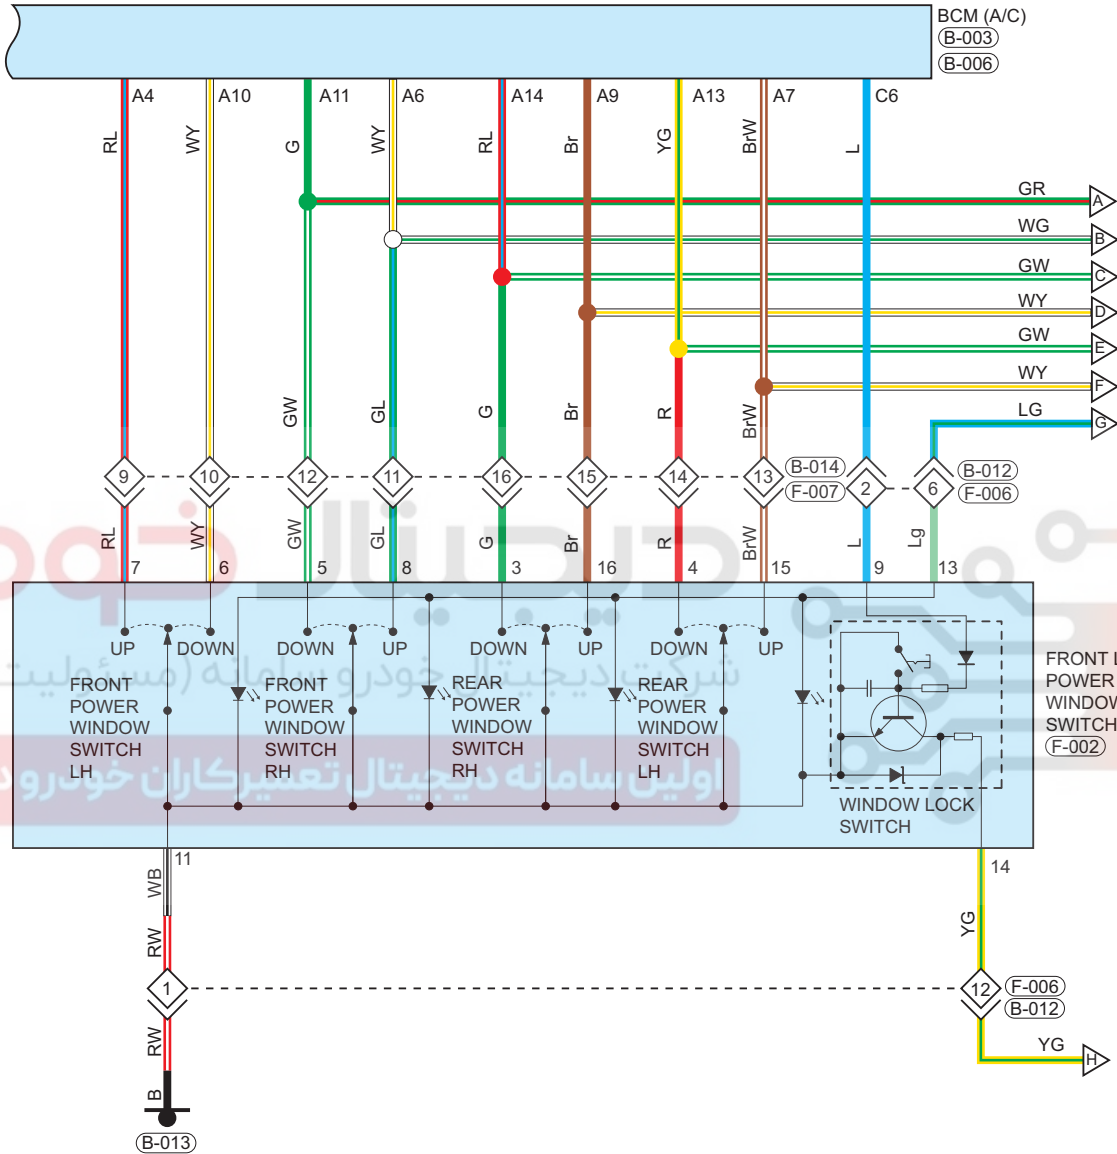

09

ET11090750

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-003	08-17	B-006	08-17	F-002	08-19
B-013	08-17				

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-014, F-007	08-17, 08-19	B-012, F-006	08-17, 08-19		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-003	12-12	B-006	12-12	F-002	12-16
B-013	12-13	B-014, F-007	12-13	B-012, F-006	12-13


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 3 of 5)

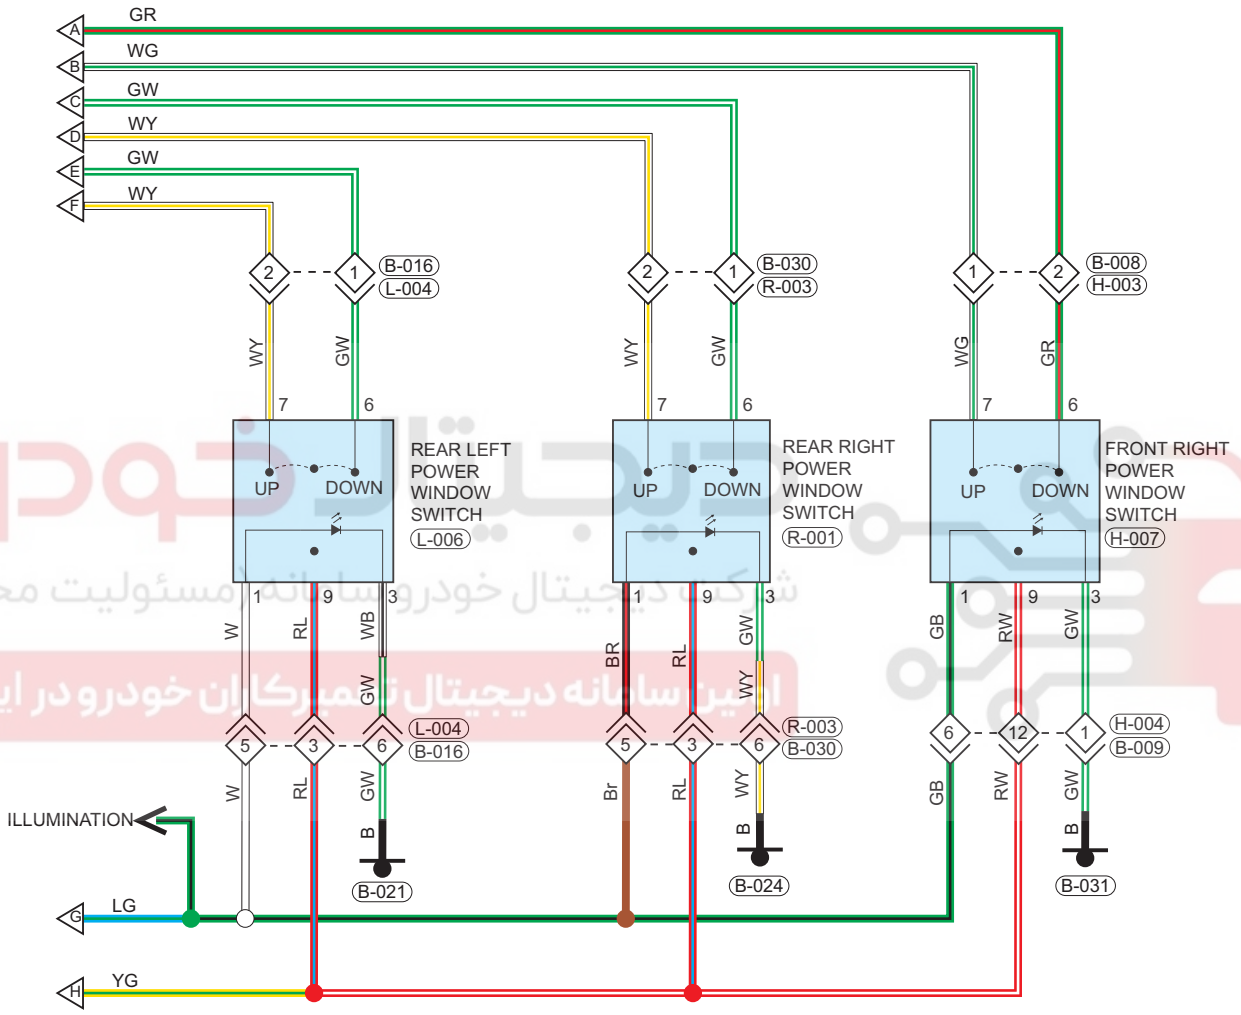

ET11090760

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
L-006	08-21	R-001	08-22	H-007	08-20
B-021	08-17	B-024	08-17	B-031	08-17

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-016, L-004	08-17, 08-21	B-030, R-003	08-17, 08-22	B-008, H-003	08-17, 08-20
H-004, B-009	08-20, 08-17				


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
L-006	12-18	R-001	12-18	H-007	12-17
B-021	12-14	B-024	12-14	B-031	12-14
B-016, L-004	12-13	B-030, R-003	12-14	B-008, H-003	12-12
H-004, B-009	12-17				

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

w/ Automatic A/C

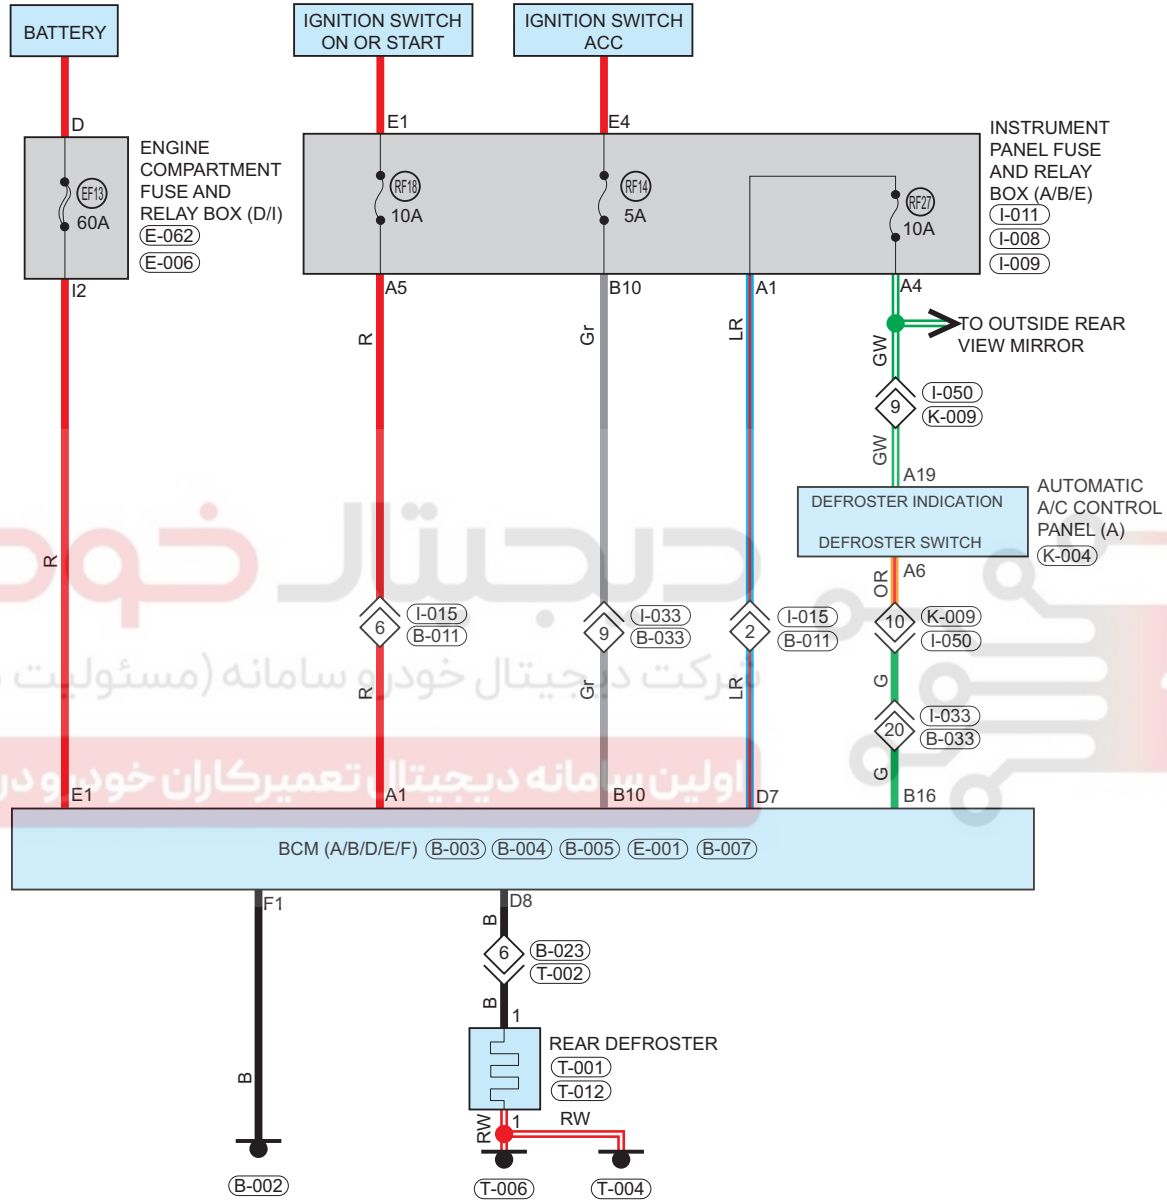

09

ET11090770

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	08-4 (MT)	E-006	08-4 (MT)	E-001	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
I-008	08-12	I-009	08-12	K-004	08-27
B-003	08-17	B-004	08-17	B-005	08-17
I-011	08-12	B-007	08-17	B-002	08-17
T-001	08-23	T-012	08-23	T-006	08-23
T-004	08-23				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF13	06-5	Engine Compartment Fuse and Relay Box
RF14	06-12	Instrument Panel Fuse and Relay Box
RF18	06-12	Instrument Panel Fuse and Relay Box
RF27	06-12	Instrument Panel Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-050, K-009	08-12, 08-27	I-015, B-011	08-12, 08-17	I-033, B-033	08-12, 08-17
B-023, T-002	08-17, 08-23				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	12-4	E-006	12-2	I-011	12-8
I-008	12-8	I-009	12-8	K-004	12-21
B-003	12-12	B-004	12-12	B-005	12-12
E-001	12-2	B-007	12-12	B-002	12-12
T-001	12-19	T-012	12-19	T-006	12-19
T-004	12-19	I-050, K-009	12-11	I-015, B-011	12-9
I-033, B-033	12-10	B-023, T-002	12-14		

Circuit Diagram (Page 5 of 5)

w/ Electrical A/C

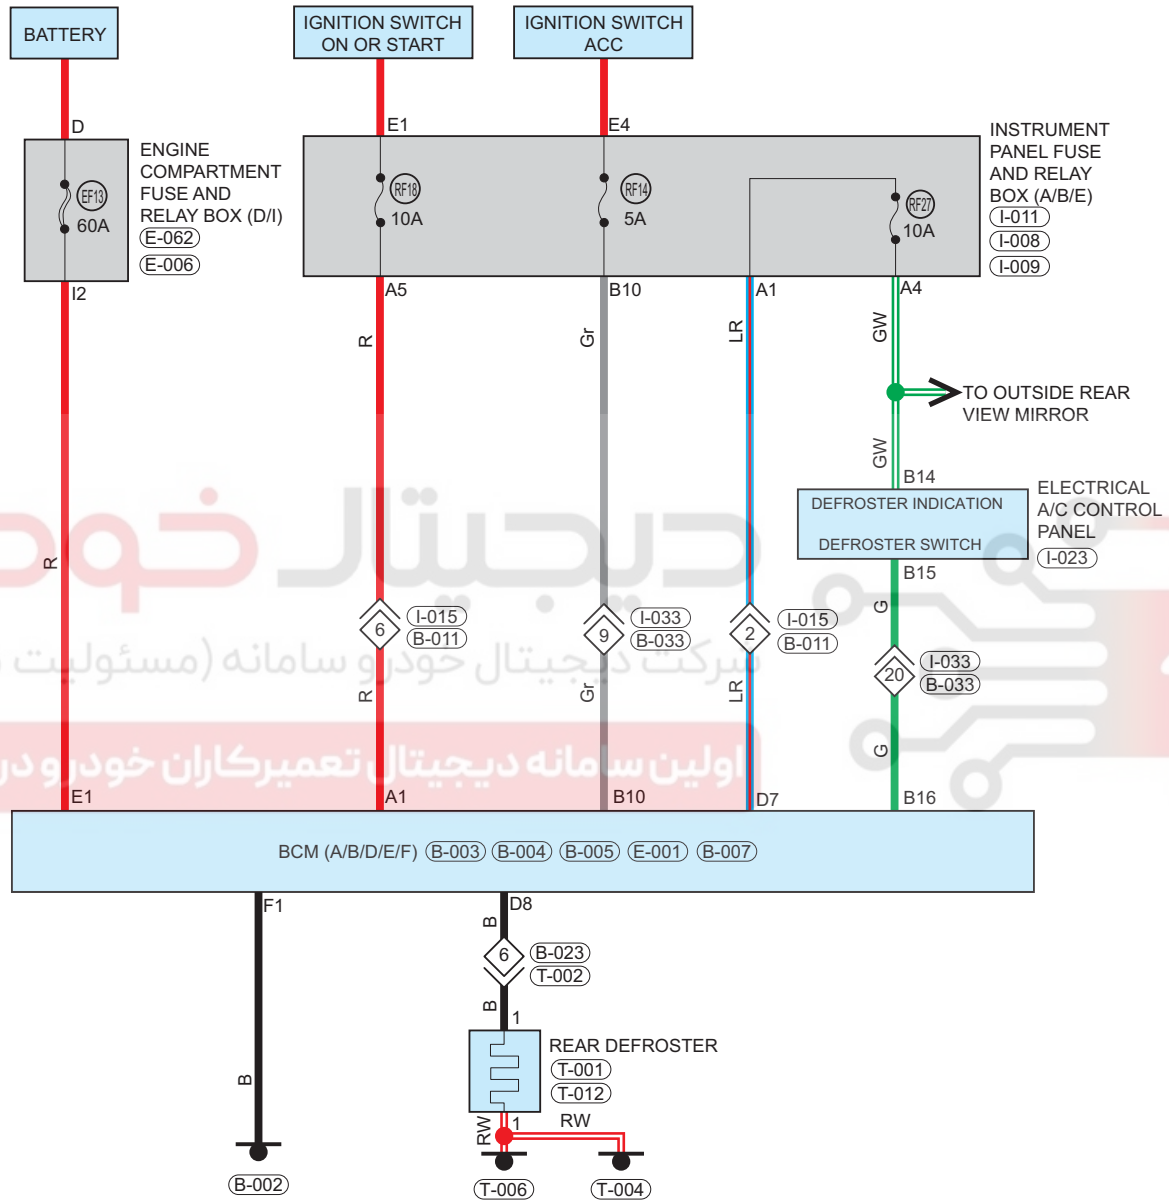

09

ET11090780