


Electrical A/C System

Circuit Diagram (Page 1 of 4)

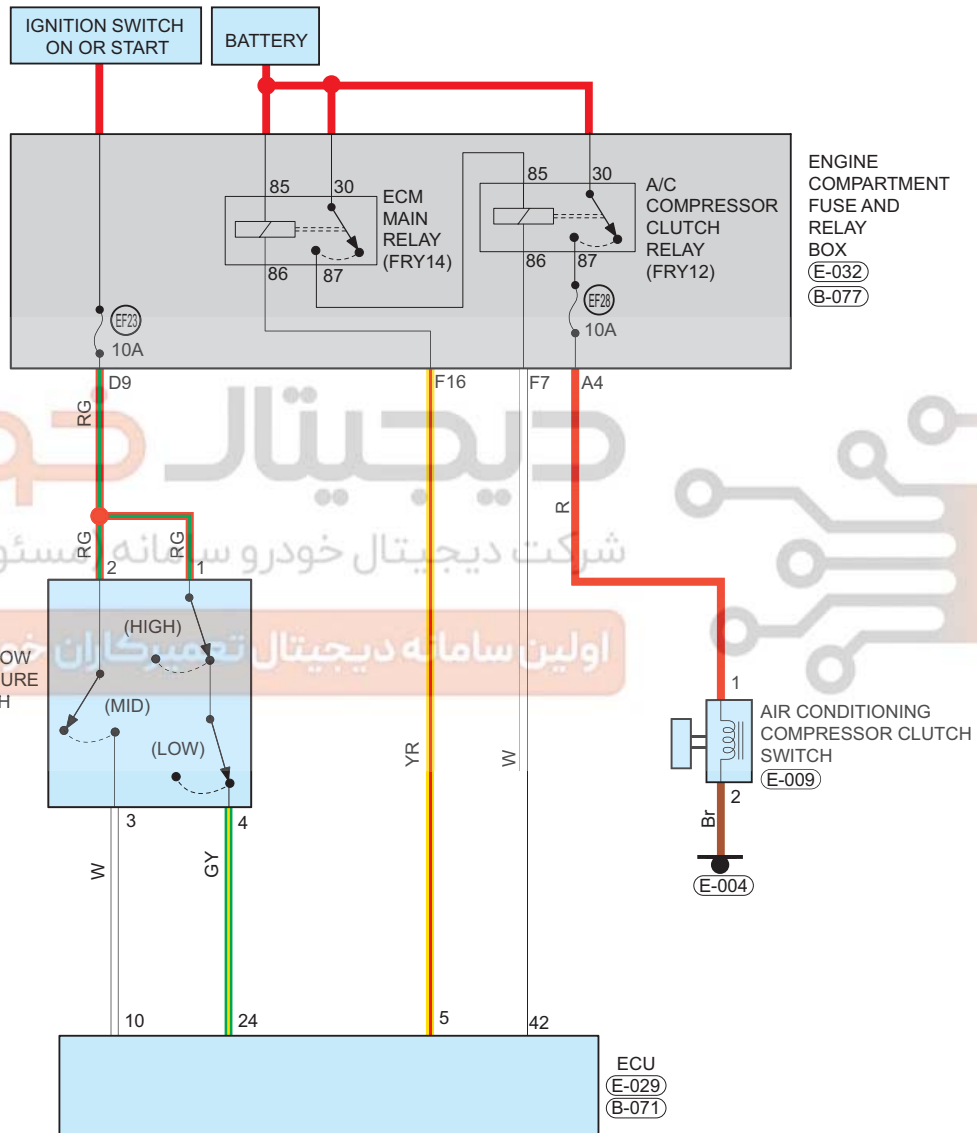

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-032	08-3	B-077	08-12	B-002	08-12
E-009	08-3	E-029	08-3	B-071	08-12
E-004	08-3				


Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF23	06-2	Engine Compartment Fuse And Relay Box
EF28	06-2	Engine Compartment Fuse And Relay Box
ECM Main Relay (FRY14)	06-2	Engine Compartment Fuse And Relay Box
A/C Compressor Clutch Relay (FRY12)	06-2	Engine Compartment Fuse And Relay Box

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-032	12-2	B-077	12-7	B-002	12-7
E-009	12-2	E-029	12-2	B-071	12-7
E-004	12-2				

Circuit Diagram (Page 2 of 4)

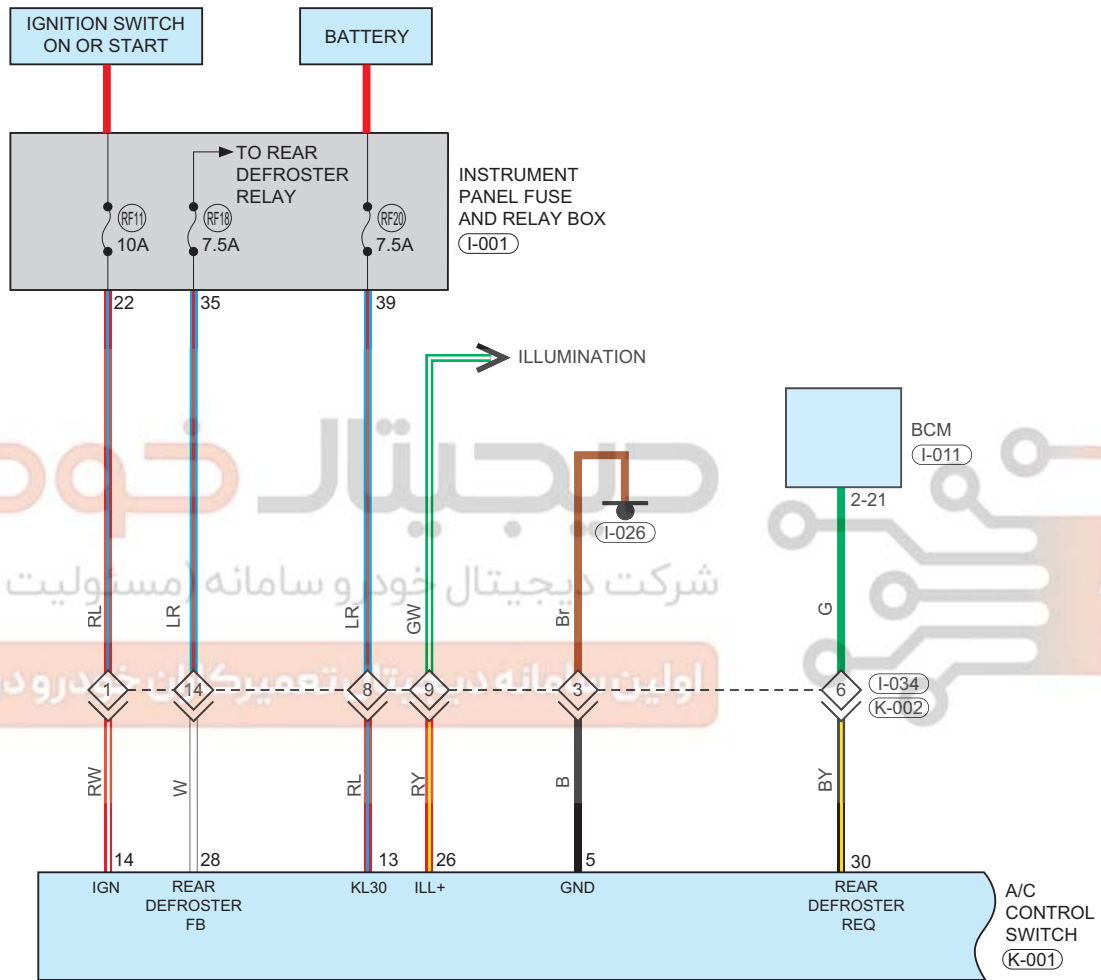

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-8	I-026	08-8	I-011	08-8
K-001	08-32				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF11	06-9	Instrument Panel Fuse And Relay Box
RF18	06-9	Instrument Panel Fuse And Relay Box
RF20	06-9	Instrument Panel Fuse And Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-034, K-002	08-8				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	I-026	12-4	I-011	12-4
K-001	12-13	I-034, K-002	12-4		

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 3 of 4)

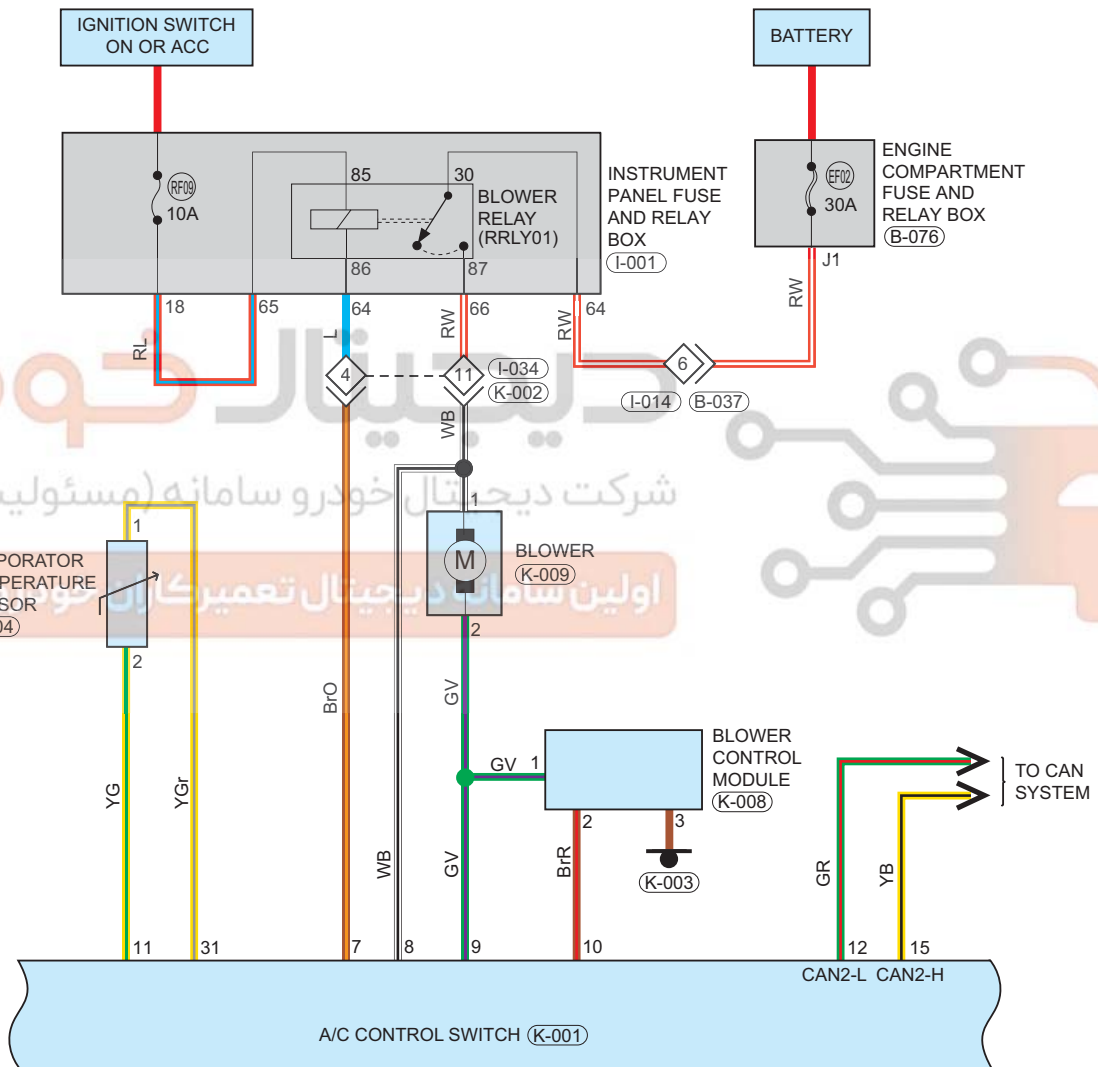

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-8	B-076	08-12	K-004	08-32
K-009	08-32	K-008	08-32	K-003	08-32
K-001	08-32				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF09	06-9	Instrument Panel Fuse And Relay Box
Blower Relay (RRLY01)	06-9	Instrument Panel Fuse And Relay Box

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-002, I-034	08-32	I-014, B-037	08-8		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	B-076	12-7	K-004	12-13
K-009	12-13	K-008	12-13	K-003	12-13
K-001	12-13	K-002, I-034	12-13	I-014, B-037	12-4

Circuit Diagram (Page 4 of 4)

