


# Radar System

Circuit Diagram (Page 1 of 5)

FOR 4 SENSORS

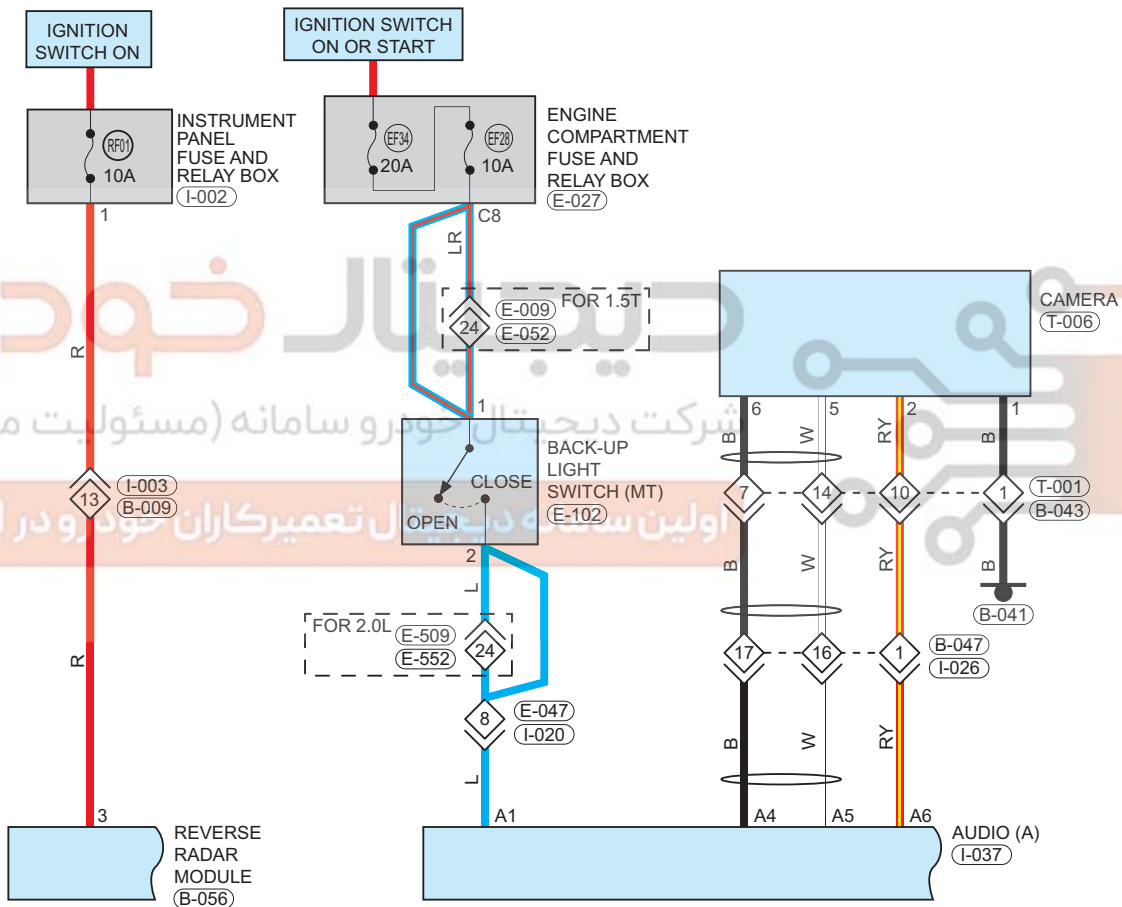

## 09 - SYSTEM CIRCUITS

## Parts Location

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| I-002          | 08-13    | B-056          | 08-16    | E-027          | 08-3     |
| E-102          | 08-7     | I-037          | 08-13    | T-006          | 08-24    |
| B-041          | 08-16    |                |          |                |          |

## Fuse and Relay

| Fuse/Relay | See Page | Fuse and Relay Box                    |
|------------|----------|---------------------------------------|
| RF01       | 06-13    | Instrument Panel Fuse and Relay Box A |
| EF34       | 06-3     | Engine Compartment Fuse and Relay Box |
| EF28       | 06-3     | Engine Compartment Fuse and Relay Box |

## Location of Junction Connector


| Connector Code | See Page     | Connector Code | See Page     | Connector Code | See Page     |
|----------------|--------------|----------------|--------------|----------------|--------------|
| I-003, B-009   | 08-13, 08-16 | E-009, E-052   | 08-3, 08-7   | T-001, B-043   | 08-24, 08-16 |
| E-047, I-020   | 08-7, 08-13  | B-047, I-026   | 08-19, 08-13 | E-509, E-552   | 08-5, 08-10  |

## Form of Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| I-002          | 12-9     | B-056          | 12-14    | E-027          | 12-2     |
| E-102          | 12-6     | I-037          | 12-10    | T-006          | 12-19    |
| B-041          | 12-13    | E-047, I-020   | 12-3     | B-047, I-026   | 12-13    |
| I-003, B-009   | 12-9     | E-009, E-052   | 12-2     | T-001, B-043   | 12-19    |
| E-509, E-552   | 12-6     |                |          |                |          |

Circuit Diagram (Page 2 of 5)

FOR 4 SENSORS

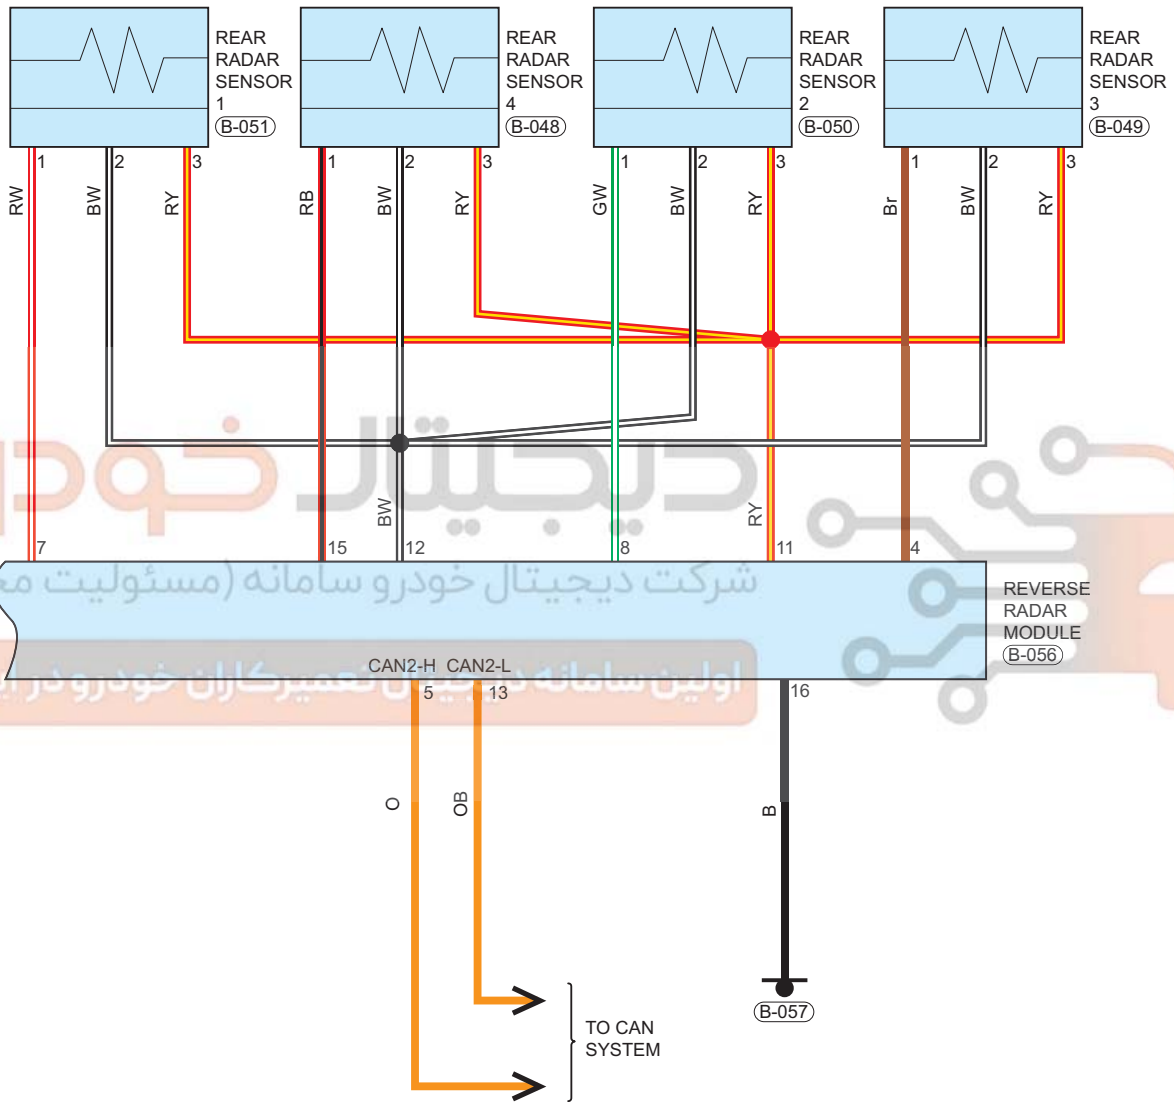

## Parts Location

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| B-051          | 08-16    | B-048          | 08-16    | B-050          | 08-16    |
| B-049          | 08-16    | B-056          | 08-16    | B-057          | 08-16    |

## Form of Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| B-051          | 12-14    | B-048          | 12-14    | B-050          | 12-14    |
| B-049          | 12-14    | B-056          | 12-14    | B-057          | 12-14    |

# دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 3 of 5)

FOR 8 SENSORS

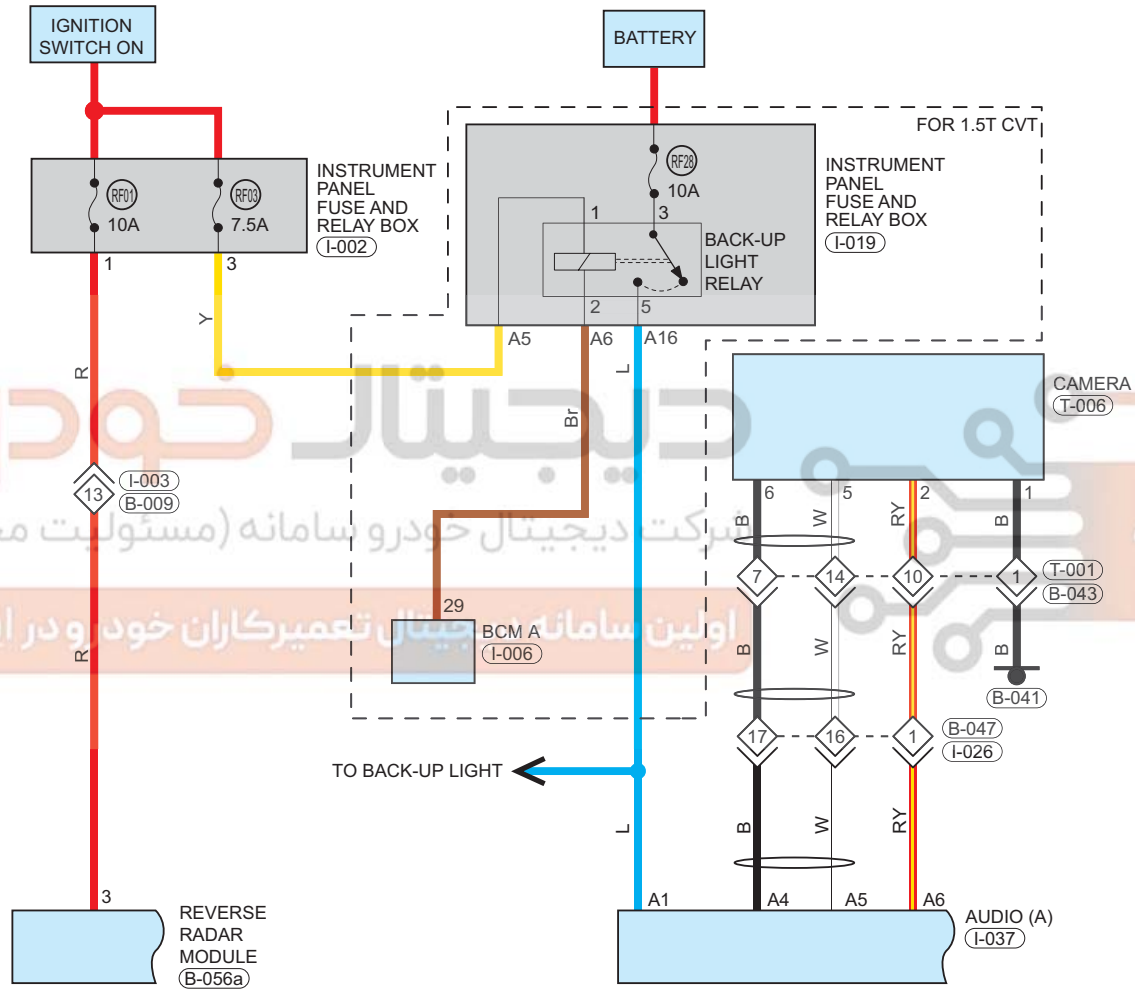

## 09 - SYSTEM CIRCUITS

## Parts Location

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| I-002          | 08-13    | I-019          | 08-13    | I-006          | 08-13    |
| T-006          | 08-24    | B-041          | 08-16    | I-037          | 08-13    |
| B-056a         | 08-16    |                |          |                |          |

## Fuse and Relay

| Fuse/Relay          | See Page | Fuse and Relay Box                    |
|---------------------|----------|---------------------------------------|
| RF01                | 06-13    | Instrument Panel Fuse and Relay Box A |
| RF03                | 06-13    | Instrument Panel Fuse and Relay Box A |
| RF28                | 06-18    | Instrument Panel Fuse and Relay Box B |
| Back-up Light Relay | 06-18    | Instrument Panel Fuse and Relay Box B |

## Location of Junction Connector


| Connector Code | See Page     | Connector Code | See Page     | Connector Code | See Page     |
|----------------|--------------|----------------|--------------|----------------|--------------|
| I-003, B-009   | 08-13, 08-16 | T-001, B-043   | 08-24, 08-16 | B-047, I-026   | 08-19, 08-13 |

## Form of Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| I-002          | 12-9     | I-019          | 12-9     | I-006          | 12-9     |
| T-006          | 12-19    | B-041          | 12-13    | I-037          | 12-10    |
| B-056a         | 12-14    | I-003, B-009   | 12-9     | T-001, B-043   | 12-19    |
| B-047, I-026   | 12-13    |                |          |                |          |

Circuit Diagram (Page 4 of 5)

FOR 8 SENSORS

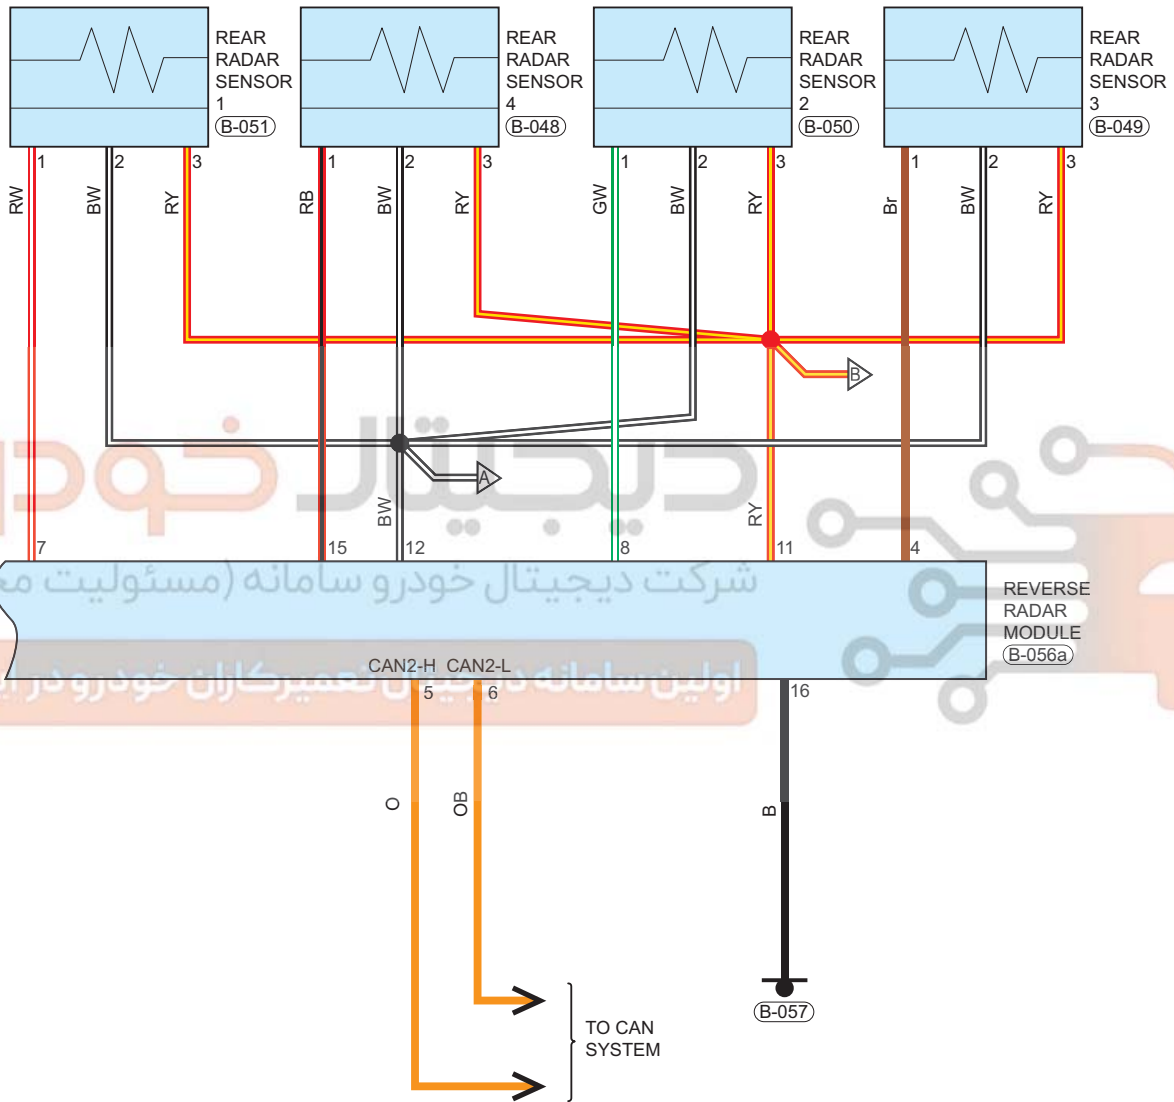

## Parts Location

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| B-051          | 08-16    | B-048          | 08-16    | B-050          | 08-16    |
| B-049          | 08-16    | B-056a         | 08-16    | B-057          | 08-16    |

## Form of Connector

| Connector Code | See Page | Connector Code | See Page | Connector Code | See Page |
|----------------|----------|----------------|----------|----------------|----------|
| B-051          | 12-14    | B-048          | 12-14    | B-050          | 12-14    |
| B-049          | 12-14    | B-056a         | 12-14    | B-057          | 12-14    |

# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران





Circuit Diagram (Page 5 of 5)

FOR 8 SENSORS

