


Instrument Panel Fuse and Relay Box


Location of Instrument Panel Fuse and Relay Box

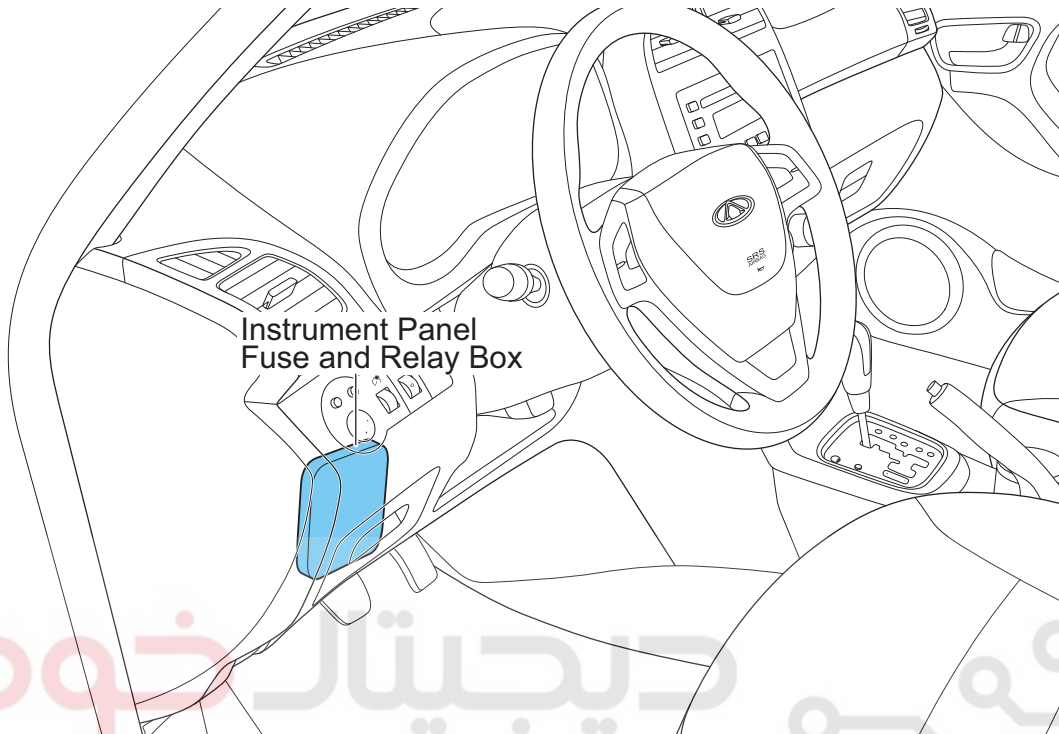

06

ET11060100

Fuse and Relay Layout in Instrument Panel Fuse and Relay Box

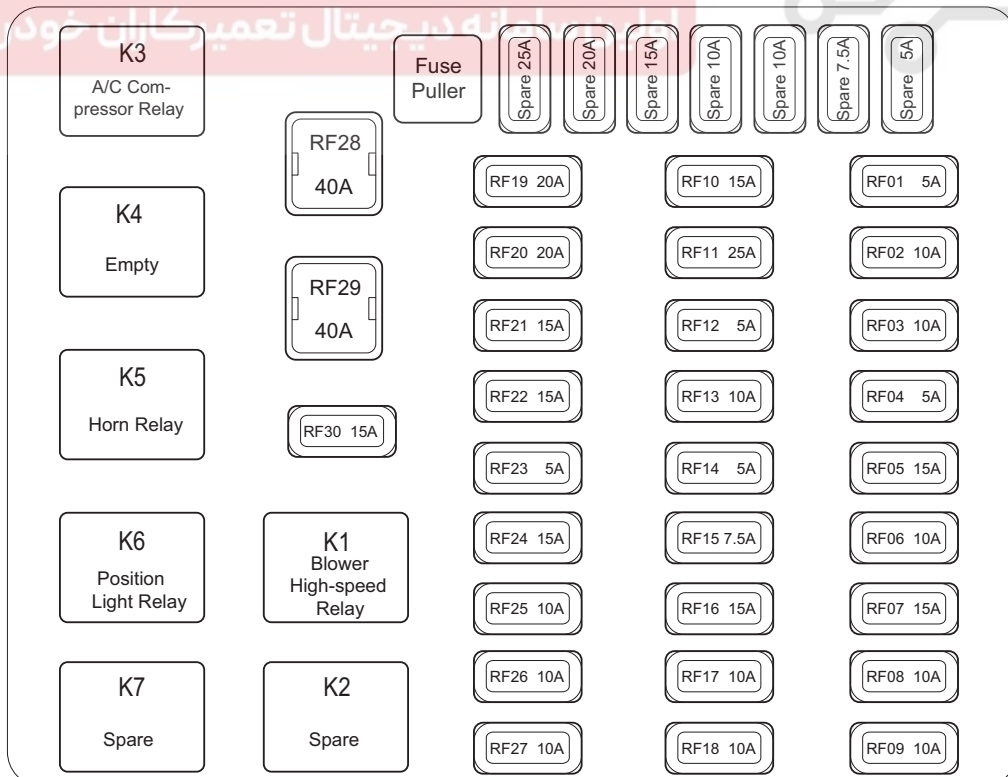

ET11060110


Instrument Panel Fuse Description

No.	Description	No.	Description
RF01	Backlights Adjustment	RF16	Seat Heater Switch (If Equipped)
RF02	Vehicle Speed Sensor (for MT Model)/ Brake Switch	RF17	TCU (for CVT Model)/ECM/Immobilizer Control Module/A/C Pressure Switch
RF03	ABS Control Module	RF18	BCM
RF04	Automatic A/C Control Panel/Speed Resistor	RF19	A/C Compressor Relay
RF05	Cigarette Lighter	RF20	Sliding Roof (If Equipped)
RF06	Instrument Cluster	RF21	Key Switch
RF07	Radio Receiver	RF22	Reserve
RF08	Data Link Connector/Combination Light Switch/Front Fog Light Switch/Rear Fog Light Switch/Hazard Light Switch	RF23	Sliding Roof Switches (If Equipped)
RF09	Instrument Cluster	RF24	Horn Relay
RF10	Rear Wiper Motor/Rear Washer Motor	RF25	Automatic A/C Control Panel/Inner and Outer Circulation Motor
RF11	Wiper and Washer Switch/Front Wiper Motor/Front Washer Motor	RF26	Immobilizer Control Module/Security Indicator
RF12	Relay Coils of A/C Compressor/Fuel Pump/Low Beam/High Beam	RF27	Outside Rear View Mirror Heating (If Equipped)/Automatic A/C Control Panel/ Electrical A/C Control Panel
RF13	SRS Control Module	RF28	Ignition Switch AM2
RF14	Radio Receiver/BCM	RF29	Ignition Switch AM1
RF15	Power Outside Rear View Mirror Adjustment Switch	RF30	Backup Power Supply

View of Instrument Panel Fuse and Relay Box


Front View

06

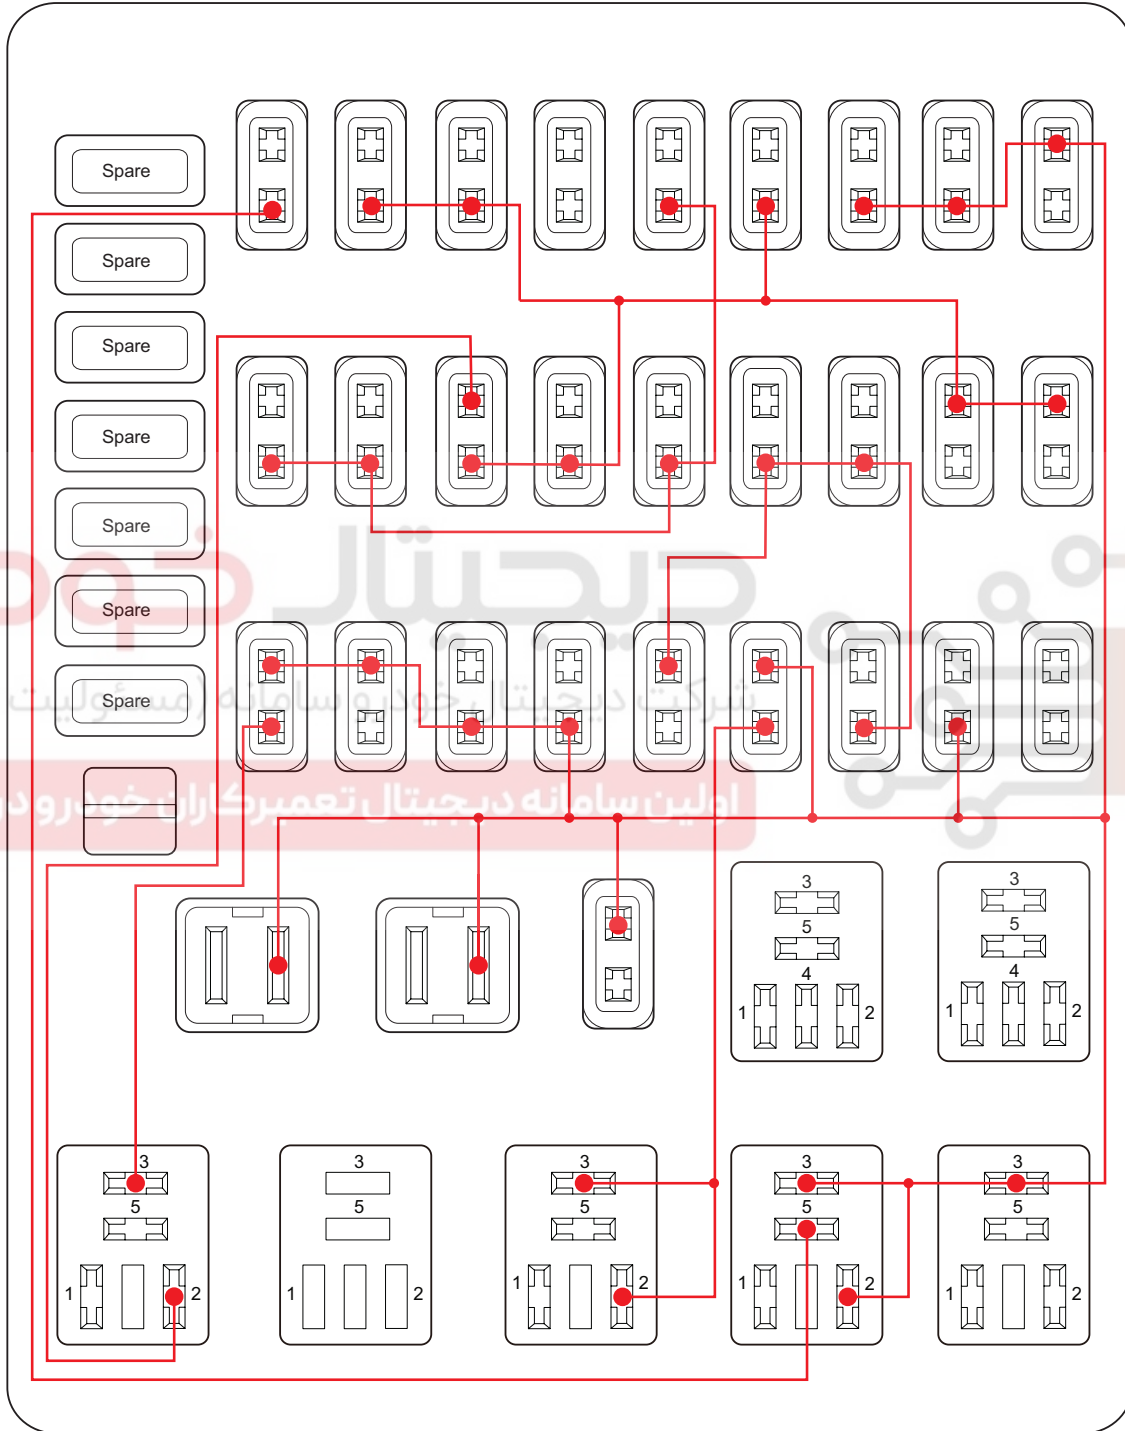

ET11060120

Back View

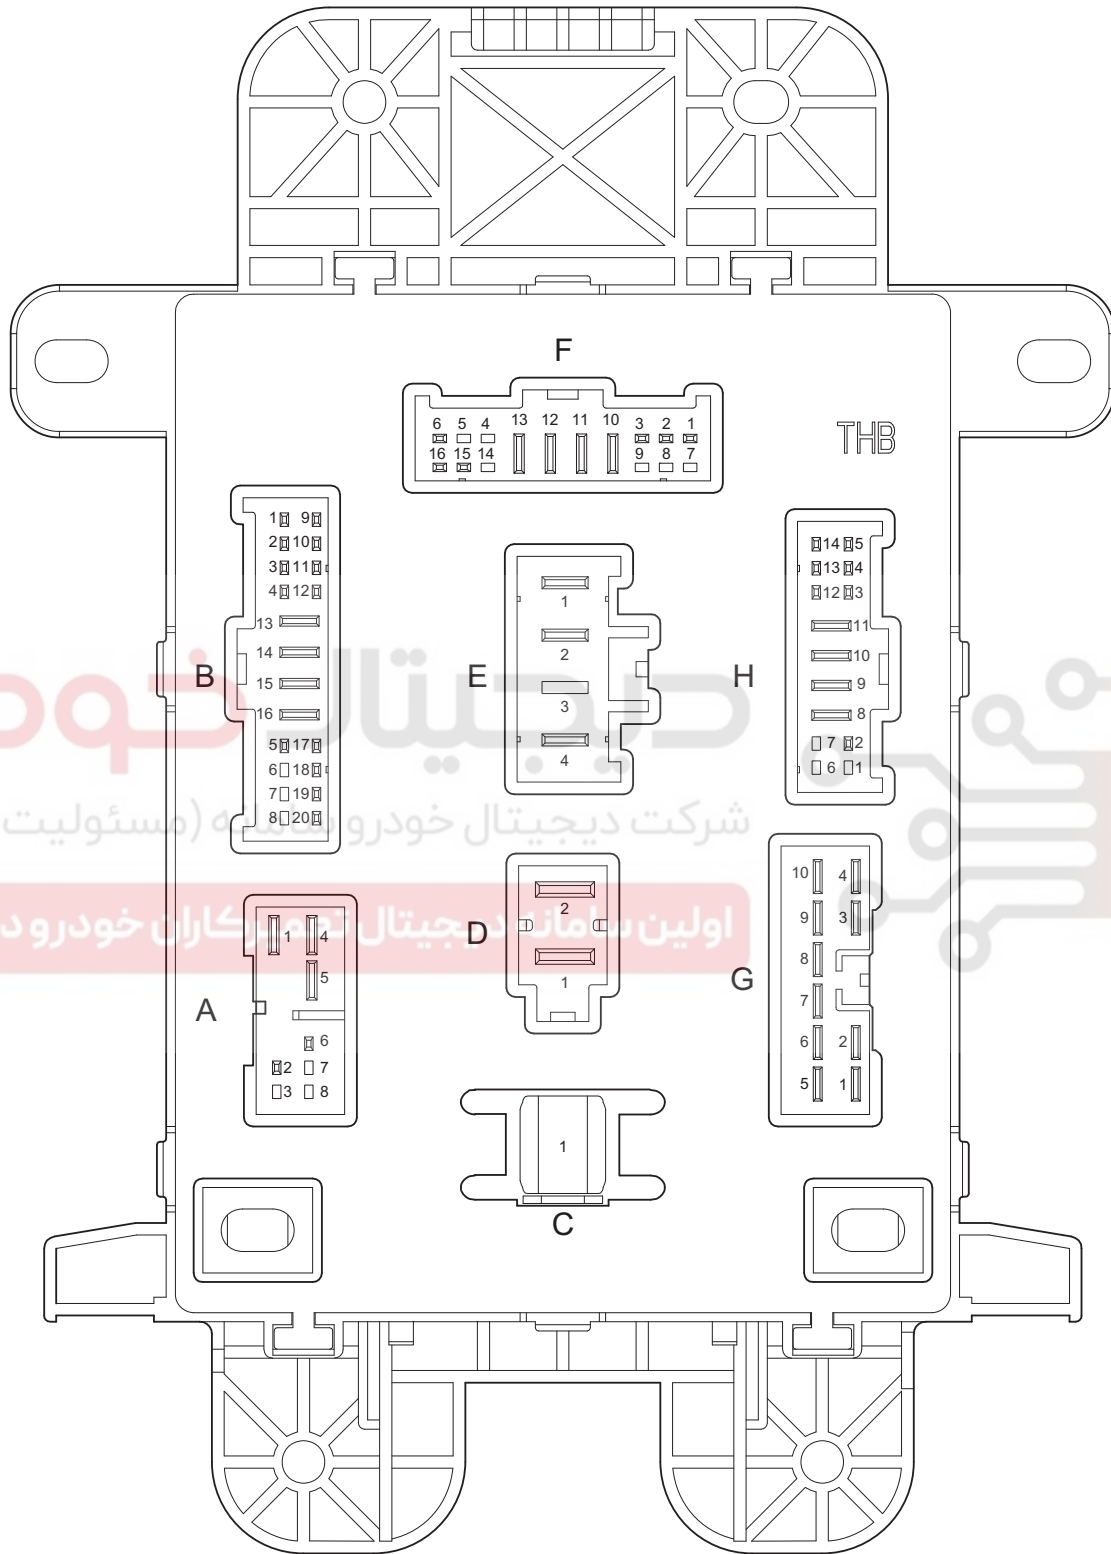


06

دیجیتال خودرو
شرکت دیجیتال خودرو (مسئولیت محدود)
اولین سامانه دیجیتال در کارخان خودرو در ایران

ET11060130

Instrument Panel Fuse and Relay Box Inner Circuit


Circuit Diagram (Page 1 of 2)

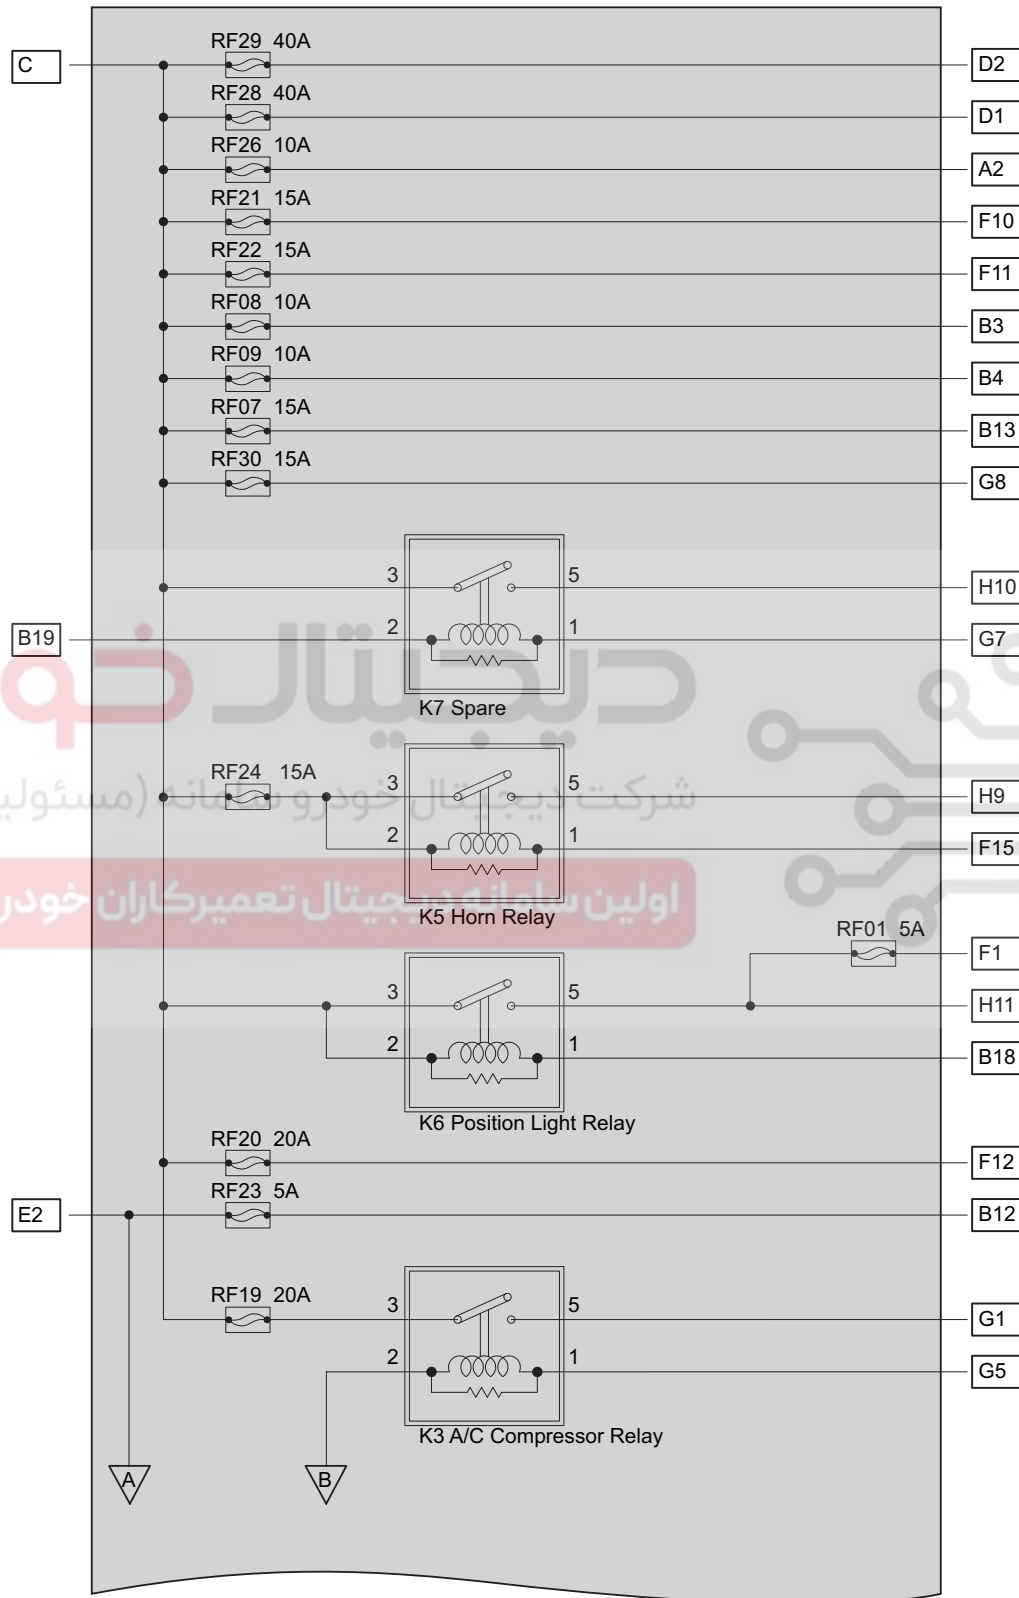

ET11060140

06

Circuit Diagram (Page 2 of 2)

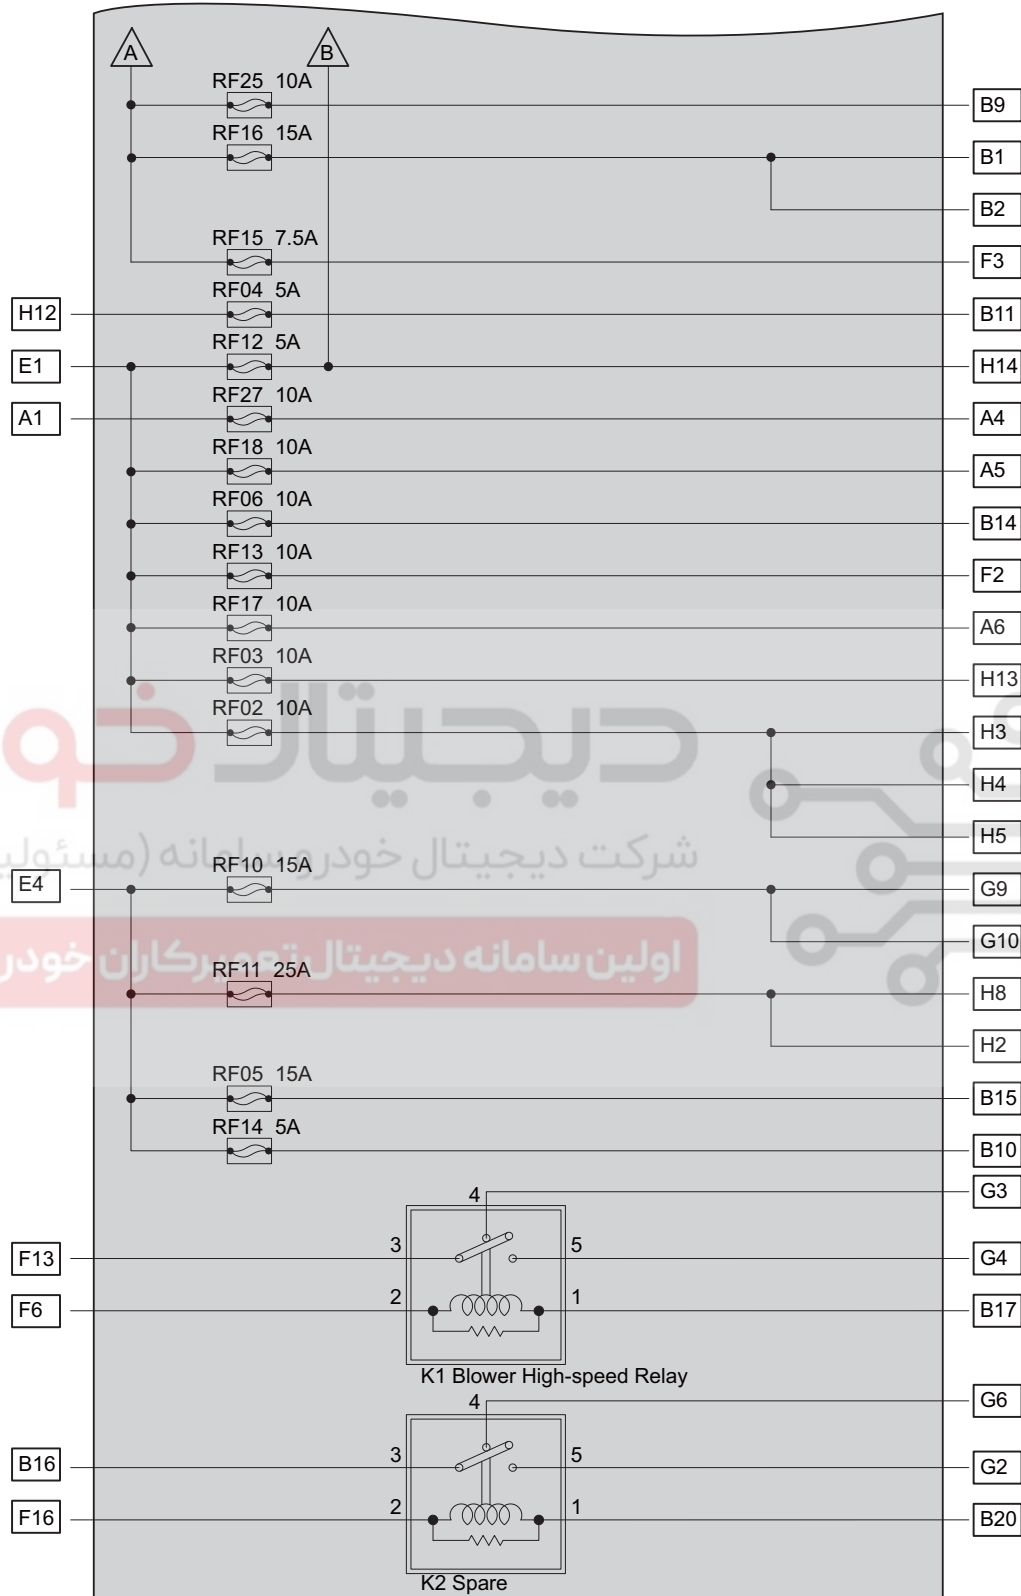

ET11060150