


Rear View Mirror

Circuit Diagram (Page 1 of 2)

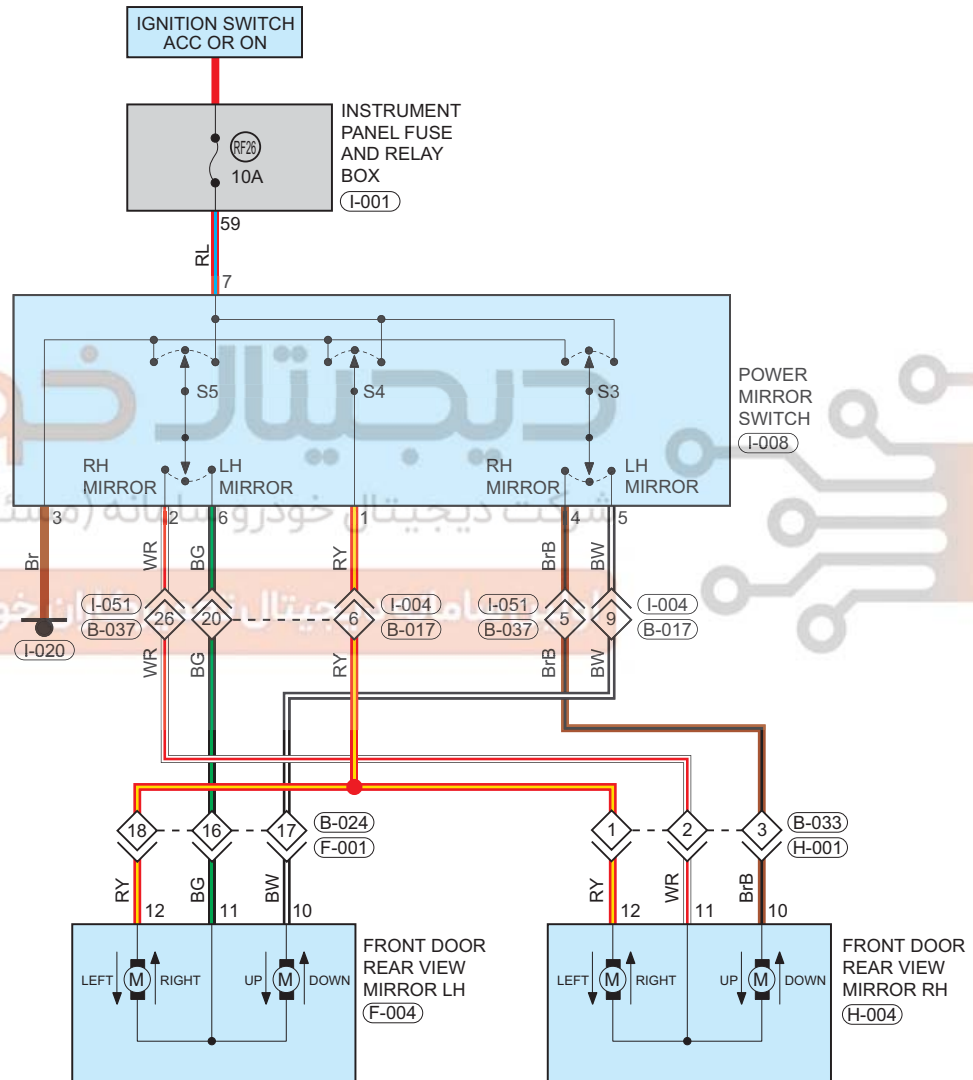

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-12	I-008	08-12	I-020	08-12
F-004	08-25	H-004	08-26		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF26	06-8	Instrument Panel Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-037, I-051	08-16	B-017, I-004	08-16	B-024, F-001	08-16
B-033, H-001	08-16				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	I-008	12-4	I-020	12-4
F-004	12-13	H-004	12-13	B-033, H-001	12-8
B-037, I-051	12-8	B-017, I-004	12-8	B-024, F-001	12-8

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 2 of 2)

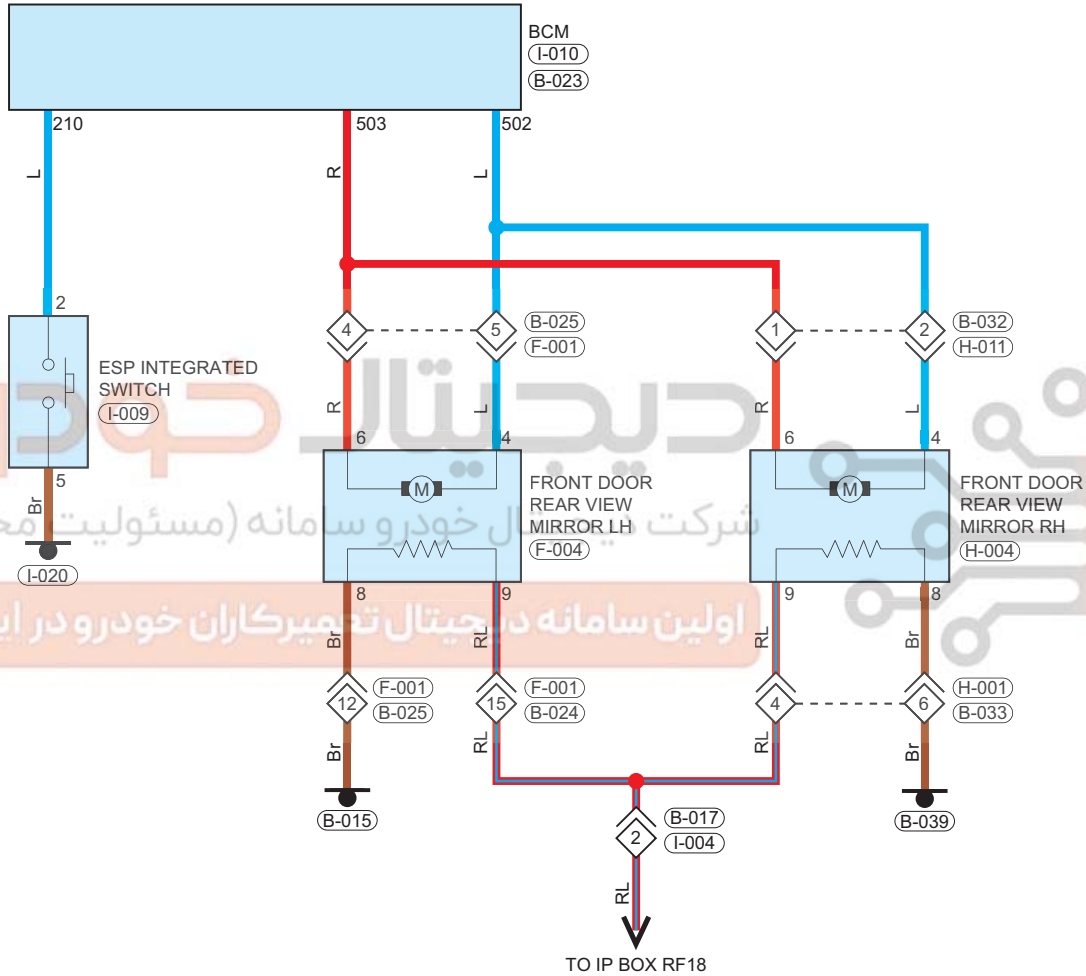

09

RME002001