


SQRE4T15B FUEL SUPPLY SYSTEM

GENERAL INFORMATION	08-3	Fuel Filter Assembly	08-11
Overview	08-3	Removal	08-11
Description	08-3	Installation	08-12
Operation	08-4	Electric Fuel Pump Assembly	08-13
Specifications	08-4	Electric Fuel Pump Circuit Diagram	08-13
Tools	08-4	On-vehicle Inspection	08-14
Fuel Supply System Line Connection Diagram	08-6	Removal	08-14
		Installation	08-16
DIAGNOSIS & TESTING	08-7	Filler Tube Assembly	08-18
Diagnosis Content	08-7	Removal	08-18
Problem Symptoms Table	08-7	Installation	08-19
ON-VEHICLE SERVICE	08-8	Fuel Tank	08-20
Fuel System Pressure Release	08-8	Removal	08-20
Operation Step	08-8	Fuel Tank Accessories Description	08-22
Fuel Supply System Pressure Test	08-9	Installation	08-22
Fuel Pressure Specifications	08-9	Fuel Rail Injector Assembly	08-23
Fuel Flow Test	08-10	Removal	08-23
		Inspection	08-24
		Installation	08-25

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

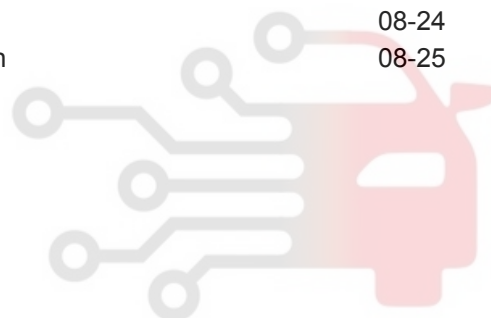

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



GENERAL INFORMATION

Overview

Description

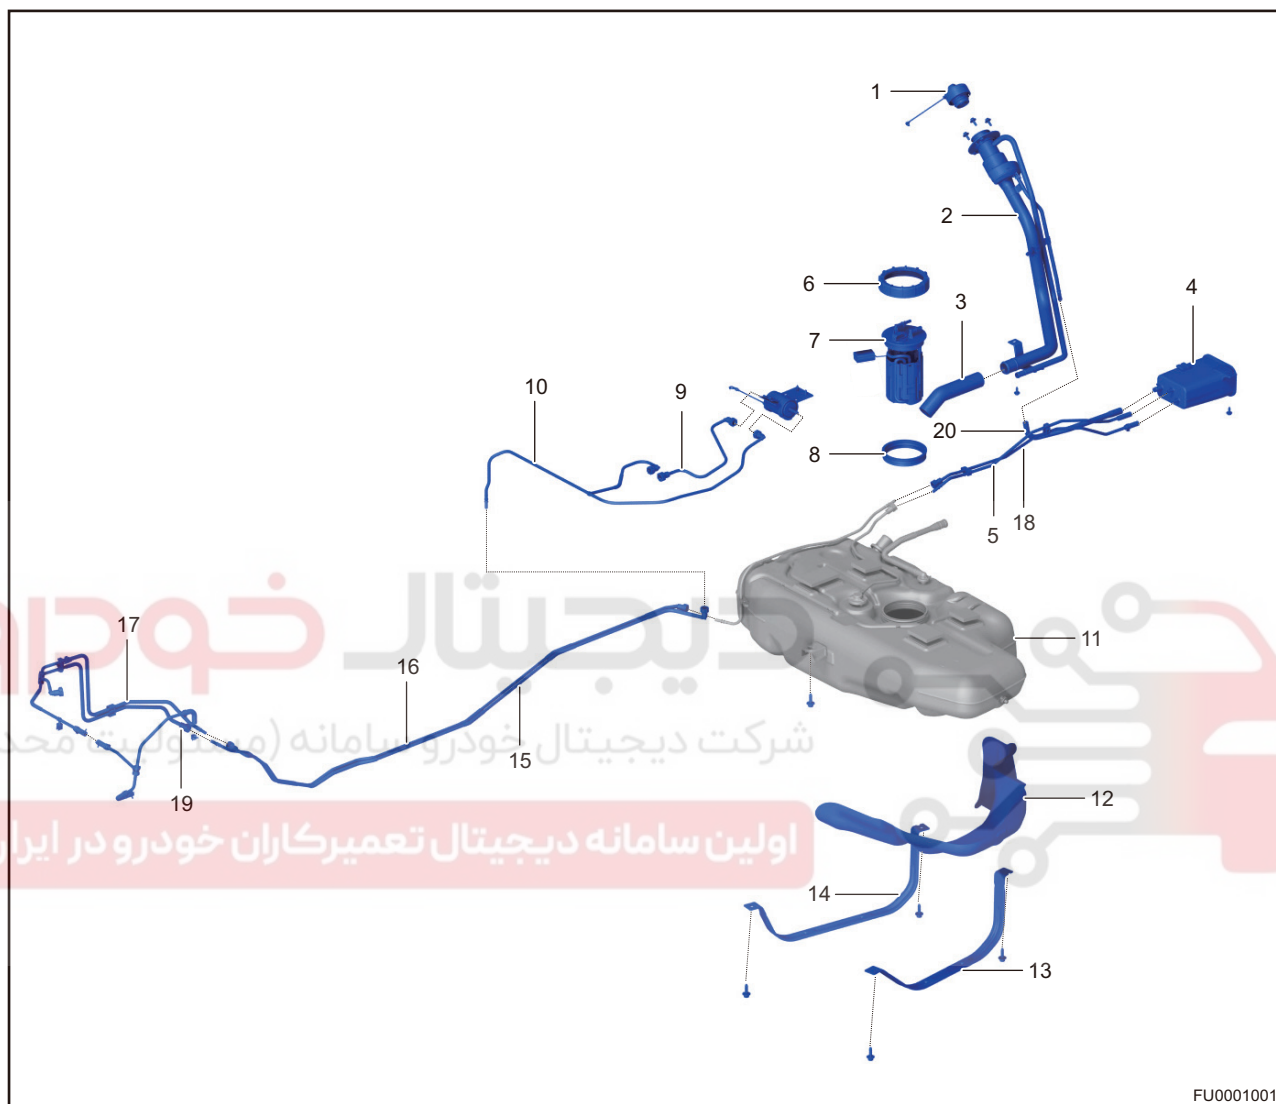

FU0001001

1 - Fuel Tank Cap Assembly	2 - Filler Tube Assembly
3 - Fuel Filler Hose	4 - Activated Charcoal Canister Assembly
5 - Fuel Vapor Pipe II Assembly	6 - Fuel Pump Pressure Cap
7 - Electric Fuel Pump Assembly	8 - Fuel Tank Seal Ring
9 - Inlet Pipe I	10 - Inlet and Return Pipes Assembly
11 - Fuel Tank Assembly	12 - Fuel Tank Heat Insulator
13 - Fuel Tank Fixing Strap I	14 - Fuel Tank Fixing Strap II
15 - Inlet Pipe II	16 - Fuel Vapor Pipe V
17 - Inlet Pipe III	18 - Fuel Vapor Pipe III Assembly
19 - Charcoal Canister Solenoid Valve Intake Pipe	20 - Activated Charcoal Canister Breather Pipe

Operation

- Fuel supply system consists of fuel tank, electric fuel pump assembly, fuel filter assembly, delivery pipes, fuel rail and injectors, which is used for fuel storage, filtration, delivery and injection. The function of fuel supply system is to provide gasoline with sufficient pressure to fuel injectors by using electric fuel pump assembly, and the injector sprays a certain amount of gasoline which burnt mixed with gas to the top of intake valve in intake manifold in accordance with control signals from ECM.

Specifications

Torque Specifications


Description	Torque (N·m)
Fuel Filter Bracket Tightening Bolt	8 ± 1.5
Fuel Pump Pressure Cap Tightening Torque	80 ± 5
Fuel Filler Fixing Bolt	7 ± 1.5
Filler Tube Assembly Fixing Bolt	8 ± 1.5
Charcoal Canister Fixing Bolt	5 ± 1
Fuel Tank Fixing Strap Fixing Bolt	23 ± 2
Fuel Rail Fixing Bolt	20 ± 5
Worm Clamp	2.5 ± 0.5

Fuel Pressure Specifications


SQRE4T15B	Pressure (kPa)
Fuel Rail Fuel Pressure - Key (ON)	400
Fuel Rail Fuel Pressure - Engine Idling	400
Fuel Rail Fuel Pressure - Key (OFF)	400 (pressure should not be less than 1 kPa within 48 hours)




Tools

Special Tool

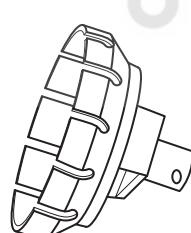
Fuel Pump Pressure Cap Remover	Part No.: CH-20032	 004
--------------------------------	--------------------	--

General Tools

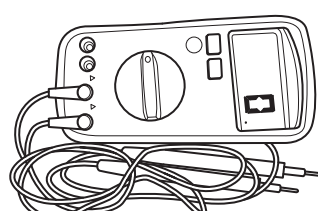Digital Multimeter	 002
--------------------	---

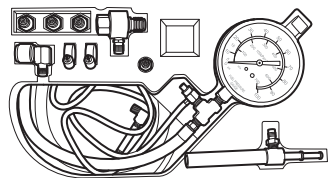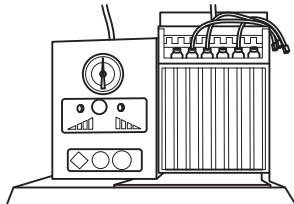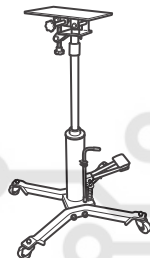Fuel System Pressure Tester	 048
Injector Tester	 062
Transmission Carrier	 005

Fuel Supply System Line Connection Diagram

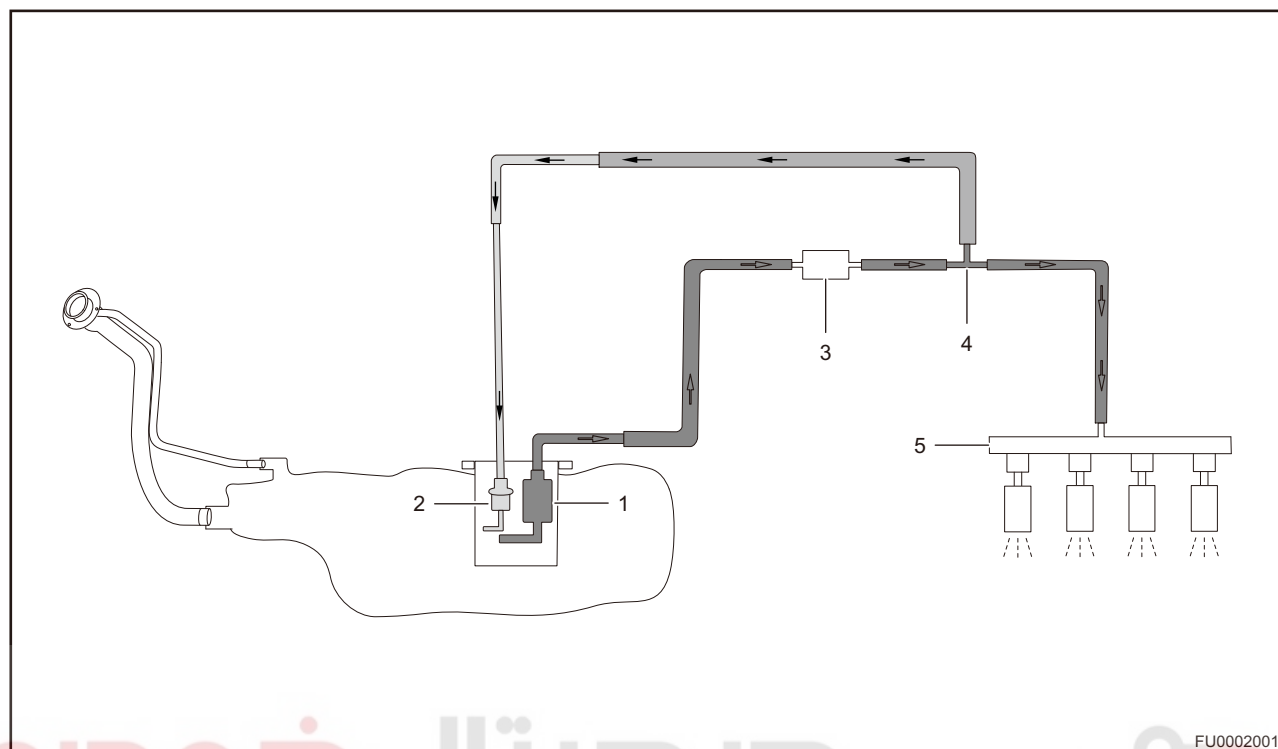

FU0002001

1 - Electric Fuel Pump Assembly	2 - Electric Fuel Pump Assembly Pressure Regulator
3 - Fuel Filter Assembly	4 - Inlet and Return Pipes Assembly
5 - Fuel Rail Injector Assembly	

When engine operates properly, the electric fuel pump assembly (1) sucks fuel from fuel tank and filtered by fuel filter assembly (3), then transmit the fuel to inlet and return pipes assembly (4). Some fuel enters the fuel rail (5) and is supplied to injectors. Some fuel flows back to the electric fuel pump assembly pressure regulator (2) directly. When fuel supply system pressure is high, the diaphragm spring in the regulator is jacked up by pressure, then the valve opens and fuel flows out from regulator. When pressure reaches normal value, the regulator shuts off and fuel stops flowing out. Finally, the system pressure reaches a steady state.

DIAGNOSIS & TESTING

Diagnosis Content

Problem Symptoms Table

Hint:

Use symptoms table below to help determine cause of problem. Check each suspected area in sequence. Repair, replace or adjust faulty components as necessary.

Symptom	Suspected Area
Fuel pressure in fuel supply system is too low	Fuel filter assembly (blocked)
	Electric fuel pump assembly (strainer blocked or fuel pressure regulator damaged)
	Low fuel level
Fuel pressure in fuel supply system is too high	Fuel injector (clogged)
	Electric fuel pump assembly (fuel pressure regulator damaged)
Electric fuel pump assembly has loud noise or a delay in operating	Low fuel level
	Electric fuel pump assembly relay
	Electric fuel pump assembly
Fuel tank flat	Canister solenoid valve operates all the time
	Canister blocked
	Filter ineffective
	Fuel tank ineffective
Fuel injector is clogged or leaked	Fuel filter assembly (blocked)
	Fuel injector
	Poor fuel quality
	Excessive impurities in fuel tank
Fuel injector does not work	Fuel supply system line (broken)
	Fuel injector (short in coil)
	Electric fuel pump assembly (damaged)
	Wire harness

ON-VEHICLE SERVICE

Fuel System Pressure Release


Operation Step

Warning:

- When engine is not operating, the fuel pressure in fuel supply system is still high. Before repairing or disconnecting the fuel line or fuel supply system components, it is necessary to release the fuel supply system pressure to prevent fuel from spraying out accidentally. Failure to follow these instructions may result in serious personal injury.

1. Perform the following procedures to release the fuel pressure in fuel supply system:

- (a) Recognize and remove the electric fuel pump assembly relay from engine compartment fuse and relay box.

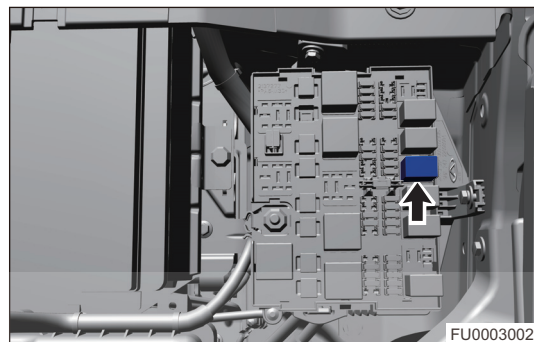

- (b) Start and run the engine until it stalls.
(c) Restart the engine until it does not run.
(d) Turn ENGINE START STOP switch to OFF.
(e) Disconnect the negative battery cable.
(f) Insert the electric fuel pump relay into the original place.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Fuel Supply System Pressure Test

Fuel Pressure Specifications

SQRE4T15B	Pressure (kPa)
Fuel Rail Fuel Pressure - Key (ON)	When power is on, pressure of fuel supply system is kept at 400 kPa - key (ON). For the new vehicle, after it is added with a certain fuel, make sure that measured fuel pressure on fuel rail at 13 s can reach 90% or higher of rated pressure.
Fuel Rail Fuel Pressure - Engine Idling	Make sure that supply fuel under normal system pressure (at least 400 kpa).
Fuel Rail Fuel Pressure - Key (OFF)	Turn off oil pump after it runs for 5 minutes, test changes of pressure in oil outlet of oil pump within 48 hours, the pressure should be not less than 100 kPa; When system pressure is 80%, turn power and oil outlet off, the maximum pressure will not drop more than 10% in 1min.


Warning:

- When operating the fuel supply system, work area should be in good ventilation and keep fire sources or open flames away from the work area, in which fire extinguisher should be equipped.
- Before operating the fuel supply system, please touch the vehicle body to discharge static electricity; failure to do so will cause a fire, even result in an explosion.
- Before removing and installing fuel pipes, release the fuel supply system pressure.

Caution:

- Make sure that battery voltage is not less than 12 V.
- The service life of fuel filter assembly should be within 5000 km.
- There is sufficient fuel in fuel tank for test.
- Make sure that fuel supply system lines are securely connected, preventing the fuel supply system from leaking.

1. Detect the fuel system pressure.
2. Remove the engine trim cover.
3. Disconnect the inlet pipe connector and connect the fuel supply system pressure tester between inlet pipe and fuel rail.

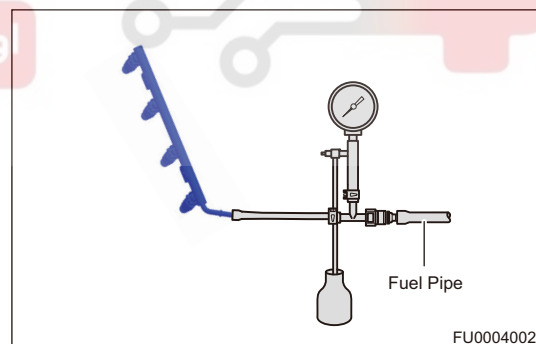

4. Start engine and run it at idle, and then read the value on pressure tester.
 - (a) Standard pressure at idle should be 400 kPa.
 - (b) If measured pressure value is lower than 380 kPa or higher than 420 kPa, check vehicle fuel supply line for leakage or kink, injector for blockage, function of electric fuel pump for abnormality.

Hint:

Replace injector or electric fuel pump assembly if necessary.


Fuel Flow Test

Caution:

- When fuel pressure is in normal during idling, the test of fuel flow can be performed.

1. Test method:

- Disconnect the inlet pipe connector and connect the fuel supply system pressure tester between inlet pipe and fuel rail.

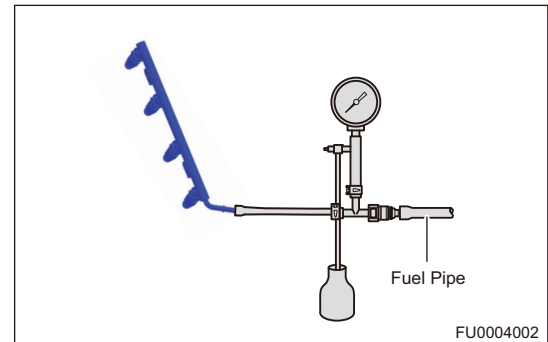

- Start engine, increase engine speed (such as throttle fully opens), if the pressure of pressure gauge is lower than 0.1 Mpa (100 kPa) of system pressure, flow is insufficient.
- If flow is insufficient, line blockage or bend, fuel pump wear or mesh blockage may be the problem cause.

Hint:

- Replace the electric fuel pump first if necessary. If line is blocked or bent, check, repair or replace it and retest flow, if it is eligible, the problem is eliminated. If it is ineligible, replace fuel pump and wash impurities in fuel tank.



Fuel Filter Assembly

Removal

Warning/Caution/Hint

Warning:


- Before operating the fuel supply system, please touch the vehicle body to discharge static electricity; failure to do so will cause a fire, even result in an explosion.
- When operating the fuel supply system, work area should be in good ventilation and keep fire sources or open flames away from the work area, in which fire extinguisher should be equipped.
- After performing the procedures for fuel system pressure release, there still remains some fuel in fuel line. When disconnecting fuel line, cover the joint with a piece of cloth or equivalent to prevent fuel from spraying out.
- If fuel leakage occurs when operating the fuel supply system, please handle the leaked fuel in time.

Caution:

- DO NOT damage the disconnected fuel system line or connectors. Cover the line joints or connectors with plastic bags or equivalent, preventing foreign matter from entering.
- Be sure to wear necessary safety equipment to prevent accidents when repairing.
- Try to prevent body paint surface from being scratched during removal and installation.

Hint:

Disconnection way for all fuel pipe coupling joints in following procedures is shown in the illustration.

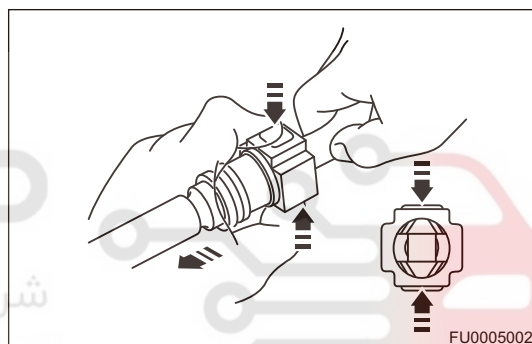


08

1. Release the fuel system pressure (See page 08-8).
2. Turn off all electrical equipment and the ENGINE START STOP switch.
3. Disconnect the negative battery cable.
4. Raise vehicle to a proper height.
5. Remove the fuel filter with wire assembly.
 - (a) Remove the fuel filter assembly fixing bolt (arrow).

Tightening torque


$7 \pm 1.5 \text{ N}\cdot\text{m}$

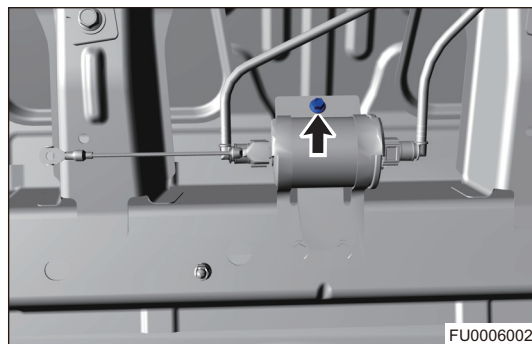

- (b) Remove the fuel filter wire ground fixing nut (arrow).

Tightening torque


$8 \pm 1.5 \text{ N}\cdot\text{m}$

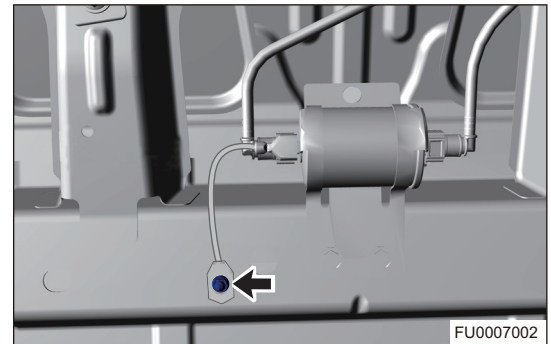

- (c) Disconnect inlet pipe joint and inlet and return pipes joint.

Caution:

- Before disconnecting the joints, remove any dirt and foreign matter from the retainer. DO NOT forcefully bend or twist delivery pipes.

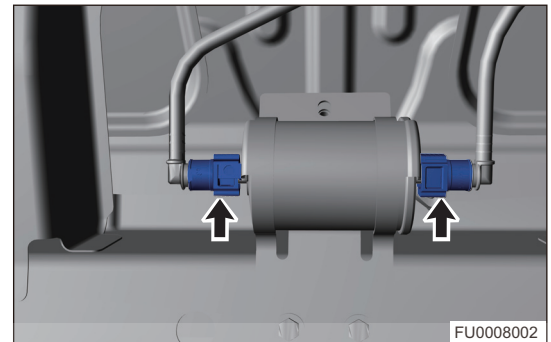

- (d) Remove the fuel filter assembly from fuel filter bracket.

Caution:


- Cover both end interfaces of the fuel filter assembly with plastic bags or equivalent to prevent foreign matter from entering.
- Drain the remaining fuel in fuel filter.
- The removed fuel filter assembly should be handled by the specialized department according to local laws and regulations. Never discard it at will.

6. Remove the fuel filter mounting bracket.

- (a) Remove 2 bolts (1) between fuel filter mounting bracket and floor metal plate.

Tightening torque

$8 \pm 1.5 \text{ N}\cdot\text{m}$

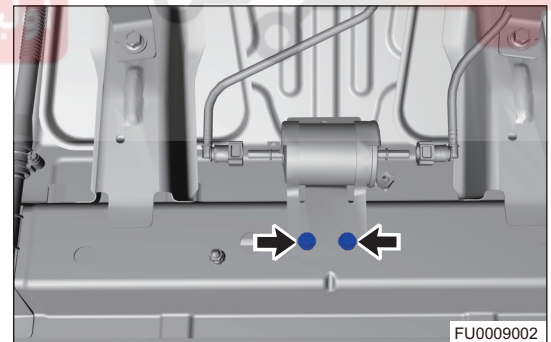

- (b) Remove the fuel filter mounting bracket.

Installation

Warning/Caution/Hint

Caution:


- Before connecting the hose, check if there is any damage or foreign matter on the hose or joint.
- During installation, push in fuel pipe joint until a click sound is heard, then check that fuel pipe joint is on the collar of fuel pipe joint. After installing the pipe joint, check that fuel pipe joint cannot be pulled out. Be careful not to damage joint. If clip is damaged, replace it.
- Turn ENGINE START STOP switch to ON (without starting engine) to apply fuel pressure to fuel supply system, and then check connections for leakage.

1. Installation is in the reverse order of removal.

On-vehicle Inspection

1. Check the electric fuel pump fuel level sensor.
 - (a) Using a flat tip screwdriver, pry off electric fuel pump assembly protective cap and disconnect electric fuel pump assembly connector.
 - (b) Using a digital multimeter, measure resistance of fuel level sensor according to remaining fuel in fuel tank.

Fuel Level Indication	Multimeter Connection	Specification (Ω)
E	Terminal 3 - Terminal 2	275 ± 5
1/4	Terminal 3 - Terminal 2	165 ± 4
1/2	Terminal 3 - Terminal 2	97 ± 4
3/4	Terminal 3 - Terminal 2	79 ± 3
F	Terminal 3 - Terminal 2	32 ± 3

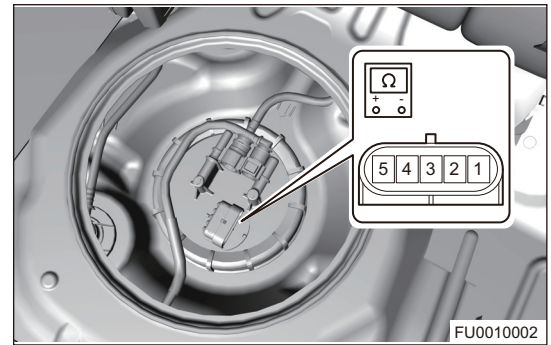


Hint:

If result is not as specified, replace electric fuel pump assembly.

08

2. Check the electric fuel pump assembly operation.
 - (a) Using a flat tip screwdriver, pry off electric fuel pump assembly protective cap and disconnect electric fuel pump connector.
 - (b) Apply battery voltage to terminals 1 and 5, and check if electric fuel pump operates within 10 seconds.

Battery Connection	Specifications
Battery positive (+) to Terminal 5 Battery negative (-) to Terminal 1	Fuel pump operates

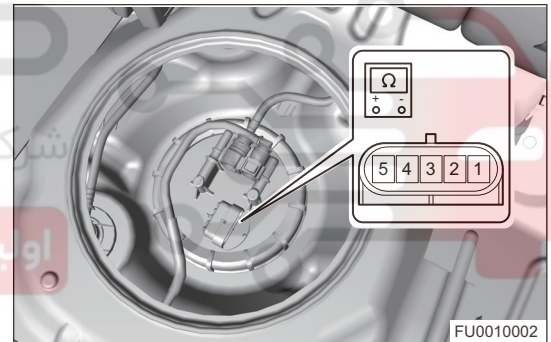

Hint:

- These tests must be finished within 10 seconds to prevent the coils from being burnt.
- Leave the electric fuel pump assembly as far as possible from the battery.
- Always switch voltage on and off on the battery side, rather than the electric fuel pump assembly side.
- If the electric fuel pump assembly does not operate, replace it.

Removal

Warning/Caution/Hint

Warning:


- Before operating the fuel supply system, please touch the vehicle body to discharge static electricity; failure to do so will cause a fire, even result in an explosion.
- When operating the fuel supply system, work area should be in good ventilation and keep fire sources or open flames away from the work area, in which fire extinguisher should be equipped.
- After performing the procedures for fuel system pressure release, there still remains some fuel in fuel line. When disconnecting fuel line, cover the joint with a piece of cloth or equivalent to prevent fuel from spraying out.
- If fuel leakage occurs when operating the fuel supply system, please handle the leaked fuel in time.

Caution:

- Be sure to wear necessary safety equipment to prevent accidents when repairing.
- Try to prevent body paint surface from being scratched during removal and installation.
- Operation staff should wear protective glasses and rubber gloves during requirement and avoid inhaling much fuel gas.
- Only use parts approved by Chery Automobile Co., Ltd. to replace the electric fuel pump assembly.
- As electric fuel pump assembly radiates through fuel, low fuel level in fuel tank will directly shorten the service life of electric fuel pump assembly.
- Keep electric fuel pump assembly and work area clean when replacing electric fuel pump assembly; otherwise the electric fuel pump assembly element will be clogged.
- DO NOT damage the disconnected fuel system line or connectors. Cover the line joints or connectors with plastic bags or equivalent, preventing foreign matter from entering.
- Keep fuel tank and line clean, and replace the fuel filter assembly if the electric fuel pump assembly has been replaced.

Hint:


Disconnection way for all fuel pipe coupling joints in following procedures is shown in the illustration.

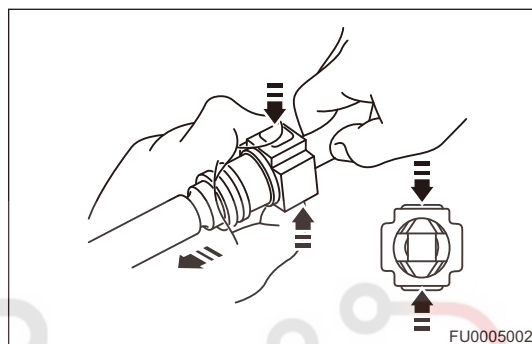


08

1. Release the fuel system pressure (See page 08-8).
2. Turn off all electrical equipment and the ENGINE START STOP switch.
3. Disconnect the negative battery cable.
4. Open the fuel tank cap assembly and discharge the fuel vapor in fuel tank.
5. Remove the rear seat cushion (See page 49-11).
6. Remove the electric fuel pump assembly.

- (a) Using a screwdriver (1) wrapped with protective tape, pry off electric fuel pump assembly protective cap (2).

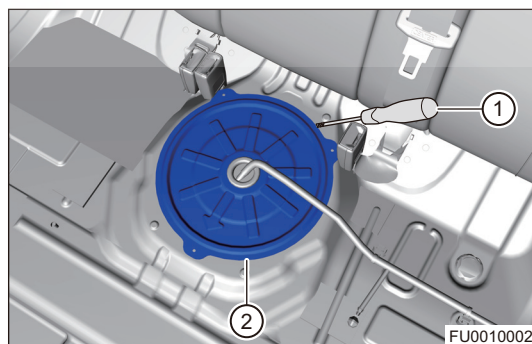


- (b) Disconnect the electric fuel pump assembly connector (arrow).

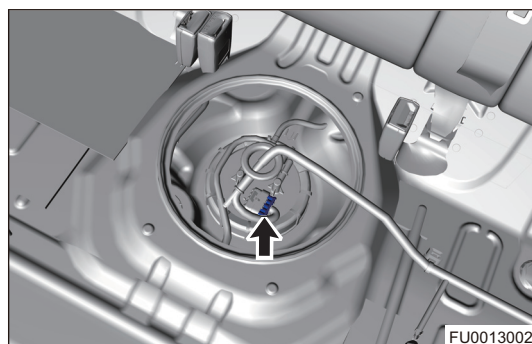

- (c) Disconnect the coupling joint between electric fuel pump assembly and inlet and return pipe assembly.

Caution:

- Before disconnecting the joints, remove all dirt from electric fuel pump assembly pressure cap.
- DO NOT forcefully bend or twist fuel line.

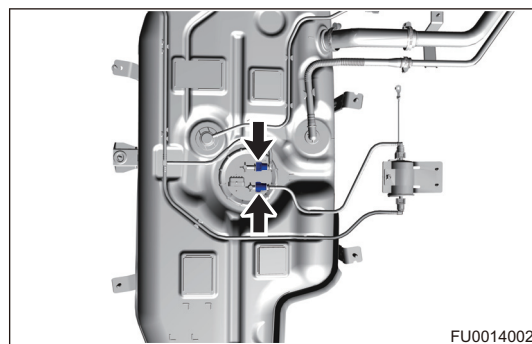


FU0014002

- (d) Using special tool (fuel pump pressure cap remover) (arrow), remove pressure cap as shown in illustration.

Tightening torque

80 ±5 N·m

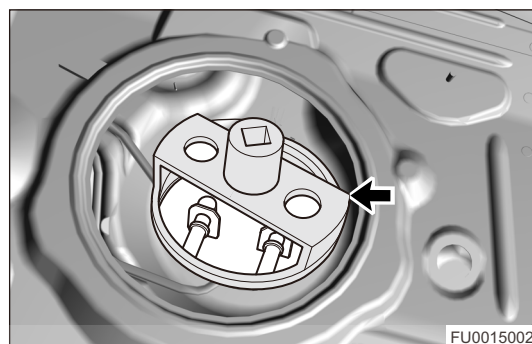

FU0015002

- (e) Take out electric fuel pump assembly.

Caution:

- Operate carefully when taking the electric fuel pump assembly out of fuel tank, preventing damaging lines and floats.
- Cover the electric fuel pump assembly completely with a plastic bag or equivalent to prevent foreign matter from entering.
- Electric fuel pump assembly can be put into a container and taken out of the cabin, thus preventing fuel in the pump from dropping into the cabin.
- It is not allowed to perform running test for electric fuel pump assembly under dry state or in water. Otherwise service life will be reduced. In addition, do not inversely connect electric fuel pump assembly positive and negative poles.

- (f) Dispose the fuel in the electric fuel pump assembly.

Installation

Warning/Caution/Hint

- DO NOT connect the power during installation. Work area should be in good ventilation and keep fire sources or open flames away.
- Replace fuel tank seal ring with a new one when installing electric fuel pump assembly, align it with installation position of fuel tank and do not run the electric fuel pump assembly with no fuel in fuel tank, preventing damaging electric fuel pump assembly.
- Before connecting the hose, check if there is any damage or foreign matter on the hose or joint.
- During installation, push in fuel pipe connector until a click sound is heard, then check that fuel pipe joint clip is on the collar of fuel pipe joint. After installing the pipe joint clip, check that fuel pipe joint cannot be pulled out. Be careful not to damage joint. If clip is damaged, replace it.
- Turn ENGINE START STOP switch to ON (without starting engine) to apply fuel pressure to fuel supply system, and then check connections for leakage.


1. Installation is in the reverse order of removal.

Caution:

- When installing electric fuel pump assembly into fuel tank. Install float rod assembly into fuel tank carefully at first to avoid deformation as collision.

- Align the installation arrow on electric fuel pump assembly with the corresponding arrow on fuel tank assembly.

Aligned Acceptable Angle
 $\pm 3^\circ$

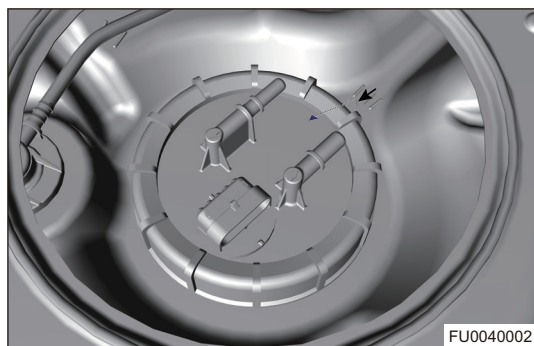

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Filler Tube Assembly

Removal

Warning/Caution/Hint

Warning:

- Before operating the fuel supply system, please touch the vehicle body to discharge static electricity; failure to do so will cause a fire, even result in an explosion.
- When operating the fuel supply system, work area should be in good ventilation and keep fire sources or open flames away from the work area, in which fire extinguisher should be equipped.
- If fuel leakage occurs when operating the fuel supply system, please handle the leaked fuel in time.

Caution:


- Be sure to wear necessary safety equipment to prevent accidents when repairing.
- Try to prevent body paint surface from being scratched during removal and installation.

1. Turn off all electrical equipment and the ENGINE START STOP switch.
2. Disconnect the negative battery cable.
3. Remove the rear left tire assembly (See page 24-8).
4. Remove the rear left wheel house protector assembly (See page 51-24).
5. Remove the filler tube assembly.

- (a) Open the fuel filler door, rotate the fuel tank cap assembly in the direction of arrow as shown in the illustration.



- (b) Loosen the elastic clamp (1) and disconnect the connection between activated charcoal canister breather pipe and filler tube assembly.

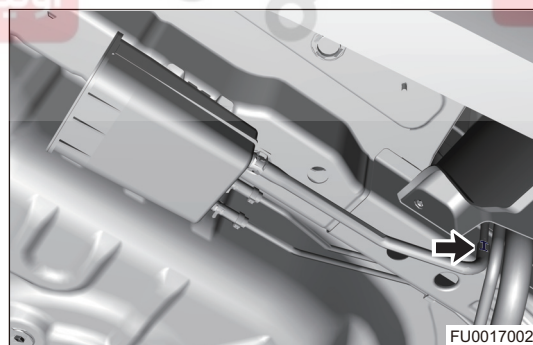

- (c) Loosen the worm clamp (1) and disconnect the connection between fuel breather hose and filler tube assembly. Loosen the worm clamp (2) and disconnect the connection between fuel filler hose and filler tube assembly.


Tightening torque

$2.5 \pm 0.5 \text{ N}\cdot\text{m}$

Caution:

- Cover the joints with plastic bags after disconnecting the fuel filler hose and fuel breather hose, in order to prevent foreign matter from entering the fuel tank and fuel from evaporating or leaking.

- (d) Loosen the worm clamp (1) and disconnect the connection between fuel breather hose and filler tube assembly. Loosen the worm clamp (2) and disconnect the connection between fuel filler hose and filler tube assembly. Remove the coupling bolt (arrow) between filler tube assembly and body.

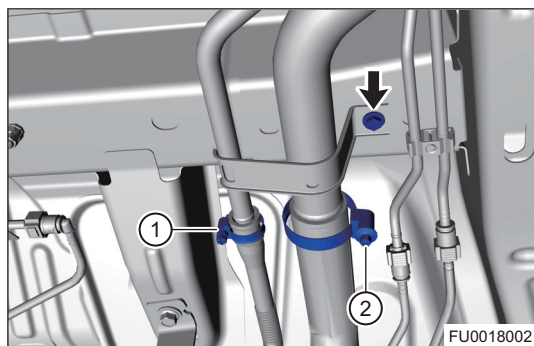Tightening torque $8 \pm 1.5 \text{ N}\cdot\text{m}$ 

- (e) Remove 3 fixing bolts (arrow) from fuel filler.

Tightening torque $7 \pm 1.5 \text{ N}\cdot\text{m}$ 

- (f) Remove the filler tube assembly.

Installation

1. Installation is in the reverse order of removal.

Caution:

- When installing hose, make sure that hose is not twisted and kinked.
- Turning the fuel tank cap clockwise until a "click" is heard, indicating the cap has been tightened.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Fuel Tank

Removal

Warning/Caution/Hint

Warning:

- Before operating the fuel supply system, please touch the vehicle body to discharge static electricity; failure to do so will cause a fire, even result in an explosion.
- When operating the fuel supply system, work area should be in good ventilation and keep fire sources or open flames away from the work area, in which fire extinguisher should be equipped.
- After performing the procedures for fuel system pressure release, there still remains some fuel in fuel line. When disconnecting fuel line, cover the joint with a piece of cloth or equivalent to prevent fuel from spraying out.
- If fuel leakage occurs when operating the fuel supply system, please handle the leaked fuel in time.


Caution:

- DO NOT damage the disconnected fuel system line or connectors. Cover the line joints or connectors with plastic bags or equivalent, preventing foreign matter from entering.
- Be sure to wear necessary safety equipment to prevent accidents when repairing.
- Try to prevent body paint surface from being scratched during removal and installation.

08

Hint:

Disconnection way for all fuel pipe coupling joints in following procedures is shown in the illustration.

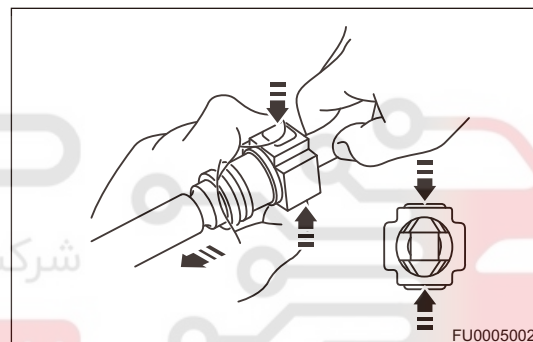

1. Release the fuel system pressure (See page 08-8).
2. Turn off all electrical equipment and the ENGINE START STOP switch.
3. Disconnect the negative battery cable.
4. Remove the muffler assembly (See page 10-12).
5. Open fuel tank cap to discharge fuel vapor.
6. Disconnect the electric fuel pump assembly line and connector.
7. Remove the fuel filter assembly (See page 13-11).
8. Remove the fuel tank assembly.
 - (a) Loosen the worm clamp (1) and disconnect the connection between fuel breather hose and filler tube assembly. Loosen the worm clamp (2) and disconnect the connection between fuel filler hose and filler tube assembly.


Tightening torque

$2.5 \pm 0.5 \text{ N}\cdot\text{m}$

Caution:

- Cover the joints with plastic bags after disconnecting the fuel filler hose and fuel breather hose, in order to prevent foreign matter from entering the fuel tank and fuel from evaporating or leaking.


- (b) Disconnect the coupling joint (3) between fuel vapor pipe I and fuel vapor pipe II, and disconnect the coupling joint (4) between fuel vapor pipe III and fuel vapor pipe IV.

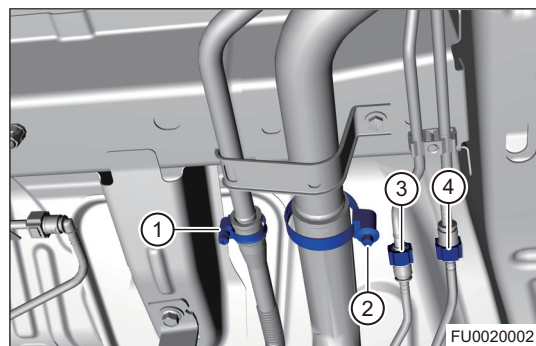


- (c) Disconnect the coupling joint (1) between fuel vapor pipe IV and fuel vapor pipe V, and disconnect the coupling joint (2) between inlet and return pipe assembly and inlet pipe II assembly.

Caution:

- Before disconnecting the joints, remove any dirt and foreign matter from the retainer.
- DO NOT forcefully bend or twist delivery pipes.

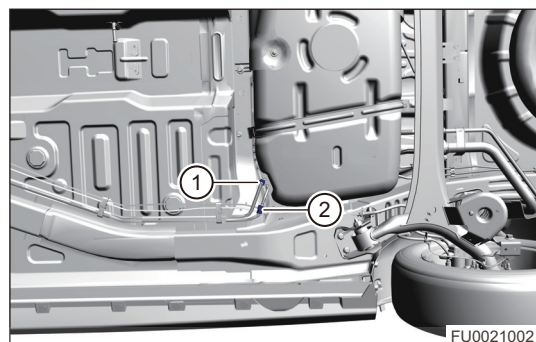


- (d) Support the fuel tank with a transmission carrier.

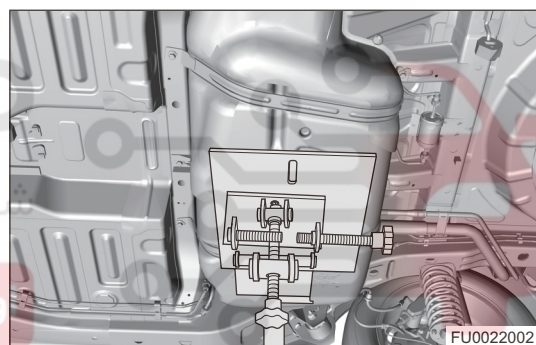

- (e) Remove fuel tank fixing bolt (1) and 4 coupling bolts (arrow) between fuel tank left and right fixing straps and body.


Tightening torque

$23 \pm 2 \text{ N}\cdot\text{m}$

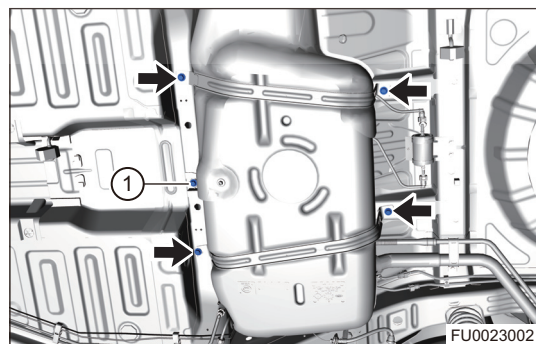

9. Slowly lower transmission carrier to remove fuel tank assembly.

- (a) Remove fuel pump pressure cap (1), electric fuel pump assembly (2) and fuel tank seal ring (3) from fuel tank assembly.

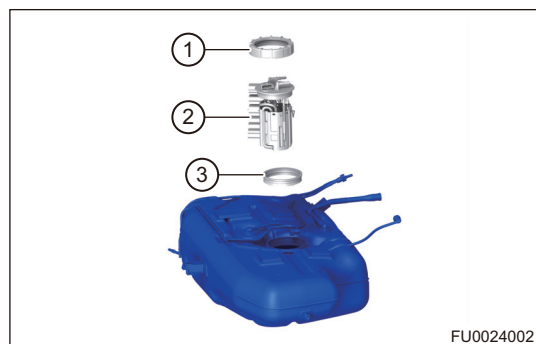


Fuel Tank Accessories Description

1. Fuel Vapor Valve

Function of fuel vapor valve:

- (a) When fuel vapor is produced in the fuel tank, the vapor will enter the charcoal canister through fuel vapor valve (1) by fuel vapor pipe I (2). When the vehicle body bumps or overturns, fuel vapor valve will automatically lock to prevent fuel overflow.

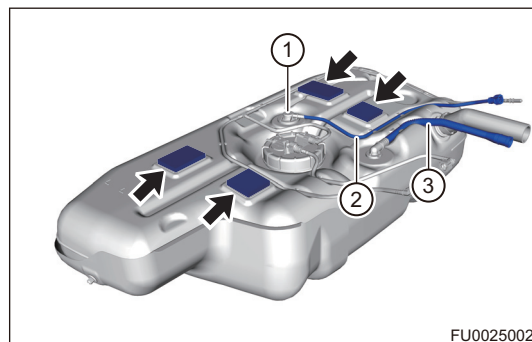

2. Fuel Breather Pipe

Function of fuel breather pipe:

- (a) When filling fuel tank through fuel filler, the fuel vapor will get out of fuel tank through fuel breather pipe (3).

3. Fuel Tank Cushion

- (a) Pay attention to the installation positions of fuel tank cushions (arrow). Incorrect installation will damage the fuel tank or fuel lines due to friction between fuel tank and body.

Installation

Warning/Caution/Hint

Caution:

- Return fuel lines and vent line on fuel tank to their original positions, or the fuel lines will be damaged due to friction generated by vehicle body shock, causing fuel leak.
- Before connecting the hose, check if there is any damage or foreign matter on the hose or joint.
- During installation, push in fuel pipe connector until a click sound is heard, then check that fuel pipe joint clip is on the collar of fuel pipe joint. After installing the pipe joint clip, check that fuel pipe joint cannot be pulled out. Be careful not to damage joint. If clip is damaged, replace it.
- Turn ENGINE START STOP switch to ON (without starting engine) to apply fuel pressure to fuel supply system, and then check connections for leakage.

1. Installation is in the reverse order of removal.

Fuel Rail Injector Assembly

Removal

Warning/Caution/Hint

Warning:


- Before operating the fuel supply system, please touch the vehicle body to discharge static electricity; failure to do so will cause a fire, even result in an explosion.
- When operating the fuel supply system, work area should be in good ventilation and keep fire sources or open flames away from the work area, in which fire extinguisher should be equipped.
- After performing the procedures for fuel system pressure release, there still remains some fuel in fuel line. When disconnecting fuel line, cover the joint with a piece of cloth or equivalent to prevent fuel from spraying out.
- If fuel leakage occurs when operating the fuel supply system, please handle the leaked fuel in time.

Caution:

- Be sure to wear necessary safety equipment to prevent accidents when repairing.
- Try to prevent body paint surface from being scratched during removal and installation.
- DO NOT damage the disconnected fuel system line or connectors. Cover the line joints or connectors with plastic bags or equivalent, preventing foreign matter from entering.
- Injector is a part of high accuracy, featuring good anti-clogging, anti-pollution and atomization, so be careful not to damage the injector during removal of fuel rail.

1. Release the fuel supply system pressure (See page 08-8).
2. Turn off all electrical equipment and the ENGINE START STOP switch.
3. Disconnect the negative battery cable.
4. Remove the engine trim cover.
5. Remove the fuel rail injector assembly.

- (a) Disconnect connection (1) between inlet pipe III and fuel rail injector.

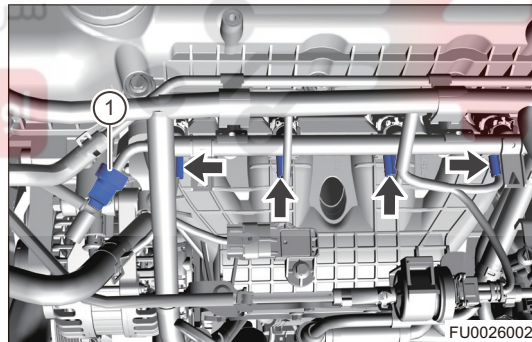


- (b) Disconnect the injector connectors (arrow) of each cylinder.

- (c) Remove 2 fixing bolts (arrow) from fuel rail injector.


Tightening torque

20 + 5 N·m

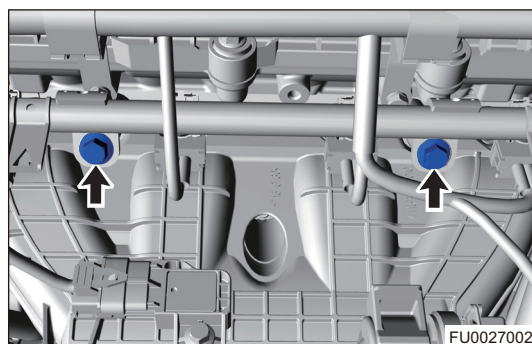


- (d) Remove the fuel rail injector assembly.

6. Separate the injector and fuel rail.
 - (a) Remove injector fixing clamps and remove injectors (arrow) from fuel rail.

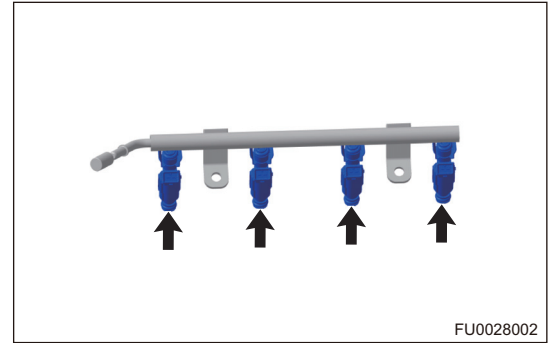

Inspection

1. Check the resistance of injector.
 - (a) Disconnect the injector connector.
 - (b) Measure resistance between 2 terminals (injector side) of injector with a digital multimeter.

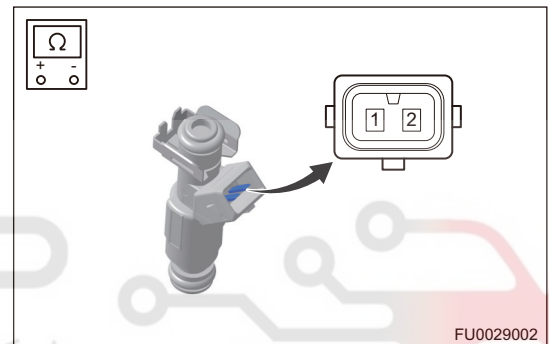

Multimeter Connection	Measurement Temperature	Specification (Ω)
Terminal 1 - Terminal 2	20°C	12

2. Check leakage test and injection test of injector.
 - (a) Remove injector and then install the injector to injector cleaning analyzer, adjust the pressure to operation pressure, and observe the injector for leakage, if so, sealing is poor.
 - (b) If there is no cleaning analyzer, a free-unpick cleaning device also can be used, adjust pressure to 4 bar, and place a white paper under injector. Observe the injector for leakage.

Caution:

- When installing injector, grease will be applied to sealing ring to install injector easily, if the part is in high temperature for a long time, grease will melt, and adsorb around injector, so it may be wrong when judging injector for leakage. It is recommend to clean around injector to check injector for leakage.
- (c) If the color of one injector nozzle is different from the color of other injector nozzles, the injector may be leaked or have a poor atomization.
 - (d) Fuel injection angle
 - (1) Poor atomization: Fuel injected by injector is radial, and injection angle from injection nozzle is irregular.
 - (2) Good atomization: Fuel injected from injector is fuel mist, and injection angle from injection nozzle is cone.

Installation

Warning/Caution/Hint

Caution:

- Install a new O-ring sealing on injector.
 - Before installing the injector, apply clean grease or oil to the O-ring sealing surface for easy installation, preventing damage to the O-ring.
 - When applying grease or oil, do not contaminate the injector internal and injection holes.
 - It is not allowed to use any tool (hammer, ect.) to strike the injector when installing it.
1. Installation is in the reverse order of removal.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

