23

BRAKE CONTROL SYSTEM

GENERAL INFORMATION	23-3	C0034-09	23-44
Overview	23-3	C0034-11	23-44
Description	23-3	C0034-12	23-44
ABS/ESP Operation	23-4	C0034-13	23-44
Hill Descent Control (HDC)	23-7	C0034-29	23-44
Specifications	23-8	C0034-37	23-44
Tools	23-8	C0037-00	23-50
Technical Parameters Table	23-8	C0037-09	23-50
DIAGNOSIS & TESTING	23-9	C0037-11	23-50
Diagnosis Content	23-9	C0037-12	23-50
Problem Symptoms Table	23-9	C0037-13 C0037-29	23-50 23-50
Failure Analysis Table	23-9	C0037-29 C0037-37	23-50
Diagnosis Procedure	23-10	C0037-37	23-56
Problem Repair (No DTC)	23-12	C003A-00	23-56
DTC Confirmation Procedure	23-12	C003A-11	23-56
Intermittent DTC Troubleshooting	23-13	C003A-12	23-56
Ground Inspection	23-13	C003A-13	23-56
EPB/ESP Control Module Assembly		C003A-29	23-56
Terminal List (EPB)	23-13	C003A-37	23-56
ABS/ESP Control Module Assembly		C0051-29	23-62
Terminal List (without EPB)	23-14	C0051-54	23-62
Diagnostic Tester Menu Function and Date Flow	23-15	C0051-64	23-62
Calibration	23-19	U0126-87	23-62
Diagnostic Trouble Code (DTC) Chart	23-19	U0428-81	23-62
C0001-04	23-24	C0061-64	23-69
C0002-04	23-28	C0062-64	23-69
C0003-04	23-28	C0063-64	23-69
C0004-04	23-28	C0063-01	23-69
C0010-04	23-28	C0063-54	23-69
C0011-04	23-28	C006B-00	23-71
C0014-04	23-28	C0089-04	23-74
C0015-04	23-28	C1000-16	23-76
C0018-04	23-28	C1000-17	23-76
C0019-04	23-28	C1001-04	23-76
C001C-04	23-28	C1009-00	23-76
C001D-04	23-28	U0005-00 U0007-00	23-81 23-81
C0020-04	23-34	U0073-88	23-81
C0031-00	23-38	U0100-87	23-81
C0031-09	23-38	U0101-87	23-81
C0031-11	23-38	U0140-87	23-81
C0031-12	23-38	U0401-81	23-81
C0031-13	23-38	U0402-81	23-81
C0031-29	23-38	U0422-81	23-81
C0031-37	23-38	C1002-49	23-81
		-	== ••

ON-VEHICLE SERVICE	23-87	Inspection	23-91
Brake System Bleeding	23-87	Installation	23-92
Operation Step	23-87	Rear Wheel Speed Sensor	
EPB/ESP control module assembly	23-88	(Rear Left Wheel as Example)	23-93
Removal	23-88	Removal	23-93
Disassembly	23-89	Inspection	23-94
Assembly	23-89	Installation	23-95
Front Wheel Speed Sensor		Steering Angle Sensor	23-96
(Front Left Wheel as Example)	23-90	Removal	23-96
Removal	23-90	Installation	23-96






GENERAL INFORMATION

Overview

Description

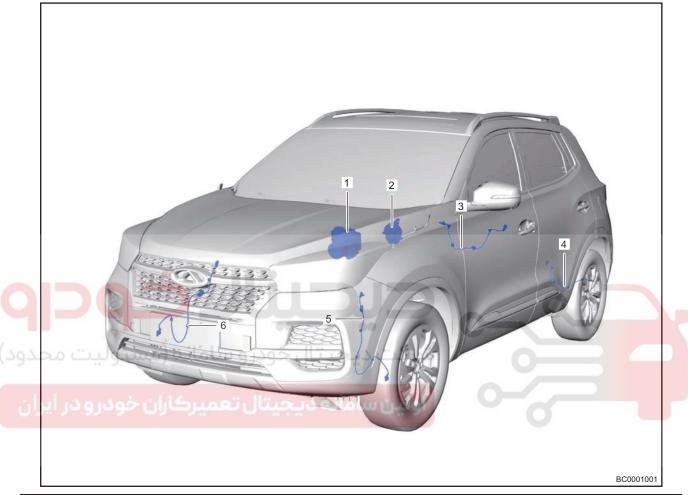

1 - EPB/ESP Control Module Assembly	2 - Steering Angle Sensor
3 - Rear Right Wheel Speed Sensor	4 - Rear Left Wheel Speed Sensor
5 - Front Left Wheel Speed Sensor	6 - Front Right Wheel Speed Sensor

Brake control system equipped on this model is ABS (Anti-lock Brake System) + EBD (Electronic Brake Force Distribution), ESP (Body Electronic Stability Program). With HDC (Hill Descent Control). It mainly consist of following components:

- ABS/ESP control module assembly (hydraulic control module and electronic control module).
- Wheel speed sensors (each wheel has one sensor).
- · Steering angle sensor (ESP).
- Yaw rate sensor (built in ESP control module assembly).
- HBA is English abbreviation of brake assist system, is extended function of ESP system. In emergency
 situation, drivers always apply brake timely, but not apply maximum brake force generally, thus
 extending brake distance. When this occurs, brake assist system will operate: when driver depresses
 brake pedal quickly in emergency with insufficient depressing force, HBA will increase brake pressure
 to maximum quickly, thus brake distance will be shortened by anti-lock brake system quickly and
 effectively.

- HHC is English abbreviation of Hill-start Assist Control System. When vehicle is static, HHC will
 determine if vehicle is on slope via longitudinal acceleration sensor. When vehicle starts to up from
 resting state (uphill forward or reversing), HHC will enter operating state automatically. When starting
 off, system will keep previous brake pressure for 1 to 2 seconds after driver releases brake pedal,
 make sure vehicle is still stopped. Brake pressure will decrease when drive torque increases, thus
 avoiding an accident caused by vehicle sliding rearward during starting off on a slope.
- TCS is English abbreviation of Traction Control System. Drive wheel may slip when vehicle starts up or
 accelerates rapidly. Accident may occur due to direction out of control on smooth road surface such as
 ice and snow etc. TCS detects that drive wheel idling can be avoided when accelerating by applying
 brake to idling wheel or decreasing engine torque when driven wheel speed is lower than drive wheel
 (a feature of sliding).


Primary purpose of ABS is to prevent wheels from being locked during sudden braking. It has following effects:

- · Improving vehicle driving stability.
- · Improving vehicle steering ability.
- · Maintaining optimal brake pressure.
- · Shortening brake distance efficiently.

ABS/ESP Operation

- 1. ABS Braking
 - (a) If ABS system detects that wheels may be locked when applying brake, brake system will enter ABS braking mode. During braking, EPB/ESP control module outputs signal from each wheel speed sensor to each solenoid valve after analysis in order to adjust fluid pressure in each line, to prevent wheels from being locked.
 - (b) There are some operating symptoms of EPB/ESP, but in fact they are normal.
 - If electronic control module is malfunctioning, fail-safe function will be activated, EPB/ESP system will not operate and EPB/ESP warning light will come on.
 - After vehicle is powered on or engine is started, short "buzz" sound can be heard. This is normal sound from EPB/ESP self-check.
 - Motor, solenoid valve, and return pump movement in hydraulic unit will cause noise when EPB/ESP is operating normally, but this is normal.
 - Brake pedal may vibrate slightly and mechanical noise can be heard during EPB/ESP operation, but this is normal.
 - Bumping sound between suspension and vehicle body can be caused by sudden brake.

1. EPB/ESP Control Mode

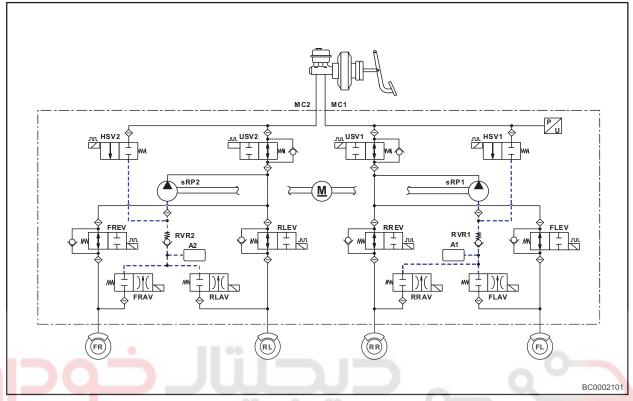

Description	Definition	Description	Definition
MC1	Brake Master Cylinder Circuit 1	J FLEV	Front Left Wheel Inlet Valve
MC2	Brake Master Cylinder Circuit 2	FLAV	Front Left Wheel Outlet Valve
М	Motor	FREV	Front Right Wheel Inlet Valve
RP1	Return Pump 1	FRAV	Front Right Wheel Outlet Valve
RP2	Return Pump 2	FLEV	Rear Left Wheel Inlet Valve
A1	Accumulator 1	RLAV	Rear Left Wheel Outlet Valve
A2	Accumulator 2	RREV	Rear Right Wheel Inlet Valve
FL	Front Left Wheel	RRAV	Rear Right Wheel Outlet Valve
FR	Front Right Wheel	HSV1	High Pressure Switch Valve 1
RL	Rear Left Wheel	HSV2	High Pressure Switch Valve 2
RR	Rear Right Wheel	USV1	Circuit Control Valve 1
UP	Pressure Sensor	USV2	Circuit Control Valve 2

1. General Brake Operating Condition

For vehicles equipped with ABS, if brake pressure applied to wheels is not enough to lock wheels, oil pressure generated by master cylinder will be transmitted to wheel cylinder through normal open valve, producing regular braking effect. "When it is not necessary to continue braking, and if driver reduces pressure to brake pedal, brake fluid of each wheel returns to master cylinder and brake pressure decreases."

Solenoid Valve	Powered Condition	Solenoid Valve Condition
Normal Open Valve	OFF	On
Normal Close Valve	OFF	OFF

2. ABS/ESP Operating (Relief) Condition

For vehicles equipped with ABS/ESP, if brake pressure is applied excessively, friction coefficient between wheels and road will decrease, and wheels will be decelerated earlier than vehicle, which could cause wheels to lock. In this case, ABS/ESP control module transmits the command that reduces wheel pressure to hydraulic control module. In other words, normal open valve cuts off oil passage and the oil passage of normal close valve is open, in order to reduce wheel cylinder pressure. At this time, brake fluid drained from wheel cylinder is temporarily stored in low pressure accumulator. Then, the brake fluid stored in low pressure accumulator returns to master cylinder with rotation of motor.

Solenoid Valve	Powered Condition	Solenoid Valve Condition
Normal Open Valve	ON	OFF
Normal Close Valve	ON	On

3. ABS/ESP Operating (Maintaining) Condition

When appropriate pressure is applied to wheel cylinder by boosting or relieving pressure, ABS system enters maintaining pressure state. In other words, normal open valve cuts off oil passage and normal close valve also cuts off oil passage, the wheel cylinder pressure is maintained.

Solenoid Valve	Powered Condition	Solenoid Valve Condition
Normal Open Valve	OFF	On
Normal Close Valve	OFF	OFF

4. ABS/ESP Operating (Boost) Condition

When relieving pressure condition, if brake fluid is drained excessively or friction coefficient between wheels and road increases, it needs to increase each wheel pressure. In this case, ABS/ESP control module transmits the command that increases wheel pressure to hydraulic control module. Normal open valve open oil circuit and normal open valve cut off oil circuit. Brake fluid stored in low pressure accumulator is supplied to each wheel cylinder through master cylinder and normal open valve to boost pressure it each wheel cylinder.

Solenoid Valve	Powered Condition	Solenoid Valve Condition
Normal Open Valve	OFF	On
Normal Close Valve	OFF	OFF

ABS system operates circularly under relief, maintaining and boost pressure conditions until vehicle is completely stopped, so vehicle braking and steering performance will be guaranteed. ESP adjustment procedure is similar to ABS adjustment procedure. Brake fluid is supplied to wheel cylinders that need to increase pressure by pump, when stability control are realized and HSV valve opens and USV valve closes.

Hill Descent Control (HDC)

HDC system is a hill descent control system, which can help driver downhill in low speed and without brake intervention by driver actively.

No.	Function	Operation Method	Precautions
1	Function on	Press HDC switch button on auxiliary fascia console manually, functional indicator of meter and operation indicator of button turn on. (Green car icon light on meter turns on, switch indicator turns on).	Speed range of function on is between 0 and 60 Km/h; HDC function is invalid when ESP system is malfunctioning.
2	Function off	Manually off: Press HDC switch button on auxiliary fascia console manually again, functional indicator of meter and operation indicator of button turn off. (Green car icon light on meter turns off, switch indicator turns off). Automatically off: When vehicle speed is higher than 60 Km/h or system has a malfunction, function turns off automatically.	-
3	Functional roles	After function turns on, automatic gear vehicle can perform vehicle speed control within in 8 to 60 Km/h, manual gear vehicle can perform vehicle speed control within in 14 to 60 Km/h; If initial speed is lower than minimum or higher than maximum controlling speed, vehicle will perform control with minimum or maximum controlling speed acquiescently; Current controlling speed can be increased or decreased in given speed interval by depressing accelerator pedal or brake pedal.	This function applies brake actively via ESP increases pressure actively, at this time there is hydraulic operating sound, and it is normal.

شرکت در حیتا از خودر و Indicators and Warning Lights

No.	Function	Operation Method	Precautions
درودا ایران	Green HDC indicator remains on	Function turns on normally	Function turns on normally
2	Green HDC indicator intermittently on	HDC function works	Function turns on normally
3	Yellow ESP light remains on	ESP is malfunctioning, HDC function can not turn on	It is suggested to check and repair by Chery dealer

Caution:

- When HDC system is operating, ABS will be activated automatically if wheel is locked.
- When HDC system is operating, brake force will be distributed to wheel with higher attachment coefficient if any wheel loses contact with ground.
- When HDC system is operating, for safety, driver must make preparations to control vehicle any time.
 Because system may be overheating or ESP system malfunction will occur except it is locked by button. At this time system will exit control automatically, driver needs to control speed timely instead of HDC.

Specifications

Torque Specifications

Description	Torque (N·m)
Wheel Mounting Bolt	110 ± 10
Fixing Nut Between ABS/ESP Control Module Assembly and Mounting Bracket	8 ± 2
Fixing Bolt Between EPB/ESP Control Module Assembly Mounting Bracket and Body	23 ± 3.5
Front Wheel Speed Sensor Fixing Bolt	9 ± 1.5
Rear Wheel Speed Sensor Fixing Bolt	9 ± 1.5
Coupling Bolt Between Brake Pipe and ABS/ESP Control Module Assembly	16 ± 2

Tools

Special Tool



Technical Parameters Table

Vehicle Model	Chery T19 (EPB) ESP9
Brake Fluid Type	DOT4
Number of Front Shaft Ring Gear Teeth	48
Number of Rear Shaft Ring Gear Teeth	48
Tire Type	215/60R17
Spare Tire Type	T125/80R17

DIAGNOSIS & TESTING

Diagnosis Content

Problem Symptoms Table

Hint:

Use symptoms table below to help determine cause of problem. Check each suspected area in sequence. Repair, replace or adjust faulty components as necessary.

Symptom	Suspected Area		
	Fuse		
When turning ENGINE START STOP switch ON, EPB/ESP warning	Wire harness or connector		
light does not come on	EPB/ESP control module assembly		
	Instrument cluster		
	Fuse		
EDB/ESD warning light ramains on	Wire harness or connector		
EPB/ESP warning light remains on	EPB/ESP control module assembly		
	Instrument cluster		
	Wheel speed sensor (damaged, improperly installed, foreign matter attached)		
EPB/ESP operation is abnormal	Hub ring gear (damaged, improperly installed, foreign matter attached)		
	Hub ring gear (damaged, improperly installed, foreign matter attached)		
	Brake line (blocked or leaked)		
	Wire harness or connector		
مرتبال خوريوسامانه (مسئوليت م	EPB/ESP control module assembly		
——————————————————————————————————————	Fuse		
Communication with EPB/ESP control module assembly cannot be	Wire harness or connector		
performed	Diagnostic tester		
	EPB/ESP control module assembly		

Failure Analysis Table ESP System Inspection Table

Technicians:

Owner's Name	Vehicle Model	
Contact Number	VIN	
Delivery Time	Driving Distance	

Malfunction Occurrence	Date of Occurrence	
	Frequency of Occurrence	☐ Always ☐ Sometimes
	Condition of Occurrence	
	Current Vehicle Speed	☐ When vehicle is stationary ☐ When vehicle drives to km/h
	Conventional Brake System	☐ Normal ☐ Abnormal (Symptoms:)
	Battery Voltage	

Malfunction Symptom	□ EBD operates well□ Poor operation□ Does not operate	
	□ ABS operates well □ ABS operates well □ ABS operates well	
	☐ ESP operates well ☐ ESP operates well ☐ ESP operates well (include	ding TCS)
	☐ EBD warning light	☐ Constants on ☐ Does not come on
DTC Check	☐ ABS warning light	☐ Constants on ☐ Does not come on
	☐ ESP warning light	☐ Constants on ☐ Does not come on
	Warranty status	□ No DTC □ Current DTC (DTC code:) □ History DTC (DTC code:)
	After clearing DTCs and performing running test	□ No DTC □ Current DTC (DTC code:) □ History DTC (DTC code:)

Diagnosis Procedure

Hint

Use following procedures to troubleshoot the brake control system.

1 Vehicle brought to workshop

رخودر و سامانه (مسئولیت م Result

Proceed to
Next

Next

2 Check battery voltage

Check if battery voltage is normal.

OK

Standard voltage: Not less than 12 V

Result

Proceed to	
OK	
NG	

23

NG

Check and repair battery

OK

3	Customer problem analysis
Result	
	Proceed to
	Next
	Next
4	Check and clear DTCs
Result	
	Proceed to
	Next
	Next
5	Confirm and duplicate malfunction: accelerate vehicle to 40 km/h or above, simulate malfunction conditions and read DTCs again
Result	
-	Proceed to
	No DTC
محد	شرکت دیجیتال خودر Current DTC (مسئولیت
	History DTC
	اولین سامانه دیجیتال تعمیرکاران خودر و د (History DTC
6	Problem Repair (No DTC)
Result	
	Proceed to
	Next
Next	So to step 7
7	Troubleshoot according to Diagnostic Trouble Code (DTC) chart
Result	
	Proceed to
	Next
N .	
Next	So to step 8

8 Troubleshoot according to Problem Symptoms Table

Result

Proceed to
Next

Next

9 Conduct test and confirm malfunction has been repaired

Result

		Proceed to
		Next
Next	End	

Problem Repair (No DTC)

If there is a problem in brake system, but no DTC is stored in ABS/ESP control module assembly, this problem is called a problem without DTC. A problem without DTC is caused by basic brake system malfunction. For example:

- 1. Brake fluid leakage (it may result in weak braking, brake pedal overtravel or even ineffective braking).
- 2. Using inferior brake fluid (it can result in corrosion of brake line and EPB/ESP hydraulic regulating module internal elements, or even ineffective braking).
- 3. Air in brake line (it may result in weak braking or even ineffective braking).
- 4. Brake line blockage (it may result in hard braking or even ineffective braking).
- 5. Excessive wear of brake disc (it may result in weak braking, brake pedal overtravel).
- 6. Brake booster malfunction (it may result in weak or hard braking, brake pedal overtravel or even ineffective braking).
- 7. Wrong brake line connection (it may result in EPB/ESP braking performance decreasing, drift, long braking distance etc.).

Hint:

- EPB/ESP no power supply or power supply abnormality will cause ABS/ESP warning light remains on without storing DTC.
- Troubleshooting method: check corresponding component according to the malfunction, repair or replace as necessary.

DTC Confirmation Procedure

Confirm that battery voltage is normal before performing following procedures.

- · Turn ENGINE START STOP switch to OFF.
- Connect the diagnostic tester (the latest software) to Data Link Connector (DLC).
- Turn ENGINE START STOP switch to ON.
- Using diagnostic tester, record and clear DTCs stored in EPB/ESP control module assembly.
- Turn ENGINE START STOP switch to OFF and wait several seconds.
- Start engine, drive vehicle at 40 km/h or more and perform road test with diagnostic tester connected to Data Link Connector (DLC).
- Use diagnostic tester to read DTCs.
- If DTC is detected, malfunction indicated by DTC is current. Go to diagnosis procedure Step 1.
- If no DTC is detected, malfunction indicated by DTC is intermittent. Please refer to Intermittent DTC

Intermittent DTC Troubleshooting

If malfunction is intermittent, perform the followings:

- · Check if connector is loose.
- Check if wire harness is worn, pierced, pinched or partially broken.
- Wiggle related wire harness and connector and observe if signal in related circuit is interrupted.
- If possible, try to duplicate conditions under which DTC was set.
- Look for data that has changed or DTC to reset during wiggle test.
- · Check for broken, bent, protruded or corroded terminals.
- Inspect wheel speed sensors and mounting areas for damage, foreign matter, etc. that will cause incorrect signals.
- Check and clean all wire harness connectors and ground parts related to DTC.
- If multiple trouble codes were set, refer to circuit diagrams to look for any common ground circuit or power supply circuit applied to DTC.
- · Refer to any Technical Bulletin that may apply to this malfunction.


Ground Inspection

Ground points are very important to the proper operation of circuits. Ground points are often exposed to moisture, dirt and other corrosive environments. Corrosion (rust) may increase load resistance. This situation may change the way in which a circuit works. Circuits are very sensitive to proper grounding. A loose or corroded ground can affect the control circuit. Check the ground points as follows:

- 1. Remove ground bolt or nut.
- 2. Check all contact surfaces for tarnish, dirt and rust, etc.
- 3. Clean as necessary to ensure that contact is in good condition.
- 4. Reinstall ground bolt or nut securely.
- 5. Check if add-on accessories interfere with ground circuit.
- 6. If several wire harnesses are crimped into one ground terminal, check for proper crimps. Make sure that all wire harnesses are clean and securely fastened while providing a good ground path.

EPB/ESP Control Module Assembly Terminal List (EPB)

Connector Terminal

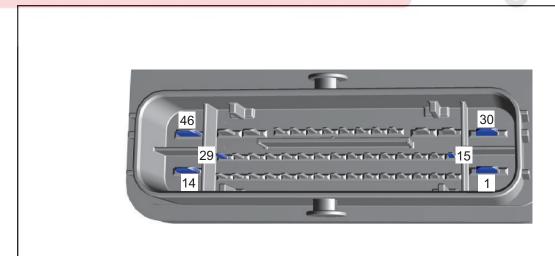


BC0069001

Terminal No.	Terminal Definition	Terminal No.	Terminal Definition
1	Motor Power Supply End (Positive)	24	Front Left Wheel Speed Sensor Power Supply
2	Right Caliper Motor Positive	25	-
3	Right Caliper Negative	26	Front Right Wheel Speed Sensor Signal End

Terminal No.	Terminal Definition	Terminal No.	Terminal Definition
4	-	27	-
5	CAN1 High	28	-
6	-	29	-
7	Front Left Wheel Speed Sensor Signal Wire	30	Valve Relay Power Supply
8	AUTO HOLD Indicator	31	EPB Switch Pin
9	Vehicle Speed Output	32	EPB Switch 4
10	HDC Switch Indicator	33	-
11	CAN2 High	34	Front Right Wheel Speed Output
12	Left Caliper Motor Negative	35	-
13	Left Caliper Motor Positive	36	ECU Power Supply (Ignition Power Supply Wire)
14	Motor Ground	37	Rear Right Wheel Speed Sensor Signal
15	EPB Switch Pin 3	38	Brake Switch
16	EPB Switch Pin 6	39	Rear Left Wheel Speed Sensor Power Supply
17	HDC Function Switch	40	-
18	EPB Switch Indicator	41	AUTO HOLD Switch
19	CAN 1 Low	42	-
20	-	43	ESP OFF Switch
21	Front Right Wheel Speed Sensor Power Supply	44	-
22	Rear Right Wheel Speed Sensor Power Supply	45	-
23	Rear Left Wheel Speed Sensor Signal	46	ECU Ground Terminal

ABS/ESP Control Module Assembly Terminal List (without EPB)

Connector Terminal

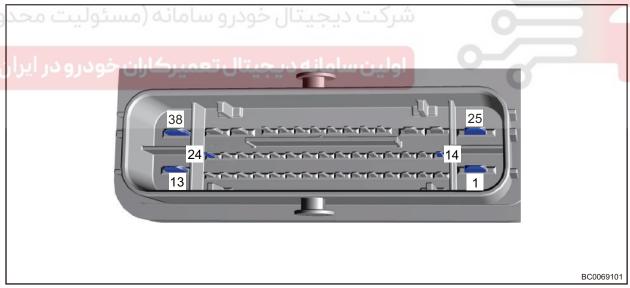

Terminal No.	Terminal Definition	Terminal No.	Terminal Definition
1	Motor Power Supply End (Positive)	20	-
2	Front Right Wheel Speed Output	21	-
3	-	22	-
4	Front Right Wheel Speed Sensor Signal Wire	23	HDC Switch Indicator
5	-	24	-
6	-	25	Valve Relay Power Supply
7	-	26	CAN High
8	Front Left Wheel Speed Sensor Signal Wire	27	-


Terminal No.	Terminal Definition	Terminal No.	Terminal Definition
9	-	28	Ignited
10	Vehicle Speed Output	29	Rear Right Wheel Speed Sensor Signal Wire
11	-	30	Brake Switch
12	ESP OFF Switch	31	Rear Left Wheel Speed Sensor Power Supply Wire
13	Motor Ground	32	-
14	CAN Low	33	
15	HDC Function Switch	34	-
16	Front Right Wheel Speed Sensor Power Supply Wire	35	-
17	Rear Right Wheel Speed Sensor Power Supply Wire	36	-
18	Rear Left Wheel Speed Sensor Signal Wire	37	-
19	Front Left Wheel Speed Sensor Power Supply Wire	38	ECU Ground

Diagnostic Tester Menu Function and Date Flow

Diagnostic menu options
 T19 ABS/ESP (Anti-lock Braking System/Electronic Stability Program)/System Selection



Reading Version Information function menu As shown in figure:

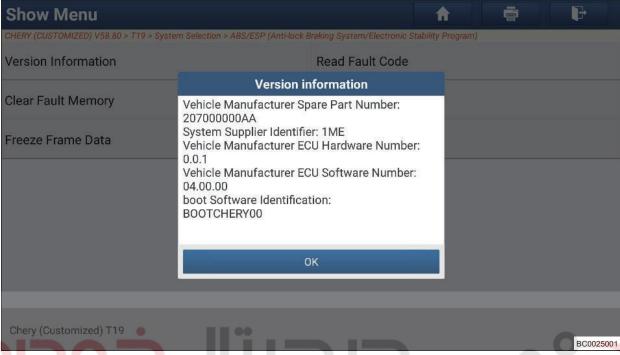


3. ABS/ESP (Anti-lock Braking System/Electronic Stability Program) function menu As shown in figure:

Read Fault Code: Read the current and history DTCs



Clear Fault Memory: Clear the current and history DTCs

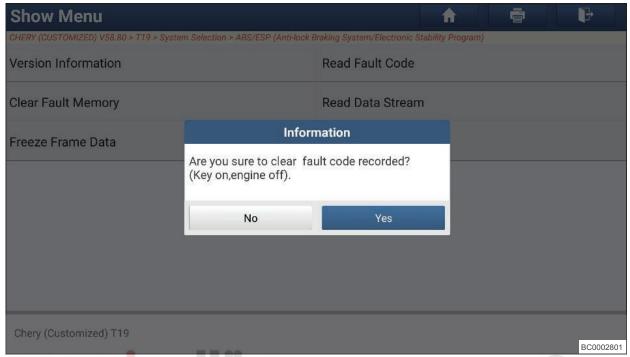

4. Reading data flow function

It is used to read the data flow related to controller, data is as follows:

- (a) Hydraulic module filling status: After vacuum pumping/filling brake fluid operation completes, "Adding is completed and successful" will be displayed. After vacuum pumping of brake fluid, service technicians should select "Write vacuum pumping and filling status" menu and write it into this status.
 - (b) Off-line detection status: After vacuum pumping/filling completes, production line facility writes this status "Offline detection is completed and successful" into controller automatically.
 - (c) Wheel speed: When vehicle is stopped, vehicle speed becomes 0; when vehicle is driven straight, speed of four wheels is basically the same.

Front left wheel speed: Km/h;

Front right wheel speed: Km/h;

Rear left wheel speed: Km/h;

Rear right wheel speed: Km/h;

(d) Solenoid valve and pump motor:

ESP valve status (only for ESP): Activated/Not activated;

Valve relay status: Activated/Not activated:

Pump motor status: Activated/Not activated;

When valve or motor operates, activated is displayed.

(e) Brake pedal switch:

Activated is displayed when brake pedal is depressed; Not activated is displayed when brake pedal is released.

(f) Steering angle sensor (only for ESP): Deg

With vehicle driven straight and steering wheel centered, read the angle value is within ± 5°.

(g) Acceleration:

Lateral acceleration (only for ESP): m/s²

Longitudinal acceleration (only for ESP): m/s²

Yaw rate (only for ESP): rad/s

If vehicle has acceleration, lateral acceleration, longitudinal acceleration and yaw rate will be displayed.

- (h) Master cylinder pressure (only for ESP): bar When brake pedal is depressed, pressure value not from brake master cylinder will be displayed.
- (i) Power supply voltage: V, same as the battery voltage value.
- (j) Vehicle speed: km/h.
- (k) Configuration information: Software configuration bar code: 2-digit configuration code. Software configuration information (only for ESP): Configuration code represents the vehicle configuration, such as engine, transmission and tires, etc.

Show Menu 5.

(a) There are 14 functions, the menu is as shown in illustration:



Yaw rate sensor calibration (only for ESP)

When removing and installing / replacing ESP assembly or if DTC code for yaw rate sensor occurs, it is necessary to to use this menu to perform yaw rate sensor calibration. Calibration condition: Refer to Yaw Rate Sensor Calibration.

Caution:

- When replacing ESP, integrated sensor calibration must be performed. During calibration, ECU will write the measured new data into EEPROM for use by ESP. Ensure the above calibration conditions are right, because ESP cannot determine whether the above mentioned preconditions are proper or not. If offset is too large, system will reject the calibration. In the case, it is necessary to repair the vehicle.
- (c) Manual bleeding
 - For all failed vacuum pumping/filling processes used in production line, or if service replacement part is dry-type EPB/ESP, manual bleeding must be performed in accordance with this procedure. To reach sufficient pressure in hydraulic regulator, brake pedal needs to be depressed repeatedly during whole draining process.
 - Operating method: Operates according to prompt on diagnostic tester. Note: Usually, service spare part is dry-type EPB/ESP assembly and this menu needs to be used.
- (d) Write vacuum pumping and filling status
 - Use this menu to Write vacuum and status filling after bleeding operation is performed by service technicians or manual bleeding for production line is performed.
 - After service technicians performs bleeding, perform this menu to write "Adding is completed

(e)

Description
Enter PBC Maintenance Mode
Exit PBC Maintenance Mode
Exit PBC Maintenance Mode
Assembly Test
Apply Both Park Brake
Rear Wheel Speed Sensor Fixing Bolt
Rear Brake Caliper Releases At The Same Time
Apply Left Park Brake
Apply Right Park Brake
Release Left Park Brake
Release Right Park Brake
Release Right Park Brake
Release Right Park Brake

Reading Data Flow Function of Steering Angle Sensor

6. SAM (Steering Angle Module): Steering angle has calibrated



Calibration

Calibrating Steering Angle Sensor

Prerequisites for sensor calibration:


- Perform zero point calibration after steering angle sensor is installed.
- Calibration should be performed at front (four) wheel alignment station (make sure that the four wheel alignment parameters are correct).
- Before calibrating, straighten up the vehicle and wheels must be in straight lines along proceeding direction. Difference between the two angles should meet toe-in of four wheel alignment parameters value. Steering wheel must be adjusted to center.
- Before calibrate a calibrated sensor again, always calibrate it again to make it return uncalibrated state.


Caution:

Steering wheel must be centered in the actual calibration. If not, even correct data can cause wrong calibration when performing four wheel alignment. This problem may not be detected at factory. Long-term cumulative errors may be caused or over range phenomenon may occur when turn steering wheel fully during actual driving. Therefore, when performing four wheel alignment, the steering wheel should be centered.


Operation step:

- 1. Connect the diagnostic tester.
- 2. Turn ENGINE START STOP switch to ON.
- 3. Place the steering wheel to center position (straighten up the vehicle, wheels must be in straight lines along proceeding direction, and center steering wheel).
- 4. Power should not be cut during calibration.
- 5. Use diagnostic tester to enter T19 "SAM (Steering Angle Module)", then click "SAS Calibration".

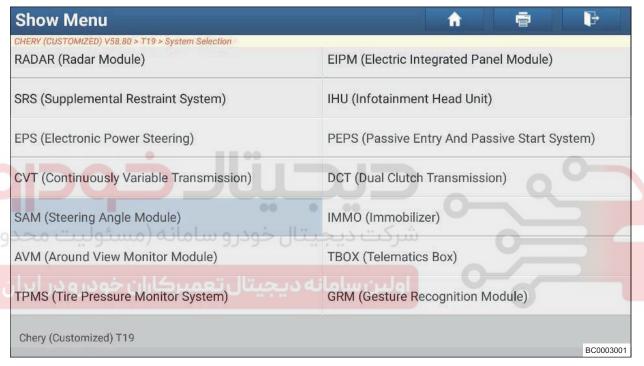

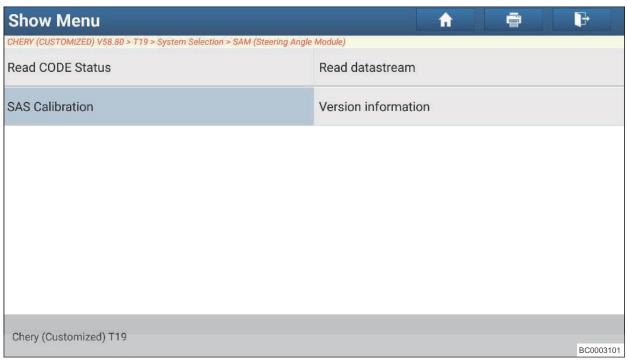

- 6. Diagnostic tester will detect sensor malfunction and calibration automatically; if sensor has malfunction, it will exit calibration.
- 7. If sensor has been calibrated, "Recalibration" will be prompted. In this case, click "Recalibration" according to prompt on diagnostic tester and then click "Initial Calibration". If there is no response, it will exit calibration.
- 8. Diagnostic tester will prompt whether calibration is success or not.

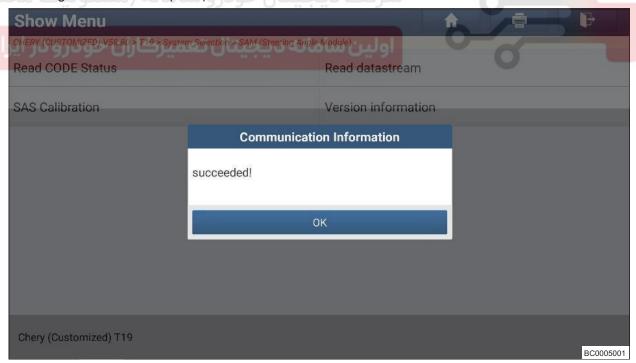

Warning:

Never cut off the power during calibration. (Power applied to equipment and steering angle sensor must not be cut off during calibration. Also, diagnostic tester and sensor must be connected properly. Otherwise, calibration cannot be performed properly. If any of them are connected poorly, electrical

Caution:

The steering angle sensor should to be calibrated again after four wheel alignment are performed.

2. Calibrating Yaw Rate Sensor

Prerequisites for sensor calibration:

- Calibration can be performed on rotary hub tester or a flat area.
- Maximum tilting angle of tester must be within allowable range, that both are met ± 0.57° (± 1%) in two positive directions.
- · The tester must be stationary.
- · Turn steering wheel to straight ahead position.
- Tire pressure is proper.
- Vehicle load is normal.
- · Less remaining fuel in fuel tank is allowable.
- · Vehicle stands on its own wheels.
- · Only driver sits in vehicle.
- Additional interference is prohibited, such as vibration due to opening or closing hood etc.

Caution:

When replacing EPB/ESP module, integrated sensor must be calibrated. During calibration, ECU will write the measured new data into the EEPROM for use by ESP. Ensure the above calibration conditions are right, because ESP cannot determine whether the above mentioned preconditions are proper or not. If offset is too large, system will reject the calibration. In the case, it is necessary to repair the vehicle.


Operation step:


- 1. Connect the diagnostic tester.
- Turn ENGINE START STOP switch to ON.

، دیجیتال خودرو سامانه (مسئولیت محدود


ن سامانه دیجیتال تعمیرکاران خودرو در ایران

 Make sure vehicle tilt angle is in range of ± 0.57° (±1%).

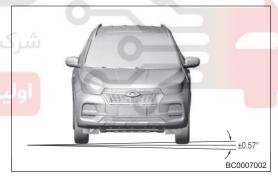

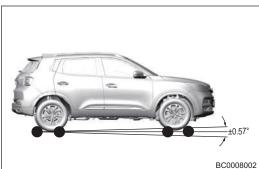

4. Enter menu "Anti-lock Brake System/Electronic Stability Program".

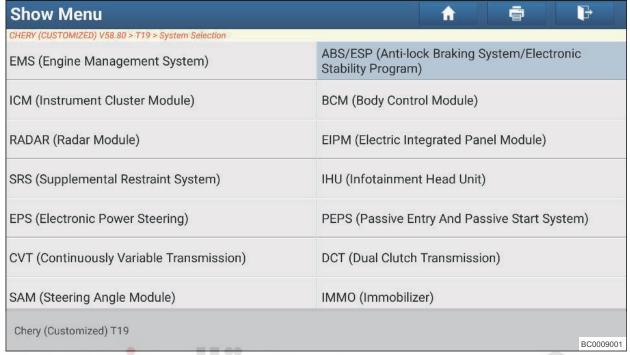

5. Click "Special Operation"



6. Click "Yaw Rate Sensor Calibration (only for ESP)".



Warning:

Never cut off the power during calibration. (Power applied to equipment and steering angle sensor must not be cut off during calibration. Also, diagnostic tester and sensor must be connected properly. Otherwise, calibration cannot be performed properly. If any of them are connected poorly, electrical overload of the products can be caused worst of all.)

Diagnostic Trouble Code (DTC) Chart

DTC	DTC Definition
C0034-09	Right Front Wheel Speed Sensor Failures
C0034-11	Right Front Wheel Speed Sensor Failures
C0034-12	Right Front Wheel Speed Sensor Failures
C0034-13	Right Front Wheel Speed Sensor Failures
C0034-29	Right Front Wheel Speed Sensor Failures
C0034-37	Right Front Wheel Speed Sensor Failures
C0037-00	Left Rear Wheel Speed Sensor
C0037-09	Left Rear Wheel Speed Sensor
C0037-11	Left Rear Wheel Speed Sensor
C0037-12	Left Rear Wheel Speed Sensor
C0037-13	Left Rear Wheel Speed Sensor
C0037-29	Left Rear Wheel Speed Sensor
C0037-37	Left Rear Wheel Speed Sensor
C003A-00	Right Rear Wheel Speed Sensor
C003A-09	Right Rear Wheel Speed Sensor
C003A-11	Right Rear Wheel Speed Sensor
C003A-12	Right Rear Wheel Speed Sensor
C003A-13	Right Rear Wheel Speed Sensor
C003A-29	Right Rear Wheel Speed Sensor
C003A-37	Right Rear Wheel Speed Sensor
C0040-64	Brake Pedal Switch (ESP Only)
C0044-01	Brake Pressure Sensor (ESP Only)
C0044-28	Brake Pressure Sensor (ESP Only)
C0051-29	Steering Wheel Position Sensor (ESP Only)
C0051-54	Steering Wheel Position Sensor (ESP Only)
C0051-64	Steering Wheel Position Sensor (ESP Only)
C0061-64	Lateral Acceleration Sensor (ESP Only)
C0062-64	Longitudinal Acceleration Sensor (ESP Only)
C0063-01	Yaw Rate Sensor (ESP Only)
C0063-54	Yaw Rate Sensor (ESP Only)
C0063-64	Yaw Rate Sensor (ESP Only)
C006B-00	Stability System Active Too Long
C0089-04	TCS Disable Switch (ESP Only)
C1000-16	ECU Voltage Supply
C1000-17	ECU Voltage Supply
C1001-04	ECU
C1002-49	CAN Hardware Internal Electronic Failure
C1003-04	Valve Relay
C1004-00	General Valve
C1007-29	Reverse Gear Switch (ESP Only)
C1007-29	Reverse Gear Switch (ESP Only)
C1008-00	General WSS
C1009-00	ECU HardWare Related
U0005-00	High Speed CAN Communication Bus (+) High
U0007-00	High Speed CAN Communication Bus (-) Low
U0073-88	Control Module Communication Bus Off
U0100-87	Lost Communication With Engine Control System Module
U0101-87	Lost Communication With Transmission Control Unit

DTC	DTC Definition
U0126-87	Lost Communication With SAM
U0140-87	Lost Communication With Body Control Module
U0401-81	Invalid Data Received From Engine Control System Module
U0402-81	Invalid Data Received From Transmission Control Unit
U0422-81	Invalid Data Received From Body Control Module
U0428-81	Invalid Data Received From SAM
U1300-55	Software Configuration Error
C1800-93	Left Actuator
C1800-19	Left Actuator
C1800-74	Left Actuator
C1800-73	Left Actuator
C1800-72	Left Actuator
C1800-91	Left Actuator
C1800-92	Left Actuator
C1800-97	Left Actuator
C1801-93	Right Actuator
C1801-19	Right Actuator
C1801-74	Right Actuator
C1801-73	Right Actuator
C1801-72	Right Actuator
C1801-91	Right Actuator
C1801-92	Right Actuator
C1801-97	Right Actuator
C1802-44	PBC EEPROM Fault
C1802-17	Supply Voltage
C1802-16	Supply Voltage
C1803-95	Assembly Test
C1804-53	Maintenance Mode
C1805-94	Hydric Support Failed
C1806-01	Apb Button Line Failure
C1806-04	Apb Button Always Pushed Or Pulled
C1824-01	APBActL_ElectricalFailure
C1825-01	APBActR_ElectricalFailure
C1822-00	APBActL_Failure
C1821-00	APBActR_Failure
C1824-1E	APBActL_ShuntOnLineOrECU
C1825-1E	APBActR_ShuntOnLineOrECU
C1830-00	APBActL_CAT
C1833-00	APBActR_UnintendedRun
C1831-00	APBActR_CAT
C186D-44	SupervisionFail
C1832-00	APBActL_UnintendedRun
C1806-16	APB Button Under Voltage
C1823-00	APB Motor Enable Line Violation
C1807-98	Disc Over Heat
C1826-01	APBActDriverGen_ElectricalFailure
C1808-12	APB Left Motor Lines Short Circuit To Ubatt
C1808-11	APB Left Motor Lines Short Circuit To GND

DTC	DTC Definition	
C1808-13	APB Left Motor Line Interruption	
C1815-12	APB Right Motor Lines Short Circuit to Ubatt	
C1815-11	APB right Motor lines short circuit to GND	
C1815-13	APB Right Motor Line Interruption	
C0032-08	Wrong Direction of Left Front Wheel Speed Sensor	
C0035-08	Wrong Direction of Left Rear Wheel Speed Sensor	
C0038-08	Wrong Direction of Right Front Wheel Speed Sensor	
C003b-08	Wrong Direction of Right Rear Wheel Speed Sensor	
C1099-08	Wrong Direction of Wheel Speed Sensor	
C10AD-08	Vacuum Sensor General Fault	
C156B-00	EPBASIC_GenericError	
C1546-04	EPB_SupplyFault	
U1163-87	Lost CommunicationWith ACC (ESP Only)	
U0433–81	Invalid Data Received From ACC (ESP Only)	
U1410–81	HAS_InvalidValue	
U1411–81	APBSystemState_InvalidValue	
B1412-81	ABANet_InvalidValue	
C1413-81	ABPNet_InvalidValue	
C1414-81	ACCNet_InvalidValue	
C1415-81	AEBNet_InvalidValue	
C1416-81	AWBNet_InvalidValue	
C1417-81	AccPedalNet_InvalidValue	
C1418-81	BTMNet_InvalidValue	
C1419-81	CDDNet_InvalidValue	
U1421–81	SClutch_InvalidValue	
U1422–81	EngineNet_InvalidValue	
U1423–81	StartStopNet_InvalidValue	
U1424–81	TCUNet_InvalidValue	
U1425–81	VLCNet_InvalidValue	
U1425–81	VLCNet_InvalidValue	
C2000-04	Rollerbench Misusage Rollerbench	
U0146–87	Lost Communication With Gateway	

DTC	C0001-04	TCS Control Channel Changeover Valve1 (ESP Only)
DTC	C0002-04	TCS Control Channel Changeover Valve2 (ESP Only)
DTC	C0003-04	TCS Control Channel High Pressure Switch Valve1 (ESP Only)
DTC	C0004-04	TCS Control Channel High Pressure Switch Valve2 (ESP Only)
DTC	C0010-04	Left Front Inlet Control
DTC	C0011-04	Left Front Outlet Control
DTC	C0014-04	Right Front Inlet Control
DTC	C0015-04	Right Front Outlet Control
DTC	C0018-04	Left Rear Inlet Control
DTC	C0019-04	Left Rear Outlet Control
DTC	C001C-04	Right Rear Inlet Control
DTC	C001D-04	Right Rear Outlet Control

Circuit Diagram BATTERY ENGINE COMPARTMENT (\$B01) 40A FUSE AND RELAY BOX Q-001 115 Q-015 Ä Ä 30 14 46 EPB MODULE Q-013 12 11 10 9 8 7 6 5 4 3 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 654321 (I-013) <u>Q-013</u> B (I-020 (Q-015) EBC012001

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause
C0001-04	TCS Control Channel Changeover Valve1 (ESP Only)	This DTC occurs when any of following conditions is met:	· 1
C0002-04	TCS Control Channel Changeover Valve2 (ESP Only)		
C0003-04	TCS Control Channel High Pressure Switch Valve1 (ESP Only)	Valve power supply malfunction (short to ground in power supply or	Valve set relay malfunction.
C0004-04	TCS Control Channel High Pressure Switch Valve2 (ESP Only)	ground circuit open). Solenoid valve temperature is too high (overheat protection).	 Poor connection of ABS/ESP control module ground circuit Fuse malfunctions
C0010-04	Left Front Inlet Control	Short circuit in more than 5	Solenoid valve short or open circuit itself
C0011-04	Left Front Inlet Control	solenoid valves (fuses).	Overheat protection triggered ABS/ESP control module assembly is damaged
C0014-04	Right Front Inlet Control	Corresponsive solenoid valve activated with no	
C0015-04	Right Front Inlet Control	feedback.	
C0018-04	Left Rear Inlet Control	Solenoid valve itself	
C0019-04	Left Rear Inlet Control	malfunction.	
C001C-04	Right Rear Inlet Control		
C001D-04	Right Rear Inlet Control		
C001D-04	Right Rear Outlet Control	00	

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

1 Check for DTCs

- (a) Leave vehicle for 5 minutes, clear and read EPB/ESP control module assembly DTC again with diagnostic tester.
- (b) Refer to "DTC confirmation procedure".
- (c) Check if the same DTCs are still output.

Result

Proceed to
ОК
NG

NG

Problem indicated by DTC is intermittent (system overheat protection)

23

ОК

2 Check fuse

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Remove the fuse SB-01 (40 A) from engine compartment fuse and relay box.
- (d) Chook if fues is blown

Result		
	Proceed to	
	OK	
	NG	
NG >	Replace fuse SB-01	


OK


3 Check wire harness and connector

Use circuit diagram as a guide to perform following procedures:

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the ABS/ESP control module connector Q-013.
- (d) Check wire harness between terminal 115 of engine compartment fuse and relay box and terminal 30 of EPB/ESP control module assembly.
- (e) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (f) Check for broken, bent, protruded or corroded terminals.
- (g) Check if related connector terminals are in good condition.

Result

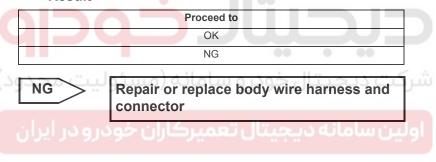

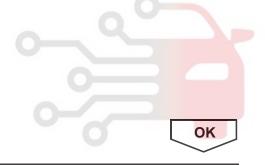

- 4 Check EPB/ESP control module power supply circuit (EPB/ESP control module assembly power supply)
- (a) Connect the negative battery terminal cable.
- (b) Turn ENGINE START STOP switch to OFF.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.


(d) Using a digital multimeter, measure the voltage between terminal 30 of EPB/ESP control module assembly and body ground to check if power supply circuit is normal according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (30) - Body ground (digital multimeter)	Always	Not less than 12 V
Q-013 (30) - Body ground (test lamp 21 W)	Always	On

Result

Proceed to	
OK	
NG	

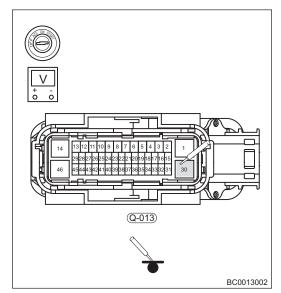

NG

Repair or replace body wire harness and connector




- 5 Check EPB/ESP control module ground circuit (ABS/ESP control module assembly Body ground)
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- d) Using a digital multimeter, check for continuity between terminals 14, 46 of EPB/ESP control module assembly and body ground to check if system ground circuit is normal.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (14) - Body ground	Always	≤ 1 Ω
Q-013 (46) - Body ground	Always	≤ 1 Ω

Result

Proceed to
OK
NG

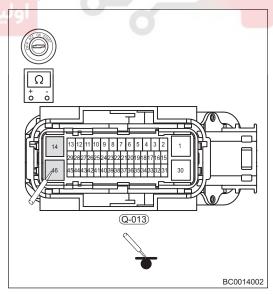

23

NG

Repair or replace body wire harness and connector

OK

6 Reconfirm DTCs

- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPB/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

Result

Proceed to
OK
NG

ОК

System operates normally

NG

Replace EPB/ESP control module assembly




شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



ABS Pump Motor Control DTC C0020-04

Circuit Diagram

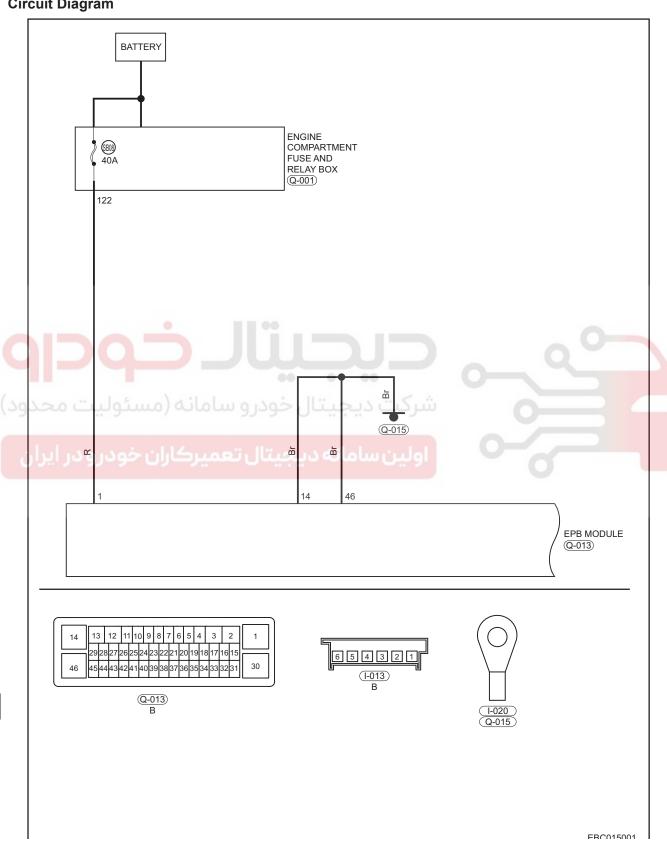

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause
C0020-04	ABS Pump Motor Control	This DTC occurs when any of following conditions is met: Pump motor operates with overload, and temperature is too high (overload protection). Return pump motor relay missing voltage signal is more than 60 ms Return pump motor relay missing voltage signal is more than 2.5 s Return pump motor relay stops operating when return pump voltage does not decrease.	 Fuse malfunctions Pump motor has poor ground connection System overheat protection Abnormal pump motor power supply Pump motor malfunction

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

1 Check for DTCs

- (a) Leave vehicle for 5 minutes, clear and read EPB/ESP control module assembly DTC again with diagnostic tester.
- (b) Refer to "DTC confirmation procedure".
 - (c) Check if the same DTCs are still output.

Result

Proceed to Proceed to
OK
NG

NG >

Problem indicated by DTC is intermittent (system overheat protection)

ОК

2 Check fuse

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Remove the fuse SB-08 (40 A) from engine compartment fuse and relay box.
- (d) Check if fuse is blown.

Result

Proceed to	
OK	
NG	

NG

Replace fuse SB-08

OK

3 Check wire harness and connector

Use circuit diagram as a guide to perform following procedures:

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module connector Q-013.
- (d) Check wire harness between terminal 122 of engine compartment fuse and relay box connector and terminal 1 of EPB/ESP control module assembly.
- (e) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (f) Check for broken, bent, protruded or corroded terminals.
- (g) Check if related connector terminals are in good condition.

Result

Proceed to	
OK	
NG	

NG >

Repair or replace body wire harness and connector




- 4 Check ABS/ESP control module power supply circuit (EPB/ESP control module assembly power supply)
- (a) Connect the negative battery terminal cable.
- (b) Turn ENGINE START STOP switch to OFF.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- (d) Using a digital multimeter, measure the voltage between terminal 1 of EPB/ESP control module assembly and body ground to check if power supply circuit is normal according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (1) - Body ground (digital multimeter)	Always	Not less than 12 V
Q-013 (1) - Body ground (test lamp 21 W)	Always	On

Result

Proceed to
ОК
NG

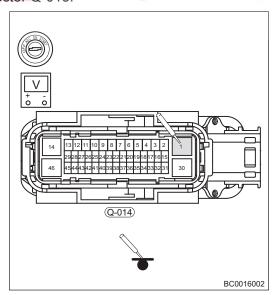

NG

Repair or replace body wire harness and connector

ОК


- 5 Check EPB/ESP control module ground circuit (ABS/ESP control module assembly Body ground)
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- (d) Using a digital multimeter, check for continuity between terminals 14, 46 of EPB/ESP control module assembly and body ground to check if system ground circuit is normal.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (14) - Body ground	Always	≤ 1 Ω
Q-013 (46) - Body ground	Always	≤ 1 Ω

Result

Proceed to	0
OK	
NG	

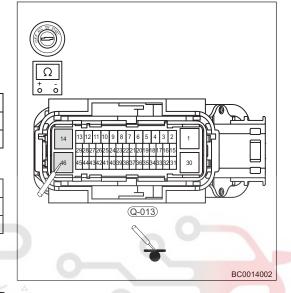

NG

Repair or replace body wire harness and connector

ок

- 6 Reconfirm DTCs
- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPB/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

Result

Proceed to
OK
NG

OK

System operates normally

NG

Replace EPB/ESP control module assembly

DTC	C0031-00	Left Front Wheel Speed Sensor Failures
DTC	C0031-09	Left Front Wheel Speed Sensor Failures
DTC	C0031-11	Left Front Wheel Speed Sensor Failures
DTC	C0031-12	Left Front Wheel Speed Sensor Failures
DTC	C0031-13	Left Front Wheel Speed Sensor Failures
DTC	C0031-29	Left Front Wheel Speed Sensor Failures
DTC	C0031-37	Left Front Wheel Speed Sensor Failures



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause
C0031-00	Left Front Wheel Speed Sensor Failures	This DTC occurs when any of following conditions is met:	Wheel speed sensor signal wire is connecting with power supply wire in reverse
C0031-09	Left Front Wheel Speed Sensor Failures	EPB/ESP control module assembly detects that wheel speed sensor signal	Signal wire is short to ground Wheel speed sensor line is open, connector is loose or broken
C0031-11	Left Front Wheel Speed Sensor Failures	wire is short to ground. • Wheel speed sensor line is	Wheel speed sensor signal wire is short to power supply
C0031-12	Left Front Wheel Speed Sensor Failures	 open. EPB/ESP control module assembly detects that 	Wheel speed sensor power supply wire is short to ground Sensor connector damages
C0031-13	Left Front Wheel Speed Sensor Failures	wheel speed sensor signal wire is short to power	Wheel speed sensor is interfered by magnetic field outside (wheel or axle is not demagnetized)
C0031-29	Left Front Wheel Speed Sensor Failures	supply. • EPB/ESP control module	Wheel speed sensor body is malfunctioning Ring gear is not installed, teeth missing, dirty,
C0031-37	Left Front Wheel Speed Sensor Failures	assembly detects that wheel speed sensor power supply wire is short to ground. • Wheel speed sensor signal is invalid.	demagnetized, off center Clearance between sensor and ring gear is excessive Number of ring gear teeth is wrong Tire size is not as specified EPB/ESP control module assembly is damaged

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

- 1 Check front left wheel speed sensor wire harness and connector
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the front left wheel speed sensor connector Q-017.
- (d) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (e) Check for broken, bent, protruded or corroded terminals.
- (f) Check if related connector pins are in good condition.

Result

Proceed to
OK
NG

NG

Repair or replace front left wheel speed sensor wire harness and connector

OK

23

2 Check installation of front left wheel speed sensor

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check front left wheel speed sensor mounting bolt for looseness.
- (d) Check if excessive clearance exists between installation position of front left wheel speed sensor and front steering knuckle.
- (e) Check installation position of front left wheel speed sensor for dirt.

Result

Proceed to	
OK	
NG	

NG

Tighten mounting bolt properly, clean or replace front left wheel speed sensor

OK

- 3 Check front left wheel speed sensor
- (a) Connect the diagnostic tester (the latest software) to Data Link Connector (DLC).
- (b) Drive vehicle straight ahead, and read datastream of front left wheel speed sensor with diagnostic
- (c) Check if data change of front left wheel speed sensor matches that of other wheel speed sensors.

Result

Proceed to
OK
NG

Replace left front wheel speed sensor

- Check front left drive shaft ring gear upper
- (a) Check front left drive shaft ring gear upper.
- (b) Check front left drive shaft ring gear upper for foreign matter, missing teeth or damage.
- (c) Check front left drive shaft ring gear upper for secure installation.

Result

Proceed to
OK
NG

NG

Replace outer joint assembly


OK

- Check wire harness and connector (Left front wheel speed sensor ABS/ESP control module assembly)
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- (d) Disconnect the front left wheel speed sensor connector Q-017.

(e) Using a digital multimeter, check for continuity between terminals of connector Q-013 and connector Q-017 to check if there is an open in the wire harness and connector according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (24) - Q-017 (2)	Always	≤ 1 Ω
Q-013 (7) - Q-017(1)	Always	≤ 1 Ω
Q-013 (24) - Q-017 (1)	Always	∞
Q-013 (7) - Q-017 (2)	Always	∞

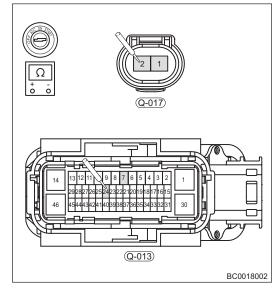



(f) Using a digital multimeter, check for continuity between connector Q-013 and body ground to check if front left wheel speed sensor is short to ground.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (7) - Body ground	Always	∞
Q-013 (24) - Body ground	Always	∞

ت دیجیتال خودرو سامانه (مسئولیت محدود)

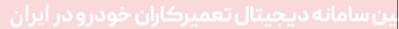

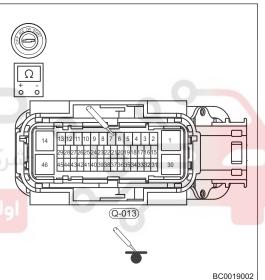


- (g) Connect the negative battery terminal cable.
- (h) Turn ENGINE START STOP switch to ON.
- (i) Using a digital multimeter, measure voltage between connector Q-013 and body ground to check if front left wheel speed sensor is short to power supply according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (7) - Body ground	ENGINE START STOP switch ON	Approx. 0 V
Q-013 (24) - Body ground	ENGINE START STOP switch ON	Approx. 0 V

Result

Proceed to	
OK	
NG	

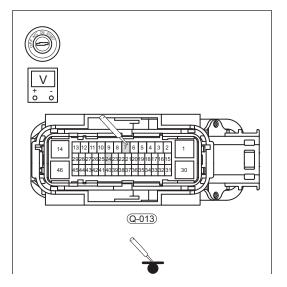

NG

Repair or replace wire harness and connector between front left wheel speed sensor and EPS/ESP control module assembly

ОК

6 Reconfirm DTCs

- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPB/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

Result

Proceed to
OK
NG

ок

System operates normally

NG

Replace EPB/ESP control module assembly

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران




DTC	C0034-00	Right Front Wheel Speed Sensor Failures
DTC	C0034-09	Right Front Wheel Speed Sensor Failures
DTC	C0034-11	Right Front Wheel Speed Sensor Failures
DTC	C0034-12	Right Front Wheel Speed Sensor Failures
DTC	C0034-13	Right Front Wheel Speed Sensor Failures
DTC	C0034-29	Right Front Wheel Speed Sensor Failures
DTC	C0034-37	Right Front Wheel Speed Sensor Failures



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



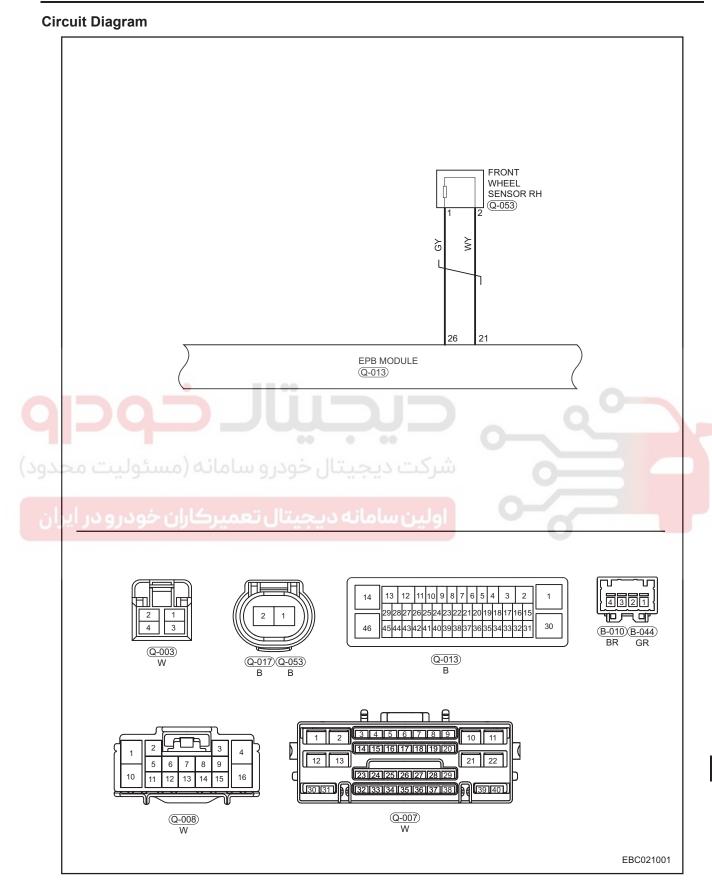

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause
C0034-00	Right Front Wheel Speed Sensor Failures	This DTC occurs when any of following conditions is met:	Wheel speed sensor signal wire is connecting with power supply wire in reverse
C0034-09	Right Front Wheel Speed Sensor Failures	EPB/ESP control module assembly detects that wheel speed sensor signal	Signal wire is short to ground Wheel speed sensor line is open, connector is loose or broken
C0034-11	Right Front Wheel Speed Sensor Failures	wire is short to ground. • Wheel speed sensor line is	Wheel speed sensor signal wire is short to power supply
C0034-12	Right Front Wheel Speed Sensor Failures	open. • EPB/ESP control module assembly detects that	Wheel speed sensor power supply wire is short to ground Sensor connector damages
C0034-13	Right Front Wheel Speed Sensor Failures	wheel speed sensor signal wire is short to power	Wheel speed sensor is interfered by magnetic field outside (wheel or axle is not demagnetized)
C0034-29	Right Front Wheel Speed Sensor Failures	supply. • EPB/ESP control module	Wheel speed sensor body is malfunctioning Ring gear is not installed, teeth missing, dirty,
C0034-37	Right Front Wheel Speed Sensor Failures	assembly detects that wheel speed sensor power supply wire is short to ground. • Wheel speed sensor signal is invalid.	demagnetized, off center Clearance between sensor and ring gear is excessive Number of ring gear teeth is wrong. Tire size is not as specified EPB/ESP control module assembly is damaged

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

- 1 Check front right wheel speed sensor wire harness and connector
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the front right wheel speed sensor connector Q-053.
- (d) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (e) Check for broken, bent, protruded or corroded terminals.
- (f) Check if related connector pins are in good condition.

Result

Proceed to	
OK	
NG	

NG

Repair or replace front right wheel speed sensor wire harness and connector

OK

23

2 Check installation of front right wheel speed sensor

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check front right wheel speed sensor mounting bolt for looseness.
- (d) Check if excessive clearance exists between installation position of front right wheel speed sensor and front steering knuckle.
- (e) Check installation position of right wheel speed sensor for dirt.

Result

Proceed to
OK
NG

NG

Tighten mounting bolt properly, clean or replace front right wheel speed sensor

OK

- 3 Check front right wheel speed sensor
- (a) Connect the diagnostic tester (the latest software) to Data Link Connector (DLC).
- (b) Drive vehicle straight ahead, and read datastream of front right wheel speed sensor with diagnostic
- (c) Check if data change of front right wheel speed sensor matches that of other wheel speed sensors.

Result

Proceed to	
	OK
	NG

Replace right front wheel speed sensor

- Check front right drive shaft ring gear upper
- (a) Check front right drive shaft ring gear upper.
- (b) Check front right drive shaft ring gear upper for foreign matter, missing teeth or damage.
- (c) Check front right drive shaft upper ring gear for secure installation.

Result

Proceed to	_
OK	
NG	

NG

Replace outer joint assembly

OK


- Check wire harness and connector (right front wheel speed sensor ABS/ESP control module assembly)

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- (d) Disconnect the front right wheel speed sensor connector Q-053.

(e) Using a digital multimeter, check for continuity between terminals of connector Q-013 and connector Q-053 to check if there is an open in the wire harness and connector according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (21) - Q-053 (2)	Always	≤ 1 Ω
Q-013 (26) - Q-053 (1)	Always	≤ 1 Ω
Q-013 (21) - Q-053 (1)	Always	∞
Q-013 (26) - Q-053 (2)	Always	∞

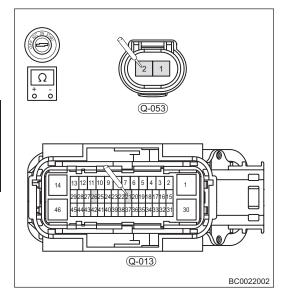

(f) Using a digital multimeter, check for continuity between connector Q-013 and body ground to check if front right wheel speed sensor is short to ground.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (21) - Body ground	Always	∞
Q-013 (26) - Body ground	Always	∞

ت دیجیتال خودرو سامانه (مسئولیت محدود)



- Ω

 14 13 12 11 10 9 8 7 5 4 2 3 2 1

 14 6 46 45443 3424 1405985 75655433231 30

 Q-013


 BC0023002
- (g) Connect the negative battery terminal cable.
- (h) Turn ENGINE START STOP switch to ON.
- (i) Using a digital multimeter, measure voltage between connector Q-013 and body ground to check if front right wheel speed sensor is short to power supply according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (21) - Body ground	ENGINE START STOP switch ON	Approx. 0 V
Q-013 (26) - Body ground	ENGINE START STOP switch ON	Approx. 0 V

Result

Proceed to	
OK	
NG	

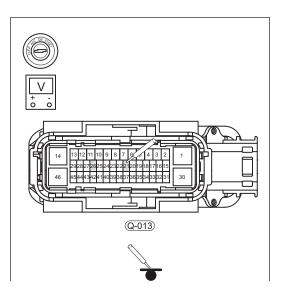

NG

Repair or replace wire harness and connector between front right wheel speed sensor and EPB/ESP control module assembly.

ОК

6 Reconfirm DTCs

- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPB/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

Result

Proceed to
OK
NG

ок

System operates normally

NG

Replace EPB/ESP control module assembly

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران



DTC	C0037-00	Left Rear Wheel Speed Sensor
DTC	C0037-09	Left Rear Wheel Speed Sensor
DTC	C0037-11	Left Rear Wheel Speed Sensor
DTC	C0037-12	Left Rear Wheel Speed Sensor
DTC	C0037-13	Left Rear Wheel Speed Sensor
DTC	C0037-29	Left Rear Wheel Speed Sensor
DTC	C0037-37	Left Rear Wheel Speed Sensor



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram EPB MODULE Q-013) 23 39 13 Ŋ Q-007 B-018 Q-008 B-019 O ≥ G M EPB CALIPER LH (B-010) 13 12 11 10 9 8 7 6 5 4 4321 B-010 B-044 BR GR Q-013) B Q-017)Q-053) A c \Box 3 4 5 6 7 8 9 10 11 21 22 12 23 24 25 26 27 28 29 [30]31] **[32**]33]34]35]36]37]38] **[**39]40] Q-007) W Q-008) W EBC025001

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause
C0034-00	Right Front Wheel Speed Sensor Failures	This DTC occurs when any of following conditions is met:	Wheel speed sensor signal wire is connecting with power supply wire in reverse
C0034-09	Right Front Wheel Speed Sensor Failures	EPB/ESP control module assembly detects that wheel speed sensor signal	Signal wire is short to ground Wheel speed sensor line is open, connector is loose or broken
C0034-11	Right Front Wheel Speed Sensor Failures	wire is short to ground. • Wheel speed sensor line is	Wheel speed sensor signal wire is short to power supply
C0034-12	Right Front Wheel Speed Sensor Failures	open. • EPB/ESP control module assembly detects that	Wheel speed sensor power supply wire is short to ground Sensor connector damages
C0034-13	Right Front Wheel Speed Sensor Failures	wheel speed sensor signal wire is short to power	Wheel speed sensor is interfered by magnetic field outside (wheel or axle is not demagnetized)
C0034-29	Right Front Wheel Speed Sensor Failures	supply. • EPB/ESP control module	Wheel speed sensor body is malfunctioning Ring gear is not installed, teeth missing, dirty,
C0034-37	Right Front Wheel Speed Sensor Failures	assembly detects that wheel speed sensor power supply wire is short to ground. • Wheel speed sensor signal is invalid.	demagnetized, off center Clearance between sensor and ring gear is excessive Number of ring gear teeth is wrong Tire size is not as specified EPB/ESP control module assembly is damaged

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

- 1 Check rear left wheel speed sensor wire harness and connector
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the rear left wheel speed sensor connector B-010.
- (d) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (e) Check for broken, bent, protruded or corroded terminals.
- (f) Check if related connector pins are in good condition.

Result

Proceed to	
OK	
NG	

NG

Repair or replace rear left wheel speed sensor wire harness and connector

OK

23

2 Check installation of rear left wheel speed sensor

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check rear left wheel speed sensor mounting bolt for looseness.
- (d) Check if excessive clearance exists between installation position of rear left wheel speed sensor and front steering knuckle.
- (e) Check installation position of rear left wheel speed sensor for dirt.

Result

Proceed to
OK
NG

NG

Tighten mounting bolt properly, clean or replace rear left wheel speed sensor

OK

- 3 Check rear left wheel speed sensor
- (a) Connect the diagnostic tester (the latest software) to Data Link Connector (DLC).
- (b) Drive vehicle straight ahead, and read datastream of rear left wheel speed sensor with diagnostic
- (c) Check if data change of rear left wheel speed sensor matches that of other wheel speed sensors.

Result

Proceed to
OK
NG

Replace left rear wheel speed sensor

- Check rear left hub ring gear
- (a) Check rear left hub ring gear.
- (b) Check for foreign matter, missing teeth or damage on the rear left hub ring gear.
- (c) Check if rear left hub assembly is securely installed.

Result

Proceed to	
OK	
NG	

NG

Replace rear left hub bearing assembly

OK


- Check wire harness and connector (Left rear wheel speed sensor ABS/ESP control module assembly)

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- (d) Disconnect the rear left wheel speed sensor connector B-010.

(e) Using a digital multimeter, check for continuity between terminals of connector Q-013 and connector B-010 to check if there is an open in the wire harness and connector according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (39) - B-010 (3)	Always	≤ 1 Ω
Q-013 (23) - B-010 (2)	Always	≤ 1 Ω
Q-013 (39) - B-010 (2)	Always	∞
Q-013 (23) - B-010 (3)	Always	∞

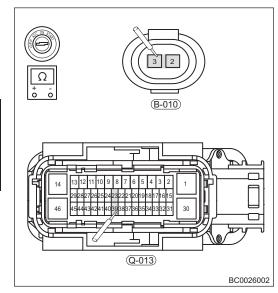


(f) Using a digital multimeter, check for continuity between connector Q-013 and body ground to check if rear left wheel speed sensor is short to ground.

OK

	Multimeter Connection	Condition	Specified Condition
(Q-013 (23) - Body ground	Always	∞
	Q-013 (39) - Body ground	Always	∞

ت دیجیتال خودرو سامانه (مسئولیت محدود



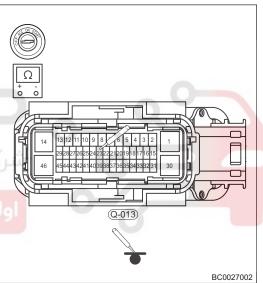


- (g) Connect the negative battery terminal cable.
- (h) Turn ENGINE START STOP switch to ON.
- (i) Using a digital multimeter, measure voltage between connector Q-013 and body ground to check if rear left wheel speed sensor is short to power supply according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (23) - Body ground	ENGINE START STOP switch ON	Approx. 0 V
Q-013 (39) - Body ground	ENGINE START STOP switch ON	Approx. 0 V

Result

Proceed to	
OK	
NG	

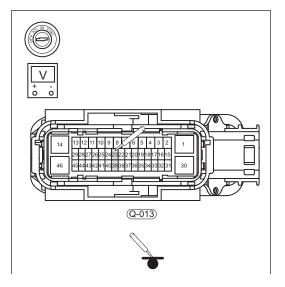

NG

Repair or replace wire harness and connector between rear left wheel speed sensor and EPB/ESP control module assembly

ОК

6 Reconfirm DTCs

- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPB/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

Result

Proceed to	
OK	
NG	

ок >


System operates normally

NG

Replace EPB/ESP control module assembly

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران

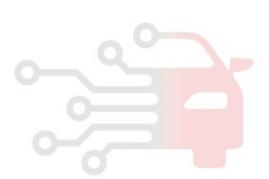

DTC	C003A-00	Right Rear Wheel Speed Sensor
DTC	C003A-09	Right Rear Wheel Speed Sensor
DTC	C003A-11	Right Rear Wheel Speed Sensor
DTC	C003A-12	Right Rear Wheel Speed Sensor
DTC	C003A-13	Right Rear Wheel Speed Sensor
DTC	C003A-29	Right Rear Wheel Speed Sensor
DTC	C003A-37	Right Rear Wheel Speed Sensor



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram EPB MODULE Q-013 OB RΝ B 0 Q-007 B-018 Q-008 B-019 RW OB В M EPB CALIPER RH (B-044) 13 12 11 10 9 8 7 6 5 4 3 4321 B-010 B-044 BR GR Q-013) B Q-017)Q-053) A c \Box 3 4 5 6 7 8 9 10 11 21 22 12 23 24 25 26 27 28 29 [30]31] **[32**]33]34]35]36]37]38] **[**39]40] Q-007) W Q-008) W EBC029001

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause	
C0034-00	Right Front Wheel Speed Sensor Failures	This DTC occurs when any of following conditions is met: • EPB/ESP control module assembly detects that wheel speed sensor signal	Wheel speed sensor signal wire is connecting with power supply wire in reverse	
C0034-09	Right Front Wheel Speed Sensor Failures		assembly detects that • Wheel speed sensor	Signal wire is short to ground Wheel speed sensor line is open, connector is loose or broken
C0034-11	Right Front Wheel Speed Sensor Failures	wire is short to ground. • Wheel speed sensor line is	Wheel speed sensor signal wire is short to power supply	
C0034-12	Right Front Wheel Speed Sensor Failures	open. • EPB/ESP control module assembly detects that wheel speed sensor signal wire is short to power supply. • EPB/ESP control module assembly detects that wheel speed sensor power supply wire is short to ground. • Wheel speed sensor signal is invalid.	 EPB/ESP control module assembly detects that wheel speed sensor signal Ground Sensor connector damages Wheel speed sensor is interfered 	S
C0034-13	Right Front Wheel Speed Sensor Failures			Wheel speed sensor is interfered by magnetic field outside (wheel or axle is not demagnetized)
C0034-29	Right Front Wheel Speed Sensor Failures		Wheel speed sensor body is malfunctioning Ring gear is not installed, teeth missing, dirty,	
C0034-37	Right Front Wheel Speed Sensor Failures		demagnetized, off center Clearance between sensor and ring gear is excessive Number of ring gear teeth is wrong Tire size is not as specified EPB/ESP control module assembly is damaged	

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

- 1 Check rear right wheel speed sensor wire harness and connector
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the rear right wheel speed sensor connector B-044.
- (d) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (e) Check for broken, bent, protruded or corroded terminals.
- (f) Check if related connector pins are in good condition.

Result

Proceed to
OK
NG

NG

Repair or replace rear left wheel speed sensor wire harness and connector

OK

- 23
- 2 Check installation of rear right wheel speed sensor
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check rear right wheel speed sensor mounting bolt for looseness.
- (d) Check if excessive clearance exists between installation position of rear right wheel speed sensor and front steering knuckle.
- (e) Check installation position of rear right wheel speed sensor for dirt.

Result

Proceed to	
OK	
NG	

NG

Tighten mounting bolt properly, clean or replace rear right wheel speed sensor

OK

- 3 Check rear right wheel speed sensor
- (a) Connect the diagnostic tester (the latest software) to Data Link Connector (DLC).
- (b) Drive vehicle straight ahead, and read datastream of rear right wheel speed sensor with diagnostic
- (c) Check if data change of rear right wheel speed sensor matches that of other wheel speed sensors.

Result

P	roceed to
	OK
	NG

Replace right rear wheel speed sensor

- Check right rear hub ring gear
- (a) Check right rear hub ring gear.
- (b) Check for foreign matter, missing teeth or damage on the rear right hub ring gear.
- (c) Check if rear right hub assembly is securely installed.

Result

Proceed to	_
OK	
NG	

NG

Replace rear right hub bearing assembly

OK


- Check wire harness and connector (Right rear wheel speed sensor ABS/ESP control module assembly)

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- (d) Disconnect the rear right wheel speed sensor connector B-044.

(e) Using a digital multimeter, check for continuity between terminals of connector Q-013 and connector B-044 to check if there is an open in the wire harness and connector according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (22) - B-044 (3)	Always	≤ 1 Ω
Q-013 (37) - B-044 (2)	Always	≤ 1 Ω
Q-013 (22) - B-044 (2)	Always	∞
Q-013 (37) - B-044 (3)	Always	∞

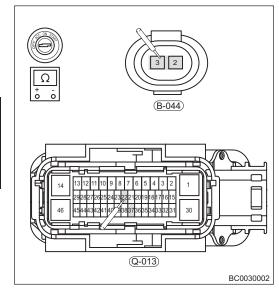

(f) Using a digital multimeter, check for continuity between connector Q-013 and body ground to check if rear right wheel speed sensor is short to ground.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (22) - Body ground	Always	∞
Q-013 (37) - Body ground	Always	∞

ت دیجیتال خودرو سامانه (مسئولیت محدود



- Q-013


 BC0031002
- (g) Connect the negative battery terminal cable.
- (h) Turn ENGINE START STOP switch to ON.
- (i) Using a digital multimeter, measure voltage between connector QB-013 and body ground to check if rear right wheel speed sensor is short to power supply according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (22) - Body ground	ENGINE START STOP switch ON	Approx. 0 V
Q-013 (37) - Body ground	ENGINE START STOP switch ON	Approx. 0 V

Result

Proceed to	
OK	
NG	

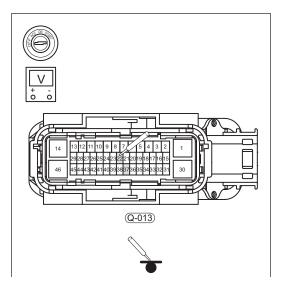

NG

Repair or replace wire harness and connector between rear right wheel speed sensor and EPB/ESP control module assembly

ОК

6 Reconfirm DTCs

- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPB/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

Result

Proceed to
OK
NG

ок

System operates normally

NG

Replace EPB/ESP control module assembly

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


ولین سامانه دیجیتال تعمیرکاران خودرو در ایران



DTC	C0051-29	Steering Wheel Position Sensor (ESP Only)
DTC	C0051-54	Steering Wheel Position Sensor (ESP Only)
DTC	C0051-64	Steering Wheel Position Sensor (ESP Only)
DTC	U0126-87	Lost Communication With SAM
DTC	U0428-81	Invalid Data Received From SAM





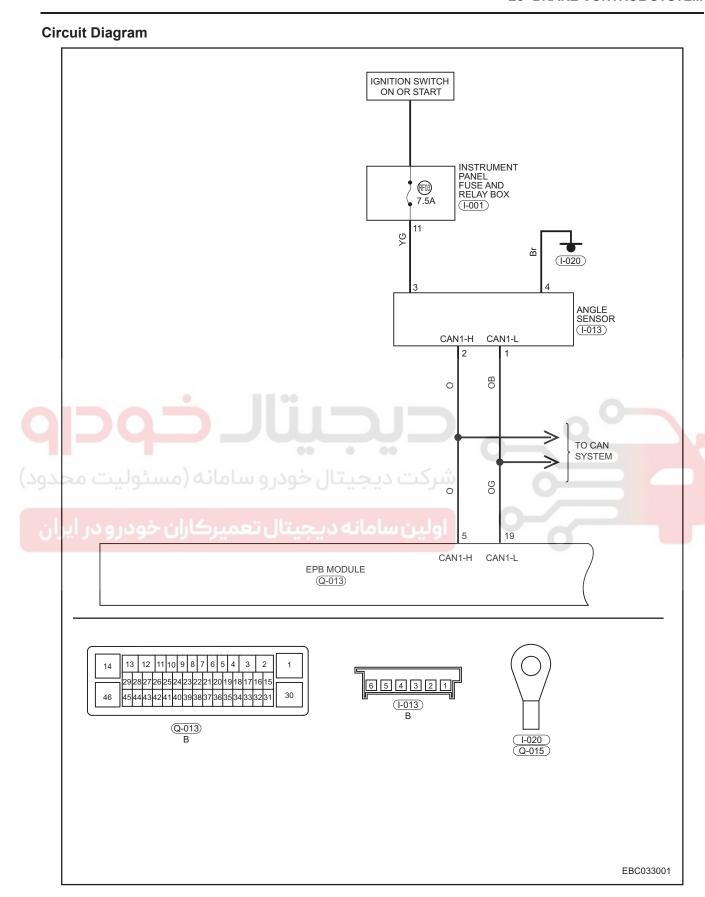

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause
C0051-29	Steering Wheel Position Sensor (ESP Only)	This DTC occurs when any of following conditions is met:	
C0051-54	Steering Wheel Position Sensor (ESP Only)	Steering wheel angle sensor is unmatched	Ctoring and a concer is unmetabled
C0051-64	Steering Wheel Position Sensor (ESP Only)	(central point is not found).Steering wheel angle	 Steering angle sensor is unmatched Steering angle sensor line is short or open. Steering angle sensor is damaged
U0126-87	Lost Communication With SAM	sensor signal is abnormal.Steering wheel angle sensor signal is	
U0428-81	Invalid Data Received From SAM	interrupted.	

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

Check steering angle sensor calibration

- (a) Turn ENGINE START STOP switch to ON.
- (b) Connect the diagnostic tester (the latest software) to Data Link Connector (DLC).
- (c) Calibrate the steering angle sensor according to instruction of diagnostic tester.
- (d) Use diagnostic tester to clear DTCs.
- (e) Start the engine.
- Drive vehicle at 40 km/h or above, read EPS/ESP control module assembly DTC again with diagnostic tester.
- (g) Check if the same DTCs are still output.

Result		
	Proceed to	
	OK	
	NG	

NG

Steering angle sensor is not calibrated

OK

2 Check fuse

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- Remove fuse RF03 (7.5 A) from instrument panel fuse and relay box. (c)
- Check if fuse is blown. (d)

Result

Proceed to	
ОК	
NG	

NG

Replace fuse RF03

ОК

3 Check wire harness and connector

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the steering angle sensor connector I-013.
- (d) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (e) Check for broken, bent, protruded or corroded terminals.
- (f) Check if related connector pins are in good condition.

Result

Proceed to	
OK	
NG	

NG

Repair or replace body/instrument panel wire harness and connector




4 Check steering angle sensor power supply and ground

- (a) Connect the negative battery terminal cable.
- (b) Turn ENGINE START STOP switch to ON.
- (c) Using a digital multimeter, measure the voltage between steering angle sensor connector terminal I-013 and body ground to check if system power supply circuit is normal according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
I-013 (3) - Body ground (digital multimeter)	ENGINE START STOP switch ON	Not less than 12 V
I-013 (3) - Body ground (test lamp 21 W)	ENGINE START STOP switch ON	On

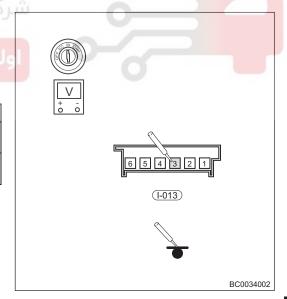

- (d) Turn ENGINE START STOP switch to OFF.
- (e) Disconnect the negative battery cable.


(f) Using a digital multimeter, check for continuity between steering angle sensor connector terminal I-013 and body ground to check if system ground circuit is normal according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
I-013 (4) - Body ground	Turn ENGINE START STOP switch to OFF	8

Result

Proceed to	
OK	
NG	

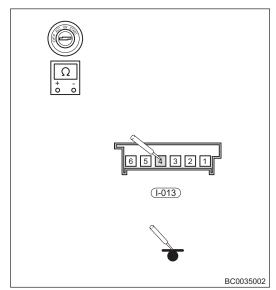

NG


Repair or replace body/instrument panel wire harness and connector



- 5 Check CAN communication control circuit (steering angle sensor)
- (a) Turn ENGINE START STOP switch to OFF, disconnect the negative battery cable.
- (b) Disconnect the steering angle sensor connector I-013.
- (c) Use a digital multimeter to check if connection between steering angle sensor connector and CAN communication line is normal according to the table below.

OK


Multimeter Connection	Condition	Specified Condition (Ω)
I-013 (1) - I-013 (2)	Always	≈ 60

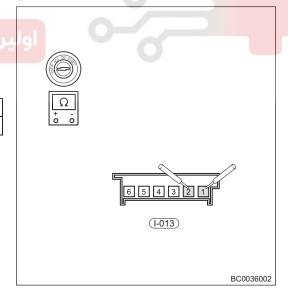

(d) Use a digital multimeter to check if line between steering angle sensor and CAN communication line is short to ground according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
I-013 (1) - Body ground	Always	More than 1 MΩ
I-013 (2) - Body ground	Always	More than 1 MΩ

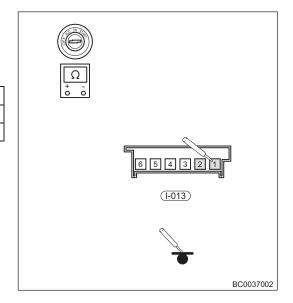


- (e) Connect the negative battery terminal cable.
- (f) Turn ENGINE START STOP switch to ON.
- (g) Use a digital multimeter to check if line between steering angle sensor and CAN communication line is short to power supply according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
I-013 (1) - Body ground	Always	1.5 - 2.5 V
I-013 (2) - Body ground	Always	2.5 - 3.5 V

Result

ا و در ایار	Proceed to	یں رسامانہ دیے
J 0 J - JJ	OK	
	NG	

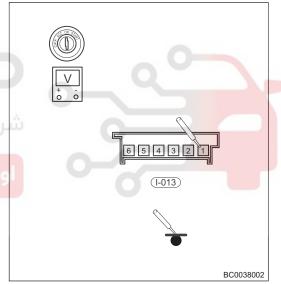

NG

Refer to check and repair CAN communication



6 Reconfirm DTCs

- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPS/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

OK

|--|

Proceed to		
NG		
ОК	System operates normally	
NG	Replace EPS/ESP control module assembly	



DTC	C0061-64	Lateral Acceleration Sensor (ESP Only)
DTC	C0062-64	Longitudinal Acceleration Sensor (ESP Only)
DTC	C0063-64	Yaw Rate Sensor (ESP Only)
DTC	C0063-01	Yaw Rate Sensor (ESP Only)
DTC	C0063-54	Yaw Rate Sensor (ESP Only)

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause	
C0061-64	Lateral Acceleration Sensor (ESP Only)	This DTC occurs when any of following conditions is met: • Y&G sensor is not calibrated. • Y&G sensors signal is abnormal. • Y&G sensors signal is interrupted.	,	
C0062-64	Longitudinal Acceleration Sensor (ESP Only)		Y&G sensor is not calibrated Y&G sensor is short or open	
C0063-64	Yaw Rate Sensor (ESP Only)		I • YX(+ sensor is damaged	Y&G sensor is damaged
C0063-01	Yaw Rate Sensor (ESP Only)			
C0063-54	Yaw Rate Sensor (ESP Only)			

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

شرکت دیجیتال خودرو سامانه (مسئول Procedure

1 Check sensor calibration

- (a) Turn ENGINE START STOP switch to ON.
- (b) Connect the diagnostic tester (the latest software) to Data Link Connector (DLC).
- (c) Calibrate the Y&G sensor according to instruction of diagnostic tester.
- (d) Use diagnostic tester to clear DTCs.
- (e) Start the engine.
- (f) Drive vehicle at 40 km/h or above, read EPB/ESP control module assembly DTC again with diagnostic tester.
- (g) Check if the same DTCs are still output.

End

Proceed to
OK
NG

NG

Y&G sensor is not calibrated

ОК	

2	Check installation of EPB/ESP control module

Caution:

- (a) Check EPB/ESP control module fixing bolt for looseness.
- (b) Check EPB/ESP control module fixing bracket for looseness.

Result

Proceed to
OK
NG

NG


Retighten EPB/ESP control module fixing bolt and bracket

ОК

3 Reconfirm DTCs

- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPB/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

Result

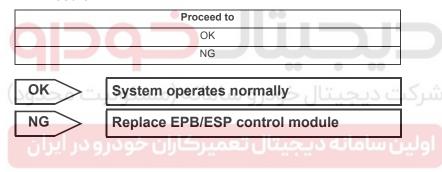

Stability System Active Too Long DTC C006B-00

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause
C006B-00	Stability System Active Too Long	This DTC occurs when any of following conditions is met: ESP receives command to continue operation (more than 1 second). ESP receives command to continue operation (more than 10 seconds).	Wheel speed differs Sensor signal is incorrect EPB/ESP control module assembly is damaged

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

1 Check sensor wire harness and connector

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect all wheel speed sensor and steering angle sensor connectors.
- (d) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (e) Check for broken, bent, protruded or corroded terminals.
- (f) Check if terminal contact pins of related connectors are in good condition.

**	Proceed to	
	OK	
يرمدر ابدل	سامانه در جرت از NG	

OK

Check installation of wheel speed sensor

(a) Turn ENGINE START STOP switch to OFF.

and connector

- (b) Disconnect the negative battery cable.
- (c) Check wheel speed sensor sensor mounting bolt for looseness.
- (d) Check wheel speed sensor mounting position and hub ring gear for any gaps.
- (e) Check installation position of wheel speed sensor for dust.

Result

Proceed to
OK
NG

NG

Tighten mounting bolts correctly, clean or replace wheel speed sensor

ОК

- 3 Check wheel speed sensor
- (a) Connect the diagnostic tester (the latest software) to Data Link Connector (DLC).
- (b) Drive vehicle straight ahead, and read datastream of wheel speed sensor with diagnostic tester.
- (c) Check if data change of wheel speed sensor matches that of other wheel speed sensors.

Result

Proceed to
OK
NG


NG >

Replace corresponding wheel speed sensor

ОК

- 4 Check hub gear ring and drive shaft ring gear upper
- (a) Remove the hub assembly.
- (b) Check hub gear ring and drive shaft ring gear upper for foreign matter, missing teeth or damage.
- (c) Check hub assembly and drive shaft ring gear upper for secure installation.

Result

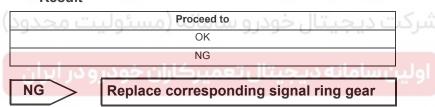

OK

- 5 Check installation of steering angle sensor
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check if steering angle sensor connector is connected securely.
- (d) Check if steering angle sensor is installed in place.
- (e) Check installation position of steering angle sensor for dust.

Result

23

Proceed to	
OK	
NG	

NG

Clean and replace steering angle sensor

OK

6 Reconfirm DTCs

- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPS/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

Result

Proceed to
OK
NG

ок

System operates normally

NG

Replace EPS/ESP control module assembly



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



DTC (C0089-04	TCS Disable Switch(ESP Only)
-------	----------	------------------------------

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause
C0089-04	TCS Disable Switch(ESP Only)	This DTC occurs when any of following conditions is met: Press and hold ESP switch more than 10 seconds. During igniting, ESP OFF switch activity signal is detected more than 2 seconds.	ESP switch if off ESP switch if damaged


Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

- 1 Check ESP switch
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check if ESP switch is stuck or pushed in by other objects.

Result

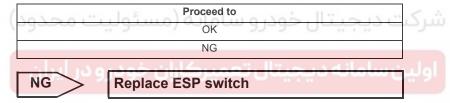

OK

- 2 Check wire harness and connector
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (d) Check for broken, bent, protruded or corroded terminals.
- (e) Check if related connector pins are in good condition.

Result

ı	Proceed to
	OK
	NG

NG

23

Repair or replace body instrument panel wire harness and connector

OK

3 Reconfirm DTCs

- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPB/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

Result

Proceed to
OK
NG

ОК

System operates normally

NG

Replace adjustment switch assembly



اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




DTC	C1000-16	ECU Voltage Supply
DTC	C1000-17	ECU Voltage Supply
DTC	C1001-04	ECU
DTC	C1009-00	ECU HardWare Related





Circuit Diagram

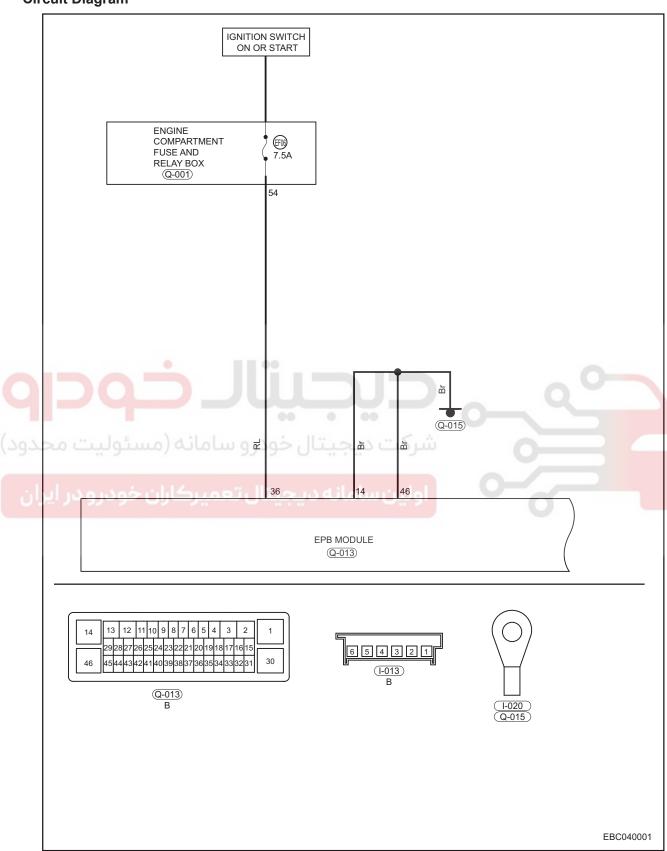

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause
C1000-16	ECU Voltage Supply	This DTC occurs when any of	Fuse malfunctions
C1000-17	ECU Voltage Supply	following conditions is met: Battery voltage is too high.	High or low battery voltage Charging system malfunctions.
C1001-04	ECU	Battery voltage is too low.	Wire harness or connector damaged
C1009-00	ECU HardWare Related	Module itself.	EPB/ESP control module assembly malfunctions

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

1 Check fuse

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Remove ABS fuse EF06 (7.5A) from engine compartment fuse and relay box.
- (d) Check if fuse is blown.

Result



- (a) Using a digital multimeter, measure voltage between positive battery terminal and negative battery terminal.
- (b) Battery voltage should be higher than 12 V.

Result

Proceed to
OK
NG

NG Check charging system

OK

23

3 Check EPB/ESP control module assembly wire harness and connector

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- (d) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (e) Check for broken, bent, protruded or corroded terminals.

Result

Proceed to	
OK	
NG	

NG

Repair or replace EPB/ESP control module assembly wire harness and connector

OK


- Check wire harness and connector (EPB/ESP control module assembly power supply)
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- (d) Connect the negative battery terminal cable.
- (e) Turn ENGINE START STOP switch to ON.
- (f) Using a digital multimeter, measure voltage between EPB/ESP control module assembly connector B-013 and body ground to check if system power supply circuit is normal according to the table below.


OK

Multimeter Connection	Condition	Specified Condition
Q-013 (36) - Body ground (digital multimeter)	ENGINE START STOP switch ON	Not less than 12 V
Q-013 (36) - Body ground	ENGINE START STOP	On
(test lamp 21 W)	switch ON	Oli

Result

Proceed to	
OK	
NG	

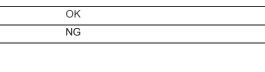

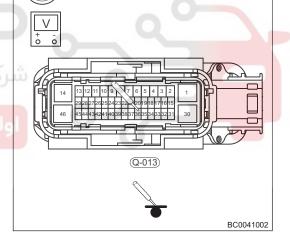

NG

Repair or replace related wire harness and connector



- Check wire harness and connector (EPB/ESP control module assembly body ground) 5
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.


(d) Using a digital multimeter, check for continuity between EPB/ESP control module assembly connector Q-013 and body ground to check if system ground circuit is normal according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-103 (14) - Body ground	Always	≤ 1 Ω
B-103 (46) - Body ground	Always	≤ 1 Ω

Result

Proceed to	
OK	
NG	

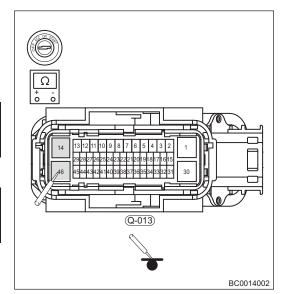

NG >

Repair or replace EPB/ESP control module assembly wire harness and connector



6 Reconfirm DTCs

- (a) Use diagnostic tester to clear DTCs.
- (b) Start the engine.
- (c) Drive vehicle at 40 km/h or above, read EPB/ESP control module assembly DTC again with diagnostic tester.
- (d) Check if the same DTCs are still output.

Result

Proceed to
OK
NG

ок


System operates normally

NG

Replace EPB/ESP control module assembly

DTC	U0005-00	High Speed CAN Communication Bus (+) High
DTC	U0007-00	High Speed CAN Communication Bus (-) Low
DTC	U0073-88	Control Module Communication Bus Off
DTC	U0100-87	Lost Communication With Engine Control System Module
DTC	U0101-87	Lost Communication With Transmission Control Unit
DTC	U0140-87	Lost Communication With Body Control Module
DTC	U0401-81	Invalid Data Received From Engine Control System Module
DTC	U0402-81	Invalid Data Received From Transmission Control Unit
DTC	U0422-81	Invalid Data Received From Body Control Module
DTC	C1002-49	CAN Hardware Internal Electronic Failure

Circuit Diagram

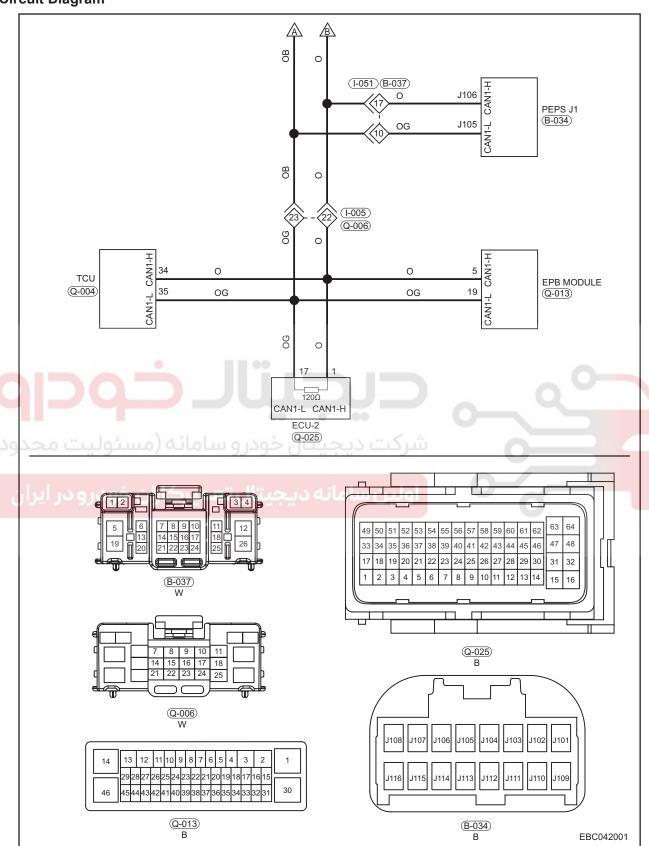

Description

DTC	DTC Definition	DTC Detection Condition	Possible Cause			
U0005-00	High Speed CAN Communication Bus (+) High					
U0007-00	High Speed CAN Communication Bus (-) Low					
U0073-88	Control Module Communication Bus Off					
U0100-87	Lost Communication With Engine Control System Module	This DTC occurs when any of following conditions is met: CAN bus communication.	CAN controller malfunction CAN configuration information unmatched			
U0101-87	Lost Communication With Transmission Control Unit	configuration information and line are malfunctioning. ECM overtime. ECM error. TCU overtime. TCU error.	CAN communication off CAN bus line malfunction ECM software version unmatched			
U0140-87	Lost Communication With Body Control Module		 malfunctioning. ECM overtime. ECM damaged TCU software version unmaged BCM damaged FSP (ABS) damaged 	ECM overtime. ECM damaged TCLI software version unmatched	ECM damaged	
U0401-81	Invalid Data Received From Engine Control System Module					
U0402-81	Invalid Data Received From Transmission Control Unit					
U0422-81	Invalid Data Received From Body Control Module					
C1002-49	CAN Hardware Internal Electronic Failure					

Caution

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

شرکت دیجیتال خودر و سامانه (مسئولیت

1

Check wire harness and connector

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- (d) Disconnect the Engine Control Module (ECM) connector Q-025.
- (e) Disconnect the Body Control Module (BCM) connector I-010.
- (f) Disconnect the Transmission Control Module (TCM) connector Q-004.
- (g) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (h) Check for broken, bent, protruded or corroded terminals.
- (i) Check if related connector pins are in good condition.

Result

Proce	ed to
0	K
N	G

NG


Repair or replace wire harness and connector

OK

- 2 Check CAN communication control circuit (EPB/ESP control module assembly Engine Control Module (ECM))
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the ABS/ESP control module assembly connector Q-013.
- (d) Disconnect the Engine Control Module (ECM) connector Q-025.
- (e) Using a digital multimeter, measure CAN resistance value via EPB/ESP module Q-013 connector to check if wire is open.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (5) - Q-013 (19)	Always	≈ 120 Ω

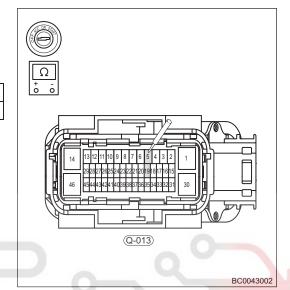

(f) Using a digital multimete


(f) Using a digital multimeter, measure CAN resistance value via ECM module Q-025 connector to check if wire is open.

رسامانه دیجیتال رتعمیرکاران خودرو در OK

Multimeter Connection	Condition	Specified Condition
Q-025 (1) - Q-025 (17)	Always	$pprox$ 120 Ω

Result

Proceed to	
OK	
NG	

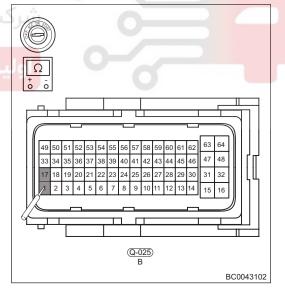

NG NG

Repair or replace engine wire harness and connector.


ОК

3 Check CAN communication control circuit (ESP/EPB control module assembly - Transmission Control Module (TCM))

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the ABS/ESP control module assembly connector Q-013.
- (d) Disconnect the Transmission Control Module (TCM) connector Q-004.
- (e) Using a digital multimeter, measure CAN resistance value via EPB/ESP module Q-013 connector to check if wire is open.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (5) - Q-013 (19)	Always	≈ 120Ω

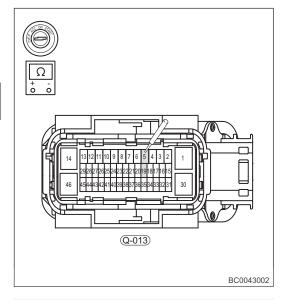


(f) Using a digital multimeter, measure CAN resistance value via TCM module Q-004 connector to check if wire is open.

OK

ľ	Multimeter Connection	Condition	Specified Condition	
	Q-004 (41) - Q-004 (42)	Always	≈ 120Ω	

Result

بان	Proceed to
	OK
	NG

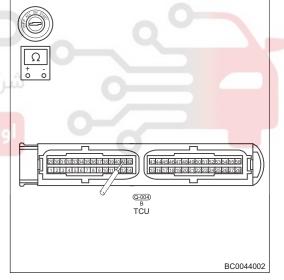

NG

Repair or replace engine wire harness and connector.




- 4 Check CAN communication control circuit (EPB/ESP control module assembly Body Control Module (BCM))
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the EPB/ESP control module assembly connector Q-013.
- (d) Disconnect the Body Control Module (BCM) connector I-010.

(e) Using a digital multimeter, measure CAN resistance value via EPB/ESP module Q-013 connector to check if wire is open.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (5) - Q-013 (19)	Always	$pprox$ 120 Ω

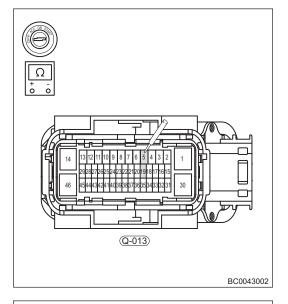


Using a digital multimeter, measure CAN resistance value via BCM module I-010 connector to check if wire is open.

OK

Multimeter Connection	Condition	Specified Condition
I-010 (216) - I-010 (203)	Always	≈ 120 Ω

Result



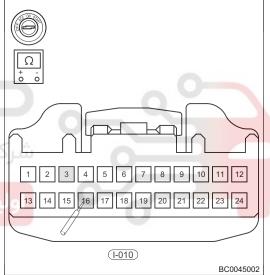



Refer to CAN system

Repair or replace body/instrument panel wire harness and connector

ON-VEHICLE SERVICE

Brake System Bleeding

Operation Step

Warning:

- When bleeding brake system, wear safety glasses. If brake fluid gets on your eyes or skin, wash off with water completely.
- Brake fluid has a corrosive on body paint surface. Do not drop brake fluid on body paint surface.

Caution:

- Brake fluid should meet Chery specified type (DOT4). DO NOT mix brake fluid with other types of brake fluid.
- Brake fluid has strong water absorbability, be sure to place it in the original sealed container.
- To prevent dust and other foreign matter from entering reservoir, wipe it off before removing reservoir cap.
- 1. Bleeding procedures for brake system with diagnostic tester are as follows:
 - (a) Make sure all brake lines are installed and tightened properly.
 - (b) Check that battery voltage is normal.
 - (c) Turn ENGINE START STOP switch to OFF.
 - (d) Connect diagnostic tester (the latest software) to Data Link Connector (DLC).
 - (e) Turn ENGINE START STOP switch to ON.
 - (f) Using diagnostic tester, read and clear DTCs stored in EPB/ESP control module assembly.
 - (g) Using diagnostic tester, enter Brake Control System, select manual bleeding, and then perform operation according to information and procedures displayed on diagnostic tester.

Hint:

- If bleeder plug is open, never depress brake pedal repeatedly. Doing so will increase the amount of air in system.
- Do not drain brake fluid from brake fluid reservoir while bleeding the system. Otherwise, low fluid level in brake reservoir will cause additional air to enter the brake system.
- Always check brake fluid level at all times to ensure that brake fluid level in brake reservoir is always close to MAX level.
- (h) For X type brake circuit, the bleeding order is: rear left wheel, front left wheel, front right wheel, rear right wheel.
- (i) After bleeding is completed, fill brake reservoir with brake fluid to MAX level.
- (j) Drive vehicle to perform a road test, and confirm that EPB/ESP system operates normally and brake pedal feel is good.

EPB/ESP control module assembly

Removal

Warning/Caution/Hint


- When repairing EPB/ESP system, first release the pressure of high pressure brake fluid in accumulator, to prevent high pressure brake fluid from spraying out and causing injury.
- Operation step: First turn off ENGINE START STOP switch, then depress and release brake pedal repeatedly, until brake pedal is hard.
- In addition, never turn on ENGINE START STOP switch before EPB/ESP system is installed completely to prevent hydraulic pump from energizing and running.
- 1. Turn off all electrical equipment and ENGINE START STOP switch.
- 2. Disconnect the negative battery cable.
- 3. Drain the brake fluid (See page 24-15).

Hint:

Drained brake fluid should be well kept in a container. Never discard it at will.

Warning:

- Wash off brake fluid immediately if it comes in contact with any paint surface.
- 4. Remove the engine trim cover assembly.
- 5. Remove the battery assembly.
- 6. Remove the air filter assembly (See page 10-8).
- 7. Remove the EPB/ESP control module assembly.
 - (a) Press the lock area of EPB/ESP control module assembly connector, toggle the connector lock bracket downward and disconnect the EPB/ESP control module assembly connector (arrow).

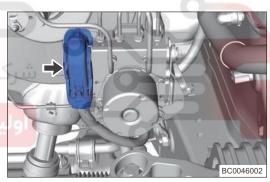

ن سامانه دیجیتال تعمیرکاران خودرو در ایران


(b) Using a fixing wrench, carefully disconnect 6 brake pipe coupling bolts (arrow).

Tightening torque

18 ± 2 N·m

Warning:


- When removing brake line, prevent foreign matter form entering EPB/ESP control module assembly threaded holes.
- After disconnecting brake line, sealing measure should be taken to prevent foreign matter form entering.

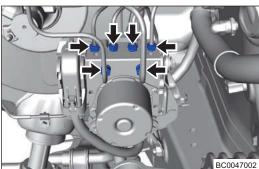


(c) Remove fixing bolt (arrow) between EPB/ESP control module assembly mounting bracket and body.


Tightening torque

23 ± 3.5 N·m

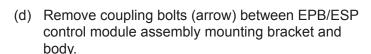

Tightening torque 23 ± 3.5 N·m

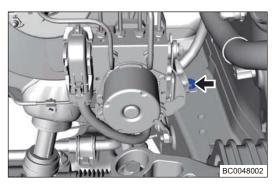

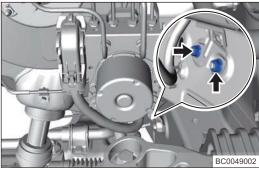


(e) Remove the EPB/ESP control module assembly with mounting bracket.

Disassembly

- Remove the EPB/ESP control module assembly.
 - (a) Remove 3 fixing nuts (arrow) between EPB/ESP control module assembly and mounting bracket.

Tightening torque

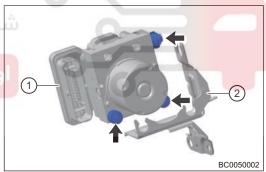

(b) Disengage EPB/ESP control module assembly (1) from mounting bracket (2).

Assembly

Installation is in the reverse order of removal. 1.

Caution:

- EPB/ESP control module assembly contains hydraulic control module and electronic control module. As a unit, they cannot be repaired or replaced individually.
- Check insulator for aging or damage. Replace if necessary.
- When installing fixing bolts and screws, be sure to tighten to specified torques.
- Perform ABS bleeding procedures for brake system after completing installation. Click here
- Using diagnostic tester, enter brake control system, record and clear trouble code, then drive vehicle to perform a road test, confirming that EPB/ESP system operates normally and brake pedal feel is good.
- It is necessary to perform yaw rate sensor calibration after replacing ESP assembly.
- After replacing ESP assembly, perform "Assembly Inspection" with diagnostic tester, otherwise, malfunction may be lit

Front Wheel Speed Sensor (Front Left Wheel as Example)

Removal

Warning/Caution/Hint

Caution:

• Keep wheel speed sensor away from oil or other foreign matter. Otherwise speed signal generated by wheel speed sensor may be inaccurate, and system may even fail to operate normally.

Hint:

- · Use same procedures for right and left sides.
- · Procedures listed below are for left side.
- 1. Turn off all electrical equipment and ENGINE START STOP switch.
- 2. Disconnect the negative battery terminal cable (See page 22-8).
- 3. Remove the front left wheel.
- 4. Remove the front left wheel speed sensor.
 - (a) Remove the fixing bolt (arrow) between front left wheel speed sensor and front left steering knuckle assembly, and disengage the front left wheel speed sensor carefully.

Tightening torque

9 ± 1.5 N·m


Caution:


- Keep head and installation hole of sensor free of foreign matter.
- (b) Disengage the attachment part (arrow) of front left wheel speed sensor wire harness from front left shock absorber assembly and fixing bracket, disengage fixing clip (1) from front left wheel speed sensor wire harness.

Hint:


- Observe winding direction of sensor wire harness to prevent incorrect installation.
- (c) Disconnect the front left wheel speed sensor wire harness connector (arrow).



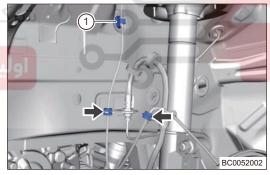

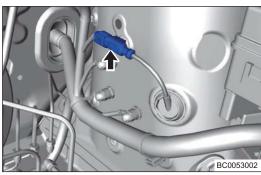

(d) Detach the front left wheel speed sensor wire harness cover (arrow) from body.

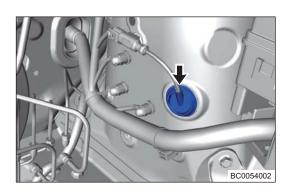


(e) Remove the front left wheel speed sensor.

Inspection


- 1. Check the rear wheel speed sensor.
 - (a) Check rear wheel speed sensor surface for breakage, dents or notch.
 - (b) Check rear wheel speed sensor connector or wire harness for scratches, breakage or damage.
 - (c) If any of above conditions occurs, replace the rear wheel speed sensor with a new one.
 - (d) Check wheel speed sensor for proper installation.
 - (e) Using a diagnostic tester, read datastream of wheel speed sensor, record if each wheel speed is consistent with acceleration display, and if vehicle speed display is accurate.



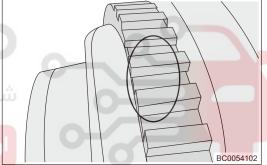


ولین سامانه دیجیتال تعمیرکاران خودرو در ایران

(f) If wheel speed display is inconsistent, check the corresponding wheel speed sensor signal ring gear for missing teeth, dirt, demagnetization, off center.

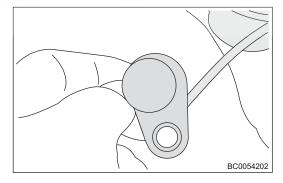

- 2. Simple test for wheel speed sensor
 - (a) Connect power supply terminal of sensor to 12 V power supply, connect sensor signal terminal and 75 Ω resistor in series and make it grounded, then rotate wheels and test voltage signal of resistor with an oscilloscope.

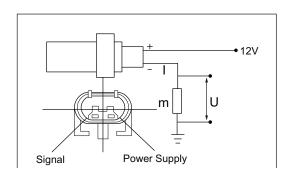


(b) U switches between high and low levels without any obvious teeth missing as ring gear rotates.

U low \approx 0.54 V U high \approx 1.07 V

Caution:

- Poles cannot be connected inversely during test, otherwise, damage may be caused.
- Above mentioned is a simple method and cannot replace the complete function test.
- Causes that affect test may include: Ring gear quality, installation error, etc.

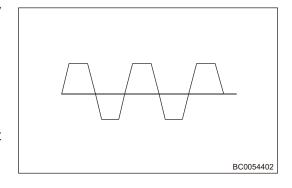

- (c) After any repair actions on wheel speed sensor, it is necessary to accelerate vehicle to 40 Km/h or more to perform dynamic self-test of EPB/ESP system.
- (d) If malfunction still cannot be eliminated after completing dynamic self-test, replace wheel speed sensor.
- (e) After repair is finished, perform completion inspection.

Installation

1. Installation is in the reverse order of removal.

Caution:

• When installing coupling bolts, be sure to tighten to specified torque.

حیات دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Rear Wheel Speed Sensor (Rear Left Wheel as Example)

Removal

Warning/Caution/Hint

Caution:

• Keep wheel speed sensor away from oil or other foreign matter. Otherwise speed signal generated by wheel speed sensor may be inaccurate, and system may even fail to operate normally.

Hint:


- · Use same procedures for right and left sides.
- · Procedures listed below are for left side.
- 1. Turn off all electrical equipment and ENGINE START STOP switch.
- 2. Disconnect the negative battery terminal cable.
- 3. Remove the rear left wheel (See page 22-8).
- 4. Remove the rear left wheel speed sensor.
 - (a) Remove rear left wheel speed sensor fixing bolt (arrow), and disconnect EPB caliper wire harness connector (1).

Tightening torque

9 ± 1.5 N·m


Caution:

 Keep head and installation hole of sensor free of foreign matter.

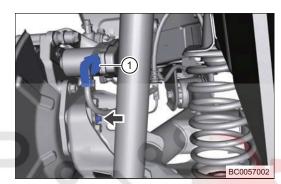


(b) Detach 2 attachment parts (arrow) of rear wheel speed sensor wire harness from fixing bracket.

ین سامانه دیجیتال تعمیرکاران خودرو در ایران

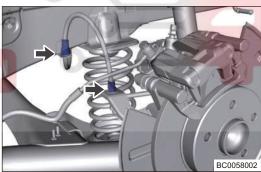


- (c) Remove the luggage compartment floor carpet assembly.
- (d) Disconnect connector (arrow) from rear wheel speed sensor with caliper wire harness assembly.

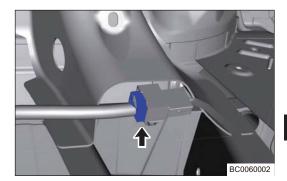


(e) Remove the rear left wheel speed sensor.

Inspection

- 1. Check the rear left wheel speed sensor.
 - (a) Check rear wheel speed sensor surface for breakage, dents or notch.
 - (b) Check rear wheel speed sensor connector or wire harness for scratches, breakage or damage.
 - (c) If any of above conditions occurs, replace the rear wheel speed sensor with a new one.
 - (d) Check wheel speed sensor for proper installation.
 - (e) Using a diagnostic tester, read datastream of wheel speed sensor, record if each wheel speed is consistent with acceleration display, and if vehicle speed display is accurate.

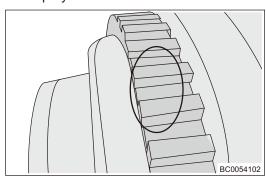


(f) If wheel speed display is inconsistent, check the corresponding wheel speed sensor signal ring gear for missing teeth, dirt, demagnetization, off center.

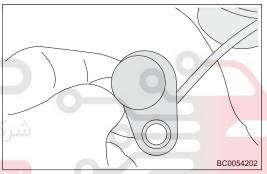



2. Simple test for wheel speed sensor

(a) Connect power supply terminal of sensor to 12 V power supply, connect sensor signal terminal and 75 Ω resistor in series and make it grounded, then rotate wheels and test voltage signal of resistor with an oscilloscope.

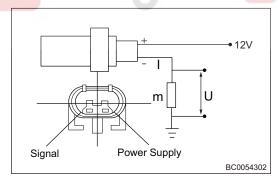


(b) U switches between high and low levels without any obvious teeth missing as ring gear rotates.

U low \approx 0.54 V U high \approx 1.07 V

Caution:

- Poles cannot be connected inversely during test, otherwise, damage may be caused.
- Above mentioned is a simple method and cannot replace the complete function test.
- Causes that affect test may include: Ring gear quality, installation error, etc.

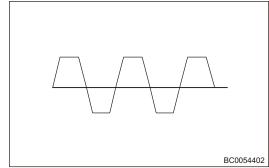

- (c) After any repair actions on wheel speed sensor, it is necessary to accelerate vehicle to 40 Km/h or more to perform dynamic self-test of EPB/ESP system.
- (d) If malfunction still cannot be eliminated after completing dynamic self-test, replace wheel speed sensor.
- (e) After repair is finished, perform completion inspection.

Installation

1. Installation is in the reverse order of removal.

Caution:

• When installing coupling bolts, be sure to tighten to specified torque.






Steering Angle Sensor

Removal

- 1. Turn off all electrical equipment and ENGINE START STOP switch.
- 2. Disconnect the negative battery cable.

Caution:


- Wait at least 90 seconds after disconnecting the negative battery cable to disable supplementary restraint system.
- 3. Position the front wheels straight ahead.
- 4. Remove the steering wheel assembly (See page 26-8).
- 5. Remove the combination switch cover (See page 26-10).
- 6. Remove the steering angle sensor.
 - (a) Disconnect the spiral cable wire harness connector (arrow) and angle sensor connector (1).

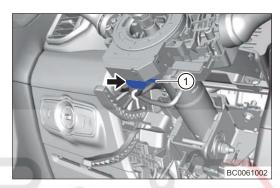


(b) Detach the fixing claws (arrow) between spiral cable and steering column, and remove the spiral cable.



(c) Detach the steering angle sensor fixing claws and separate the angle sensor (1) and spiral cable (2).

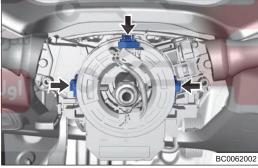

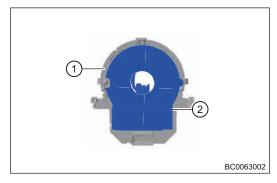


23

Installation

Installation is in the reverse order of removal.

Hint:

 Always install spiral cable correctly according to matchmarks on spiral cable and steering column (fully turn spiral cable clockwise slowly, then turn it counterclockwise until yellow ball appears in transparent neutral window and arrow marks align with each other), otherwise the spiral cable may be damaged.

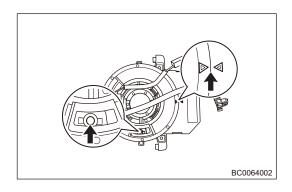

Caution:

- Always install spiral cable correctly according to specified operating instructions.
- DO NOT rotate the spiral cable over specified turns to prevent it from breaking.
- Be sure to install fixing claws in place when installing spiral cable.
- · Check that horn operates normally after installation.
- Check SRS warning light after installation, and make sure that supplemental restraint system operates normally.
- · It is necessary to adjust front wheel alignment.





- MEMO -





GENERAL INFORMATION	24-3	Brake Pedal Assembly	24-23
Overview	24-3	Removal	24-23
Description	24-3	Inspection	24-24
Specifications	24-4	Installation	24-24
Tools	24-5	Front Disc Brake Assembly	24-26
DIAGNOSIS & TESTING	24-7	Description On-vehicle Inspection	24-26 24-26
Diagnosis Content	24-7	Removal	24-27
Problem Symptoms Table	24-7	Disassembly	24-28
On-vehicle Inspection	24-8	Inspection	24-29
Operation Step	24-8	Assembly	24-30
ON-VEHICLE SERVICE	24-9	Installation	24-32
Brake Bleeding	24-9	Front Brake Hose Assembly	24-33
Brake Bleeding	24-9	Removal	24-33
Brake Fluid Replacement	24-15	Installation	24-34
Brake Fluid Replacement	24-15	Rear Disc Brake Assembly	24-35
Brake Fluid Reservoir Assembly	24-16	Description	24-35
On-vehicle Inspection	24-16	On-vehicle Inspection	24-36
Removal	24-16	Removal	24-36
Installation	24-17	Disassembly	24-37
Brake Master Cylinder Assembly	24-18	Inspection	24-39
Removal	24-18	Assembly	24-40
Installation	24-19	Installation	24-42
Vacuum Booster with Brake	24 10	Rear Brake Hose Assembly	24-43
Master Cylinder Assembly	24-20	Removal	24-43
On-vehicle Inspection	24-20	Installation	24-43
Removal	24-20	Vacuum Pump Assembly	24-44
Inspection	24-21	Removal	24-44
Installation	24-22	Installation	24-44






GENERAL INFORMATION

Overview


Description

Front Ventilated Disc Brake Assembly

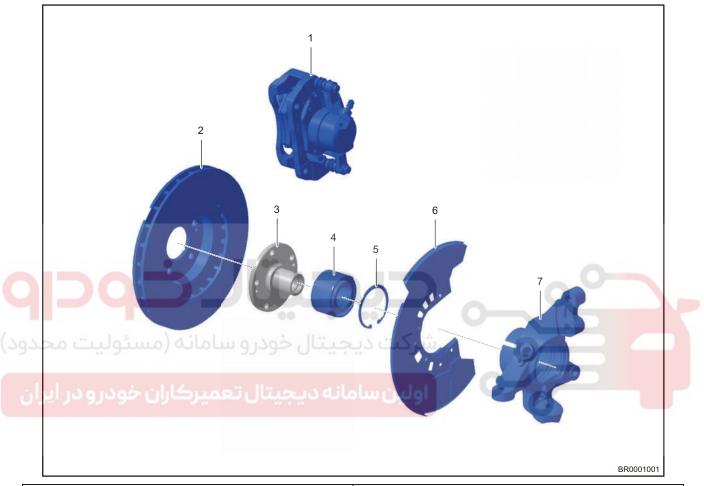

1 - Front Brake Caliper Assembly	2 - Front Brake Disc
3 - Front Hub	4 - Front Hub Bearing
5 - Bearing Retainer	6 - Front Dust Guard
7 - Front Steering Knuckle	

Rear Solid Disc Brake Assembly

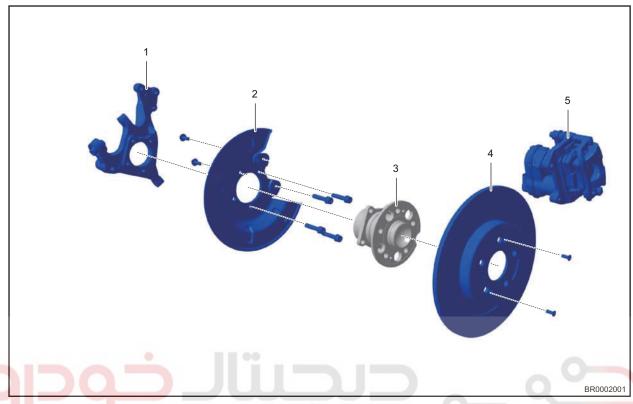

1 - Rear Brake Disc	2 - Rear Hub Bearing Assembly
3 - Rear Dust Guard	4 - Rear Brake Caliper Assembly

Brake system uses the following configuration: a ventilated disc brake is used for each front wheel, and solid disc brake is used for each rear wheel (disc brake is used for service brake, and electric parking is used for parking brake).

Using lever principle, brake pedal pushes the pushrod into vacuum booster, which boosts the force of pushrod by using vacuum and then transmits the force to brake master cylinder assembly. Hydraulic pressure, produced in the brake master cylinder assembly, is transmitted to ESP Hydraulic Control Unit (HCU) through the brake line, and then distributed to individual brake calipers. Brake calipers apply force to brake linings using hydraulic pressure. Brake linings will cause wheel speed to decrease or stop depending on the amount of brake pressure applied.

Specifications

Torque Specifications

Description	Torque (N·m)
Wheel Mounting Bolt	110 ± 10
Master Cylinder Mounting Nut	13.7 - 21.6
Fixing Plug Between Brake Master Cylinder Assembly and Brake Pipe	18 ± 2
Fixing Nut Between Vacuum Booster Assembly and Brake Pedal Assembly	23 ± 2
Fixing Nut Between Brake Pedal Assembly and Body	23 ± 2
Coupling Plug Between Front Brake Caliper Assembly and Front Brake Hose Assembly	20 ± 2
Coupling Bolt Between Front Brake Caliper Assembly and Front Steering Knuckle Assembly	90 - 110
Front Brake Disc Locating Screw	4.5 ± 0.5
Front Droke Coliner Blooder Careur	0 44

Description	Torque (N·m)
Guide Bolt Between Front Brake Caliper Fixing Bracket and Front Brake Cylinder Assembly	22 - 32
Coupling Plug Between Front Brake Hose Assembly and Front Brake Pipe	18 ± 2
Coupling Bolt Between Rear Brake Caliper Assembly and Rear Brake Hose Assembly	27 ± 2
Coupling Bolt Between Rear Brake Caliper Assembly and Brake Caliper Mounting Board Assembly	90 - 110
Rear Brake Disc Locating Screw	4.5 ± 0.5
Rear Brake Caliper Bleeder Screw	9 - 11
Guide Bolt Between Rear Brake Caliper Fixing Bracket and Rear Brake Cylinder Assembly	22 - 32
Coupling Plug Between Rear Brake Hose Assembly and Brake Pipe	18 ± 2
Parking Actuator Mechanism Fixing Screw	9 - 11

Front Disc Brake


Description	Standard Thickness (mm)	Minimum Thickness (mm)	Brake Disc Runout (mm)
Front Brake Disc	25	23	Less than 0.06
Front Brake Lining	11	2	-

Rear Disc Brake


Description	Standard Thickness (mm)	Minimum Thickness (mm)	Brake Disc Runout (mm)
Rear Brake Disc	10	8	Less than 0.06
Rear Brake Lining	10.2	2	9 .

Tools

Special Tool

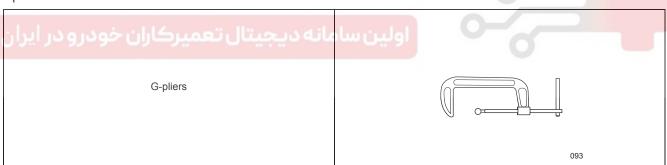

General Tool

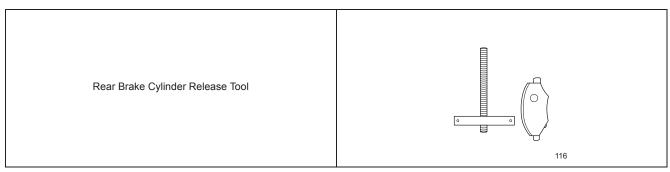



DIAGNOSIS & TESTING

Diagnosis Content

Problem Symptoms Table

Hint:

Use symptoms table below to help determine cause of problem. Check each suspected area in sequence. Repair, replace or adjust faulty components as necessary.

Symptom	Possible Cause	Corresponding Measures
	Brake disc thickness is out of limit thickness	Check brake disc thickness difference
	Real brake disc runout is out of limit amount	Check real brake disc runout
	Hub bearing is damaged or worn	Check bearing damage
Brake shakes	Brake assembly bolt becomes loose	Check looseness of brake assembly bolt
Diake Silakes	Steering/suspension part is loose or worn	Check in accordance with Repair Manual
	Tire dynamic balance	Check in accordance with Repair Manual
	Four-wheel alignment	Check in accordance with Repair Manual
	ABS operates	Check in accordance with Repair Manual
	Spring plate is worn or deformed	Check spring plate
	Brake assembly bolt becomes loose	Check looseness of brake assembly bolt
Abnormal noise occurs on bumpy road	Abnormal noise is caused by slight axial movement of brake caliper on bumpy road	Check guide pin and spring plate
	Steering/suspension part becomes loose or shock absorber is worn	Check in accordance with Repair Manual
	Residual pressure in brake system	Loosen bleeder screw and discharge residual pressure
مانه (مسئولیت محد	Bearing is damaged	Check bearing
, -	Large sliding resistance of brake caliper	Check sliding of brake caliper
	Guide pin is deformed	Check deformation of guide pin
Wheel dragging	Guide pin is not installed in place	Check if guide pin is installed in place
	Guide pin dust boot is damaged	Check if guide pin dust boot is damaged
	Linings are not installed correctly	Check if tab of linings are installed in place
	Drive shaft	Check in accordance with Repair Manual
	Chassis interference part	Check in accordance with Repair Manual
	Metal scratching occurs during braking	Check for interferences and alarms
	Continuous "squeak" sound occurs for a longer time during braking	Check inside and outside linings for metal particles
Brake noise	A clear "click" sound occurs at the beginning of braking	Check linings for looseness
	Relevant bolts are loose	Check in accordance with Repair Manual
	Relevant parts are damaged	Check in accordance with Repair Manual
		l .

On-vehicle Inspection

Operation Step

Warning/Caution/Hint

Caution:

- Use well-sealed brake fluid DOT4 or equivalent. DO NOT use oily solution, otherwise brake system seal may be damaged.
- Brake fluid may damage paint surface. If brake fluid spills on paint surface, wash it off immediately with water.
- DO NOT use gasoline, kerosene, alcohol, engine oil, transmission oil or any other fluid that contains mineral oil to clean the system components. These kinds of fluid will damage the rubber cover and seal.
- During servicing, be sure to clean the grease or other foreign matter on the outer surface of brake caliper assembly, brake lining, brake disc and wheel hub.
- When operating brake disc and brake caliper, be careful not to damage brake disc and brake caliper and scratch or cut brake shoe linings.
- 1. Check conditions of tires and wheels. Damaged or worn wheels and tires can cause a pull, shudder, vibration and a condition similar to sudden braking.
- 2. If noise occurs while braking, check suspension components. Bounce the vehicle up and down several times and check suspension or steering components for any looseness, wear or damage.
- 3. Check brake fluid level and condition.
 - (a) If brake fluid level is low, check ESP control unit assembly, brake caliper, brake line, brake master cylinder assembly and brake fluid reservoir, etc. for leakage.
 - (b) If brake fluid is contaminated, drain a certain amount of fluid for inspection. Replace with new fluid as necessary.

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

ON-VEHICLE SERVICE

Brake Bleeding

Brake Bleeding

Be sure to perform brake bleeding and clutch bleeding after replacing hydraulic parts related to brake and clutch.

For details about clutch bleeding

There are 2 methods for brake bleeding, and specific operation procedures are as follows:

Method 1: Manual bleeding brake

Caution:


- · When bleeding brake system, wear safety glasses.
- Be careful when bleeding air, as brake fluid at high pressure may spray out from bleeder screw.

Warning:

- Before removing brake fluid reservoir, wipe off any dust and other foreign matters on brake fluid reservoir to prevent them from entering.
- Use fresh, clear and well-sealed brake fluid with specified type or equivalent.
- DO NOT allow the brake fluid to adhere to any paint surface, such as vehicle body. If brake fluid leaks onto any paint surface, immediately wash it off.
- During bleeding, do not depress brake pedal repeatedly at any time with bleeder screw opened. Otherwise, air amount in the system will increase to make an extra bleeding.
- DO NOT drain the brake fluid in brake fluid reservoir while bleeding brake system.

Hint:

- An assistant will be required to assist when bleeding brake system.
- 1. Fill brake fluid reservoir with brake fluid to a proper level.
- Loosen bleeder screw cap and connect a clear plastic hose to bleeder screw. Submerge the end of hose into container.
- 3. Have an assistant depress brake pedal 3 to 4 times repeatedly; and depress and hold it at a lower position, then loosen the bleeder screw.

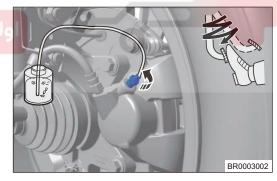

 Tighten bleeder screw every time brake pedal goes down quickly, then release the brake pedal.



Show Menu	↑ ₽	
CHERY (CUSTOMIZED) V58.80 > T19 > System Selection		
EMS (Engine Management System)	ABS/ESP (Anti-lock Braking System/Electronic Stability Program)	
ICM (Instrument Cluster Module)	BCM (Body Control Module)	
RADAR (Radar Module)	EIPM (Electric Integrated Panel Module)	
SRS (Supplemental Restraint System)	IHU (Infotainment Head Unit)	
EPS (Electronic Power Steering)	PEPS (Passive Entry And Passive Start System)	
CVT (Continuously Variable Transmission)	DCT (Dual Clutch Transmission)	
SAM (Steering Angle Module)	IMMO (Immobilizer)	
Chery (Customized) T19	BR0005101	

- 5. Repeat above steps, and use the same procedures to bleed brake line of each wheel in order of rear left wheel, front left wheel, front right wheel and rear right wheel, until no air exists in brake system.

 Empty sign: A stream of fresh brake fluid flows into clear container without bubbles.
- During bleeding of brake system, make sure brake fluid level in brake fluid reservoir is always near
 "MAX" mark. Check brake fluid level at all times during bleeding. Add brake fluid as necessary.
- 6. Check and adjust the brake fluid level to "MAX" mark.
- 7. Check the brake pedal braking effect. If braking effect is poor or pedal is spongy, air may still exist in system. Perform bleeding procedures for brake system again as necessary.
- 8. Test vehicle to confirm that brakes operate properly with good depressing feel.

Method 2: Bleeding brake using diagnostic tester

Warning:

- Check that battery voltage should not be lower than 12 V.
- Bleeding order must be rear left/front left/front right/rear right.
- If it is necessary to repeat part or whole bleeding procedure, be sure to wait for 5 minutes to cool solenoid valve down, otherwise solenoid valve may be damaged due to overheat.
- Depress brake pedal repeatedly with a frequency of 0.5 times per second in the whole bleeding process.


To reach sufficient pressure in hydraulic regulator, brake pedal needs to be depressed repeatedly during whole process.

- 9. Fill brake fluid reservoir with brake fluid to a proper level.
- 10. Depress brake pedal more than 20 times with engine stopped.

- 11. Turn ENGINE START STOP switch to ON, and enter T19 "Anti-lock Brake System/Electronic Stability Program" system using diagnostic tester.
 - (a) Please select [Anti-lock Brake System/Electronic Stability Program] on Diagnostic program screen.




(b) Please select [Special function] on Diagnostic program screen.

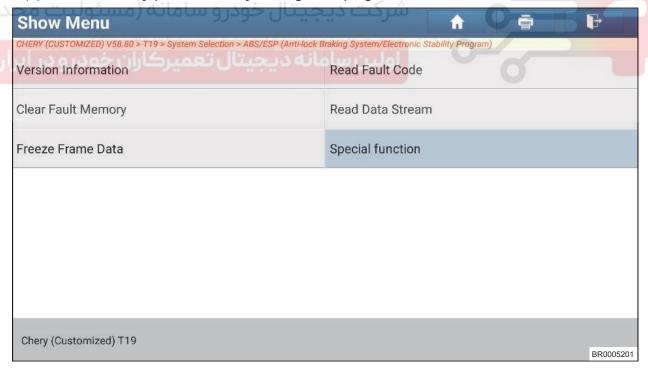

Z4


(c) Please select [Manual bleeding] on Diagnostic program screen.

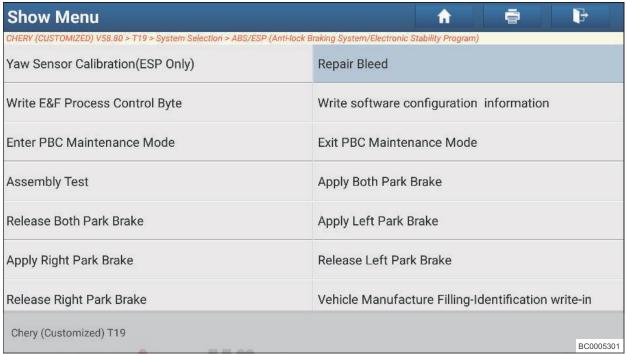

(d) The following figures appear on Diagnostic program screen. Click OK continuously.




(e) Please select [Phase 1: Bleed the wheel rear left] on Diagnostic program screen, then perform bleeding operation for rear left wheel.

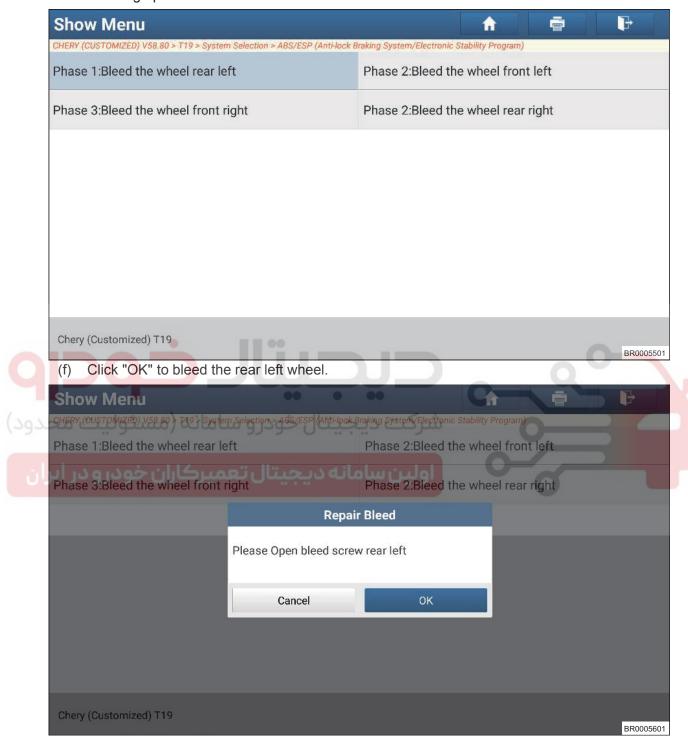


Z4

 Loosen bleeder screw cap of rear left wheel and connect a clear plastic hose to bleeder screw. Submerge the end of hose into container.

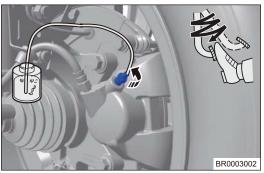

13. Use same bleeding procedures as rear left wheel to bleed air for brake lines of rear left wheel, front left wheel, front right wheel and rear right wheel, until no air exists in brake system.
Empty sign: A stream of fresh brake fluid flows into clear container without bubbles.
Hint:

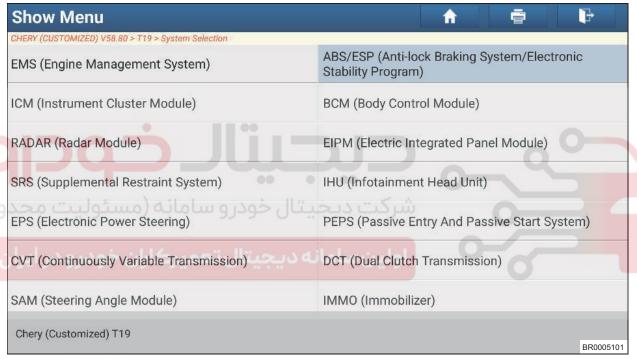


- During bleeding of brake system, make sure brake fluid level in brake fluid reservoir is always near "MAX" mark. Check brake fluid level at all times during bleeding. Add brake fluid as necessary.
- 14. Check and adjust the brake fluid level to "MAX" mark.
- 15. Check the brake pedal braking effect. If braking effect is poor or pedal is spongy, air may still exist in system. Perform bleeding procedures for brake system again as necessary.
- 16. Test vehicle to confirm that brakes operate properly with good depressing feel.

Brake Fluid Replacement

Brake Fluid Replacement

- 1. Drain the brake fluid.
 - (a) Start engine and run it at idle.
 - (b) Screw off filler cap of brake fluid reservoir assembly. Loosen bleeder screw cap and connect a clear plastic hose to bleeder screw. Submerge the end of hose into container.
 - (c) Loosen bleeder screw, and depress brake pedal continuously until no brake fluid comes out.

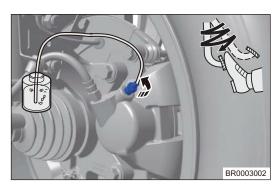

- 2. Add brake fluid.
 - (a) Tighten bleeder screw after confirming that brake fluid has been drained. Fill brake fluid reservoir with new brake fluid to a proper level.
- 3. Perform bleeding procedures.
 - (a) After replacing with new brake fluid, be sure to bleed the brake system for normal operation. For details of brake system bleeding. Click here


شرکت دیجیتال خودرو سامانه (مسئولیت محدود

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Brake Fluid Reservoir Assembly

On-vehicle Inspection

- 1. Check the brake fluid level warning switch.
 - (a) Remove the brake fluid reservoir filler cap.
 - (b) Disconnect the brake fluid level warning switch wire harness connector.
 - (c) Using ohm band of digital multimeter, check for continuity between brake fluid level warning switch terminals according to conditions shown in table below.

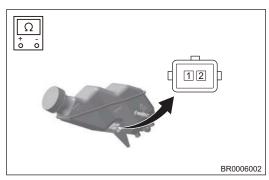

Multimeter Connection	Condition	Specified Condition	
Terminal 1 - Terminal 2	Float upward (switch ON)	∞	
Terminal 1 - Terminal 2	Float downward (switch OFF)	≤ 1 Ω	

Hint:

- There is a float in fluid reservoir. Position of float changes as brake fluid level rises or drops.
- If result is not as specified, replace brake fluid reservoir assembly.
- (d) Unplug fluid level sensor connector when warning light comes on. If warning light remains on, check wire harness and instrument cluster. If instrument cluster warning indicator goes off immediately, the fluid level sensor is malfunctioning. (Precondition: Brake fluid is within scale range)
 - (e) Add brake fluid to MAX mark.

Removal


Drain the brake fluid.

Hint:


Drained brake fluid should be well kept in a container. Never discard it at will.

Caution

- Wash off brake fluid immediately if it comes in contact with any paint surface.
- 2. Remove the brake fluid reservoir assembly.
 - (a) Disconnect the brake fluid level warning switch connector (arrow).

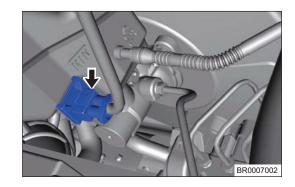


(b) Disconnect clutch hose from brake fluid reservoir assembly (for MT models).

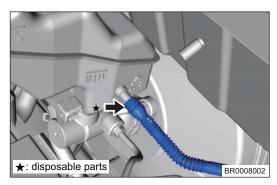

(c) Remove fixing screw (arrow) between brake fluid reservoir assembly and brake master cylinder assembly.

Tightening torque

5 ± 1 N·m

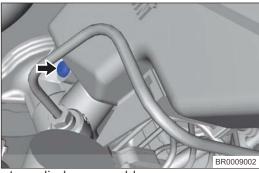

(d) Remove brake fluid reservoir assembly from brake master cylinder assembly.

Installation

Installation is in the reverse order of removal.

Hint:

Perform bleeding procedures for brake system and add brake fluid to a proper level after completing installation.

Caution:

- Clutch hose only can be used once, and cannot be used repeatedly after removal and installation.
- After hose is bent, it is normal that some material between two corrugations is "whitish".

Brake Master Cylinder Assembly

Removal

Warning/Caution/Hint

Warning:


- To prevent brake master cylinder assembly damage and other dirt from being attracted by booster, remove vacuum from vacuum booster before removing brake master cylinder assembly.
- Remove vacuum by depressing brake pedal repeatedly without engine running, until brake pedal is depressed firmly.
- · After removing brake line, sealing measure should be taken to prevent foreign matter form entering.
- 1. Drain the brake fluid.


Hint:

• Drained brake fluid should be well kept in a container. Never discard it at will.

Caution:

- Wash off brake fluid immediately if it comes in contact with any paint surface.
- 2. Remove the air filter with intake hose (See page 10-8).
- 3. Remove the brake fluid reservoir assembly.
- 4. Remove the brake master cylinder assembly.
 - (a) Loosen 2 fixing plugs (arrow) between brake master cylinder assembly and brake pipe.

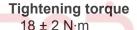


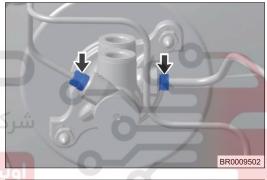

(b) Loosen 2 fixing nuts and washers (arrow) between brake master cylinder assembly and vacuum booster.

Tightening torque

13.7 - 21.6 N·m

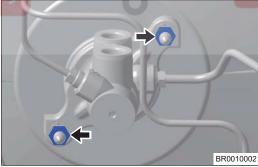

- (c) Carefully slide brake master cylinder assembly vertically out of vacuum booster.

 Caution:
 - The design of brake master cylinder assembly and piston makes piston fall out easily. To
 prevent the occurrence of this case, make sure the master cylinder is level or end surface
 faces downward (piston surface facing upward) when operating brake master cylinder
 assembly, to prevent master cylinder piston from dropping.
 - Make sure that no foreign matter adheres to brake master cylinder assembly piston. If foreign matter adheres, clean it off with a piece of clean cloth. Then, apply grease to entire outer edge contact surface of the master cylinder piston.
 - Master cylinder should be handled carefully. Avoid any impact to master cylinder, such as dropping. It cannot be reused if dropped.
 - DO NOT tap or pinch the master cylinder piston, and avoid damaging the master cylinder piston in any other wave

Installation

1. Installation is in the reverse order of removal.

Caution:

- Be sure to tighten fixing bolt and nut to specified torque during installation.
- Perform bleeding procedures for brake system and add brake fluid to a proper level after completing installation.
- Check if distance between brake master cylinder and brake pedal is within normal range after installation.

Specified distance: 125 mm







Vacuum Booster with Brake Master Cylinder Assembly


On-vehicle Inspection

- Check the vacuum booster assembly.
 - (a) Check air tightness:
 - Start engine and stop it after 1 or 2 minutes, then disconnect negative battery cable. Slowly depress the brake pedal several times.
 - Make sure that booster is airtight. Check that every pedal depression amount becomes less than the previous one. If pedal operation is not as specified, check the check valve. If check valve is normal, replace the vacuum booster assembly.
 - Start the engine. Depress and hold pedal, and then stop engine.
 - Make sure that booster is airtight. Depress and hold pedal for 30 seconds, and check that pedal reserve distance does not change.
 - (b) Check operation.
 - Stop engine and disconnect negative battery cable.
 - Depress the pedal several times and check that pedal reserve distance does not change.

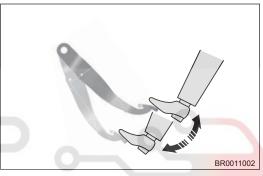

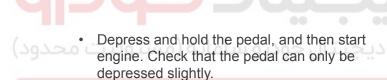

بن سامانه دیجیتال تعمیرکاران خودرو در ایران

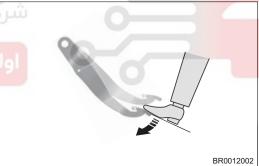

• If pedal operation is not as specified, check the check valve. If check valve is normal, replace the vacuum booster assembly.

Removal

Drain the brake fluid.

Hint:


· Drained brake fluid should be well kept in a container. Never discard it at will.

Caution:


- Wash off brake fluid immediately if it comes in contact with any paint surface.
- 2. Disconnect the negative battery cable.
- 3. Remove the brake fluid reservoir assembly.
- 4. Remove the vacuum booster with brake master cylinder assembly.

(a) Loosen 2 fixing plugs (arrow) between brake master cylinder assembly and brake pipe.


Tightening torque 18 ± 2 N·m

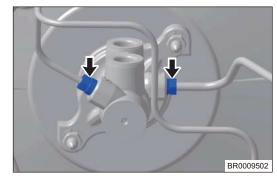

(b) Detach vacuum tube assembly with check valve (arrow) from vacuum booster assembly.

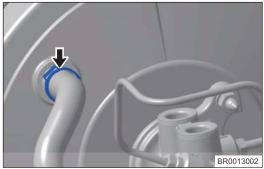


(c) Remove locking pin (2) and push rod pin (1) from vacuum booster push rod and disengage brake pedal assembly.

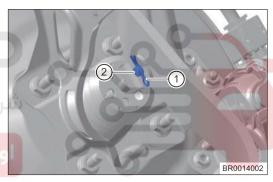

(d) Remove 4 fixing nuts (arrow) between vacuum booster assembly and brake pedal assembly.

Tightening torque 23 ± 2 N·m

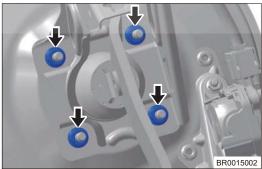


- (e) Move away the brake pedal.
- (f) Remove vacuum booster with brake master cylinder assembly from engine compartment.

Inspection

- Check the check valve.
 - (a) Remove check valve from vacuum tube assembly.

(b) Check that there is airflow (A) from vacuum booster to engine, and no airflow (B) from engine to vacuum booster.

If result is not as specified, replace vacuum tube assembly.

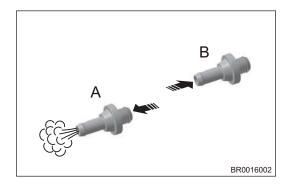

Installation

1. Installation is in the reverse order of removal.

Caution:

- Be sure to tighten fixing bolt and nut to specified torque during installation.
- Perform bleeding procedures for brake system and add brake fluid to a proper level after completing installation.
- It is necessary to check or adjust brake switch assembly after removing vacuum booster with brake master cylinder assembly (Refer to installation of brake switch assembly).







Brake Pedal Assembly

Removal


- 1. Remove the brake light switch assembly.
 - (a) Disconnect brake light switch assembly wire harness connector (1) and brake pedal fixing clip (2).

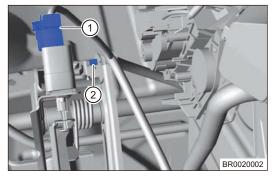

(b) Press switch by hand and turn it counterclockwise, align the switch body with lengthwise direction of pedal installation hole, and pull out brake switch assembly along opening of pedal, then remove brake switch assembly.

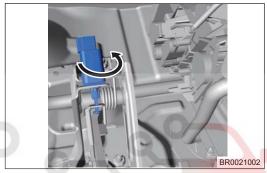


- 2. Remove the brake pedal assembly.
 - (a) Remove locking pin (2) and push rod pin (1) from vacuum booster push rod and disengage brake pedal assembly.

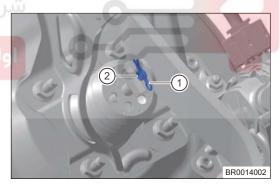


(b) Remove 4 fixing nuts (arrow) between vacuum booster assembly and brake pedal assembly.

Tightening torque 23 ± 2 N·m

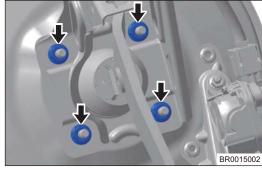

(c) Remove fixing nut (arrow) between brake pedal assembly and body.

Tightening torque 23 ± 2 N·m

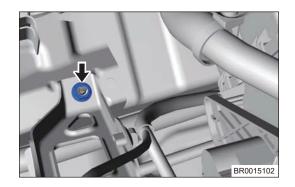


(d) Remove brake pedal assembly from cabin.

Inspection

- 1. Check the brake light switch assembly.
 - (a) Using ohm band of digital multimeter, check for continuity between brake light switch assembly terminals according to table below.

Multimeter Connection	Switch Condition	Specified Condition	
Terminal 1 - Terminal 3	Brake pedal depressed (switch pin released)	≤ 1 Ω	
Terminal 2 - Terminal 4	Brake pedal depressed (switch pin released)		
Terminal 1 - Terminal 3	Brake pedal released (switch pin pushed)	∞	
Terminal 2 - Terminal 4	Brake pedal released (switch pin pushed)	≤ 1 Ω	

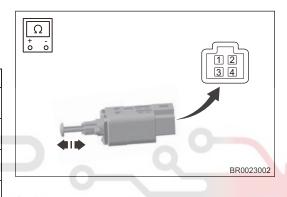


Hint:

 If result is not as specified, replace brake light switch assembly.

Installation


- 1. Install the brake pedal assembly. (Installation is in the reverse order of removal)
- 2. Install the brake switch assembly.
 - (a) Before assembling brake switch to vehicle, the lever must be pulled out completely. If the switch lever cannot be pulled out in the direction of axis, the lever has been pulled to the longest.
 - (b) Depress brake pedal fully, align brake switch body with mounting hole of pedal and insert it into mounting hole, press switch and turn it clockwise to clamp switch clip into clip hole of pedal (before assembly, brake pedal has been installed to brake master cylinder).

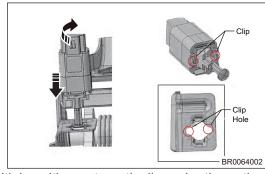

24

(c) Release brake pedal slowly to return brake pedal to initial position automatically under the action of return spring, and automatically adjust brake switch lever to appropriate gear position simultaneously.

(d) Connect the back light switch assembly wire harness connector (arrow).

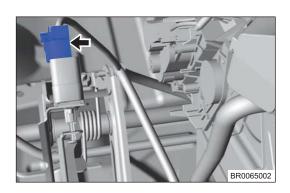

(e) Installation is finished.

Caution:


- After completing installation, brake pedal should fully contact with brake switch lever (lever is compressed).
- After brake pedal is fully depressed, the hand should not release pedal during auto return of pedal and make pedal return to original position slowly. Avoid releasing pedal suddenly, large impact may lead brake switch to jump.
- Be sure to tighten fixing nuts to specified torques during installation.
- Check that brake light operates normally after installation.
- Check if brake pedal travel is within normal range after installing brake pedal.
 Normal range: ≥ 120 mm





Front Disc Brake Assembly


Description

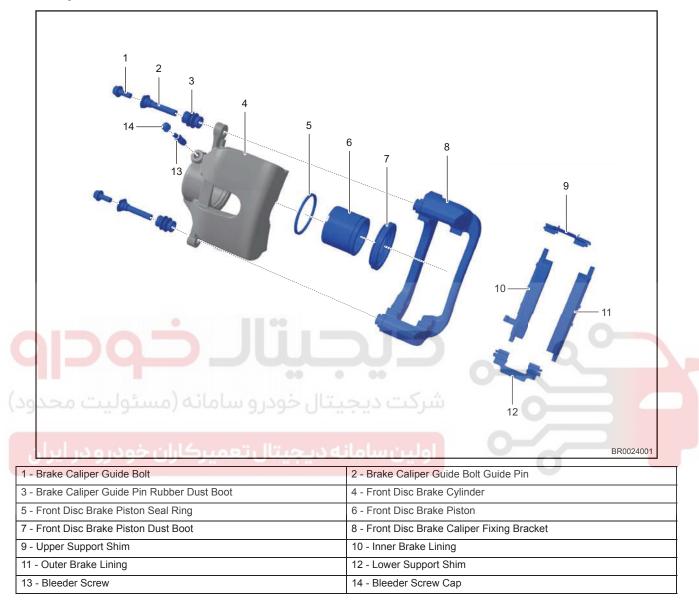

On-vehicle Inspection

- 1. Check the brake disc runout.
 - (a) Remove the front wheel.
 - (b) Fix dial indicator (1) to a proper position, then set its pointer to a position about 10 mm from out edge of brake disc.

(c) Turn brake disc (2) slowly and check its runout, mark the lowest and highest points and record these measured value.

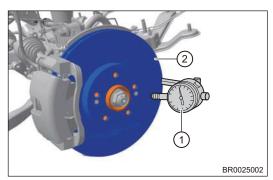

- (d) Check the runout on the other side of brake disc in the same manner, mark the lowest and highest points and record these measured value.
- (e) Compare recorded runout value with limit value. Front brake disc runout: Less than 0.06 mm
- (f) If runout exceeds the maximum value, replace brake disc.

Removal

Warning/Caution/Hint

Hint:

- · Use same procedures for right and left sides.
- · Procedures listed below are for left side.
- 1. Remove the front left wheel (See page 22-8).
- 2. Remove the front left brake caliper assembly.
 - (a) Remove 2 coupling bolts (1) between front left brake caliper assembly and front left steering knuckle.

Tightening torque
90 - 110 N·m


(b) Remove coupling plug (arrow) between front left brake caliper assembly and front left brake hose assembly.


Tightening torque 20 ± 2 N·m

Caution:

- DO NOT allow brake fluid to be sprayed on your clothes or skin when removing brake hose, as brake fluid is corrosive.
- (c) Remove the front left brake caliper assembly.
- Remove the front left brake disc.
 - (a) Remove 2 locating screws (arrow) and front left brake disc.

Tightening torque 4.5 ± 0.5 N·m

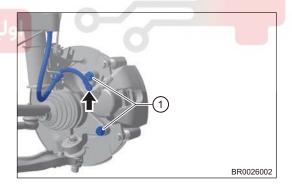

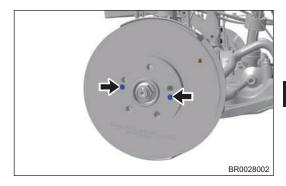

Disassembly


Warning/Caution/Hint

Hint:

- Use same procedures for right and left sides.
- · Procedures listed below are for left side.
- 1. Remove the bleeder screw (with bleeder screw cap).
 - (a) Remove bleeder screw (with bleeder screw cap) (arrow) from brake caliper assembly.

Tightening torque


9 - 11 N·m

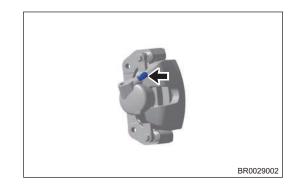

- Remove the brake cylinder assembly.
 - (a) Remove 2 guide bolts (arrow) between brake caliper fixing bracket and brake cylinder assembly.

Tightening torque


22 - 32 N·m

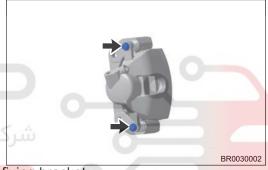


- (b) Separate brake cylinder assembly from brake caliper fixing bracket.
- 3. Remove the front brake caliper guide bolt guide pin (with dust boot).
 - (a) Remove 2 brake caliper guide bolt guide pins (with dust boot) (arrow) from brake caliper fixing bracket.



- Remove the front brake lining.
 - (a) Remove inner brake lining and outer brake lining (arrow) from brake caliper fixing bracket.

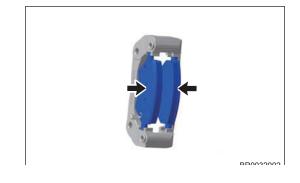


- 5. Remove the brake lining support shim.
 - (a) Remove 2 brake lining support shims (arrow) from brake caliper fixing bracket.

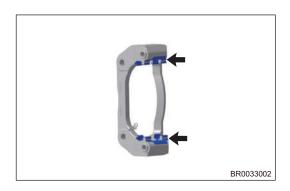

Inspection


- 1. Check brake caliper fixing bracket and brake caliper guide pin set.
 - (a) Clean the contact surfaces of brake caliper fixing bracket and brake lining support shims with brake cleaner. Check for deformation, cracks, rust and foreign matter which is difficult to remove.
 - (b) Check brake caliper guide pin rubber dust boot for deformation, cracks, wear and foreign matter which is difficult to remove.
 - (c) Install the brake caliper guide pin and its rubber dust boot to brake caliper fixing bracket. Brake caliper guide pin set should move smoothly without sticking when pushing it with hand; otherwise replace it.
 - (d) After installing the brake lining, check if it is easy to drop (due to insufficient elasticity of support shim). Replace as necessary.
- 2. Check the brake lining.
 - (a) Visually check the brake lining for flatness, and also check for excessive wear. If the condition of lining cannot be confirmed accurately only by visual inspection, perform physical inspection as necessary.
 - (b) Measure the minimum brake lining thickness. When the minimum thickness of brake lining is 2 mm or less, replace the brake linings.

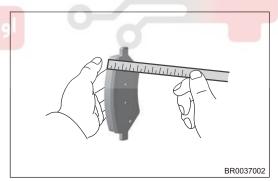

- (c) When replacing the excessively worn brake linings (inner and outer), it is also necessary to replace the linings on opposite side of vehicle as well as unchecked linings to maintain proper braking performance. If it is unnecessary to replace brake linings, be sure to reinstall brake linings to original positions.
- 3. Check the brake disc.
 - (a) Minor scratch or wear on brake disc surface is acceptable. If severe scratch or deformation exists, the brake disc must be replaced.
 - (b) Excessive wear of brake disc may cause poor contact between brake lining and surface of brake disc. If protrusion on the disc is not removed before installing new brake lining, it will cause abnormal wear of brake disc.
 - (c) It is normal that the surface of brake disc is worn when replacing brake lining. If cracks or burned spots exist, the brake disc must be replaced.

- 4. Check the brake disc thickness.
 - (a) Using a vernier caliper, measure brake disc thickness at center of brake lining contact surface as shown in illustration.

Standard thickness: 25 mm Minimum thickness: 23 mm

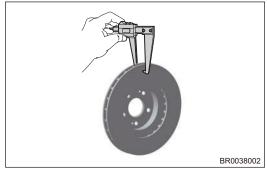

- (b) If it is less than the minimum thickness due to wear, replace brake disc.
 - DO NOT machine the brake disc, because it may make brake disc thickness less than the minimum thickness.

Assembly

Warning/Caution/Hint


- · Use same procedures for right and left sides.
- · Procedures listed below are for left side.

Hint

- When assembling brake caliper assembly, always keep your hands clean.
- When assembling brake caliper assembly, always use new clean brake fluid.
- Never use old front disc brake piston seal ring.
- 1. Install the brake lining support shim.
- (a) Securely install upper and lower support shims

 (arrow) onto brake caliper fixing bracket.




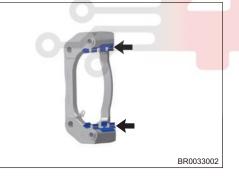

- 2. Install the front brake lining.
 - (a) Securely install inner brake lining and outer brake lining (arrow) onto brake caliper fixing bracket.Make sure they are clamped in place.

Caution:


 Make sure contact surface of lining and brake disc is free of oil and grease.

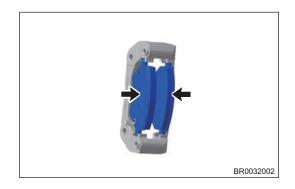

- Install the front brake caliper guide bolt guide pin (with dust boot).
 - (a) Apply a small amount of grease to the contact surface between guide bolt guide pin and guide pin rubber dust boot (arrow), and securely install them to brake caliper fixing bracket.




- Install the brake cylinder assembly.
 - (a) Using G type pliers, slightly retract brake cylinder piston.

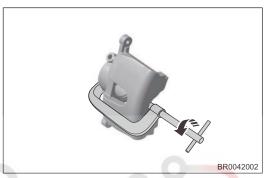

Align brake caliper guide bolts (arrow) with guide pin holes and securely install brake cylinder assembly.

Tightening torque


22 - 32 N·m

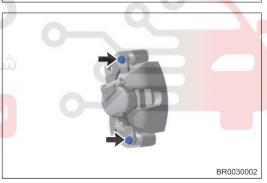

- 5. Install the bleeder screw (with bleeder screw cap).
 - (a) Securely install bleeder screw (with bleeder screw cap) (arrow) to front brake caliper assembly.

Tightening torque

9 - 11 N·m

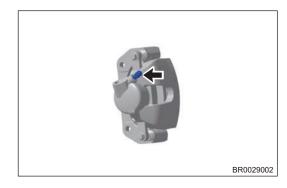

Installation

Installation is in the reverse order of removal.

Caution:

- Make sure contact surface of lining and brake disc is free of oil and grease.
- · Make sure contact surface of lining and brake disc is free of oil and grease.
- Before installing brake linings, completely retract brake caliper piston back into bore of brake caliper.
- Depress brake pedal several times to secure brake linings to brake disc in order to ensure safety after installing brake linings and before moving vehicle.
- Replace the brake linings in pairs. DO NOT replace one alone.
- DO NOT install inner brake lining and outer brake lining reversely.
- Be sure to check brake system for leakage after installation. Repair or replace malfunctioning parts as necessary.
- Be sure to perform bleeding procedures for brake system after installation.
- Be sure to add brake fluid to a proper level after installation.





Front Brake Hose Assembly

Removal

Warning/Caution/Hint

Warning:

- Be sure to wear necessary safety equipment to prevent accidents when repairing.
- Try to prevent body paint surface from being scratched during removal and installation.

Hint:

- · Use same procedures for right and left sides.
- · Procedures listed below are for left side.
- 1. Remove the front left wheel (See page 22-8).
- 2. Drain the brake fluid.

Hint:

· Drained brake fluid should be well kept in a container. Never discard it at will.

Caution:


- Wash off brake fluid immediately if it comes in contact with any paint surface.
- 3. Remove the front left brake hose assembly.
 - (a) Loosen coupling bolt (arrow) between front left brake hose assembly and front left brake pipe, and disengage fixing clip (1).

Tightening torque

18 ± 2 N·m

Caution:

- DO NOT bend or damage brake tube.
- DO NOT allow any foreign matter such as dirt and dust to enter brake pipe from joint parts.
 - After removing brake line, perform sealing treatment to prevent foreign matter from entering.
- (b) Disengage fixing part (arrow) of front left brake hose assembly from front left shock absorber assembly.

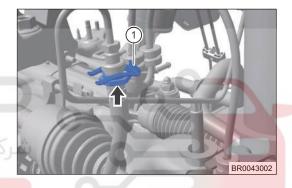




(c) Remove coupling plug (arrow) between front left brake caliper assembly and front left brake hose assembly.

Tightening torque

20 ± 2 N·m

Caution:

- DO NOT allow brake fluid to be sprayed on your clothes or skin when removing brake hose, as brake fluid is corrosive.
- (d) Remove the front left brake hose assembly.

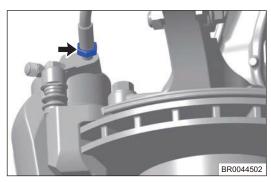


Installation

- Installation is in the reverse order of removal.
 - Be sure to tighten fixing plugs to specified torques during installation.
 - Be sure to check brake system for leakage after installation. Repair or replace malfunctioning parts as necessary.
 - Be sure to perform bleeding procedures for brake system after installation.
 - Be sure to add brake fluid to a proper level after installation.




Rear Disc Brake Assembly

Description

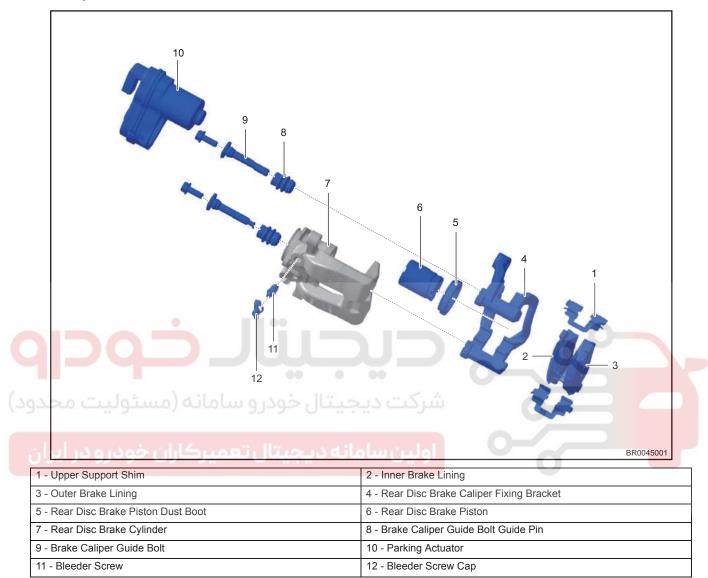

On-vehicle Inspection

- 1. Check the brake disc runout.
 - (a) Remove the rear wheel.
 - (b) Fix dial indicator (1) to a proper position, then set its pointer to a position about 10 mm from out edge of rear brake disc.
 - (c) Turn brake disc (2) slowly and check its runout, mark the lowest and highest points and record these measured value.

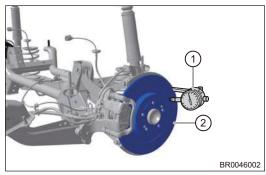

- (d) Check the runout on the other side of brake disc in the same manner, mark the lowest and highest points and record these measured value.
- (e) Compare recorded runout value with limit value. Rear brake disc runout: Less than 0.06 mm
- (f) If runout exceeds the maximum value, replace brake disc.

Removal

Warning/Caution/Hint Hint:

- · Use same procedures for right and left sides.
- Procedures listed below are for left side.
- 1. Remove the rear left wheel (See page 22-8).
- Remove the rear left brake caliper assembly.Caution:
 - Be sure to perform "Enter Parking Brake Maintenance Mode" using diagnostic equipment before removal.
 - (a) Unplug parking actuator connector (arrow) from EPB caliper.



(b) Remove coupling bolt and washer (arrow) between rear left brake caliper assembly and rear left brake hose assembly.

Tightening torque


27 ± 2 N·m


Caution:

- DO NOT allow brake fluid to be sprayed on your clothes or skin when removing brake hose, as brake fluid is corrosive.
- (c) Remove coupling bolts (arrow) between rear left brake caliper assembly and left brake caliper mounting board assembly.

Tightening torque

90 - 110 N·m

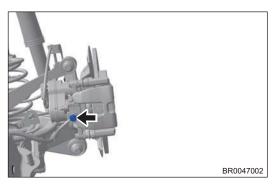

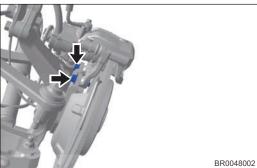


- (d) Remove the rear left brake caliper assembly.
- 3. Remove the rear left brake disc.
 - (a) Remove locating screws (arrow) from rear left brake disc, and remove rear left brake disc.

Tightening torque

4.5 ± 0.5 N·m

ین سامانه دیجیتال تعمیرکاران خودرو در ایران

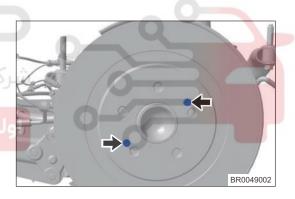

Disassembly


Warning/Caution/Hint

Hint:

- · Use same procedures for right and left sides.
- · Procedures listed below are for left side.
- 1. Remove the parking actuator.
 - (a) Remove 2 parking actuator fixing screws.

Tightening torque


9 - 11 N·m

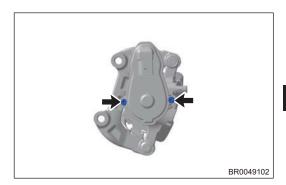

- 2. Remove the bleeder screw (with bleeder screw cap).
 - (a) Remove bleeder screw (with bleeder screw cap) (arrow) from brake caliper assembly.

Tightening torque


9 - 11 N·m

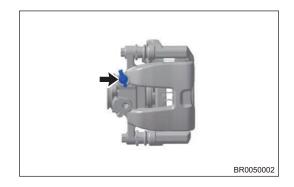

- 3. Remove the brake cylinder assembly.
 - (a) Remove 2 guide bolts (arrow) between brake caliper fixing bracket and brake cylinder assembly.

Tightening torque


22 - 32 N·m

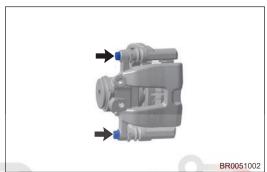


(b) Separate brake cylinder assembly from brake caliper fixing bracket.

Warning:


- Slowly operate when performing this procedure using caliper with slanted spring, or brake plate may be popped out by spring, be careful not to injuring your feet.
- 4. Remove the rear brake caliper guide bolt guide pin (with dust boot).
 - (a) Remove 2 brake caliper guide bolt guide pins (with dust boot) (arrow) from brake caliper fixing bracket.

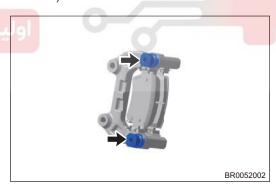

- 5. Remove the rear brake lining.
 - (a) Remove inner brake lining and outer brake lining (arrow) from brake caliper fixing bracket.

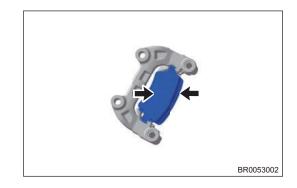


- Remove the brake lining support shim.
 - (a) Remove 2 brake lining support shims (arrow) from brake caliper fixing bracket.

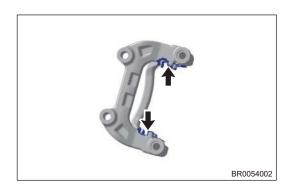

Inspection


- 1. Check brake caliper fixing bracket and brake caliper guide pin set.
 - (a) Clean the contact surfaces of brake caliper fixing bracket and brake lining support shims with brake cleaner. Check for deformation, cracks, rust and foreign matter which is difficult to remove.
 - (b) Check brake caliper guide pin rubber dust boot for deformation, cracks, wear and foreign matter which is difficult to remove.
 - (c) Install the brake caliper guide pin and its rubber dust boot to brake caliper fixing bracket. Brake caliper guide pin set should move smoothly without sticking when pushing it with hand; otherwise replace it.
 - (d) After installing the brake lining, check if it is easy to drop (due to insufficient elasticity of support shim). Replace as necessary.
- Check the brake lining:
 - (a) Visually check the brake lining for flatness, and also check for excessive wear. If the condition of lining cannot be confirmed accurately only by visual inspection, perform physical inspection as necessary.
 - (b) Measure the minimum brake lining thickness. When the minimum thickness of brake lining is 2 mm or less, replace the brake linings.

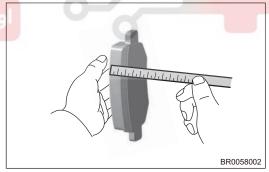

- (c) When replacing the excessively worn brake linings (inner and outer), it is also necessary to replace the linings on opposite side of vehicle as well as unchecked linings to maintain proper braking performance. If it is unnecessary to replace brake linings, be sure to reinstall brake linings to original positions.
- 3. Check the brake disc:
 - (a) Minor scratch or wear on brake disc surface is acceptable. If severe scratch or deformation exists, the brake disc must be replaced.
 - (b) Excessive wear of brake disc may cause poor contact between brake lining and surface of brake disc. If protrusion on the disc is not removed before installing new brake lining, it will cause abnormal wear of brake disc.
 - (c) It is normal that the surface of brake disc is worn when replacing brake lining. If cracks or burned spots exist, the brake disc must be replaced.

- 4. Check the brake disc thickness.
 - (a) Using a vernier caliper, measure brake disc thickness at center of brake lining contact surface as shown in illustration.

Standard thickness: 10 mm Minimum thickness: 8 mm

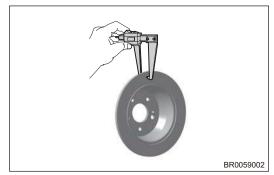

- (b) If it is less than the minimum thickness due to wear, replace brake disc. **Caution:**
 - DO NOT machine the brake disc, because it may make brake disc thickness less than the minimum thickness.

Assembly


Warning/Caution/Hint

Hint:

- · Use same procedures for right and left sides.
- Procedures listed below are for left side.

Hint:


- When assembling brake caliper assembly, always keep your hands clean.
- When assembling brake caliper assembly, always use new clean brake fluid.
- Never use old rear disc brake piston seal ring.
- 1. Install the brake lining support shim.
 - (a) Securely install upper and lower support shims (arrow) onto brake caliper fixing bracket.

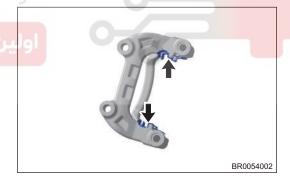


- Install the rear brake lining.
 - (a) Securely install inner brake lining and outer brake lining (arrow) onto brake caliper fixing bracket.Make sure they are clamped in place.

Caution:


 Make sure contact surface of lining and brake disc is free of oil and grease.

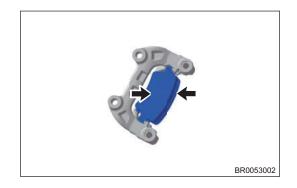

- 3. Install the rear brake caliper guide bolt guide pin (with dust boot).
 - (a) Apply a small amount of grease to the contact surface between guide bolt guide pin and guide pin rubber dust boot (arrow), and securely install them to brake caliper fixing bracket.

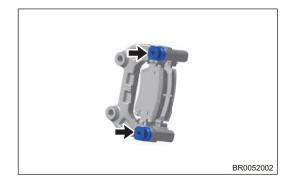

- 4. Firmly press the brake piston.
 - (a) Using brake cylinder piston pressing tool, slightly retract brake cylinder piston.

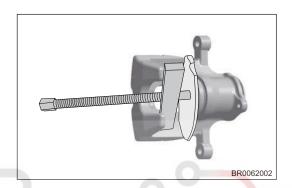


- 5. Install the slanted spring.
 - (a) Pinch the well installed brake plate with hand, so that it closes to brake disc.
 - (b) Install 2 legs of slanted spring into small holes on support lugs at the same side of inner and outer brake plates separately, and install slanted spring on the other side while keeping brake plates clamped.

Warning:

- Slowly operate when performing this procedure using caliper with slanted spring, or brake
 plate may be popped out by spring, be careful not to injuring your feet.
- 6. Install the brake cylinder assembly.
 - (a) Align brake caliper guide bolts (arrow) with guide pin holes and securely install brake cylinder assembly.

Tightening torque


22 - 32 N·m

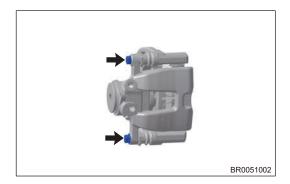

- 7. Install the bleeder screw (with bleeder screw cap).
 - (a) Securely install bleeder screw (with bleeder screw cap) (arrow) to rear brake caliper assembly.

Tightening torque


9 - 11 N·m

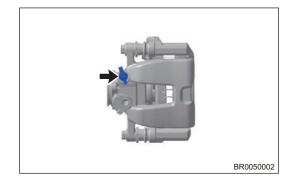

- 8. Install the parking actuator.
 - (a) Install 2 parking actuator fixing screws.

Tightening torque

9 - 11 N·m

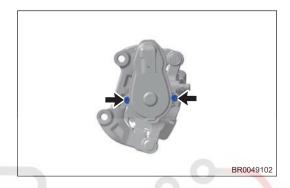

Installation

1. Installation is in the reverse order of removal.

خودرو سامانه (مستول:Caution

- · Make sure to tighten fixing bolt and nut to specified torque during installation.
- Before installing brake linings, completely retract brake caliper piston back into bore of brake caliper.
- Depress brake pedal several times to secure brake linings to brake disc in order to ensure safety after installing brake linings and before moving vehicle.
- Replace the brake linings in pairs. DO NOT replace one alone.
- DO NOT install inner brake lining and outer brake lining reversely.
- Be sure to check brake system for leakage after installation. Repair or replace malfunctioning parts as necessary.
- Be sure to perform bleeding procedures for brake system after installation.
- Be sure to add brake fluid to a proper level after installation.
- Be sure to perform "Exit Parking Brake Maintenance Mode" using diagnostic equipment after installation.

BR0047002

Rear Brake Hose Assembly

Removal

Warning/Caution/Hint

Caution:

- Be sure to wear necessary safety equipment to prevent accidents when repairing.
- Try to prevent body paint surface from being scratched during removal and installation.

Hint:

- · Use same procedures for right and left sides.
- · Procedures listed below are for left side.
- 1. Drain the brake fluid.

Hint:

· Drained brake fluid should be well kept in a container. Never discard it at will.

Caution

- Wash off brake fluid immediately if it comes in contact with any paint surface.
- . Remove the rear left brake hose assembly.
 - (a) Remove coupling bolt and washer (arrow) between rear left brake caliper assembly and rear left brake hose assembly.

Tightening torque

27 ± 2 N·m

Caution:

- DO NOT allow brake fluid to be sprayed on your clothes or skin when removing brake hose, as brake fluid is corrosive.
- (b) Loosen coupling plug (arrow) between rear left brake hose assembly and rear brake pipe, and move away clip (1).

Tightening torque

18 ± 2 N·m

Caution:

- DO NOT bend or damage brake tube.
- DO NOT allow any foreign matter such as dirt and dust to enter brake pipe from joint parts.
- After removing brake line, perform sealing treatment to prevent foreign matter from entering.
- (c) Remove the rear left brake hose assembly.

Installation

1. Installation is in the reverse order of removal.

Caution:

- Be sure to tighten bolts and plugs in place during installation.
- Be sure to check brake system for leakage after installation. Repair or replace malfunctioning parts as necessary.
- Be sure to perform bleeding procedures for brake system after installation.
- Be sure to add brake fluid to a proper level after installation.


Vacuum Pump Assembly

Removal

Warning/Caution/Hint

Caution:

- Be sure to wear necessary safety equipment to prevent accidents when repairing.
- Try to prevent body paint surface from being scratched during removal and installation.
- 1. Remove the air filter assembly (See page 10-8).
- 2. Remove the vacuum pump assembly
 - (a) Disconnect the vacuum pump connector (arrow).

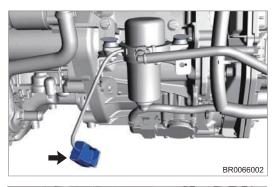


(b) Press the vacuum tube connector, remove vacuum tube (1), 2 vacuum pump fixing bolts (arrow) and vacuum pump assembly.



، دیجیتال خودرو سامانه (مسئولیت محدود)

3. Remove the vacuum pump mounting bracket.

(a) Remove 2 fixing bolts (arrow) of vacuum pump mounting bracket.

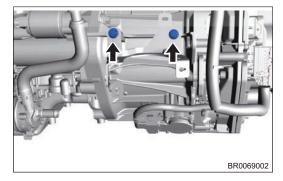

(b) Remove the vacuum pump mounting bracket.

Installation

Installation is in the reverse order of removal.

Caution:

- Be sure to tighten bolts and plugs in place during installation.
- Be sure to check whether the vacuum tube is stuck in place after installation. Repair or replace malfunctioning parts as necessary.

ELECTRONIC PARKING BRAKE SYSTEM

GENERAL INFORMATION	25-3	C1801-97	25-35
Description	25-3	C1802-17	25-40
Overview	25-3	C1802-16	25-41
Function Description	25-3	C1803-95	25-43
System Function Introduction	25-4	C1804-53	25-44
Meter Indicator Light and Prompt		C182B-62	25-45
Information	25-8	C1824-01	25-47
Specifications	25-8	C1822-00	25-47
Tool Drawings	25-8	C1824-1E	25-47
DIAGNOSIS & TESTING	25-9	C1825-01	25-52
		C1821-00	25-52
Diagnosis Content	25-9	C1825-1E	25-52
Diagnostic Help	25-9	C1830-00	25-57
Intermittent Troubleshooting	25-9	C1831-00	25-57
Ground Inspection	25-9	C1833-00	25-59
DTC Confirmation Procedure	25-9	C1832-00	25-59
Diagnosis Procedure	25-10	C1826-01	25-62
Diagnostic Trouble Code (DTC) Chart	25-12	C1807-98	25-64
C1800-93	25-13	C1806-16	25-66
C1801-93	25-13	C1823-00	25-70
C1800-19	25-18	ON-VEHICLE SERVICE	25-72
C1801-19	25-18		25-72
292C1800-749(audu 9)29	25-22	EPB system	25-72 25-72
C1801-74	25-22	On-vehicle Inspection	
C1800-73	25-24	Integrated Caliper Motor	25-73
C1801-73	25-24	Removal	25-73
C1800-72	25-29	EPB Brake Caliper Emergency Release	25-74
C1801-72	25-29	Installation	25-74
C1800-91	25-31	Rear Brake Lining	25-7 - 25-75
C1801-91	25-31	Removal	25-75
C1800-92	25-33 25-33	EPB Switch	25-75 25-82
C1801-92			
C1800-97	25-35	Inspection of EPB switch	25-82






GENERAL INFORMATION

Description

Overview

ELECTRICAL PARKING BRAKE

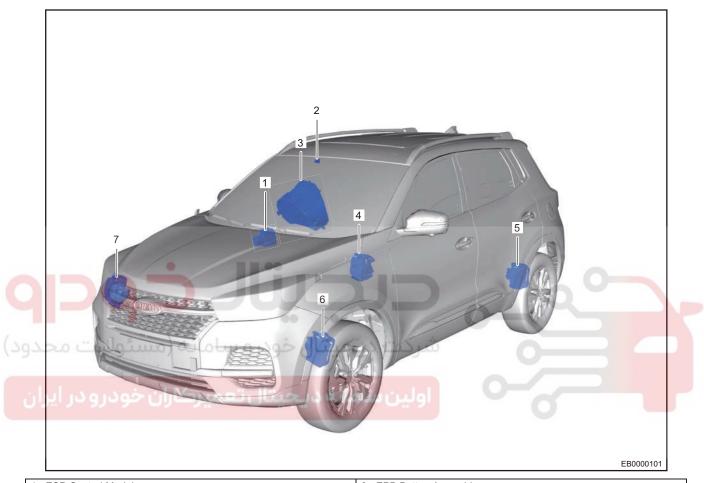

1 - ESP Control Module	2 - EPB Button Assembly
3 - Meter	4 - Rear Right Integrated Caliper Assembly
5 - Rear Left Integrated Caliper Assembly	6 - Front Left Brake Caliper Assembly
7 - Front Right Brake Caliper Assembly	

Function Description

EPB (Electrical Parking Brake) system: electrical parking brake system can apply parking brake and emergency brake by electronic control, and traditional handbrake operation is replaced by electronic parking button.

Automatic parking function: stop vehicle by service brake, release brake pedal to park automatically.

System Function Introduction

I: Manual Parking Function

Function	Vehicle Status	Engine Status		EPB Status	Operation	HMI S	Status
			Key Status		Method	Instrument Cluster	Switch
	ting Stationary	Ignited	ON	Released		Red P light	EPB switch
		Stall	ON			comes on	indicator comes on
Manual Parking		Within 20 s after stalling	OFF		Pull up EPB switch	(goes off 20 seconds after engine stalled)	comes on (goes off 20 seconds after engine stalled)

II: Manual Releasing Function

		Engine			Operation	HMI Status		
Function Ve	Vehicle Status	Status	Key Status	EPB Status	Method	Instrument Cluster	Switch	
Manual Releasing					Depress brake pedal and press EPB switch simultaneously	Red P light	EPB switch	
Function	Stationary	Ignited/Stall	ON	Firmly applied	Depress accelerator pedal and press EPB switch simultaneously	goes off	indicator goes off	

III: Stall and Park

With vehicle in stationary status, turn off engine with key or turn key to OFF from ON position, EPB system will park automatically.

For vehicles with start and stop function, when engine stalls with start and stop function operating, parking state of vehicle will not change.

Automatic parking also operates at stall when starting off.

Function		Engine Status			Operation	HMIS	HMI Status		
	Vehicle Status		Key Status	EPB Status	Method	Instrument Cluster	Switch		
		Ignited				Red P light	EPB switch		
Automatic Parking	Stationary	Stall	ON → OFF	Released	Turn ENGINE START STOP switch to OFF	comes on (goes off 20 seconds after engine stalled)	indicator comes on (goes off 20 seconds after engine stalled)		

IV: EPB Automatic Releasing

	Vehicle	Engine	Kev	EPB	Driver	Driver Gear		HMI S	Status
Function	Status	Status	Status	Status	Seat Belt Status	Position	Operation Method	Instrument Cluster	Switch
EPB Automatic Releasing	Stationary	Ignited	ON	Firmly applied	Closed	Driving or reverse position	Accelerator pedal depressed	Red P light goes off	EPB switch indicator goes off

- V: Automatic Parking Function ON
- 1. This function is four wheels parking brake supplied by ESP system.
- 2. After automatic parking, when any of following conditions is met, automatic parking will exit and turn to electrical caliper parking, parking light will turn to red P from green P, and a "fizz" sound of electrical caliper will be heard and it is normal operating sound; if there is a malfunction in system, yellow P comes on simultaneously.
- a. Automatic parking is more than 10 minutes.
- b. Turn automatic parking function off manually.
- c. Release seat belt.
- d. Open driver door.
- e. ESP system is malfunctioning.
- f. Engine stall.
- 3. Operation methods for automatic parking and automatic releasing are as shown in table below.

	Vehicle Status	Engine	Driver Door	Driver Seat	Operation	HMI Status		
Function		Status	Status	Belt Status	Method	Instrument Cluster	Switch	
Automatic Parking Function ON	1	Ignited	Closed	Locking	Press automatic parking switch	Automatic parking function is turned on	Automatic parking switch indicator comes on	

VI: Automatic Parking Activation

		Vehicle	Engine	EPB Status	Driver Door	Driver Seat Belt Status	Operation Method	HMI Status	
	Function	Status	Status		Status			Instrument Cluster	Switch
		Stationary		00 0	00				Automatic
30	Automatic Parking Activation	Driving → Stationary	Ignited	Released	Closed	Locking	Depress brake pedal	Green P light comes on	parking switch indicator comes on

VII: Automatic Releasing

4		Vehicle	Engine	Gear	Automatic	Driver Door	Driver Seat	Driver Seat	Driver Seat	Operation	HMI Status	
	Function	Status	Status	Position Status	Parking Status	Status	Belt Status	Method	Instrument Cluster	Switch		
	Automatic Releasing	Stationary	Ignited	Driving or reverse position	Reclamping	Closed	Locking	Accelerator pedal depressed	Green P light goes off	Automatic parking switch indicator comes on		

VIII: Reclamping Function

- 1. If system enters parking status after keeping brake disc at excessively high temperature for a long time (under conditions such as service brake or down-hill HDC ON), electric parking system will perform second clamping according to the brake disc temperature for safety; during the second clamping process, system will produce a certain operating sound, which is normal.
- 2. If vehicle coasts after stopping (within 10 minutes), for safety, system will increase parking brake force automatically, to make vehicle stationary; during the process of increasing parking brake force, system will produce a certain operating sound, which is normal.
- 3. Functions of reclamping at coasting and reclamping at high temperature are performed automatically by system without any operation.

Function					HMI S	Status
	Vehicle Status	Engine Status	Key Status	EPB Status	Instrument Cluster	Switch
Reclamping at Coasting					Red P light	EPB switch
Reclamping at High Temperature	Stationary	Ignited/Stall	Within 10 minutes after ON or OFF	Reclamping	comes on (goes off 20 seconds after engine stalled)	indicator comes on (goes off 20 seconds after engine stalled)

IX: Trailer Mode

- 1. EPB caliper will not clamp automatically after stalling in trailer mode for towing vehicle.
- 2. Operation method for entering trailer mode is as shown in table below.

		Engine			Operation	HMI Status		
Function	Vehicle Status	Status	Key Status	EPB Status	Method	Instrument Cluster	Switch	
Trailer Mode	Stationary	Ignited/Stall	ON	Released	Turn off engine while keeping EPB switch pressed	No P light comes on	No indicator comes on	

X: Roller Mode

- 1. This mode is used in brake detection during annual inspection of vehicle. EPB system will enter roller mode automatically only when following conditions are met without performing other operations, and there is no any indication on instrument cluster.
- 2. Operation method for entering roller mode is as shown in table below.

				Operation	HMI Status		
Function	Vehicle Status	Engine Status	Key Status	Method	Instrument Cluster	Switch	
Roller Mode	Driving	Ignited	ON	Front wheel speed is 1 km/h or less; rear wheel speed is 1.5-18 km/h; difference between two wheels speed is 5 km/h or less	No P light comes on	No indicator comes on	

XI: Service Mode

- 1. This mode is used when checking and repairing EPB system.
- 2. When entering service mode, EPB caliper will be released in place automatically.
- 3. Never perform "Exit Maintenance Mode" if inspection and repair of vehicle are not finished, to prevent serious accident.
- 4. Diagnostic tester must be used to perform "Exit Maintenance Mode" after inspection and repair of vehicle are finished (such as replacing brake linings with new ones), failure to do so may cause vehicle to lose EPB function, however, conventional braking will not be affected.
- 5. When service mode function is triggered, a "drone" sound will be heard, it is normal.
- 6. Operation methods for entering and exiting service mode are as shown in table below.

		Engine Status		Operation	HMIS	Status
Function	Vehicle Status		Key Status	Method	Instrument Cluster	Switch
Service Mode	Stationary	Ignited/Stall	ON	Entering or exiting is performed using diagnostic tester or by professional technicians at 4S shop	Red P and yellow P lights flash when entering service mode, and reflect EPB status of real- vehicle after exiting service mode	Reflect EPB status of real vehicle

XII: Emergency Brake

- 1. This function is used when service brake becomes unavailable. Never use electric parking brake on this vehicle in emergency case other than service brake failure.
- 2. Emergency brake refers to the ESP system brake, and the brake force is constant during emergency brake.
- 3. Brake light comes on normally during emergency brake.
- 4. When emergency brake function is triggered, a "drone" sound will be heard, it is normal.
- 5. Operation methods for entering and exiting emergency brake are as shown in table below.

00.7 77 77		11 1 11	Operation HMI Status		Status	
Function	Vehicle Status	Engine Status	Key Status	Method	Instrument Cluster	Switch
Entering Emergency Brake	Driving	Ignited/Stall	ON	Pull up EPB switch and hold it when vehicle speed is more than 3 km/h	Red P light flashes	EPB switch indicator flashes
Exiting Emergency Brake	Driving	Ignited/Stall	ON	Release EPB switch/depress accelerator pedal	No P light comes on	No indicator comes on
	Driving → Stationary			Stop vehicle		

Meter Indicator Light and Prompt Information

No.	Indicator Light Condition or Prompt Information	Indicator Light Description	Treatment
1	Yellow P light - remains ON	EPB system malfunction	Check and repair
2	Red and yellow P lights - flash simultaneously	EPB is in check and repair mode	Check and repair
3	Red P light - flashes	In emergency brake mode	Normal, don't need to repair
4	Red P light - remains ON	EPB parking function is operative	Normal, don't need to repair
5	Green P light - remains ON	Automatic parking function is operative	Normal, don't need to repair
6	"Please depress brake pedal when releasing parking brake"	Press EPB release button when parking brake is applied and brake pedal is not depressed	Depress brake pedal and press EPB button simultaneously
7	"Please fasten seat belt"	Seat belt is not fastened when driving away after parking	Fasten seat belt-and depress accelerator pedal
8	"Please close door and fasten seat belt"	Press automatic parking switch when seat belt is not fastened or a door is not closed	Close driver door and fasten seat belt, then press automatic parking switch
9	"Parking slope is too large, Please take care"	Static parking on a slope is larger than 30%	It is recommend to park vehicle on a small slope

Specifications

Torque Specifications

Description	Torque (N·m)
Left Integrated Caliper Motor Fixing Bolt	10 ± 1.0
Right Integrated Caliper Motor Fixing Bolt	10 ± 1.0
Left Integrated Caliper Guide Pin Bolt	30 ± 2.0
Right Integrated Caliper Guide Pin Bolt	30 ± 2.0

Tool Drawings

General Tools

Digital Multimeter	-	002
Rear Brake Cylinder Release Tool	Part No.: CH30003, with aid of wasted brake	- TIE

DIAGNOSIS & TESTING

Diagnosis Content

Diagnostic Help

- 1. Connect diagnostic tester (the latest software) to diagnostic connector, and make it communicate with vehicle electronic module through data network.
- 2. Confirm that malfunction is current, and carry out diagnostic test and repair procedures.
- 3. If DTC cannot be deleted, malfunction is current.
- 4. Only use a digital multimeter to measure voltage of EPB system.
- 5. Refer to any Technical Bulletin that may apply to this malfunction.
- 6. Visually check related wire harness and connector.
- 7. Check and clean all EPB wire harness system grounds related to the latest DTC.
- 8. If multiple trouble codes were set, use circuit diagrams and look for any common ground circuit or power supply circuit applied to DTC.

Intermittent Troubleshooting

If malfunction is intermittent, perform the followings:

- 1. Check if connector is loose.
- 2. Check if wire harness is worn, pierced, pinched or partially broken.
- 3. Wiggle related wire harness and connector and observe if signal in related circuit is interrupted.
- 4. If possible, try to duplicate the conditions under which DTC was set.
- 5. Look for data that has changed or DTC to reset during wiggle test.
- 6. Look for broken, bent, protruded or corroded terminals.
- 7. Inspect the mounting areas of EPB system, wire harness or wire harness connector and so on for damage, foreign matter, etc. that will cause incorrect signals.
- 8. Check and clean all wire harness connectors and ground parts related to DTC.
- 9. Refer to any Technical Bulletin that may apply to this malfunction.

اولین سامانه دیجیتال تعمیر Ground Inspection

Ground points are very important to normal work of circuit, and they are often exposed to moisture, dirt and other corrosive environments. Corrosion (rust) may increase load resistance. This situation may change the way in which a circuit works. Circuits are very sensitive to proper grounding. A loose or corroded ground can affect the control circuit. Check the ground points as follows:

- 1. Remove ground bolt or nut.
- 2. Check all contact surfaces for tarnish, dirt and rust, etc.
- 3. Clean as necessary to ensure that contact is in good condition.
- 4. Reinstall ground bolt or nut securely.
- 5. Check if add-on accessories interfere with ground circuit.
- 6. If several wire harnesses are crimped into one ground terminal, check for proper crimps. Make sure that all wire harnesses are clean and securely fastened while providing a good ground path.

DTC Confirmation Procedure

Confirm that battery voltage is over 12 V before performing following procedures

- · Turn ENGINE START STOP switch to OFF.
- Connect diagnostic tester (the latest software) to diagnostic connector, and make it communicate with vehicle electronic module through data network.
- Turn ENGINE START STOP switch to ON.
- Use diagnostic tester to record and clear DTCs stored in EPB system.
- Turn ENGINE START STOP switch to OFF and wait several seconds.
- Turn ENGINE START STOP switch to ON, select "Read DTC".
- If DTC is not detected, malfunction indicated by DTC is intermittent

Diagn	osis	Proc	edure
-------	------	-------------	-------

Warning/Caution/Hint

Hint:

• Use following procedures to troubleshoot the brake control system.

Proceed to Next

1 Vehicle brought to workshop

Result

2 Check battery voltage

Check if battery voltage is normal.

OK

Standard voltage: not less than 12 V.

Result

Proceed to
OK
NG

NG

Replace battery or inspect and repair charging system

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران

OK

Next

3 Customer problem analysis

Result

Proceed to
Next

Next

4 Check and clear DTCs

Result

Proceed to
Next

25

Next

5	Confirm and duplicate malfunction: accelerate vehicle to 40 km/h or above, sin malfunction conditions and read DTCs again	nulate
Result		
	Result	
	No DTC	
	Current DTC	
	History DTC	
		History DTC
6	Problem Repair (No DTC)	
Result		
	Proceed to	
	Next	
Next	So to step 7	
7	Troubleshoot according to Diagnostic Trouble Code (DTC) chart	
Result		
Nesuit	Proceed to	
	Next	
1 1	HOX	
Next	Go to step 8	
8	Troubleshoot according to Problem Symptoms Table	
Result		
	Proceed to	
	Next	
		Next
9	Conduct test and confirm malfunction has been repaired	
Result		
	Proceed to	
	Next	
Nove		
Next	> End	


Diagnostic Trouble Code (DTC) Chart

DTC	DTC Definition
C1800-93	Left Actuator
C1800-19	Left Actuator
C1800-74	Left Actuator
C1800-73	Left Actuator
C1800-72	Left Actuator
C1800-91	Left Actuator
C1800-92	Left Actuator
C1800-97	Left Actuator
C1801-93	Right Actuator
C1801-19	Right Actuator
C1801-74	Right Actuator
C1801-73	Right Actuator
C1801-72	Right Actuator
C1801-91	Right Actuator
C1801-92	Right Actuator
C1801-97	Right Actuator
C1802-17	Supply Voltage
C1802-16	Supply Voltage
C1803-95	Assembly Test
C1804-53	Ma <mark>in</mark> tenance Mode
C182B-62	APB Act_Plausibility
C1824-01	APBActL_ElectricalFailure
C1825-01	APBActR_ElectricalFailure
C1822-00	APBActL_Failure
C1821-00	APBActR_Failure
C1824-1E	APBActL_ShuntOnLineOrECU
C1825-1E	APBActR_ShuntOnLineOrECU
C1830-00	APBActL_CAT
C1833-00	APBActR_UnintendedRun
C1831-00	APBActR_CAT
C1832-00	APBActL_UnintendedRun
C1826-01	APBActDriverGen_ElectricalFailure
C1807-98	Disc Over Heat
C1806-16	APB Button Under Voltage
C1823-00	APB Motor Enable Line Violation

DTC	C1800-93	Left Actuator
DTC	C1801-93	Right Actuator





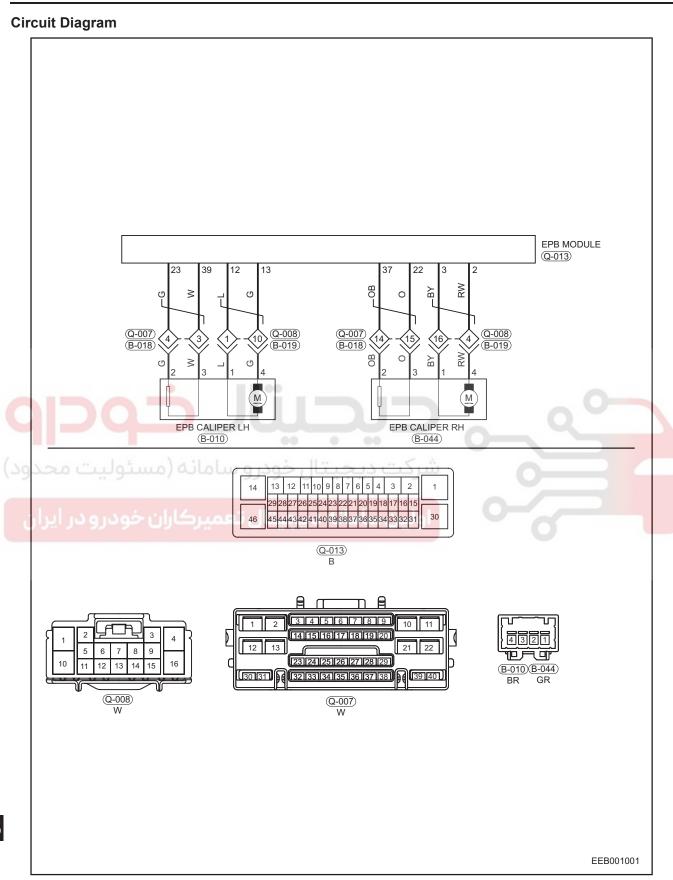

Description

EPB software detects that the current is lower than threshold value when motor starts and duration is too long.

	DTC	DTC Definition	DTC Detection Condition	Possible Cause	Disabled Function	Malfunction Condition
Ī	C1800-93	Left Actuator	ENIONE		Dynamic park	EPB malfunction light
	C1801-93	Right Actuator	ENGINE START STOP switch is in ON	Actuator wire harness resistance is too big	Actuator parking function Actuator releasing function	Actuator cannot perform parking / releasing operation

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.


Procedure

- 1 Inspect left actuator wire harness or connector
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness connector B-010 and ESP control module connector Q-013.
- (d) Check wire harness, connector and terminal for deformation, bend or damage.

OK

Left actuator wire harness or connector is normal

Result

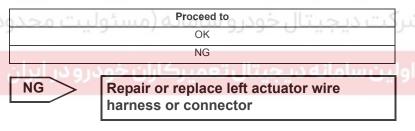



- 2 Inspect left actuator wire harness or connector for continuity
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Using a digital multimeter, check for continuity between ESP control module connector Q-013 and left actuator connector B-010 according to value(s) in table below.

OK

Multimeter Connection	Condition	Standard Resistance
Q-013 (12) - B-010 (1)	Always	≤ 1 Ω
Q-013 (13) - B-010 (4)	Always	≤ 1 Ω

Result

Proceed to	
OK	
NG	

NG

Repair or replace left actuator wire harness or connector

ОК

- 3 Inspect left actuator wire harness resistance
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Using a digital multimeter, measure the resistance between ESP control module connector Q-013 and left actuator connector B-010 according to value(s) in table below.

OK

Multimeter Connection	Condition	Standard Resistance	
Q-013 (12) - B-010 (1)	Ohms Range	≤ 0.3 Ω	
Q-013 (13) - B-010 (4)	Ohms Range	≤ 0.3 Ω	

Result

Proceed to	
OK	
NG	

NG

Replace left actuator wire harness

OK

- 4 Test left actuator
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect left actuator wire harness connector at luggage compartment, using a digital multimeter, measure internal resistance of left actuator according to value(s) in table below.

Warning:

The measurement result is minus multimeter error when measuring internal resistance of actuator.

OK

Condition	Standard Resistance
Ohms Range	0.4 Ω - 0.9 Ω

Result

Proceed to
OK
NG

NG

Replace left actuator

OK

25

5 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (h) I lea diagnostic tester (the latest software) to record and clear DTC stored in EDR system

- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to	
OK	
NG	

OK NG

System operates normally

Replace ESP control module






DTC	C1800-19	Left Actuator
DTC	C1801-19	Right Actuator





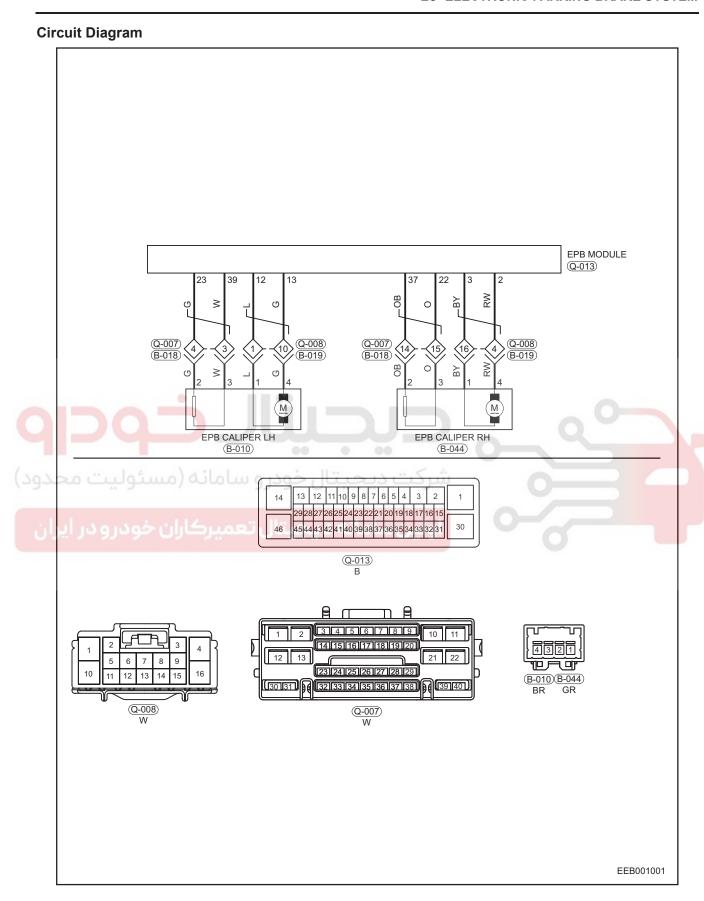

Description

EPB software detects that the current is higher than threshold value when motor starts and duration is too long.

DTC	DTC Definition	DTC Detection Condition	Possible Cause	Disabled Function	Malfunction Condition
C1800-19	Left Actuator		Actuator wire harness or		EPB malfunction light
C1801-19	Right Actuator	ENGINE START STOP switch is in ON	 connector circuit open Actuator wire harness resistance is too big. Actuator internal circuit open 	Dynamic parkActuator parking functionActuator releasing function	comes on Actuator cannot perform parking / releasing operation

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

1 Inspect left actuator wire harness or connector

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness connector B-010 and ESP control module connector Q-013.
- (d) Check wire harness, connector and terminal for deformation, bend or damage.

Result

	Proceed to			
3-1	OK	100		
سوبيت محدود	NG	ل حودر	بجبب	12 -



Repair or replace left actuator wire harness or connector

OK

- 2 Inspect left actuator wire harness or connector for short circuit
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect connector Q-013 and left actuator connector B-010. Using a digital multimeter, check for continuity between ESP control module connector Q-013 and left actuator connector B-010 and ground according to value(s) in table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (12) - Ground	Always	∞
Q-013 (13) - B Ground	Always	∞
Q-013 (12) - Q-013 (13)	Always	∞
B-010 (4) - Ground	Always	∞
B-010 (1) - Ground	Always	∞

Result

Dunnan d to	
Proceed to	

NG NG Repair or replace left actuator wire harness or connector

ОК

3 Test left actuator

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect left actuator wire harness connector at luggage compartment, using a digital multimeter, measure internal resistance of left actuator according to value(s) in table below.

Warning:

• The measurement result is minus multimeter error when measuring internal resistance of actuator.

OK

Condition	Standard Resistance
Ohms Range	0.4 Ω - 0.9 Ω

Result

	Proceed to
	OK
	NG
	00 0 00
NG	Replace left actuator

OK

4 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to	
OK	
NG	

ОК

System operates normally

NG >

Replace ESP control module

DTC	C1800-74	Left Actuator
DTC	C1801-74	Right Actuator

Description

EPB software detects that left motor is performing parking for a certain time, but cannot complete parking.

DTC	DTC Definition	DTC Detection Condition	Possible Cause	Malfunction Condition	Disabled Function
C1800-74	Left Actuator	ENIONE		EPB malfunction light	Dynamic park
C1801-74	Right Actuator	ENGINE START STOP switch is in ON	Actuator mechanical malfunction	Actuator cannot perform manual parking / releasing operation	Actuator parking function Actuator releasing function

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

- 1 Inspect if the left actuator and caliper are installed properly.
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness connector
- (d) Inspect if the left actuator and caliper are installed properly.

ل حودرو سامانه (مستولیت Result

	Proceed to
الدان	: سامانه دیجیتال تعم۵کاران خودرو در
	NG

NG

Repair or reinstall left actuator and caliper

OK

- 2 Test left actuator
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect left actuator wire harness connector at luggage compartment, using a digital multimeter, measure internal resistance of left actuator according to value(s) in table below.

Warning:

The measurement result is minus multimeter error when measuring internal resistance of actuator.

OK

Condition	Standard Resistance
Ohms Range	0.4 Ω - 0.9 Ω

Result

Proceed to
OK
NG

NG Replace left actuator

ОК

- 3 Reconfirm DTCs
- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to	
OK	
NG	

ОК

System operates normally

NG >

Replace ESP control module

ديجيتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


ولین سامانه دیجیتال تعمیرکاران خودرو در ایران



DTC	C1800-73	Left Actuator
DTC	C1801-73	Right Actuator





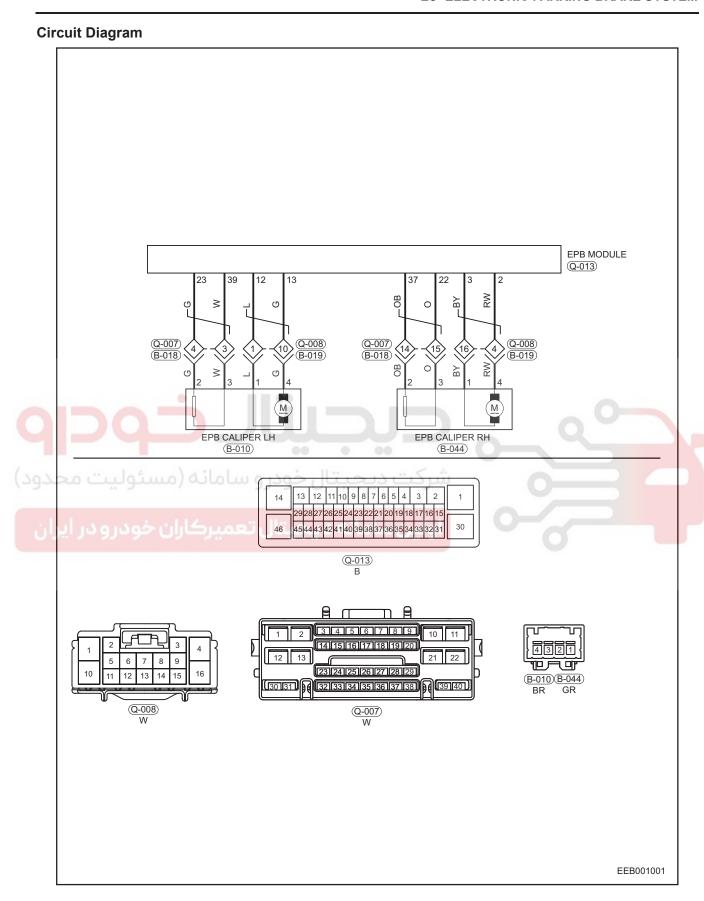

Description

EPB software detects that motor is clamping for a certain time, but cannot reach target parking force

DTC	DTC Definition	DTC Detection Condition	Possible Cause	Malfunction Condition	Disabled Function
C1800-73	Left Actuator	ENIONE	System voltage low	EPB malfunction light	Dynamic park
C1801-73	Right Actuator	ENGINE START STOP switch is in ON	Actuator wire harness resistance is too big Actuator internal resistance is too big	Actuator cannot perform parking operation properly	Actuator parking functionActuator releasing function


Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

- 1 Inspect if the left actuator and caliper are installed properly
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness connector.
- (d) Inspect if the left actuator and caliper are installed properly.

Result

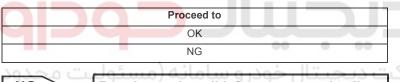

NG >

Repair or reinstall left actuator and caliper

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران

OK

- 2 Check if battery voltage is low
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Measure if battery voltage is lower than 12 V with a digital multimeter.

Result

Proceed to
OK
NG

NG

Test again after charging or replacing battery

OK

25

3 Inspect left actuator wire harness resistance

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.

(c) Using a digital multimeter, measure the resistance between ESP control module connector Q-013 and left actuator connector B-010 according to value(s) in table below.

OK

Multimeter Connection	Condition	Standard Resistance
Q-013 (12) - B-010 (1)	Ohms Range	≤ 0.3 Ω
Q-013 (13) - B-010 (4)	Ohms Range	≤ 0.3 Ω

Result

Proceed to	
OK	
NG	

NG

Replace left actuator wire harness

OK

4 **Test left actuator**

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect left actuator wire harness connector at luggage compartment, using a digital multimeter, measure internal resistance of left actuator according to value(s) in table below.

The measurement result is minus multimeter error when measuring internal resistance of actuator.

OK

Condition	Standard Resistance
Ohms Range	0.4 Ω - 0.9 Ω

Result

Proceed to
OK
NG

NG

Replace left actuator

OK

Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to
OK
NG

OK System operates normally

NG

Replace ESP control module





DTC	C1800-72	Left Actuator
DTC	C1801-72	Right Actuator

Description

EPB software detects that left motor is performing releasing for a certain time, but cannot return to target position.

DTC	DTC Definition	DTC Detection Condition	Possible Cause	Malfun	ction Condition		Disabled Function
C1800-72	Left Actuator				nalfunction light	•	Dynamic park
C1801-72	Right Actuator	ENGINE START STOP switch is in ON	Left actuator internal mechanical malfunction, cannot release normally		ctuator cannot e parking brake	•	Left actuator parking function Left actuator releasing function

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

- 1 Inspect if the left actuator and caliper are installed properly
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness connector.
- (d) Inspect if the left actuator and caliper are installed properly.

Result

ان خود و در ایران	Proceed to	لين سامانه ديجيتا
J.J. J. J. J. J.	OK	
	NG	

NG

Repair or replace left actuator and caliper

ОК

- 2 Inspect left actuator internal for foreign matter
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness connector.
- (d) Remove the left actuator.
- (e) Inspect left actuator internal for foreign matter, which cause the motor rotary resistance too high and cannot complete release operation normally.

Result

Proceed to	
OK	
NG	

NG

Clear up the foreign matter in left actuator

OK

3 Test left actuator

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect left actuator wire harness connector at luggage compartment, using a digital multimeter, measure internal resistance of left actuator according to value(s) in table below.

Warning:

• The measurement result is minus multimeter error when measuring internal resistance of actuator.

OK

Condition	Standard Resistance
Ohms Range	0.4 Ω - 0.9 Ω

Result

Proceed to	
OK	
NG	

NG

Replace left actuator

ОК

- 4 Reconfirm DTCs
- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to
OK
NG

ok >

System operates normally

NG

Replace ESP control module

DTC	C1800-91	Left Actuator
DTC	C1801-91	Right Actuator

Description

EPB software detects that internal resistance is abnormal when motor starts.

	DTC	DTC Definition	DTC Detection Condition	Possible Cause	Malfunction Condition Disabled Function
ſ	C1800-91	Left Actuator			EPB malfunction light
	C1801-91	Right Actuator	ENGINE START STOP switch is in ON	 Actuator wire harness or connector resistance is too big Actuator internal motor resistance is abnormal 	comes on Parking / releasing function cannot be performed by pulling up / pressing down the switch. Dynamic park Actuator parking function Actuator releasing function

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

- 1 Inspect if it is caused by incomplete left actuator wire harness
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness connector.
 - (d) Inspect if it is caused by incomplete left actuator wire harness (splicing, damage, deterioration, etc.), which lead to big resistance of left wire harness, parking and releasing operation cannot be completed normally.

Result

Proceed to	
OK	
NG	

NG

Repair or replace left actuator wire harness

ОК

- 2 Test left actuator
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect left actuator wire harness connector at luggage compartment, using a digital multimeter, measure internal resistance of left actuator according to value(s) in table below.

Warning:

• The measurement result is minus multimeter error when measuring internal resistance of actuator.

OK

Condition	Standard Resistance
Ohms Range	0.4 Ω - 0.9 Ω

Result		
	Proceed to	
	OK	
	NG	
NG	Replace left actuator	

OK

Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to
OK
NG

OK

System operates normally

Replace ESP control module

DTC	C1800-92	Left Actuator
DTC	C1801-92	Right Actuator

Description

EPB software detects that resistance is too large when motor idles.

DTC	DTC Definition	DTC Detection Condition	Possible Cause	Malfunction Condition	Disabled Function
C1800-92	Left Actuator	ENIONE		EPB malfunction light	Dynamic park
C1801-92	Right Actuator	ENGINE START STOP switch is in ON	Actuator mechanical malfunction (such as foreign matter inside)	Actuator cannot perform parking operation by pulling up switch	Actuator parking function Actuator releasing function

Caution

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

- 1 Test left actuator
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness connector.
- (d) Replace actuator with a new one and test again, confirm if it is caused by actuator internal mechanical malfunction.

Result

کاران خودرودر ایران	Proceed to	لين سامانه ديجيتاا
J J J J J J	OK	
	NG	

NG

Replace left actuator

OK

2 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

OK

No same DTC is output

Result

Proceed to	
OK	
NG	

OK

System operates normally

NG

Replace ESP control module





DTC	C1800-97	Left Actuator
DTC	C1801-97	Right Actuator





Circuit Diagram EPB MODULE Q-013 12 13 22 ΑŠ _BY Ŋ 0 Q-007 B-018 Q-007 B-018 Q-008) Q-008 B-019 B-019 RW. OB ВҮ M EPB CALIPER LH EPB CALIPER RH (B-010) B-044 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 46 Q-013) 3 4 5 6 7 8 9 10 B-010 B-044 32 33 34 35 36 37 38 BR GR Q-008 Q-007) W

25

EEB001001

Description

EPB software detects that motor current and voltage signal is abnormal

DTC	DTC Definition	DTC Detection Condition	Possible Cause	Malfunction Condition	Disabled Function
C1800-97	Left Actuator		Actuator wire harness	EPB malfunction light	
C1801-97	Right Actuator	ENGINE START STOP switch is in ON	 circuit open Actuator or wire harness circuit short Manual parking release via switch operation frequency is too high 	comes on Actuator cannot perform parking / releasing function by pulling up / pressing down switch.	All functions of actuator are invalid Dynamic park

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

- 1 Inspect if the left actuator and caliper are installed properly
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness connector.
- (d) Inspect if the left actuator and caliper are installed properly.

Result

	Proceed to	
1.6	OK	II ee
بتوليت محد	حودر و سهمانه رمس	، دیجیتال

NG

Reinstall and adjust left actuator and caliper



- 2 Inspect if the left actuator wire harness and connector are in good condition
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness connector.
- (d) Inspect if the left actuator wire harness and connector are in good condition

Result

Proceed to	
OK	
NG	

NG >

Repair or replace left actuator wire harness and connector

OK

- 3 Inspect left actuator wire harness and connector for short circuit
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect ESP control module connector Q-013 and left actuator connector B-010.
- (d) Using a digital multimeter, measure and inspect if left actuator wire harness and connector are short according to value(s) in table below.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (13) - B-010 (4)	Ohms Range	≤ 1 Ω
Q-14 (12) - B-010 (1)	Ohms Range	≤ 1 Ω
Q-013 (13) - Body ground	Ohms Range	∞
Q-013 (12) - Body ground	Ohms Range	∞

Result

Proceed to	
OK	
NG	

NG

Repair or replace left actuator wire harness

OK

- 4 Test left actuator
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect left actuator wire harness connector at luggage compartment, using a digital multimeter, measure internal resistance of left actuator according to value(s) in table below.

Warning:

• The measurement result is minus multimeter error when measuring internal resistance of actuator.

OK

Condition	Standard Resistance
Ohms Range	0.4 Ω - 0.9 Ω

Result

Proceed to
OK
NG

NG >

Replace left actuator

OK

25

5 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.

- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to	
OK	
NG	

OK	>
NO	

System operates normally


NG

Replace ESP control module



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

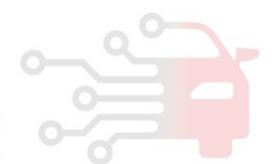

DTC C1802-17 Supply Voltage

Description

Battery voltage exceeds the set threshold voltage and duration is too long.

DTC	DTC Definition	DTC Detection Condition	Possible Cause	Malfunction Condition	Disabled Function
C1802-17	Supply Voltage	ENGINE START STOP switch is in ON	External power supply voltage is too high or battery is damaged ECU internal fault	EPB malfunction light comes on EPB does not response to clamping and releasing request	All functions of EPB are invalid

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

Measure vehicle battery voltage

- (a) Start vehicle and idle.
- (b) Measure if battery voltage is higher than 16.5 V.

Result

Proceed to
OK
NG

NG

Check and repair charging system

OK

2 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to
OK
NG

ok >

System operates normally

NG

Replace ESP control module

Supply Voltage DTC C1802-16

Description

Battery voltage is lower than the set threshold voltage and duration is too long.

DTC	DTC Definition	DTC Detection Condition	Possible Cause	Malfunction Condition	Disabled Function
C1802-16	Supply Voltage	ENGINE START STOP switch is in ON	Battery voltage is too low or battery is damaged Connection line is in poor contact with positive/ negative of battery ECU internal fault	EPB malfunction light comes on EPB does not response to clamping and releasing request	All functions of EPB are invalid

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

Measure vehicle battery voltage

(a) Measure if battery voltage is lower than 12 V when vehicle is idling and engine stalls

	Proceed to
	OK
	NG
یت محد	با دیجیتال خودر و سامایه (مستور
NG	Check and repair charging system or

replace battery

OK

- 2 Check EPB power source connection line
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check if EPB power source connection line is in poor contact with positive/negative of battery, or resistance is too big due to large area oxidation on contact surface.

Result

Pro	oceed to
	OK
	NG

NG

Check and repair charging system or replace battery

OK

3 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to	
OK	
NG	

OK >

System operates normally

NG

Replace ESP control module



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



DTC (C1803-95	Assembly Test
-------	----------	---------------

Description

EPB assembly test incomplete mark position is modified.

DTC	DTC Definition	DTC Detection Condition	Possible Cause	Malfunction Condition	Disabled Function
C1803-95	Assembly Test	ENGINE START STOP switch is in ON	Assembly test is not performed after completion of EPB Power is not turned off normally after performing assembly test	EPB malfunction light comes on "Assembly Test is not performed" malfunction is displayed when reading DTC.	• None

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

- 1 Perform assembly calibration normally by diagnostic tester
- (a) Assembly calibration is not performed after completion of EPB, after performing assembly calibration normally by diagnostic tester, turn off power normally.
- (b) Turn power on again after EPB sleeps, EPB malfunction light goes off, there is no current malfunction "Assembly Test".
 - 2 Reconfirm DTCs 9 399
- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

OK

No same DTC is output

DTC C1804-53 Maintenance Mode	DTC	C1804-53	Maintenance Mode
-------------------------------	-----	----------	------------------

Description

EPB maintenance mode mark position is modified

DTC	DTC Definition	DTC Detection Condition	Possible Cause	Malfunction Condition Disabled Function
C1804-53	Maintenance Mode	ENGINE START STOP switch is in ON	Enter maintenance mode due to replacement of EPB calipers or friction linings, and the maintenance mode has not been exited by diagnostic tester.	EPB malfunction light comes on; "EPB Maintenance Mode" is displayed when reading DTC by diagnostic tester. Motor on both sides do not respond to switch requests All functions except diagnostic function (exit maintenance mode) are invalid invalid

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

- 1 After maintenance is completed, maintenance mode function exit will be performed through the diagnostic tester.
- (a) In EPB maintenance state, after maintenance is completed, maintenance mode function exit will be performed through the diagnostic tester.
- (b) After the normal execution of maintenance mode exit request, the vehicle power is turned off normally (IGN off).
- (c) Turn power on again after ESP sleeps, EPB malfunction light goes off (no other faults in system).

2 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

OK

No same DTC is output

DTC C182B-62 APB Act_Plausibility

Description

Caution:

When performing circuit diagnosis and test, always refer to the circuit diagram for specific circuit and component information.

Procedure

- 1 Perform Active Test using diagnostic tester
- (a) Clamp and release left and right rear wheel brake caliper.

Result

Proceed to
OK
NG

OK End

NG

2 Check wire harness and connector

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness and connector.
- (d) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (e) Check for broken, bent, protruded or corroded terminals.
- (f) Check if terminal contact pins of related connectors are in good condition.

Result

Proceed to	
OK	
NG	

NG

Repair or replace related wire harness and connector

OK

3 Check left caliper motor

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator connector, replace actuator and test.

OK

Motor rotates normally

Result

Pro	ceed to
	OK
	NG

NG

Replace left parking brake actuator

OK

4 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to
OK
NG

OK NG

Same DTC is not output

Replace ABS/ESP control module


ولین سامانه دیجیتال تعمیرکاران خودرو در ایران



DTC	C1824-01	APBActL_ElectricalFailure
DTC	C1822-00	APBActL_Failure
DTC	C1824-1E	APBActL_ShuntOnLineOrECU





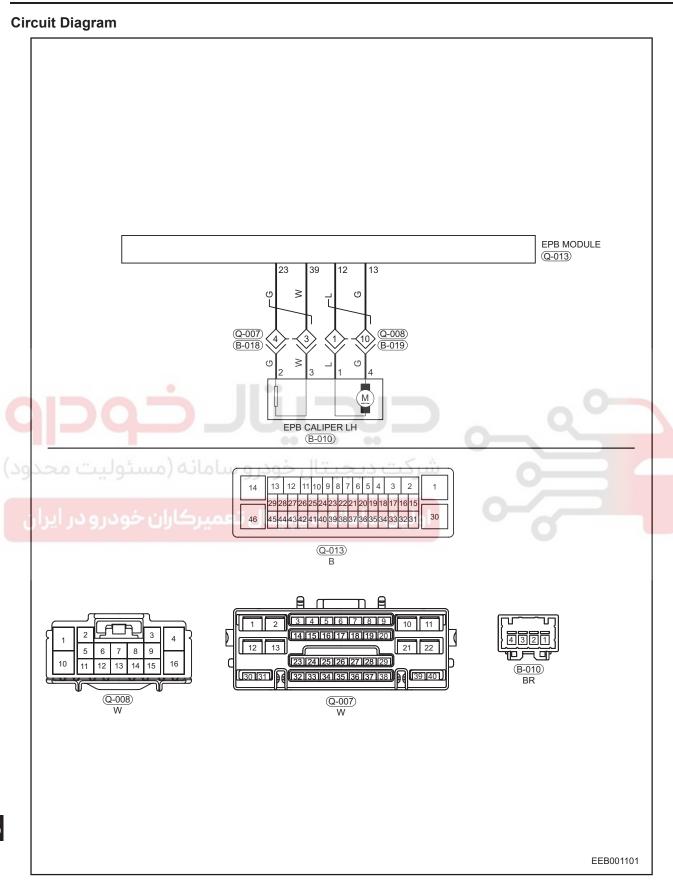

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

1 Check wire harness and connector

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator wire harness and connector.
- (d) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (e) Check for broken, bent, protruded or corroded terminals.
- (f) Check if terminal contact pins of related connectors are in good condition.

Result

Proceed to
OK
NG

NG >

Repair or replace related wire harness and connector

OK

2 Check left caliper motor

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the left actuator connector, replace actuator and test.

OK

Motor rotates normally

Result

Proceed to	
OK	
NG	

NG

Replace left parking brake actuator

OK

3 Check wire harness and connector for continuity

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check continuity between Q-013 (13) pin and Q-008 (4) pin using resistance gear of multimeter.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (13) - Q-008 (4)	Always	≤ 1 Ω

(d) Using ohm band of multimeter, check for continuity between terminal 10 of Q-008 and terminal 4 of B-010.

OK

Multimeter Connection	Condition	Specified Condition
Q-008 (10) - B-010 (4)	Always	≤ 1 Ω

(e) Check continuity between Q-013 (12) pin and Q-008 (1) pin using resistance gear of multimeter.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (12) - Q-008 (1)	Always	≤ 1 Ω

(f) Using ohm band of multimeter, check for continuity between terminal 1 of Q-008 and terminal 1 of B-010.

OK

Multimeter Connection	Condition	Specified Condition
Q-008 (1) - B-010 (1)	Always	≤ 1 Ω

(g) Using a digital multimeter, check if left caliper motor connector is short to ground according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
B-010 (4) - Body ground	Always	8
B-010 (1) - Body ground	Always	∞

- (h) Disconnect the negative battery cable.
- (i) Turn ENGINE START STOP switch to ON.
- (j) Using a digital multimeter, check if left caliper motor connector is short to power source according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
B-010 (4) - Body ground	ENGINE START STOP switch ON	Approx. 0 V
B-010 (1) - Body ground	ENGINE START STOP switch ON	Approx. 0 V

Result

Proceed to	_
OK	
NG	

NG >

Repair or replace wire harness and connector between left caliper motor connector and ABS/ESP control module assembly

OK

25

4 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.

- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to	
OK	
NG	

OK	>

System operates normally

NG

Replace left parking brake actuator




ولین سامانه دیجیتال تعمیرکاران خودرو در ایران



DTC	C1825-01	APBActR_ElectricalFailure
DTC	C1821-00	APBActR_Failure
DTC	C1825-1E	APBActR_ShuntOnLineOrECU





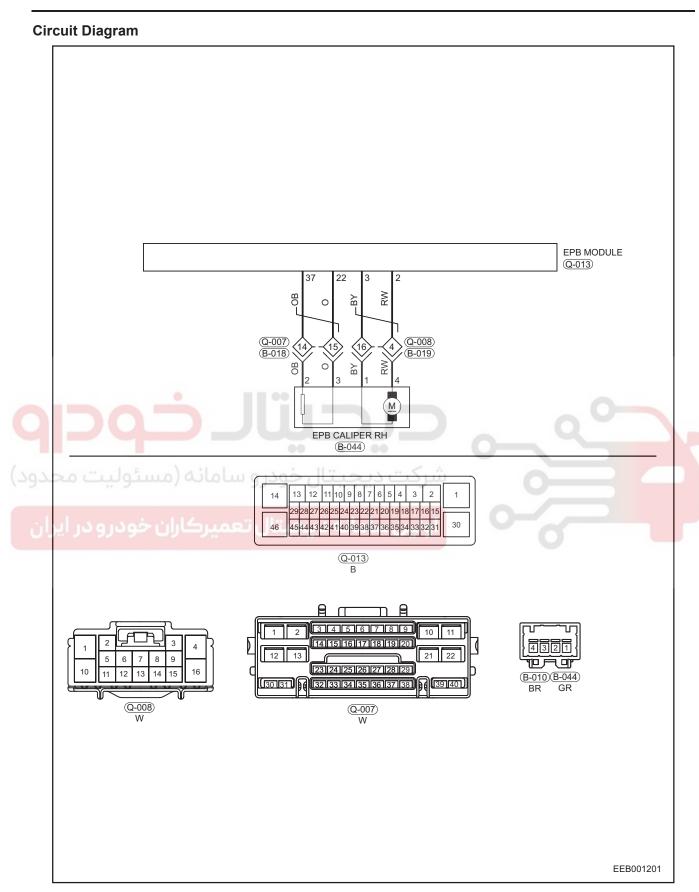

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

Procedure

1 Check wire harness and connector

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the right actuator wire harness and connector.
- (d) Check if wire harnesses are worn, pierced, pinched or partially broken.
- (e) Check for broken, bent, protruded or corroded terminals.
- (f) Check if terminal contact pins of related connectors are in good condition.

Result

Proceed to
OK
NG

NG

Repair or replace related wire harness and connector

OK

2 Check the right caliper motor

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the right actuator connector, replace actuator and test.

OK

Motor rotates normally

Result

Proceed to
OK
NG

NG

Replace right parking brake actuator

ОК

3 Check wire harness and connector for continuity

- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check continuity between Q-013 (2) pin and Q-008 (4) pin using resistance gear of multimeter.

OK

Multimeter Connection	Condition	Specified Condition
Q-013 (2) - Q-008 (4)	Always	≤ 1 Ω

(d) Using ohm band of multimeter, check for continuity between terminal 4 of Q-008 and terminal 4 of B-044.

OK

Multimeter Connection	Condition	Specified Condition
Q-008 (4) - B-044 (4)	Always	≤ 1 Ω

(e) Check continuity between Q-013 (3) pin and Q-008 (16) pin using resistance gear of multimeter.

OK

	Multimeter Connection	Condition	Specified Condition
ĺ	Q-013 (3) - Q-008 (16)	Always	≤ 1 Ω

(f) Using ohm band of multimeter, check for continuity between terminal 16 of Q-008 and terminal 1 of B-044.

OK

Multimeter Connection	Condition	Specified Condition
Q-008 (16) - B-010 (1)	Always	≤ 1 Ω

(g) Using a digital multimeter, check if right caliper motor connector is short to ground according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
B-044 (4) - Body ground	Always	8
B-044 (1) - Body ground	Always	∞

- (h) Disconnect the negative battery cable.
- (i) Turn ENGINE START STOP switch to ON.
- (j) Using a digital multimeter, check if right caliper motor connector is short to power source according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
B-044 (4) - Body ground	ENGINE START STOP switch ON	Approx. 0 V
B-044 (1) - Body ground	ENGINE START STOP switch ON	Approx. 0 V

Result

Proceed to	
OK	
NG	

NG

Repair or replace wire harness and connector between right caliper motor connector and ABS/ESP control module assembly

ОК

4 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.

- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to	
OK	
NG	

OK NG

System operates normally

Replace right parking brake actuator



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



DTC	C1830-00	APBActL_CAT
DTC	C1831-00	APBActR_CAT

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

- 1 Check wire harness and connector for continuity
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check continuity of wire harness between ABS/ESP and actuator using resistance gear of multimeter.

Result

Proceed to
OK
NG

NG

Repair or replace wire harness and connector between caliper motor connector and ABS/ESP control module assembly

OK

- 2 Check caliper actuator motor
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the right actuator connector, replace actuator and test.

OK

Motor rotates normally

Result

Proceed to
OK
NG

NG

Replace parking brake actuator

OK

- 3 Reconfirm DTCs
- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.

(e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Proceed to
OK
NG



System operates normally

Replace ESP/ABS control module






DTC	C1833-00	APBActR_UnintendedRun
DTC	C1832-00	APBActL_UnintendedRun





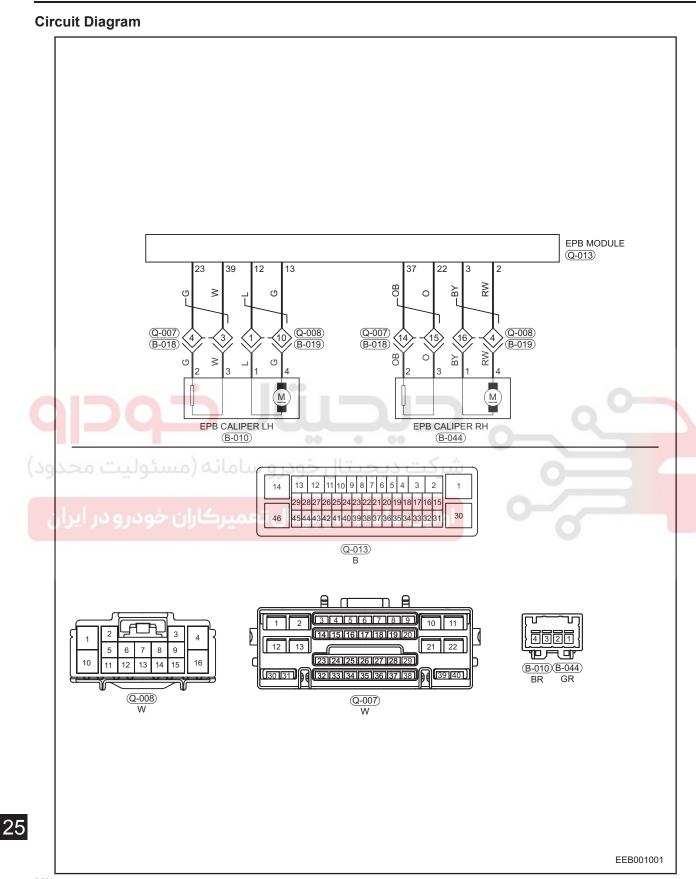

Hint:

The right actuator shock shall provail

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

1 Check if right actuator is short to power source

- (a) Connect the negative battery cable.
- (b) Turn ENGINE START STOP switch to ON.
- (c) Using a digital multimeter, check if right caliper motor connector is short to power source according to the table below.

OK

Multimeter Connection	Condition	Specified Condition
B-044 (4) - Body ground	ENGINE START STOP switch ON	Approx. 0 V
B-044 (1) - Body ground	ENGINE START STOP switch ON	Approx. 0 V

Result

Proceed	to
OK	
NG	

NG

Repair or replace wire harness and connector between right caliper motor connector and ABS/ESP control module assembly

ОК

ولين سامانه ديجيتال تعميركاران خودرودر ابرار

2 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to
OK
NG

ок

System operates normally

NG >

Replace ESP/ABS control module

DTC C1826-01 APBActDriverGen_ElectricalFailure

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

- 1 Check actuator connector
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check if actuator connector is installed firmly.
- (d) Check if installing position of actuator connector is dirty.

Result

Proceed to
OK
NG

NG)

Install actuator connector correctly and firmly

OK

- Perform Active Test using diagnostic tester
- (a) Clamp and release left and right rear wheel brake caliper.

Result

Proceed to South From South From

ок

End

NG

- 3 Check caliper actuator motor
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Replace actuator and retest.

OK

Motor rotates normally

Result

Proceed to
OK
NG

NG

Replace parking brake actuator

ОК

4 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to	
OK	
NG	

ок

System operates normally

NG >

Replace ABS/ESP control module



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



DTC	C1807-98	Disc Over Heat

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

- **Perform Active Test using diagnostic tester**
- (a) Clamp and release left and right rear wheel brake caliper.

Result

Proceed to	
OK	
NG	

OK **End**

NG

- 2 Check caliper actuator motor
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Replace actuator and retest.

Motor rotates normally

Result

درودر ایران	Proceed to	بن سامانه دیجیتال
	OK	
	NG	

NG

Replace parking brake actuator

OK

- 3 **Reconfirm DTCs**
- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to OK NG

25

System operates normally


NG

Replace ABS/ESP control module





APB Button Under Voltage DTC C1806-16

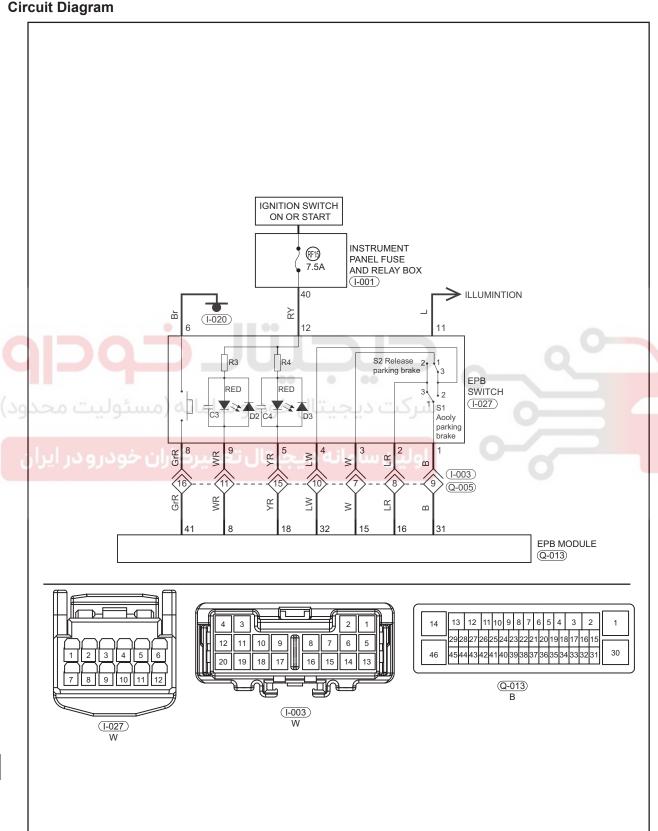

1 Check EPB switch

(a) Refer to inspection of EPB switch

Result

Proceed to
OK
NG

NG)

Replace EPB switch

ОК

2 Check the battery

- (a) Using a digital multimeter, measure voltage between positive battery terminal and negative battery terminal.
- (b) Battery voltage should be higher than 12 V.

Result

OK NG	00	Proceed to
NG		OK
		NG

NG `

Check charging system

OK

اولين سامانه ديجيتال بتعميركاران ذودرو درايرل

- 3 Check wire harness and connector for continuity
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect the connector.
- (d) Using ohm band of multimeter, check for continuity between terminal 1 of I-027 and terminal 9 of I-003.

OK

Multimeter Connection	Condition	Specified Condition
I-027 (1) - I-003 (9)	Always	≤ 1 Ω

(e) Check continuity between I-003 (9) pin and Q-013 (31) pin using resistance gear of multimeter.

OK

Multimeter Connection	Condition	Specified Condition
I-003 (9) - Q-013 (31)	Always	≤ 1 Ω

(f) Using ohm band of multimeter, check for continuity between terminal 2 of I-027 and terminal 8 of I-003.

OK

Multimeter Connection	Condition	Specified Condition
I-027 (2) - I-003 (8)	Always	≤ 1 Ω

(g) Check continuity between I-003 (8) pin and Q-013 (16) pin using resistance gear of multimeter.

OK

Multimeter Connection	Condition	Specified Condition
I-003 (8) - Q-013 (16)	Always	≤ 1 Ω

(h) Using ohm band of multimeter, check for continuity between terminal 3 of I-027 and terminal 7 of I-003.

OK

	Multimeter Connection	Condition	Specified Condition
ĺ	I-027 (3) - I-003 (7)	Always	≤ 1 Ω

(i) Check continuity between I-003 (7) pin and Q-013 (15) pin using resistance gear of multimeter.

OK

Multimeter Connection	Condition	Specified Condition
I-003 (7) - Q-013 (15)	Always	≤ 1 Ω

(j) Using ohm band of multimeter, check for continuity between terminal 4 of I-027 and terminal 10 of I-003.

OK

Multimeter Connection	Condition	Specified Condition
I-027 (4) - I-003 (10)	Always	≤ 1 Ω

(k) Check continuity between I-003 (10) pin and Q-013 (32) pin using resistance gear of multimeter.

OK

	Multimeter Connection	Condition	Specified Condition
1	I-003 (10) - Q-013 (32)	Always	≤ 1 Ω

Result

خودرودر ابران	Proceed to	رسامانه ديجيتاا	الب
0 3 3 33 3	OK		and a
	NG		

NG

Repair or replace wire harness and connector between EPB switch and ABS/ ESP control module assembly

ОК

4 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to
OK
NG

ок

Same DTC is not output

NG

Replace ABS/ESP control module assembly





DTC C1823-00 APB Motor Enable Line Violation

Caution:

When performing electrical equipment diagnosis and test, always refer to circuit diagram for related circuit and component information.

- 1 Check actuator connector
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Disconnect actuator connector, check it for dirty, water, aging or loosening.

Result

Proceed to
OK
NG

NG)

Install, clean or replace connector correctly and firmly

OK

- 2 Check wire harness and connector for continuity
- (a) Turn ENGINE START STOP switch to OFF.
- (b) Disconnect the negative battery cable.
- (c) Check continuity of wire harness between ABS/ESP and actuator using resistance gear of multimeter.

Result

Proceed to
OK
NG

NG

Repair or replace wire harness and connector between actuator motor and ABS/ESP control module assembly

OK

- 3 Check actuator motor
- (a) Disconnect the negative battery cable.
- (b) Turn ENGINE START STOP switch to OFF.
- (c) Replace actuator motor with a new one and retest.

Result

Proceed to
Next

Next

4 Reconfirm DTCs

- (a) Turn ENGINE START STOP switch to ON.
- (b) Use diagnostic tester (the latest software) to record and clear DTC stored in EPB system.
- (c) Turn ENGINE START STOP switch to OFF and wait several seconds.
- (d) Turn ENGINE START STOP switch to ON.
- (e) Use diagnostic tester (the latest software) to reread DTC in EPB system.

Result

Proceed to	
OK	
NG	

oĸ	>

Same DTC is not output

NG

Replace actuator motor



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



ON-VEHICLE SERVICE

EPB system

On-vehicle Inspection

Warning/Caution/Hint

Caution:

- EPB system must be repaired by professional technicians who have trained and mastered maintenance skills and only use original parts for replacement.
- Before perform a fault diagnosis of EPB system, it is necessary to confirm that vehicle CAN interface can be connected properly.
- Note following when connecting EPB wire harness: Turn ENGINE START STOP switch off before
 disconnecting wire harness connector, make sure that connector is dry and clean and avoid any
 foreign material entering; Wire harness must be installed in place horizontally and vertically in order to
 avoid damaging connector.
- If EPB motor fuse need to be replaced, make sure that it is exactly the same with original model, including shape and parameters, and ensure that connection is fully in place.
- 1. Inspect friction material thickness of brake discs on both sides visually, replace it when minimum value is less than 2 mm.
- 2. When brake disc is worn to limit state, there will be mechanical alarm, and the brake disc should be replaced.
- 3. It is necessary to replace 4 brake linings of left and right brake calipers when replacing brake linings.
- 4. If removed brake lining can be reused, it must be installed at original position when it is reinstalled.
- 5. During warranty period of brake lining, it is not possible to replace brake lining with different wear thickness. If friction material thickness is less than 2 mm in warranty period, brake lining should be replaced, and check brake caliper for dragging at the same time.
- 6. Check EPB wire harness for aging or damage, replace as necessary.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Integrated Caliper Motor

Removal


Warning/Caution/Hint

Hint:

- · Use same procedures for right and left sides.
- · Procedures listed below are for left side.

Caution:


- Be sure to wear safety equipment to prevent accidents, when removing integrated caliper motor.
- · Remove integrated caliper motor without damaging motor seal ring and replace it when necessary.
- When removing integrated caliper motor, do not allow foreign matter enter into motor.
- 1. Turn off all electrical equipment and the ENGINE START STOP switch.
- 2. Disconnect the negative battery cable for at least 30 seconds
- 3. Remove the rear tires (See page 22-8).
- 4. Remove the integrated caliper motor
 - (a) Disconnect the integrated caliper motor wire harness connector plug (arrow).

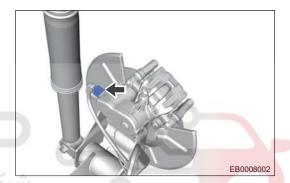

(b) Remove the 2 fixing bolts (arrows) from left

Tightening torque


integrated caliper motor.

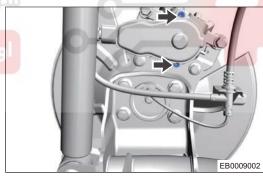

(c) Remove the integrated caliper motor (arrow).

Caution:

 Save the removed parking actuator properly to avoid dust or water polluting grease and seal rings.

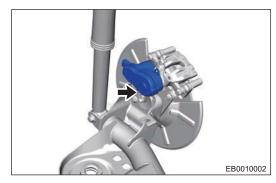

EPB Brake Caliper Emergency Release

Warning/Caution/Hint

Hint:

- Use same procedures for right and left sides.
- · Procedures listed below are for left side.

Caution:

- If parking brake cannot be released by parking brake switch manually or automatically due to unexpected circumstances (such as battery does not output voltage, parking brake system failure, etc.) during using EPB system, you need to enable parking emergency releasing function to release parking brake, please follow the following steps for specific methods.
- If this malfunction occurs on a slope, please try to tow vehicle to a level road or place obstacles such as rocks in front of or rear of front wheels respectively to prevent wheel rolling, avoiding coasting accident after releasing rear wheel brake urgently.
- Be sure to wear safety equipment to prevent accidents, when EPB brake caliper emergency releasing.
- 1. Remove the rear tires (See page 22-8).
- 2. Remove the integrated caliper motor
- Align inner hexagon 6# with spline in EPB caliper, rotate 2-3 cycles clockwise (when operator faces spline) or stop until brake disc can rotate freely (it is normal that a large rotation force is needed due to vehicle parking brake condition).



 The vehicle only loses parking function and does not affect normal braking function after releasing parking brake

ولین سامانه دیجیتال تعمیرکاران خودر:Caution

 Emergency release is highly specialized, it is recommend to perform by Chery 4S shop professionals.

Installation

1. Installation is in the reverse order of removal.

Caution:

- Be sure to wear safety equipment to prevent accidents, when installing integrated caliper motor.
- When installing integrated caliper motor, remove sediment, dust and other foreign objects that are on matching surface of parking actuator and on head of parking caliper.
- When installing integrated caliper motor, check whether the o-ring of parking caliper head is invalid or abnormal. Please replace it in time.
- When installing integrated caliper motor, parking caliper head and actuator motor must be tightly coupled, tighten fixing bolts to specified torque.
- When installing integrated caliper motor, check whether the o-ring seal is extruded between parking actuator and parking caliper, if it is extruded, should be reinstalled.
- When installing integrated caliper motor, manual parking clamp and release must be performed to confirm if parking function is normal.

Rear Brake Lining

Removal


Warning/Caution/Hint

Caution:


- When worn minimum value of brake lining is 2 mm, replace 4 brake linings of left and right brake calipers.
- DO NOT perform "Exit Maintenance Mode" using diagnostic tester during vehicle maintenance.
- After removing EPB caliper set, it is strictly forbidden to depress brake pedal, otherwise the piston will rush out of cylinder hole and the brake fluid will come out and pollute brake disc and other parts.
- After completing replacing new brake lining, make sure to perform "Exit Parking Brake Maintenance Mode" with diagnostic tester.
- 1. Connect diagnostic tester, turn ignition switch to ON
- 2. Enter parking brake maintenance mode using diagnostic tester




- 3. Remove the rear brake lining
 - (a) Disconnect the integrated caliper motor wire harness connector plug (arrow).

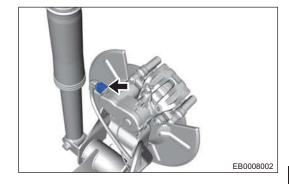

(b) Remove the lower fixing bolt (arrow) from single guide pin.

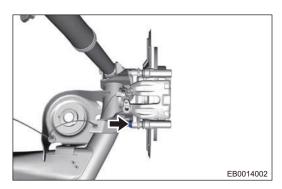


(c) Flip the parking caliper around another guide pin (arrow) and use hook to lift the caliper.

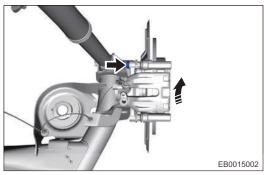

(d) Remove the brake lining (arrow) that needs to be replaced.


Caution:

- After removing EPB caliper set, it is strictly forbidden to depress brake pedal, otherwise the piston will rush out of cylinder hole and the brake fluid will come out and pollute brake disc and other parts.
- Move caliper equipped with spring diaphragm slowly during this process, spring may flick the brake lining and drop on the foot.

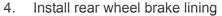


(a) A thin sheet of steel (1) or old brake lining is added to the piston end to prevent damaging anti-rotating tooth of end surface.



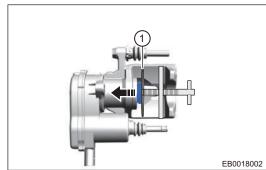

- (b) Use special tool to press piston along the direction of hand as shown in figure to push piston back to bottom of cylinder hole.
- (c) Install new brake lining.
- (d) Install brake caliper bolt in place.
- 5. Connect EPB connector and install wheel


6. Perform exit maintenance mode using diagnostic tester

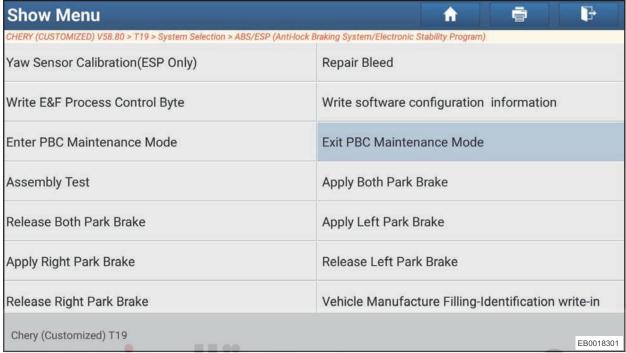

- 7. Rear brake calipers simultaneously release and clamp test.
 - (a) Turn ENGINE START STOP switch ON.
 - (b) Connect the diagnostic tester.
 - (c) Click diagnostic tester, enter special operation.



(d) Click to clamp rear brake caliper.

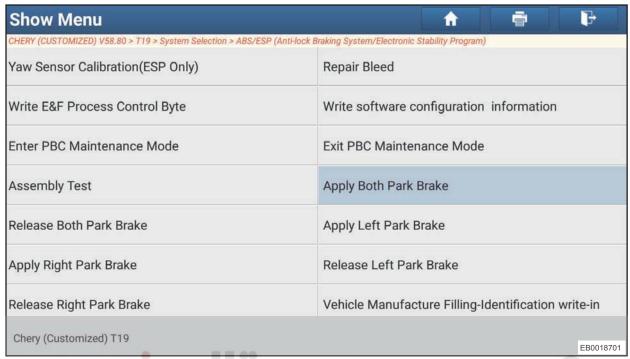


(e) Click to release rear brake caliper.




- 8. Rear brake calipers separately release and clamp test
 - (a) Turn ENGINE START STOP switch ON.
 - (b) Connect the diagnostic tester.

(c) Click diagnostic tester, enter special operation.

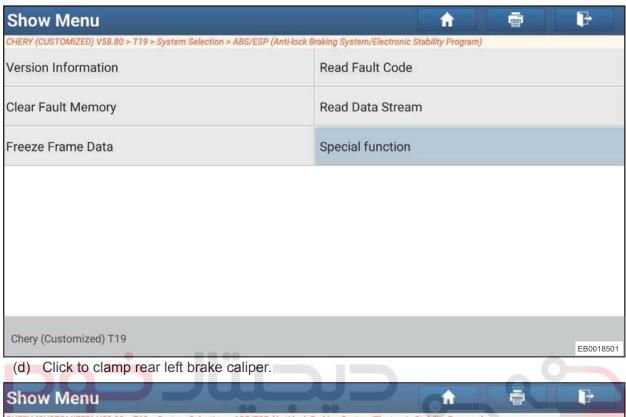





(e) Click to release rear left brake caliper.

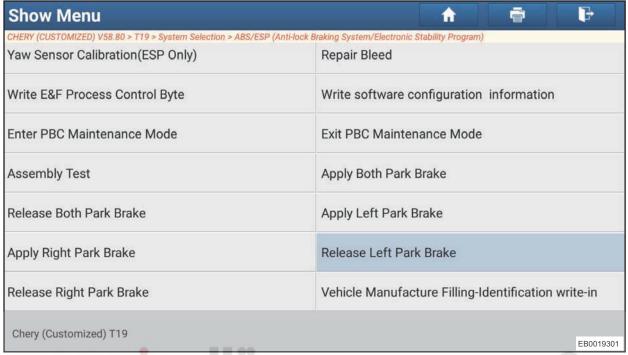

(f) Click to clamp rear right brake caliper.

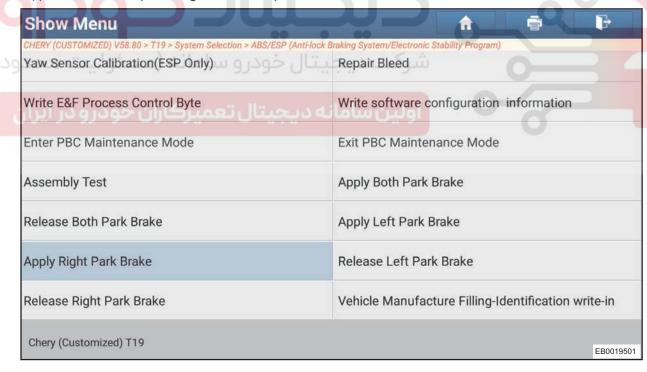

(g) Click to release rear right brake caliper.

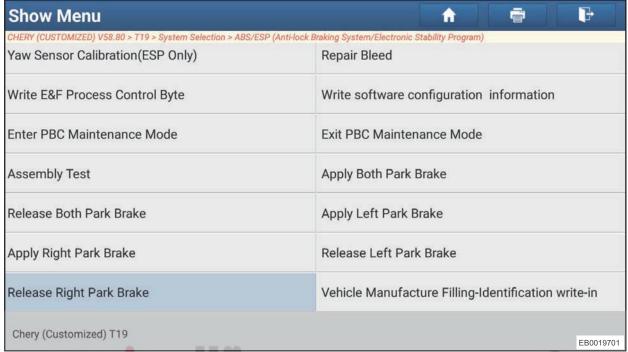


Caution:

- Be sure to wear safety equipment to prevent accidents, when installing rear brake linings.
- When replacing brake lining, check whether piston dust boot and guide pin dust boot is broken, and whether the spring plate is deformed or damaged, replace it when necessary.
- After completing replacing new brake lining, make sure to perform "Exit Parking Brake Maintenance Mode" with diagnostic tester.
 - After installing rear brake linings, two manual parking and release are carried out to make the brake lining fully in contact with the brake disc.
 - All actions of the EPB action test should be in line with the actual operation, otherwise the EPB system should be overhauled.

EPB Switch

Inspection of EPB switch

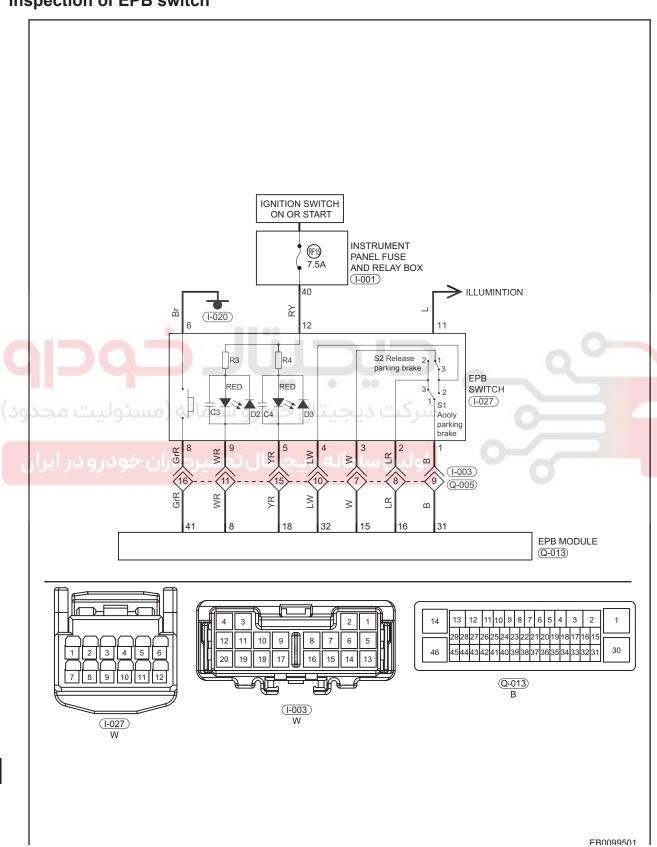

 According to circuit diagram, internal resistance of EPB switch is measured using digital multimeter ohm gear. If it does not match with measured value of following table, replace the EPB switch.

Multimeter Connection	Manual Parking Switch State	Specified Condition
Terminal 1 - Terminal 2	No action	≤ 1 Ω
Terminal 3 - Terminal 4	No action	≤ 1 Ω
Terminal 1 - Terminal 3 - Terminal 4	Pull hand brake	≤ 1 Ω
Terminal 3 - Terminal 2 - Terminal 1	Release hand brake	≤ 1 Ω

Ω	
	EB0099602

Multimeter Connection	Automatic Parking Switch State	Specified Condition
Terminal 6 - Terminal 8	Not pressed	8
Terminal 6 - Terminal 8	Pushed	≤ 1 Ω

Multimeter Connection	Indicator Light	Specified Condition
Terminal 12 - Terminal 5	Manual Parking Switch Indicator Light	2.2 kΩ
Terminal 12 - Terminal 9	Automatic Parking Switch Indicator Light	2.2 kΩ

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

- MEMO -



