

Body Electrical System

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




GENERAL

REFERENCE SERVICE TOOLS EFCBCDDB

Tool Number	Tool Name
TRK00A	Wiring Repair Kit (Standard kit)
TRK001	Wire Stripper Set
TRK002	Remover Tool Set
TRK003	Terminal Tension Gauge Set
TRK004	Cable Tie Set
TRK005	Shrink Tube Set
TRK006	Jump Connector kit(A)
TRK007~10	General Connector Kit(B~E)
TRK011	Terminal With Lead Wire Kit(F)
TRK012	Composition Kit(G)
TRK013	Lead Wire Set
TRK014	Carrying Case
TRK015	User's Guide & Parts Information
TRK016	Inner Box(Large)
TRK017	Inner Box(Small)

* For the wiring repair kit, refer to the User's guide & parts Information of the Wiring Repair Kit (Pub. No. : OSG200208).

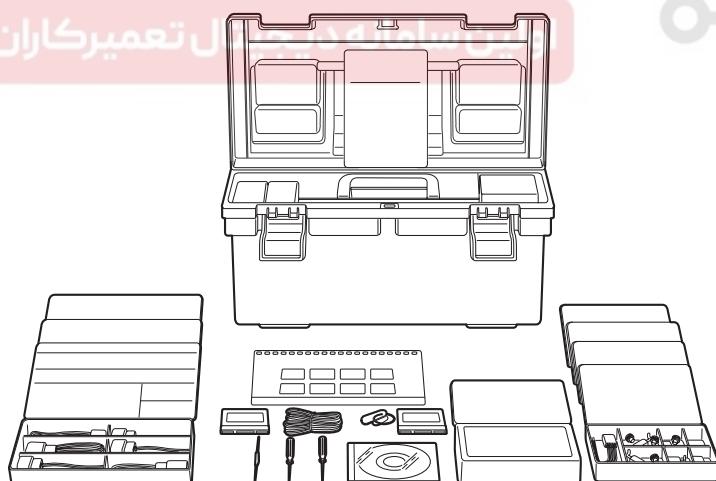

LTG990B

GENERAL TROUBLESHOOTING INFORMATION

ECBDF6CC

BEFORE TROUBLESHOOTING

1. Check applicable fuses in the appropriate fuse/relay box.
2. Using the battery checker (MCR-570 KIT), check the battery for damage, state of charge, and clean and tight connections.
(Refer to the Engine Electrical System - Battery)


NOTE

- Do not quick-charge a battery unless the battery ground cable has been disconnected, otherwise you will damage the alternator diodes.
- Do not attempt to crank the engine with the battery ground cable loosely connected or you will severely damage the wiring.

3. Check the alternator belt tension.

HANDLING CONNECTORS


1. Make sure the connectors are clean and have no loose wire terminals.
2. Make sure multiple cavity connectors are packed with grease (except watertight connectors).
3. All connectors have push-down release type locks (A).

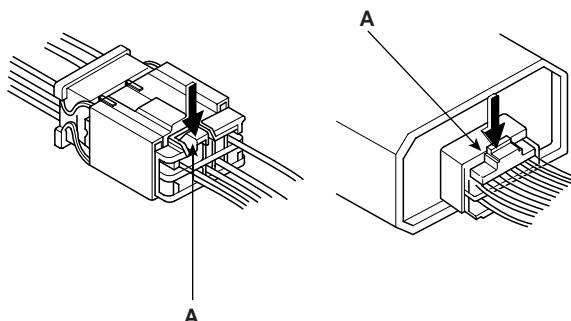

ETKD150A


4. Some connectors have a clip on their side used to attach them to a mount bracket on the body or on another component. This clip has a pull type lock.

5. Some mounted connectors cannot be disconnected unless you first release the lock and remove the connector from its mount bracket (A).

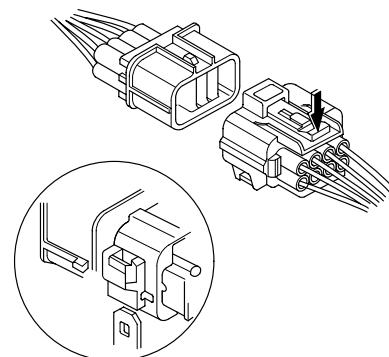


ETKD150B

6. Never try to disconnect connectors by pulling on their wires; pull on the connector halves instead.
7. Always reinstall plastic covers.

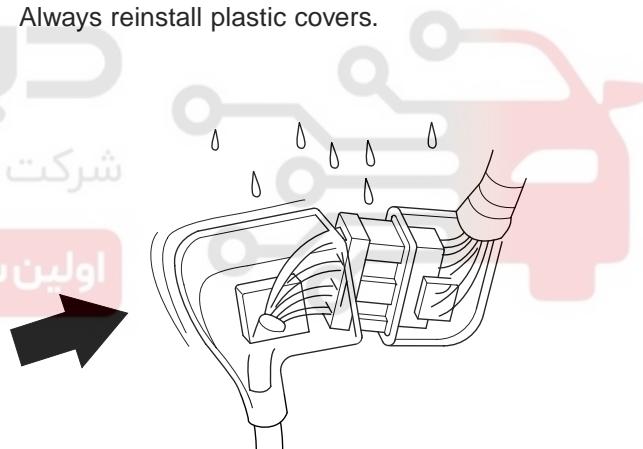

ETKD150C

8. Before connecting connectors, make sure the terminals (A) are in place and not bent.

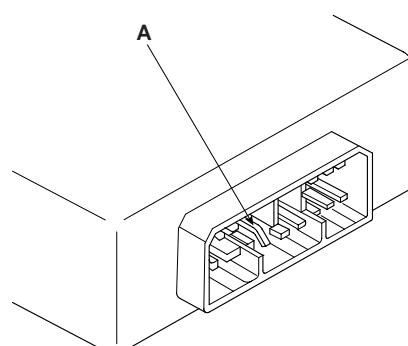


ETKD150D

GENERAL

BE -5


9. Check for loose retainer (A) and rubber seals (B).

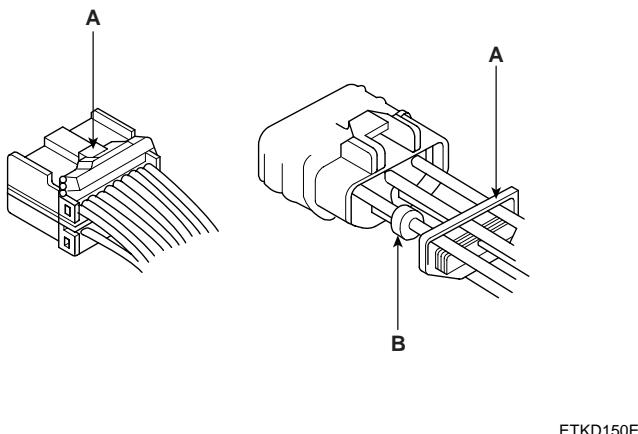

10. The backs of some connectors are packed with grease. Add grease if necessary. If the grease (A) is contaminated, replace it.


HANDLING WIRES AND HARNESES

1. Secure wires and wire harnesses to the frame with their respective wire ties at the designated locations.
2. Remove clips carefully; don't damage their locks (A).

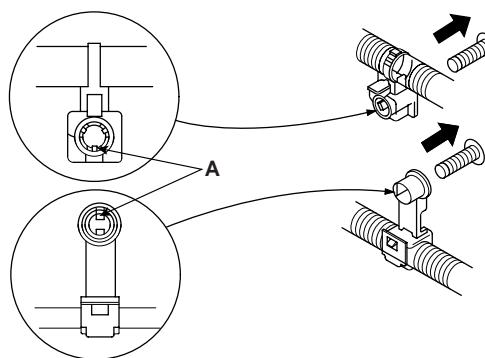

ETKD150H


3. Slip pliers (A) under the clip base and through the hole at an angle, and then squeeze the expansion tabs to release the clip.

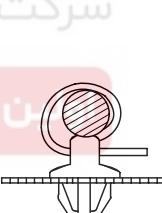

ETKD150F


11. Insert the connector all the way and make sure it is securely locked.

12. Position wires so that the open end of the cover faces down.

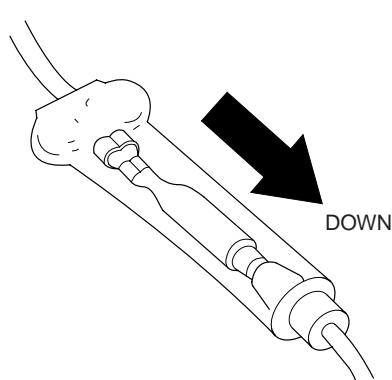


ETKD150G

4. After installing harness clips, make sure the harness doesn't interfere with any moving parts.
5. Keep wire harnesses away from exhaust pipes and other hot parts, from sharp edges of brackets and holes, and from exposed screws and bolts.

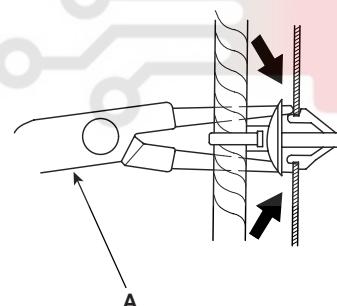


ETKD150I

6. Seat grommets in their grooves properly (A). Do not leave grommets distorted (B).

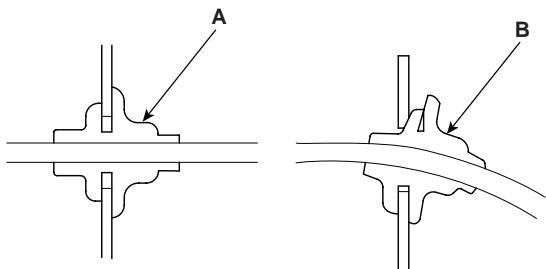

ETKD150J


5. Use a probe with a tapered tip.
Refer to the user's guide in the wiring repair kit (Pub No. : TRK 015.)



ETKD150L

TESTING AND REPAIRS

1. Do not use wires or harnesses with broken insulation. Replace them or repair them by wrapping the break with electrical tape.
2. After installing parts, make sure that no wires are pinched under them.
3. When using electrical test equipment, follow the manufacturer's instructions and those described in this manual.
4. If possible, insert the remover tool from the wire side (except waterproof connector).

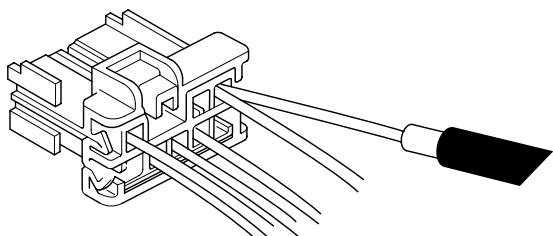

ETKD150K

FIVE-STEP TROUBLESHOOTING

1. Verify the complaint
Turn on all the components in the problem circuit to verify the customer complaint. Note the symptoms. Do not begin disassembly or testing until you have narrowed down the problem area.
2. Analyze the schematic
Look up the schematic for the problem circuit. Determine how the circuit is supposed to work by tracing the current paths from the power feed through the circuit components to ground. If several circuits fail at the same time, the fuse or ground is a likely cause. Based on the symptoms and your understanding of the circuit operation, identify one or more possible causes of the problem.
3. Isolate the problem by testing the circuit.
Make circuit tests to check the diagnosis you made in step 2. Keep in mind that a logical, simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points that are easily accessible.
4. Fix the problem
Once the specific problem is identified, make the repair. Be sure to use proper tools and safe procedures.
5. Make sure the circuit works
Turn on all components in the repaired circuit in all modes to make sure you've fixed the entire problem. If the problem was a blown fuse, be sure to test all of the circuits on the fuse. Make sure no new problems turn up and the original problem does not recur.

AUDIO SYSTEM**SPECIFICATION** EDB048F2**AUDIO**

Item		Specification			
Model		RADIO/CD (M445)	RADIO / TAPE / CD/MP3 (M455)	RADIO / TAPE / 6CDC / MP3 (M465)	RADIO / 6CDC / MP3 (D466)
Power supply		DC 14.4V			
Rated output		Max 43W x 4		Max 3.2Vrms	Max 4.5Vrms
Antenna		80PF 75			
Tuning type		PLL synthesized type			
Frequency range / Channel space	FM	87.5 ~ 108.0 MHz/100 KHz (General), 50KHz(Europe)			
	AM	531 ~ 1602 KHz/9 KHz (General)			
	MW	522 ~ 1620 KHz/9 KHz (Europe)			
	LW	153 ~ 279 KHz/1 KHz (Europe)			


SPEAKER & EXTERNAL AMPLIFIER

Item		M445 (Internal Amplifier)	M455	M465	D466
Input Power (W)	Front	50	50	50	40
	Rear	50	50	50	40
	Tailgate	-	-	-	32
	Tweeter	50	50	50	20
	Front center	-	-	-	32
	Sub woofer	-	-	50	64
Speaker Impedance ()	Front	3.4 ± 0.5	3.4 ± 0.5	2 ± 0.3	2 ± 0.4
	Rear	3.4 ± 0.5	3.4 ± 0.5	2 ± 0.3	2 ± 0.4
	Tailgate	-	-	-	2.15 ± 0.25
	Tweeter	3.4 ± 0.5	3.4 ± 0.5	3.4 ± 0.5	4 ± 0.8
	Front center	-	-	-	2.15 ± 0.25
	Sub woofer	-	-	2 ± 0.3	1.4 ± 0.25
Speaker Number		6	6	7	10
External Amplifier	Power supply	DC 14.4V	DC 14.4V	DC 14.4V	DC 14.4V
	Output power	MAX 43W x 4	MAX 43W x 4	MAX 310W (55W x 4CH + 45W x 2CH)	MAX 660W (55W x 12CH)
	Speaker Impedance ()	4 x 4	4 x 4	2 x 5 + 3.4 x 2	2 x 5 + 3.4 x 2 + 1.4V

COMPONENT LOCATION

E713F673

This illustration shows the LHD type.
RHD type is symmetrical.

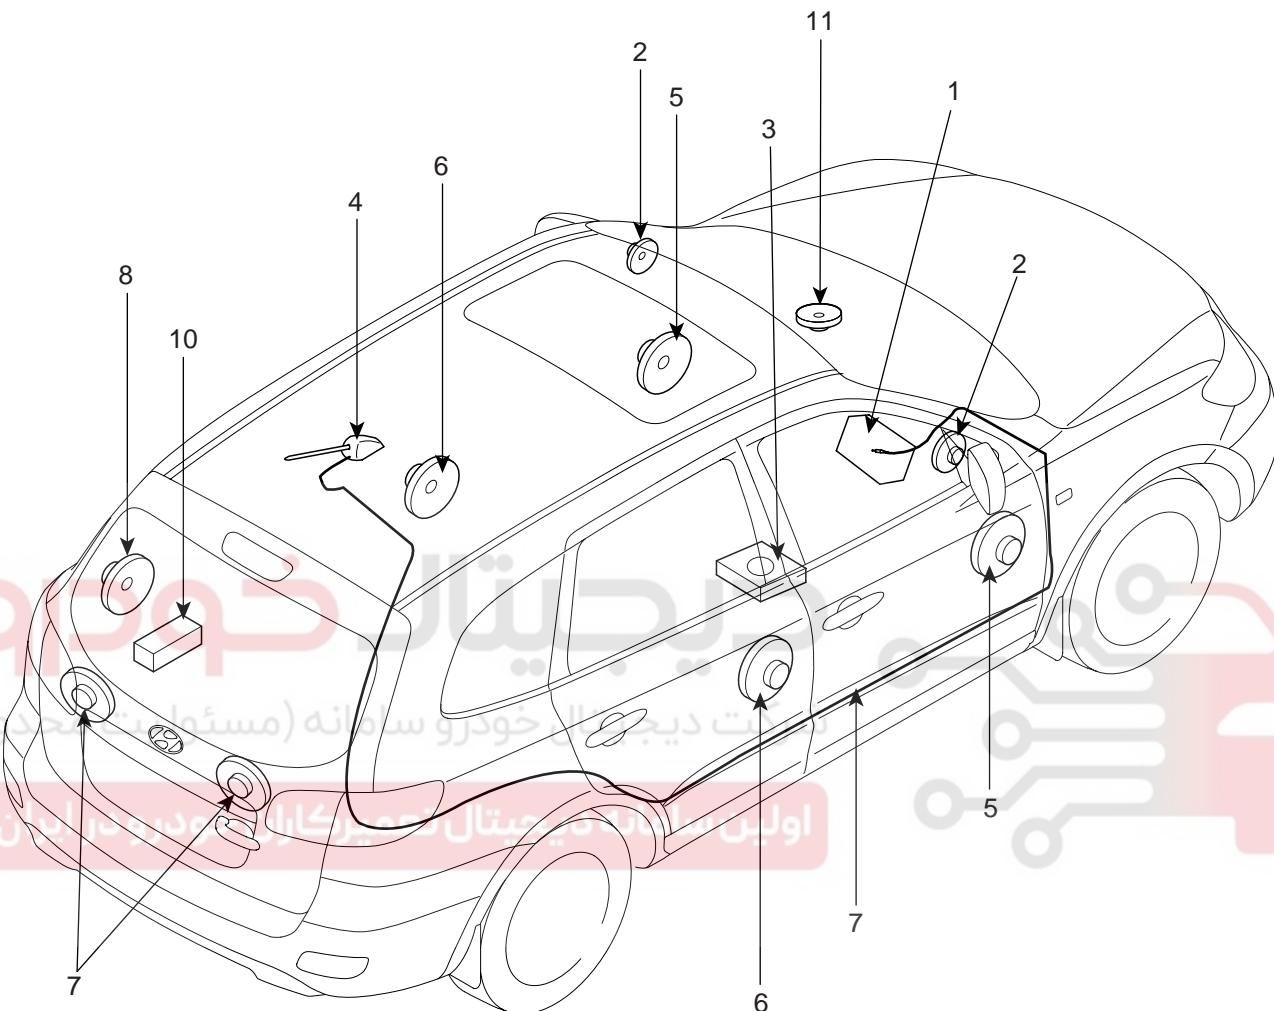

- 1. Audio unit
- 2. Tweeter speaker
- 3. External amplifier
- 4. Roof antenna
- 5. Front door speaker
- 6. Rear door speaker
- 7. Tailgate speaker
- 8. Sub-woofer speaker
- 9. Antenna feeder cable
- 10. 6CD changer
- 11. Crash pad center speaker

SCMBE6001L

TROUBLESHOOTING

EABDCBC8

CUSTOMER COMPLAINT ANALYSIS CHECK SHEET

TROUBLE IN	<input type="checkbox"/> ALL <input type="checkbox"/> AM <input type="checkbox"/> FM <input type="checkbox"/> TAPE <input type="checkbox"/> CD <input type="checkbox"/> MP3 <input type="checkbox"/> CD changer <input type="checkbox"/> AMP <input type="checkbox"/> Others
TROUBLE OCCURS	<input type="checkbox"/> Always <input type="checkbox"/> Engine start <input type="checkbox"/> Engine Running <input type="checkbox"/> Cold <input type="checkbox"/> Warm <input type="checkbox"/> Sometimes <input type="checkbox"/> Most of the time <input type="checkbox"/> Engine off
TYPE OF TROUBLE	<input type="checkbox"/> Will not play <input type="checkbox"/> Tape speed not proper <input type="checkbox"/> Weak <input type="checkbox"/> Squealing noise <input type="checkbox"/> Eats tape <input type="checkbox"/> Display/illumination poor <input type="checkbox"/> CD skips & jumps <input type="checkbox"/> Tape/CD will not eject or insert <input type="checkbox"/> Others (Describe) :
OTHERS	<ul style="list-style-type: none"> ► Customer complaint contents : ► Have you checked customer's defects :

* Using the customer complaint analysis check sheet for reference, ask the customer for as much detail as possible about the problem.


BT1G001A

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

There are six areas where a problem can occur: wiring harness, the radio, the cassette tape deck, the CD player,


and speaker. Troubleshooting enables you to confine the problem to a particular area.

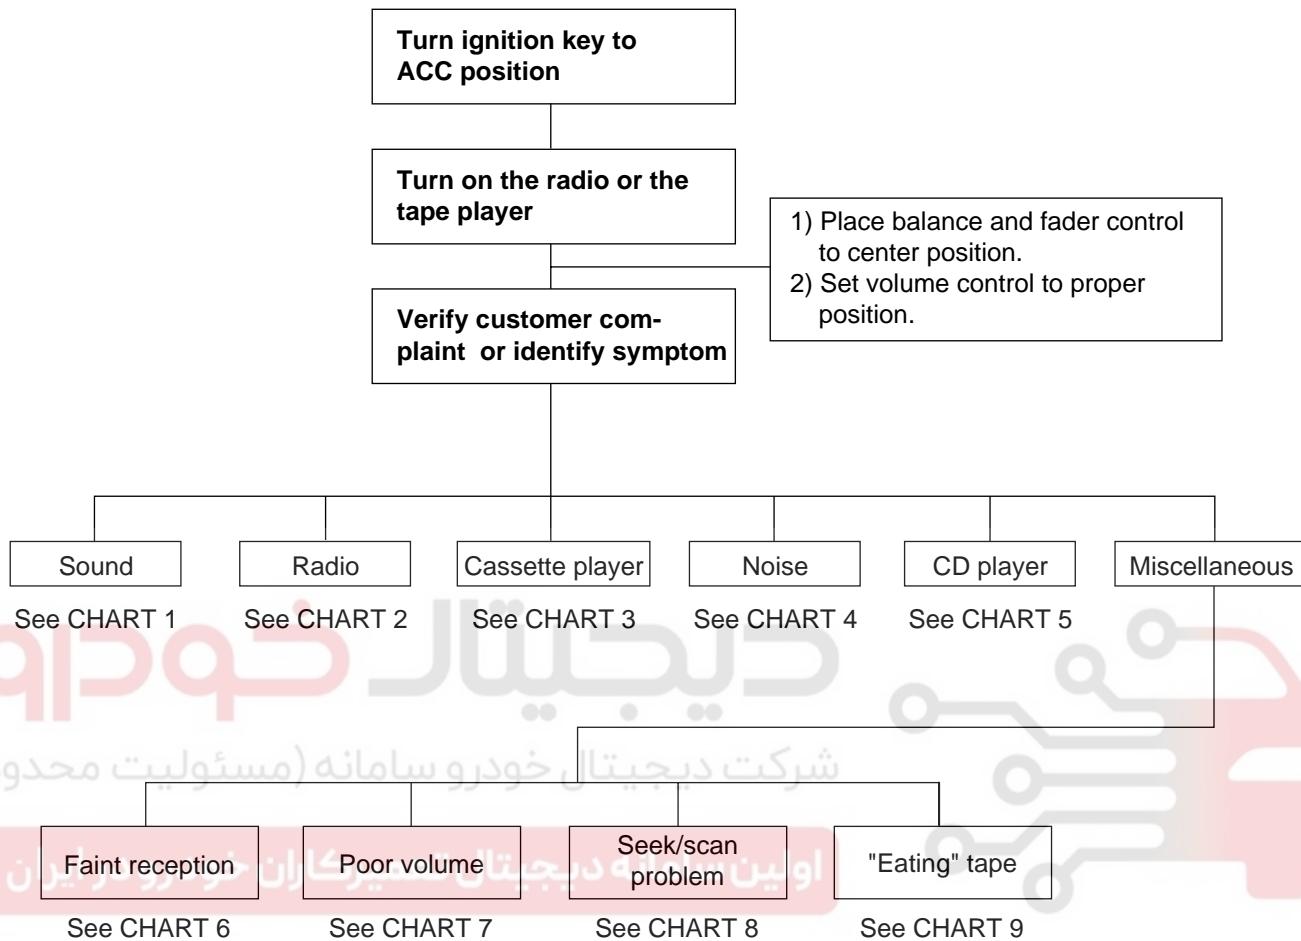


LTIF001A


AUDIO SYSTEM

BE -11

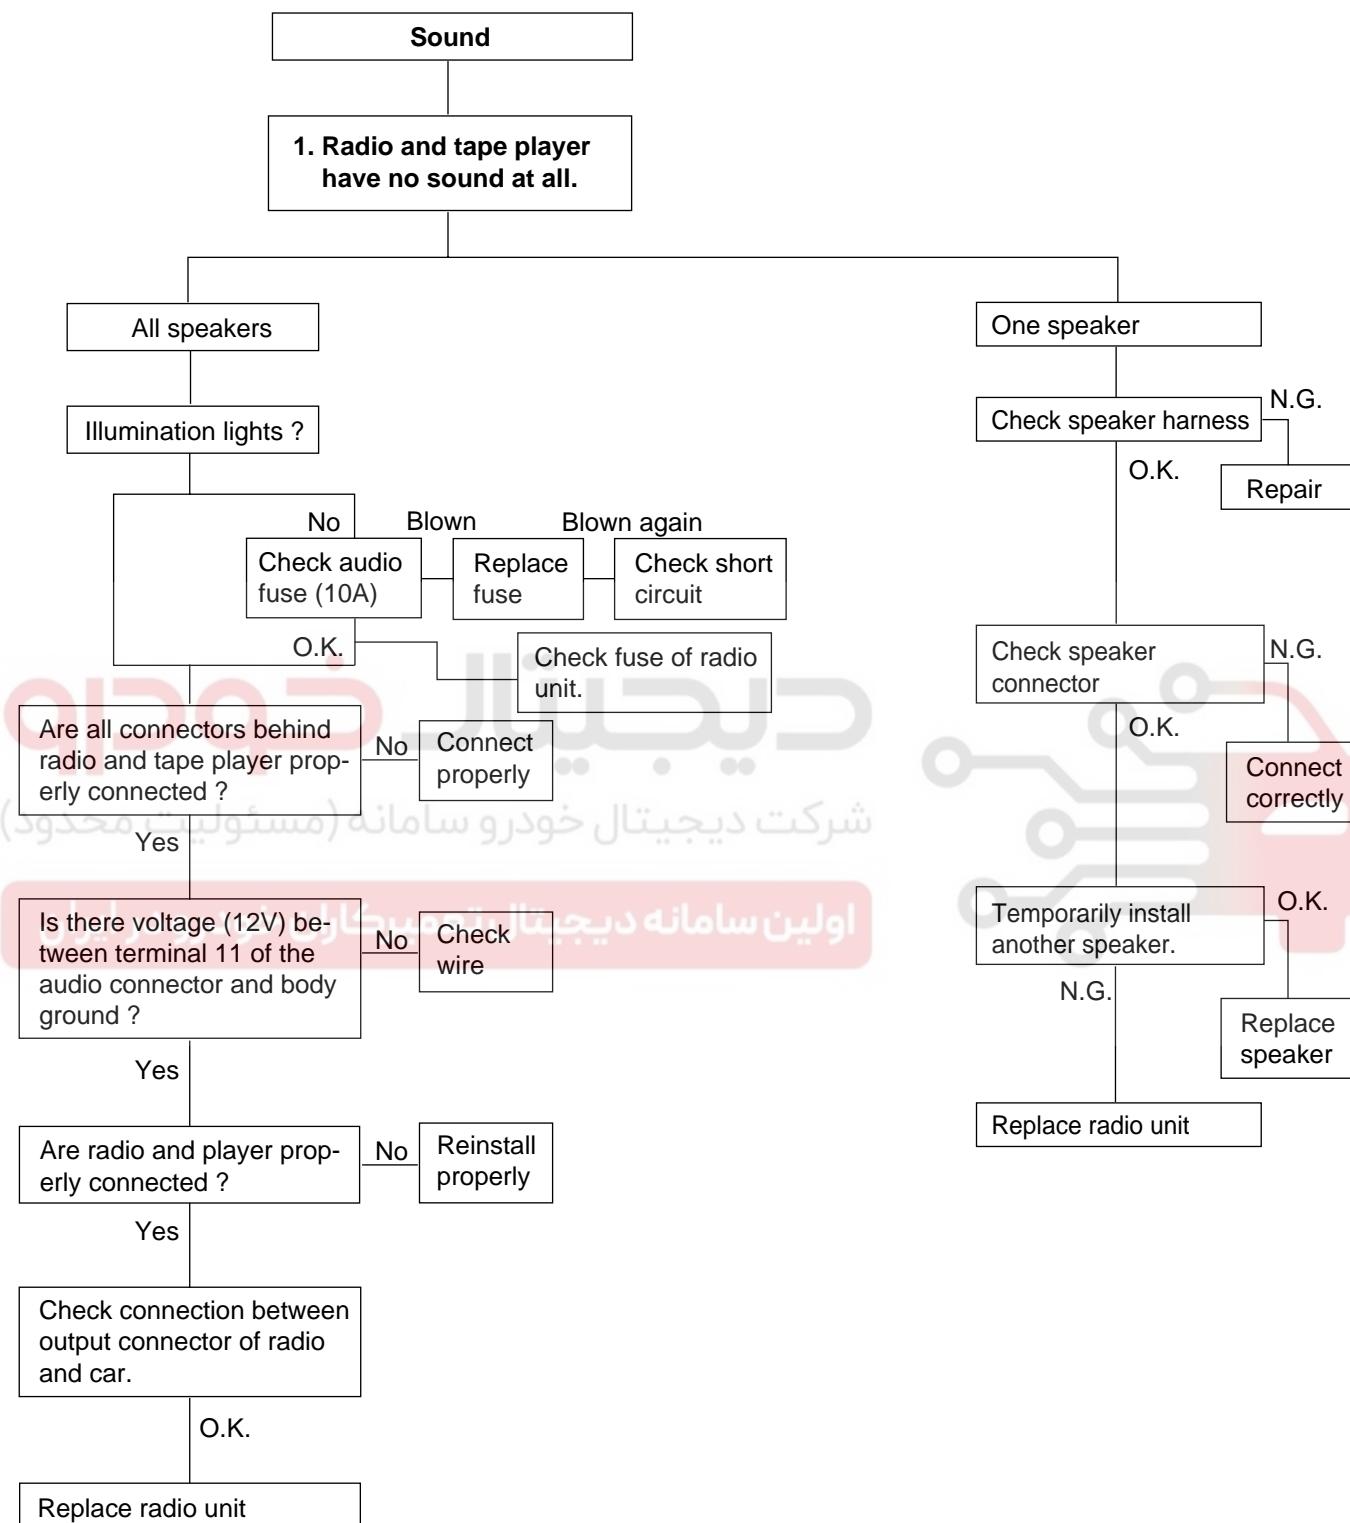CHART 1

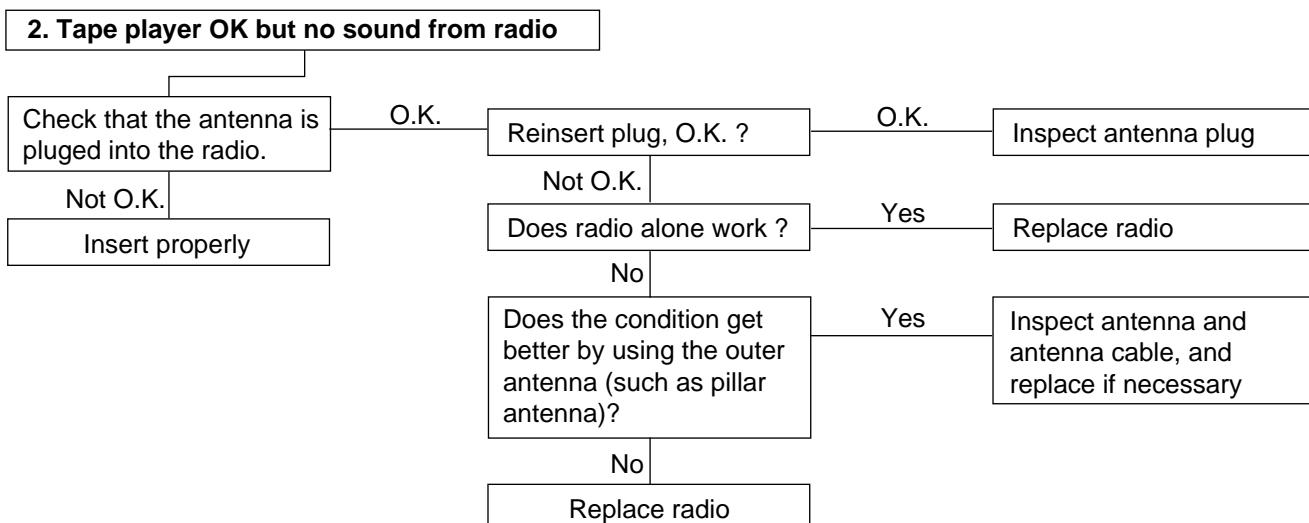


LTIF001C

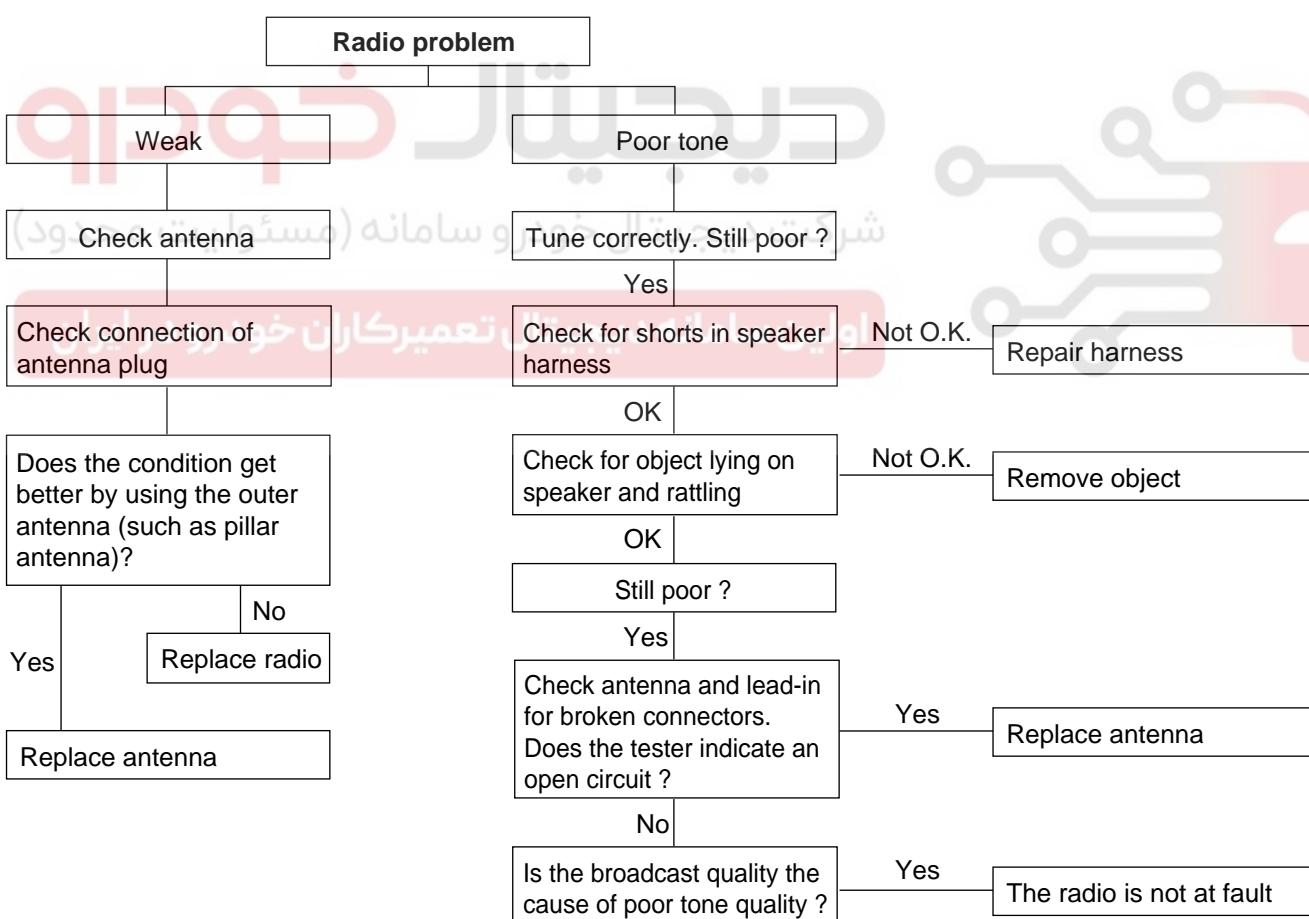CHART 2

BTIF001D


CHART 3

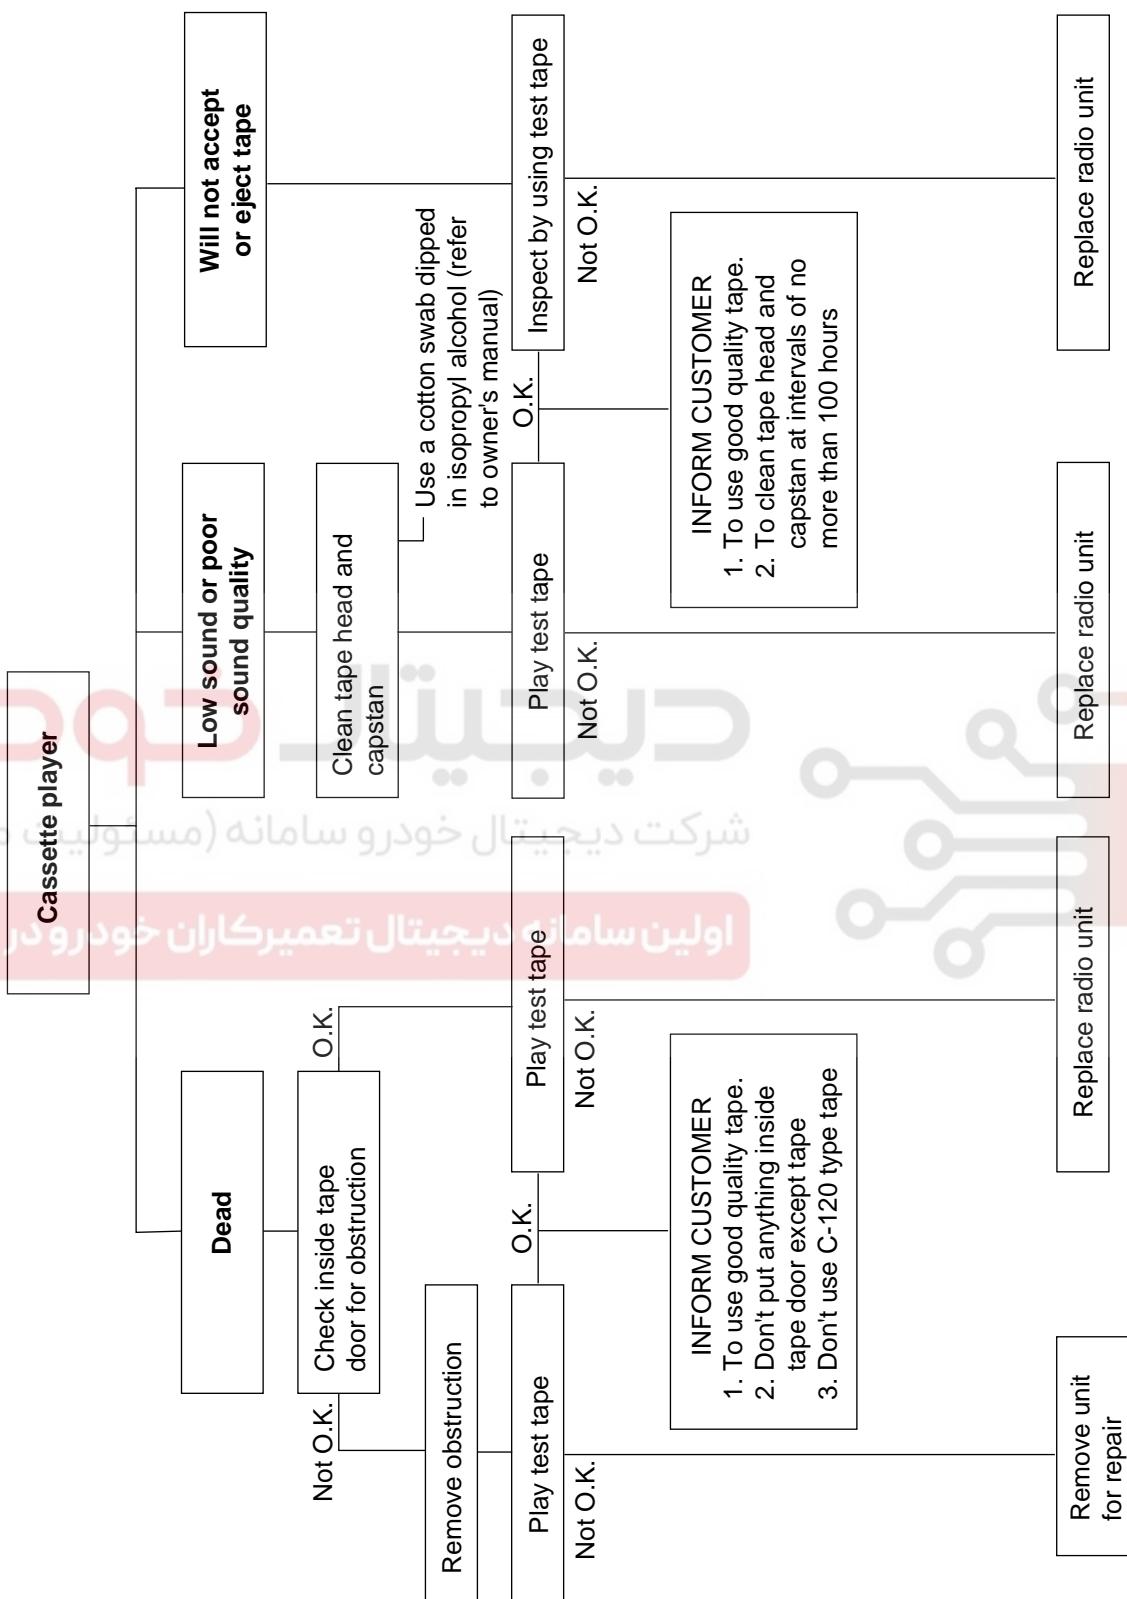

ETBF001E

CHART 4

1. RADIO

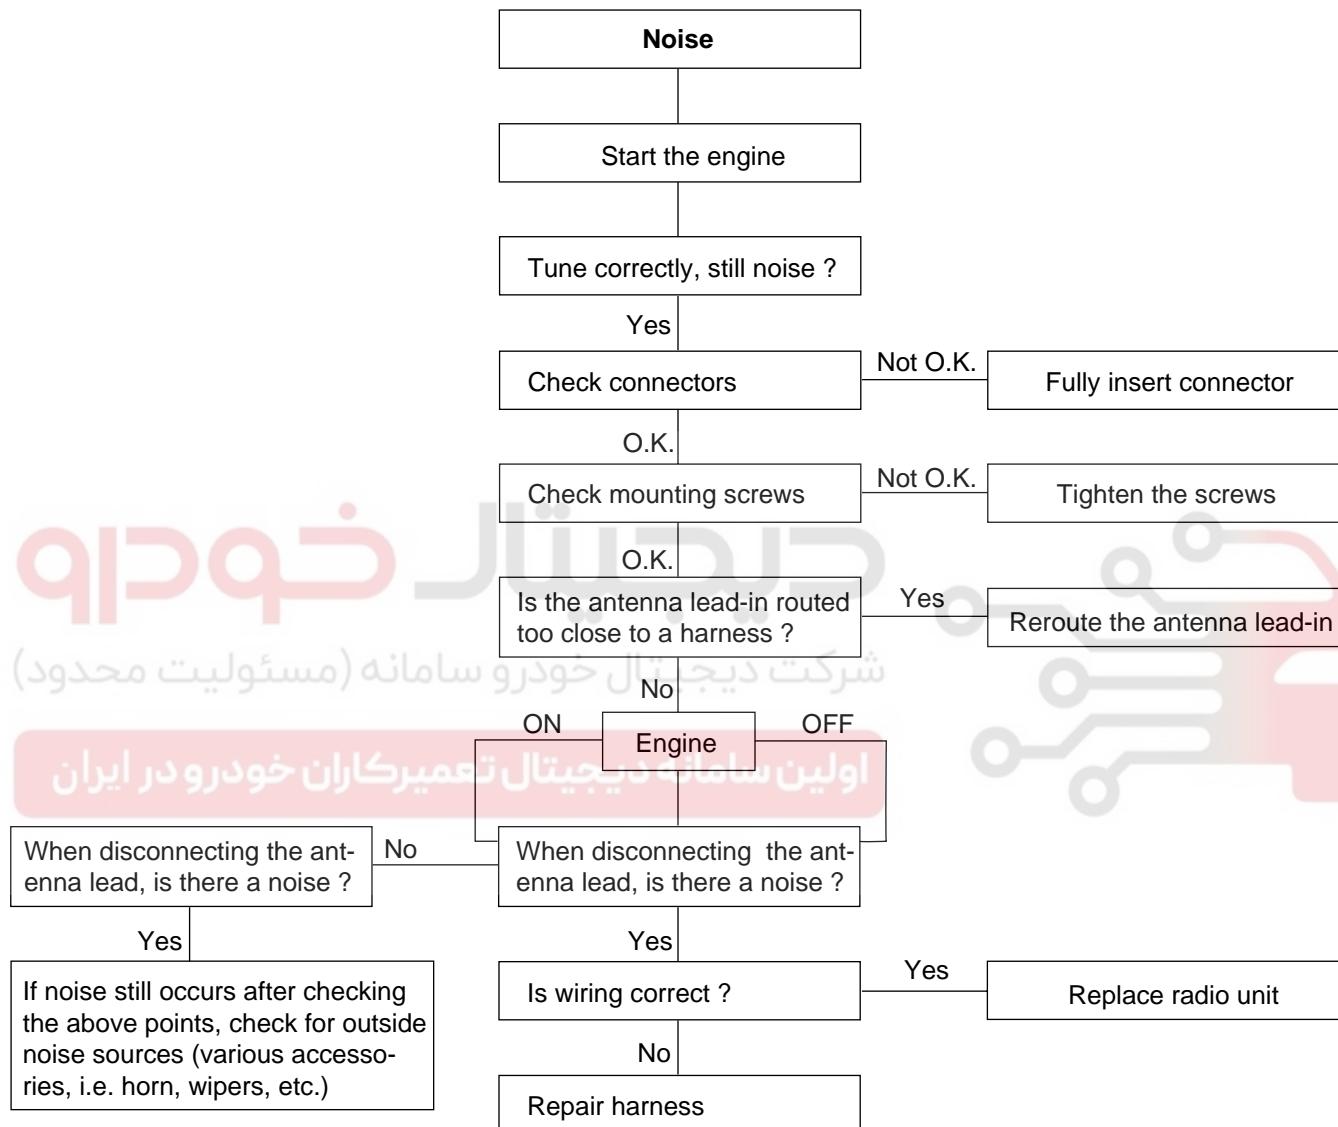

LTIF001F


AUDIO SYSTEM

BE -15

2. TAPE




شركة ديجيتال خودرو سامانه (مسؤولیت محدود)

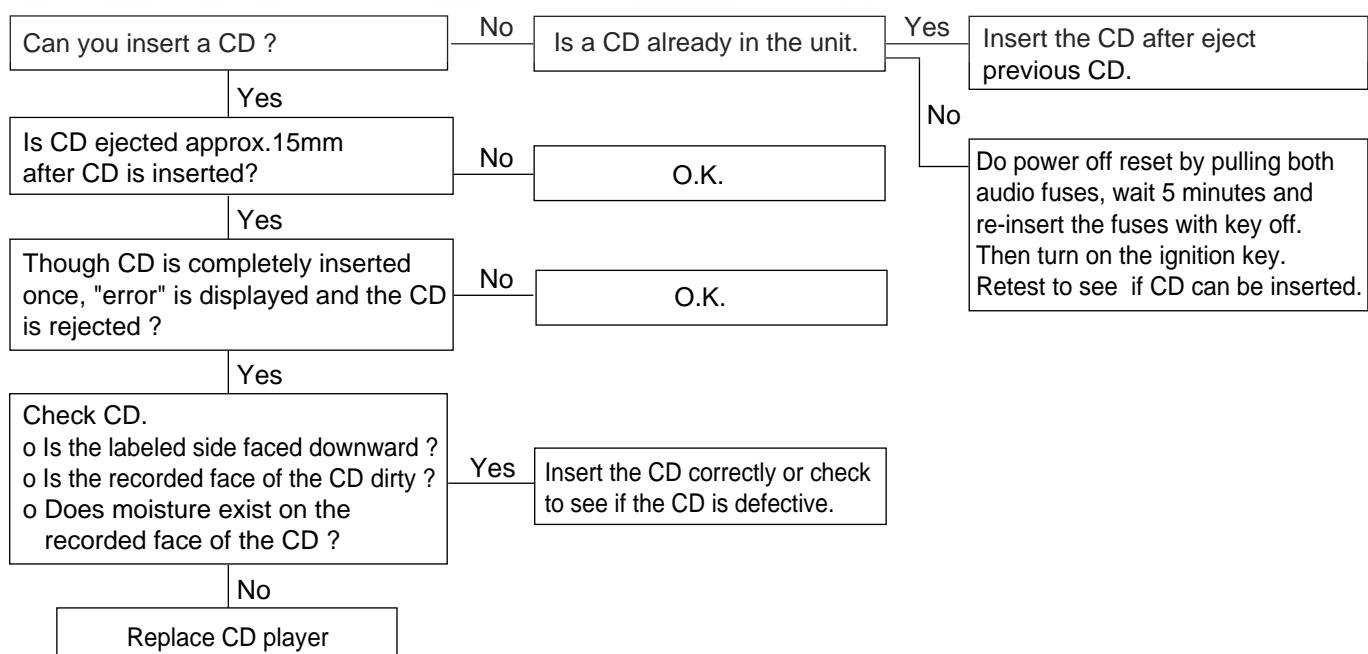CHART 5**اولین سامانه دیجیتال تعمیر**

LTIF001H

2. NO SOUND

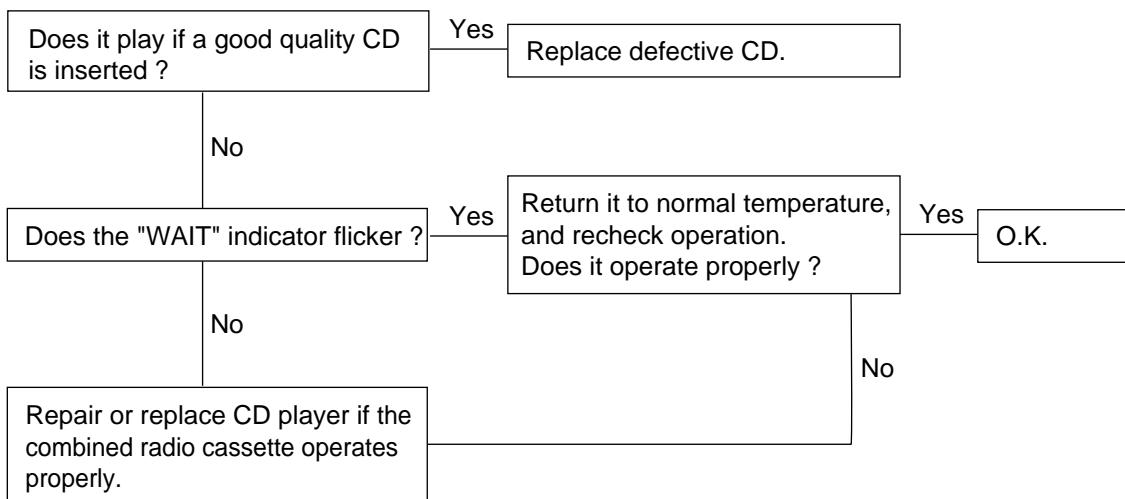

LTIF001I

3. CD SOUND SKIPS


1) Sound sometimes skips when parking.



2) Sound sometimes skips when driving.

(Stop vehicle, and check it.)




(Check by using a CD which is free of scratches, dirt or other damage.)

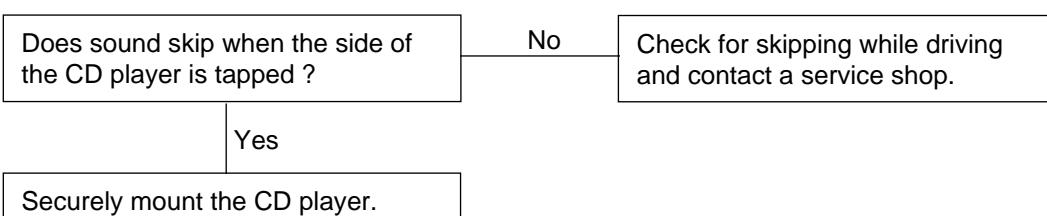

LTIF001J

AUDIO SYSTEM

BE -17

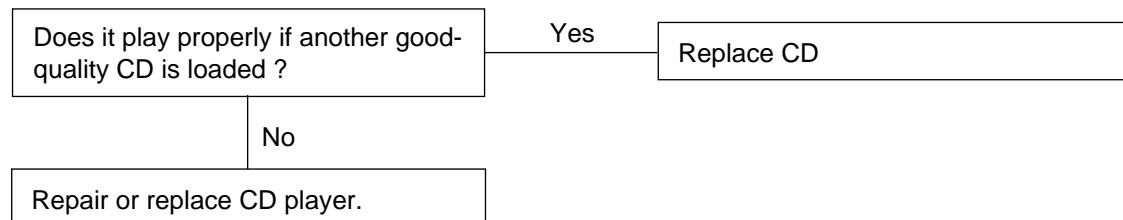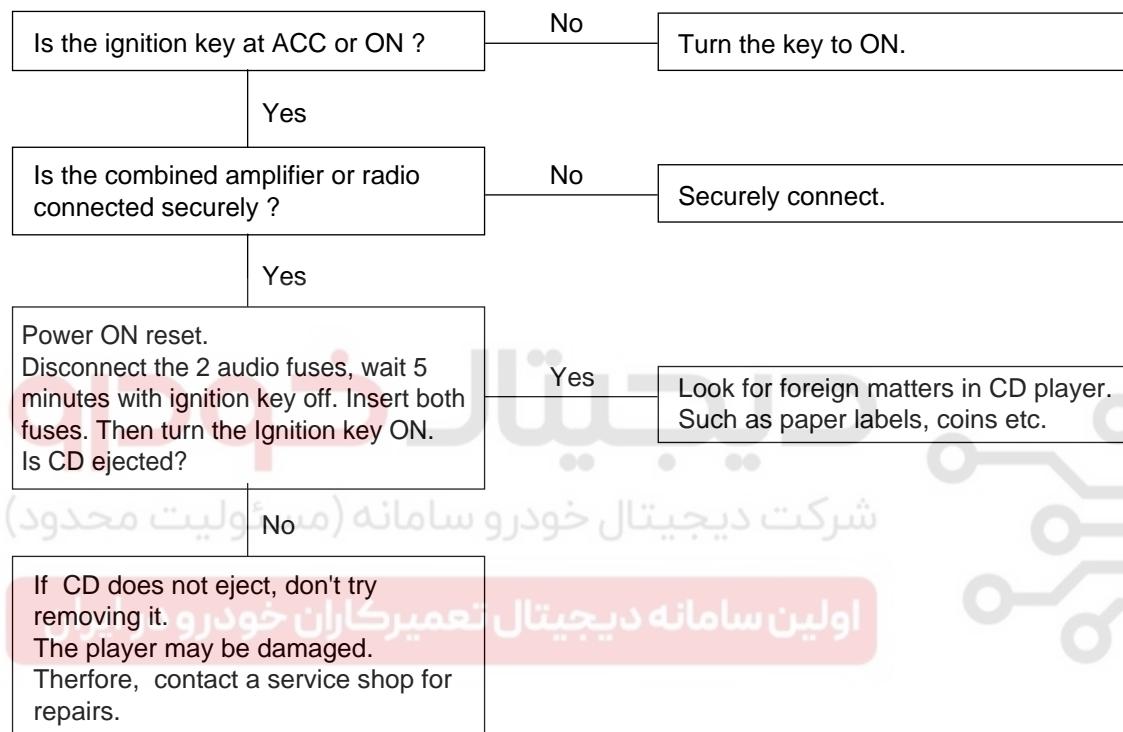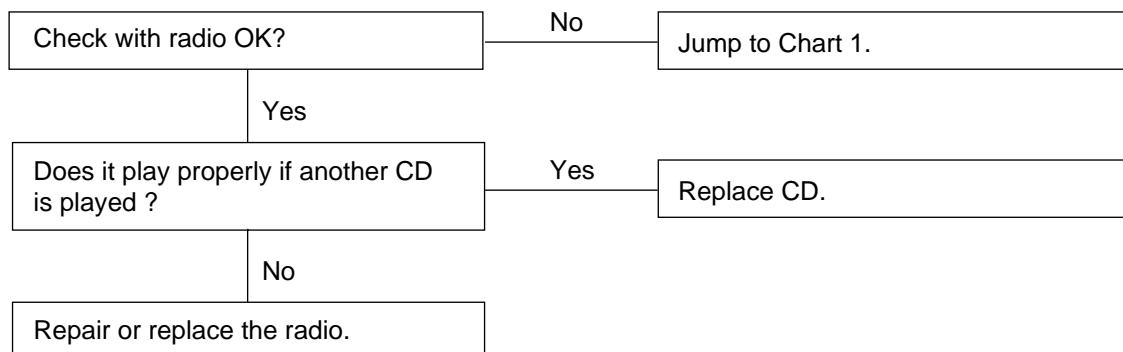4. SOUND QUALITY IS POOR**5. CD WILL NOT EJECT****6. NO SOUND FROM ONE SPEAKER**

LTIF001K

CHART 6




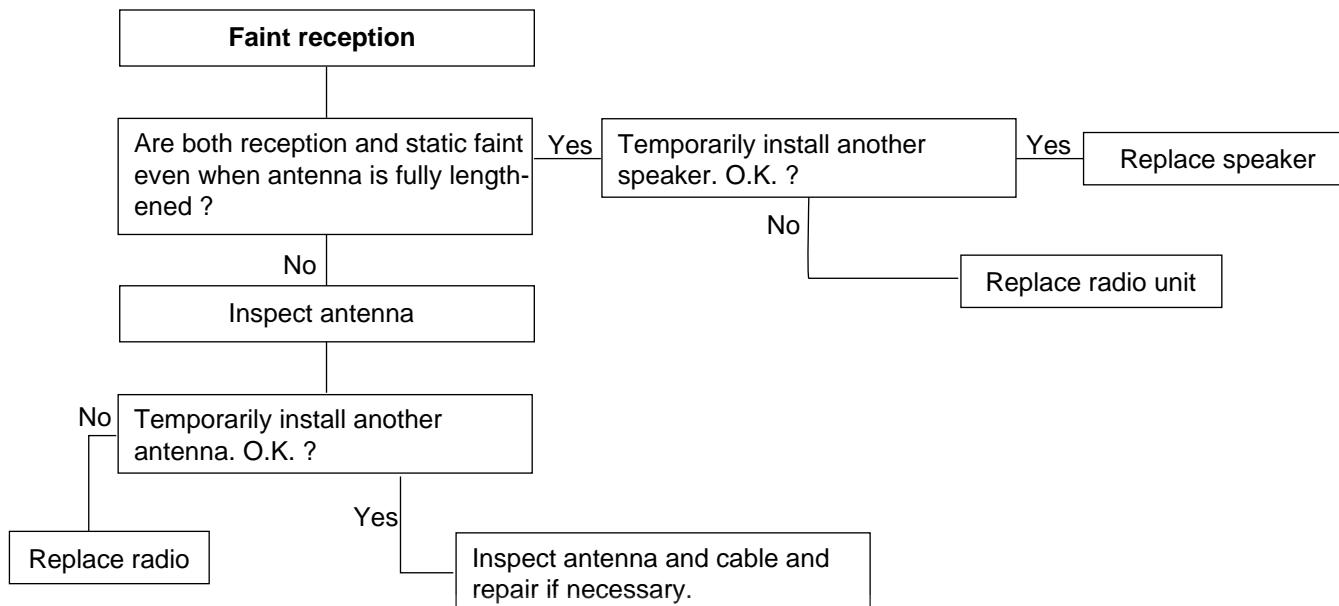


CHART 7

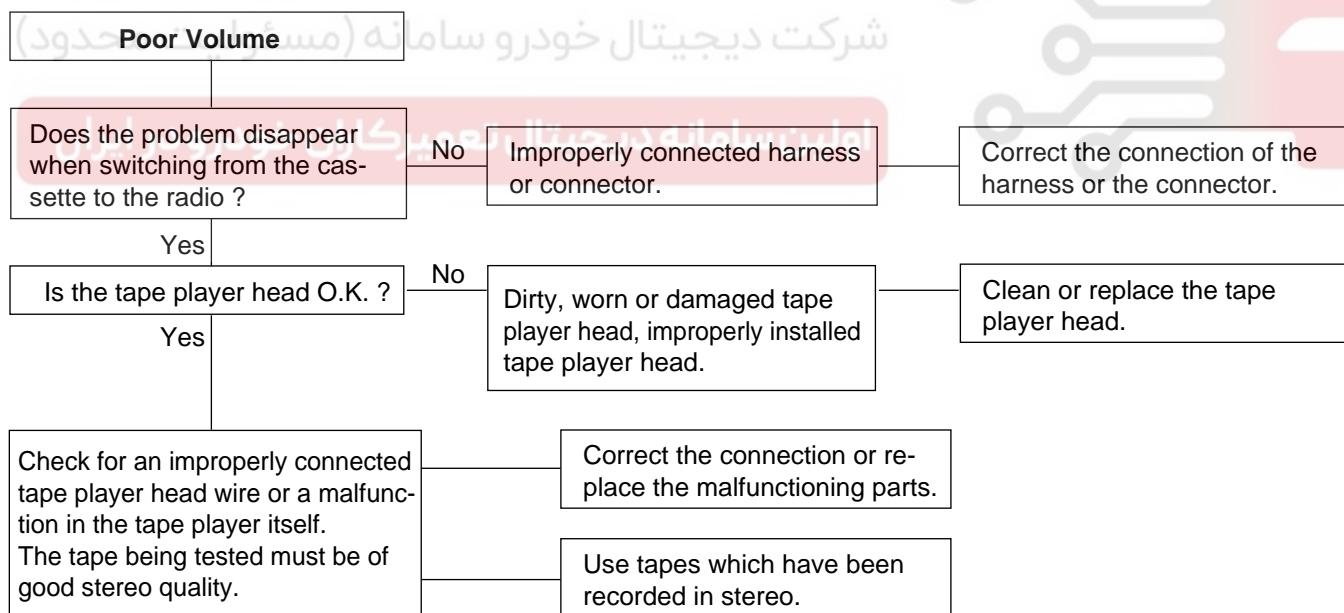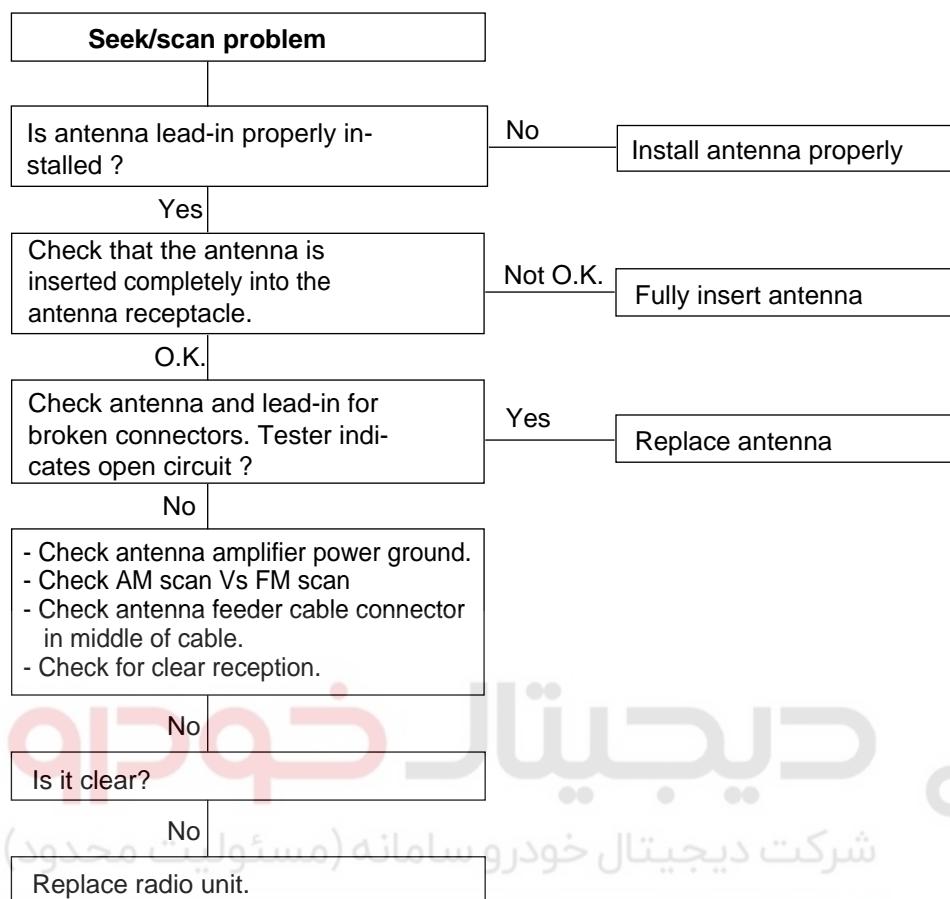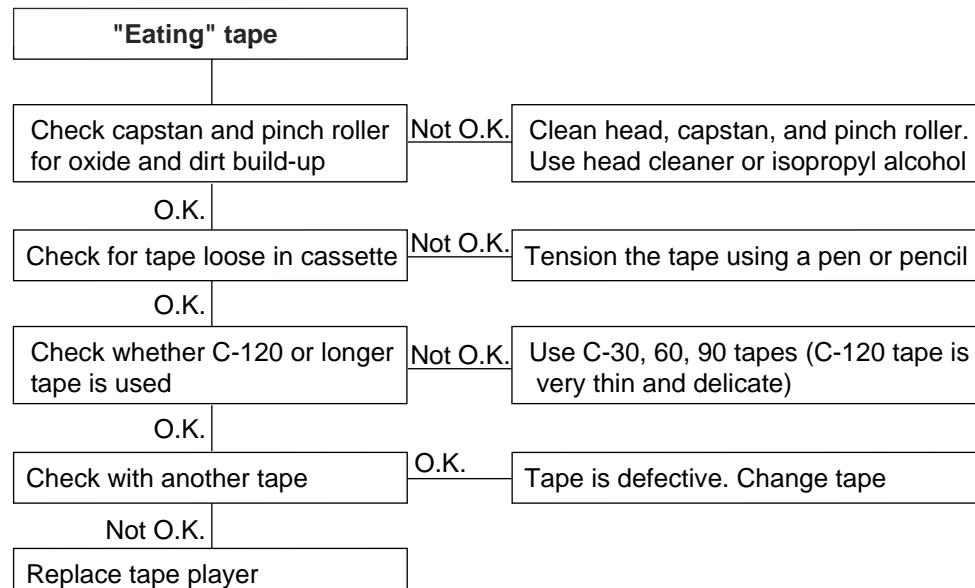

AUDIO SYSTEM

BE -19

CHART 8**CHART 9**



LTIF001N

LTIF001O

AUDIO UNIT



COMPONENTS E35BCAF6

[AM/FM/CASSETTE/CD(M445)]

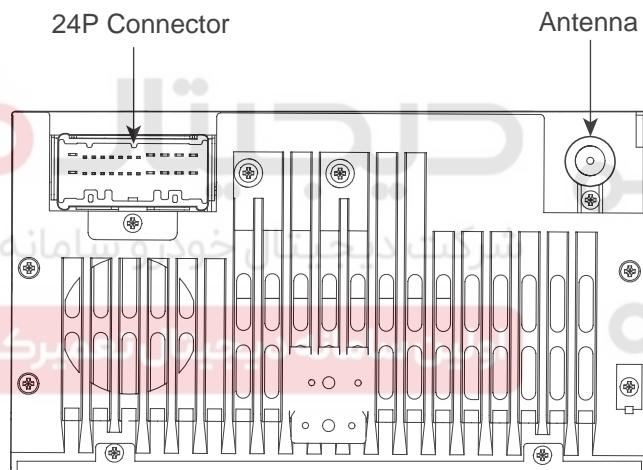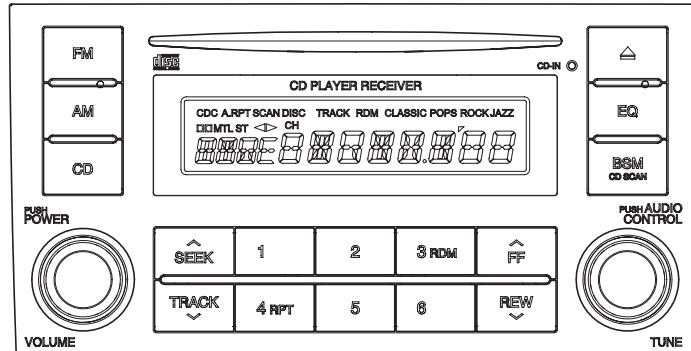

24P Connector	Pin	Description	Pin	Description
	1	Ground	13	Remote control ground
	2	B+	14	Steering remote control
	3	Antenna B+	15	Illumination(-)
	4	ACC	16	Illumination(+)
	5	-	17	Rear left speaker(-)
	6	-	18	Rear left speaker(+)
	7	Tweeter in(Right)	19	Rear right speaker(-)
	8	Tweeter in(Left)	20	Rear right speaker(+)
	9	Ground	21	Front right speaker(-)
	10	Tweeter ground	22	Front right speaker(+)
	11	MUTE	23	Front left speaker(-)
	12	Rear arm remote control	24	Front left speaker(+)



[AM/FM/MP3/CD(M455)]

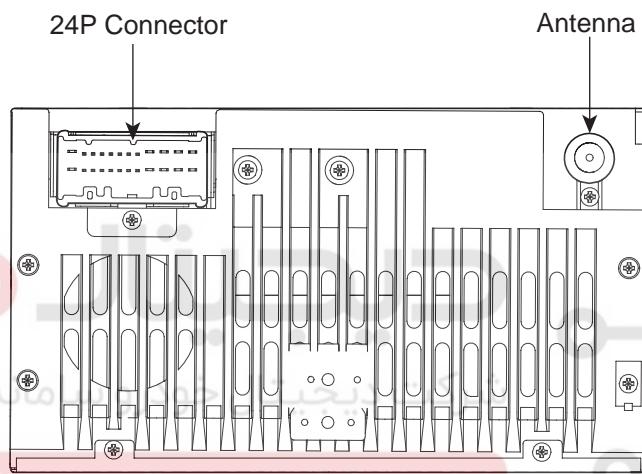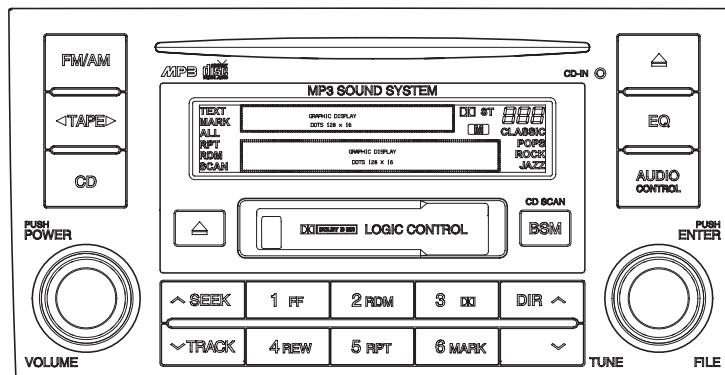

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران


24P Connector	Pin	Description	Pin	Description
	1	Ground	13	Remote control ground
	2	B+	14	Steering remote control
	3	Antenna B+	15	Illumination(-)
	4	ACC	16	Illumination(+)
	5	-	17	Rear left speaker(-)
	6	-	18	Rear left speaker(+)
	7	Tweeter in(Right)	19	Rear right speaker(-)
	8	Tweeter in(Left)	20	Rear right speaker(+)
	9	Ground	21	Front right speaker(-)
	10	Tweeter ground	22	Front right speaker(+)
	11	MUTE	23	Front left speaker(-)
	12	Rear arm remote control	24	Front left speaker(+)

[AM/FM/CASSETTE/MP3/6CDC(M465)]

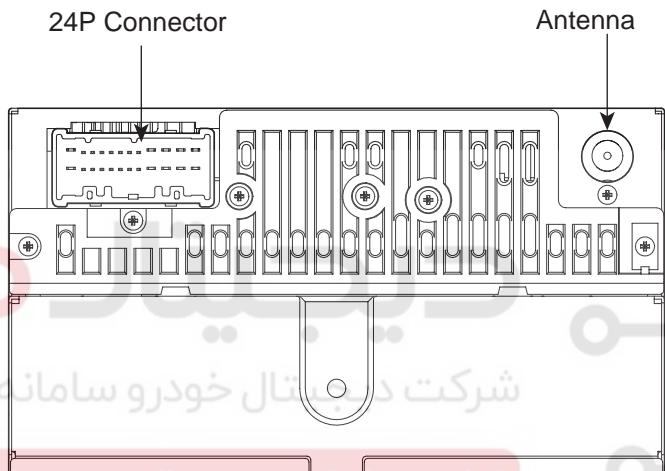
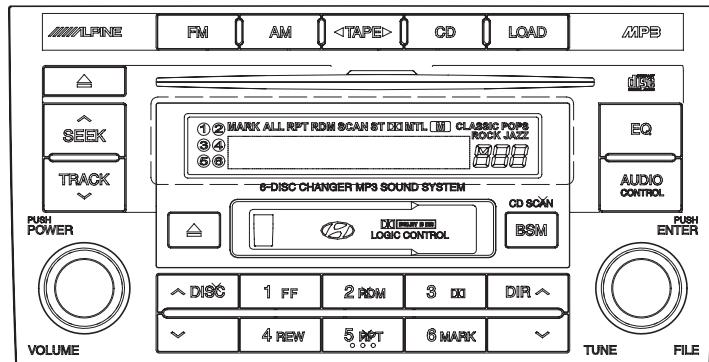


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سماوه دیجیتال سیمیرکاران خودرو در ایران

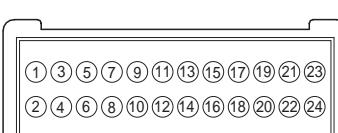24P Connector	Pin	Description	Pin	Description
	1	Ground	13	Remote control ground
	2	B+	14	Steering remote control
	3	Antenna B+	15	Illumination(-)
	4	ACC	16	Illumination(+)
	5	-	17	Rear left speaker(-)
	6	Remote control	18	Rear left speaker(+)
	7	Tweeter in(Right)	19	Rear right speaker(-)
	8	Tweeter in(Left)	20	Rear right speaker(+)
	9	Ground	21	Front right speaker(-)
	10	Tweeter ground	22	Front right speaker(+)
	11	MUTE	23	Front left speaker(-)
	12	Rear arm remote control	24	Front left speaker(+)

[PREMIUM (D466)]

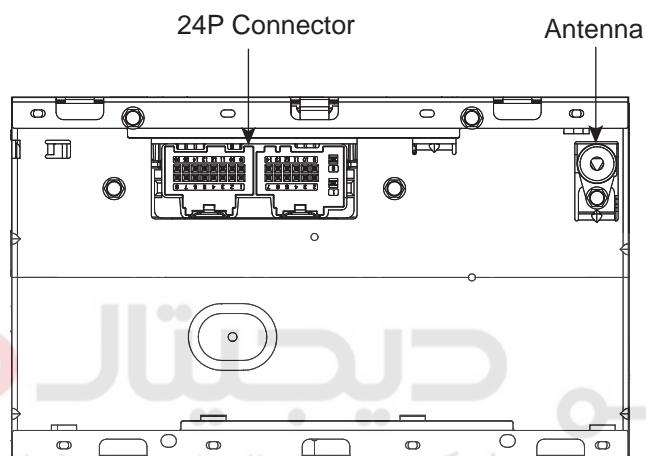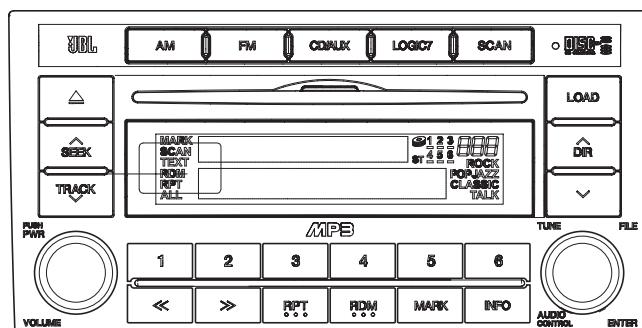


Connector	Connector A		Connector B	
	Pin	Description	Pin	Description
	1	B+	1	Tweeter (Left)
Connector A	2	-	2	Tweeter (Right)
Connector B	3	-	3	Tweeter ground
	4	Illumination(+)	4	EQ SEL
	5	Illumination(-)	5	Front right speaker(-)
	6	Remote control	6	Front right speaker(+)
	7	ACC	7	Rear left speaker(-)
	8	Ground	8	Rear left speaker(+)
	9	MUTE	9	-
	10	Surround ON/OFF	10	-
	11	SWC	11	-
	12	SWC output	12	-
	13	MSCAN high	13	Front left speaker(-)
	14	MSCAN low	14	Front left speaker(+)
			15	Rear right speaker(-)
			16	Rear right speaker(+)

INSPECTION

E813AFA7

TAPE HEAD AND CAPSTAN CLEANING


1. To obtain optimum performance, clean the head, and capstan as often as necessary, depending on frequency of use and tape cleanliness.
2. To clean the tape head and capstan, use a cotton swab dipped in ordinary rubbing alcohol. Wipe the head and capstan.

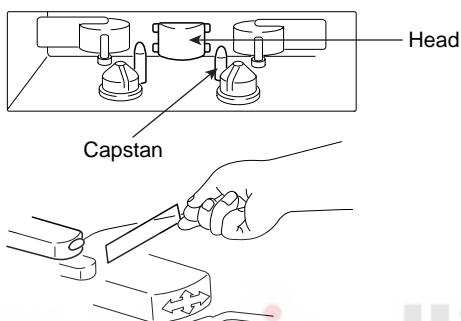

REPLACEMENT


EA2B9CB5

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad center speaker grill (A). (Refer to the Body group - Crash pad).

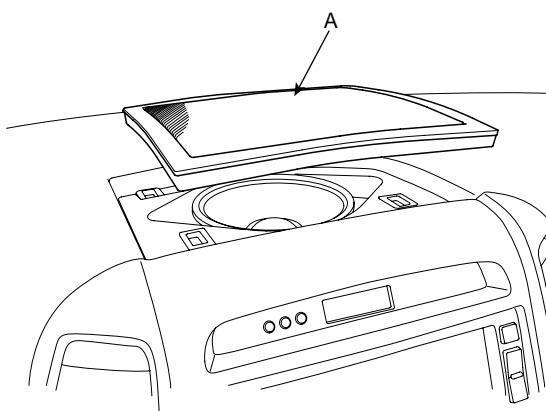

SCMBE6014D

3. Remove the crash pad center speaker (A) after loosening the screws. Avoid damaging retaining clips.

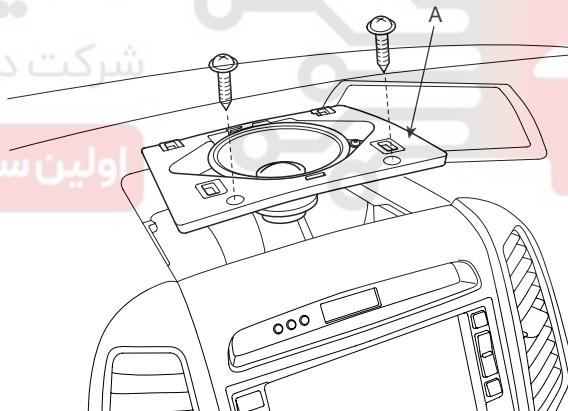

SCMBE6015D


شکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

AUDIO SYSTEM**BE -25**

4. Remove the center facia panel (A) after loosening the screws.
(Refer to the Body group - Crash pad).


▷: Screw, 2

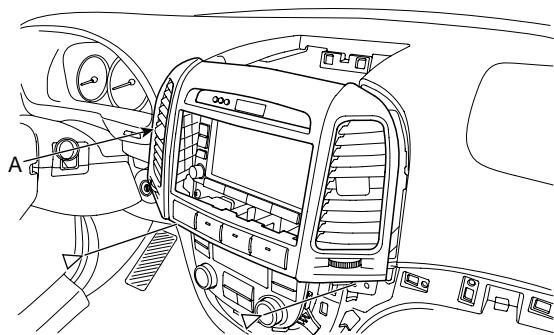

SCMBE6010L

5. Remove the connectors.
6. Remove the mounting bolts then remove the audio unit (A).

شركة ديجيتال خودرو سامانه (المسؤولية محدودة)
اولین سامانه دیجیتال خودرو

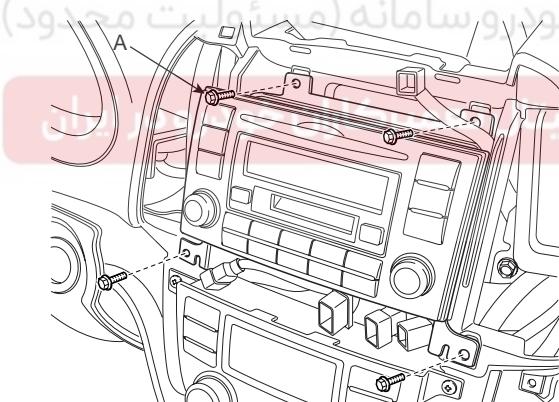

SCMBE6011D

7. Remove the audio unit after disconnecting the audio connectors and cable.
8. Installation is the reverse of removal.


SPEAKERS

INSPECTION

EA07AC38

1. Check the speaker with an ohmmeter. If an ohmmeter indicates the correct impedance of the speaker when checking between the speaker (+) and speaker (-) of the same channel, the speaker is ok.

Specified impedance : 2~4

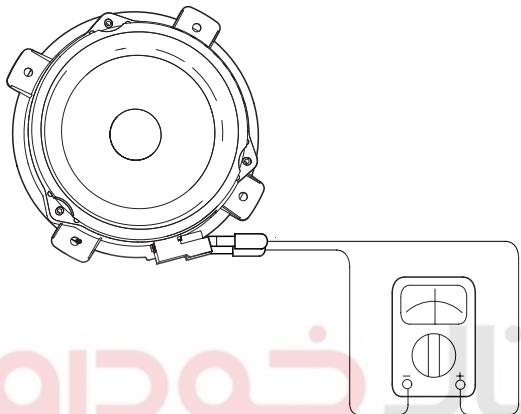


ATLG022E

REPLACEMENT

EC2DE7E3

FRONT SPEAKER

1. Remove the front door trim.
(Refer to the Body group - Front door).
2. Remove the front speaker (A) after removing 4 rivets.

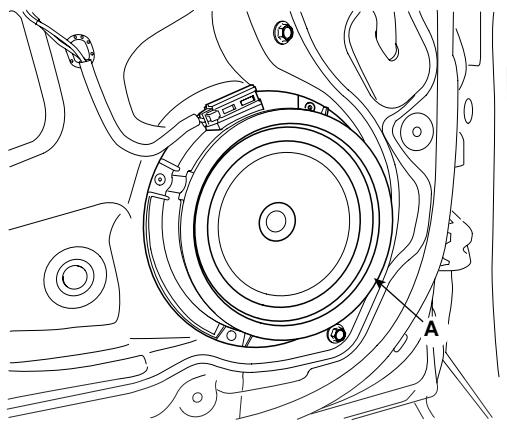


SCMBE6020D

3. Installation is the reverse of removal.

REAR SPEAKER

1. Remove the rear door trim.
(Refer to the Body group - Rear door).
2. Remove the rear speaker (A) after removing 4 rivets.

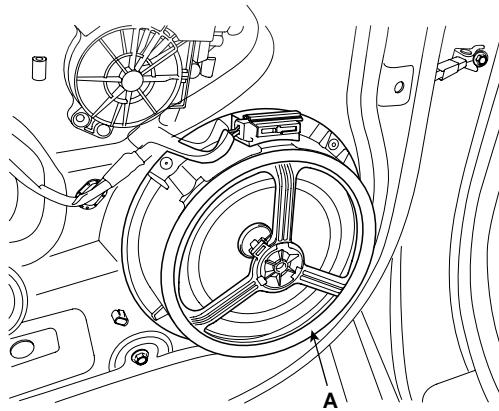


SCMBE6021D

3. Installation is the reverse of removal.

AUDIO SYSTEM**BE -27****CRASH PAD SPEAKER**

1. Remove the crash pad center speaker grill (A).

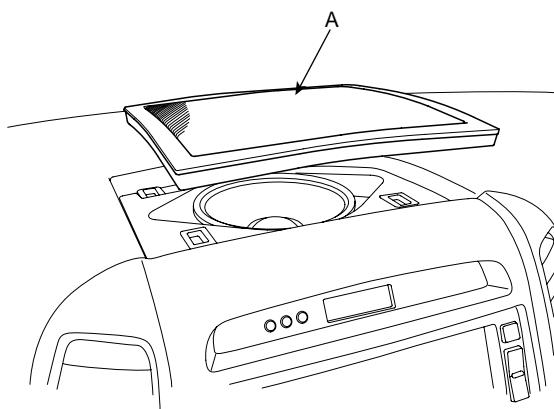


SCMBE6022D

TAILGATE SPEAKER

1. Remove the tailgate trim.
(Refer to the Body group - Tailgate).
2. Remove the tailgate speaker (A) after loosening 2 bolts.


▷: Bolt, 2

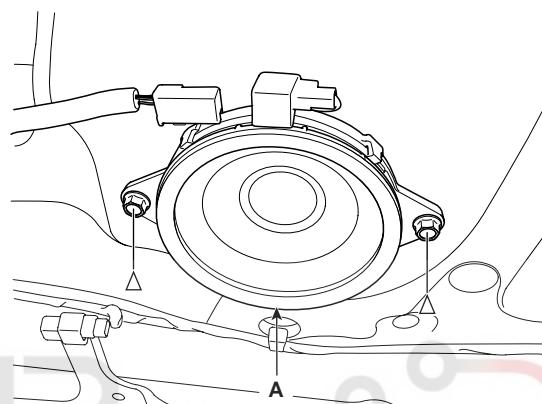


SCMBE6027L

6CD CHANGER

1. Remove the left luggage side trim.
(Refer to the Body group - Internal trim)
2. Remove the 6CD changer (A) after removing 4 bolts and disconnecting the connector.

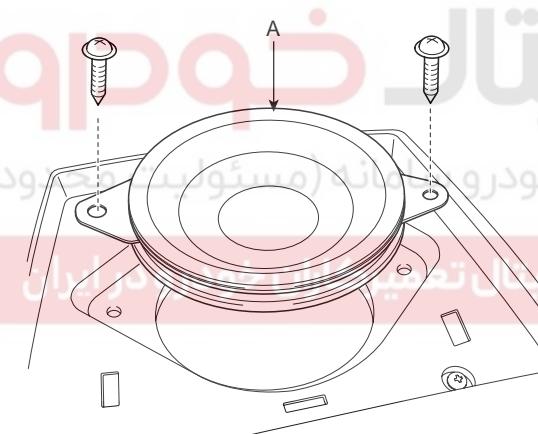

SCMBE6023D

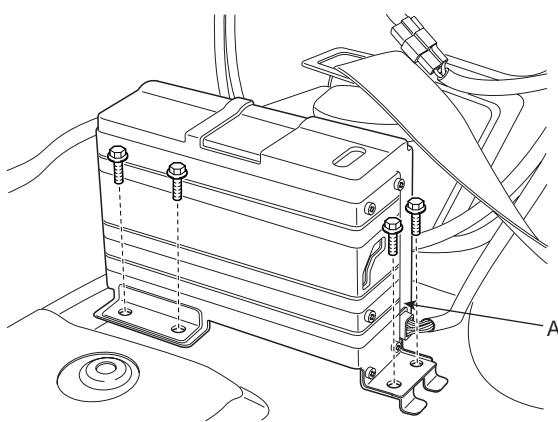


SCMBE6028D

3. Installation is the reverse of removal.

EXTERNAL AMPLIFIER

1. Remove the assistance seat after removing the 4 bolts and disconnecting the connector (Refer to the Body group - Front seat).
2. Remove the external amplifier (A) under the assistance seat after removing the 3 bolts.

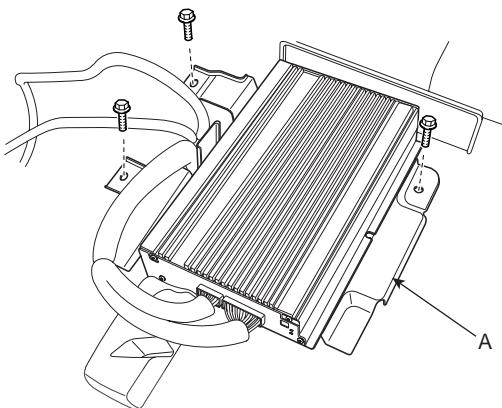

SCMBE6029D

3. Installation is the reverse of removal.


TWEETER SPEAKER

1. Remove the front door delta cover (A). (Refer to the Body group - Front door).



SCMBE6024D

2. Remove the tweeter speaker (A) after loosening 2 screws and disconnecting the connector.

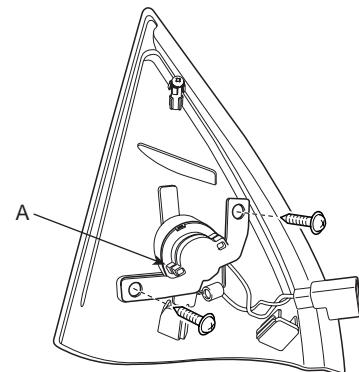


SCMBE6025D

3. Installation is the reverse of removal.

WOOFER SPEAKER

1. Remove the left luggage side trim. (Refer to the Body group - Rear seats).
2. Remove the woofer speaker (A) after removing 4 bolts and disconnecting the connector.

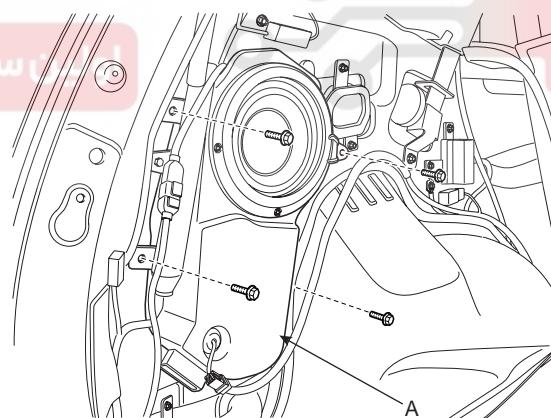


SCMBE6026D


3. Installation is the reverse of removal.

AUDIO SYSTEM**BE -29****ANTENNA****INSPECTION** E14AC1A5**ANTENNA CABLE**

1. Remove the antenna jack from the audio unit and antenna.
2. Check for continuity between the center poles of antenna cable.

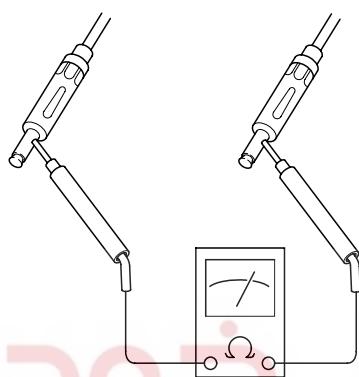

ATJF023C

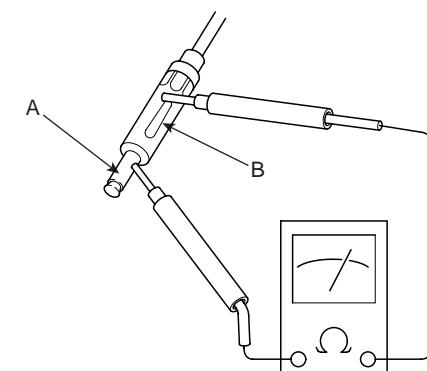


ATJF023F


5. Check for continuity between the center pole of antenna cable and terminal of glass antenna. There should be continuity.
6. If there is continuity, replace the antenna cable.

REPLACEMENT E8FE7EEC

1. Remove the rear roof trim.
(Refer to the Body group - Roof trim).
2. Disconnect the 1P power connector (A) and antenna jack (B) from the roof antenna.
3. Remove the roof antenna after removing a nut.

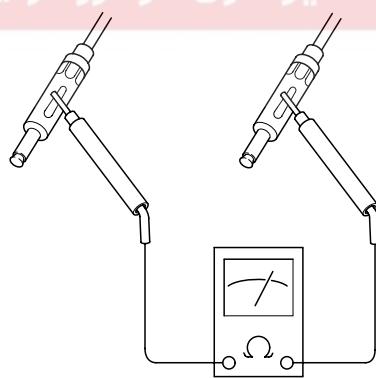

ATJF023D

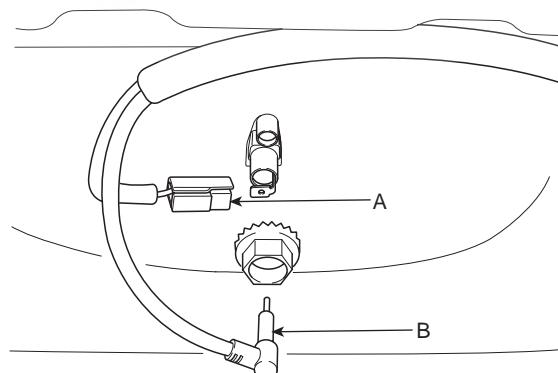


SCMBE6031D

4. If there is no continuity, replace the antenna cable.

4. Installation is the reverse of removal.

AUDIO REMOTE CONTROL

CIRCUIT DIAGRAM EB89A7CE

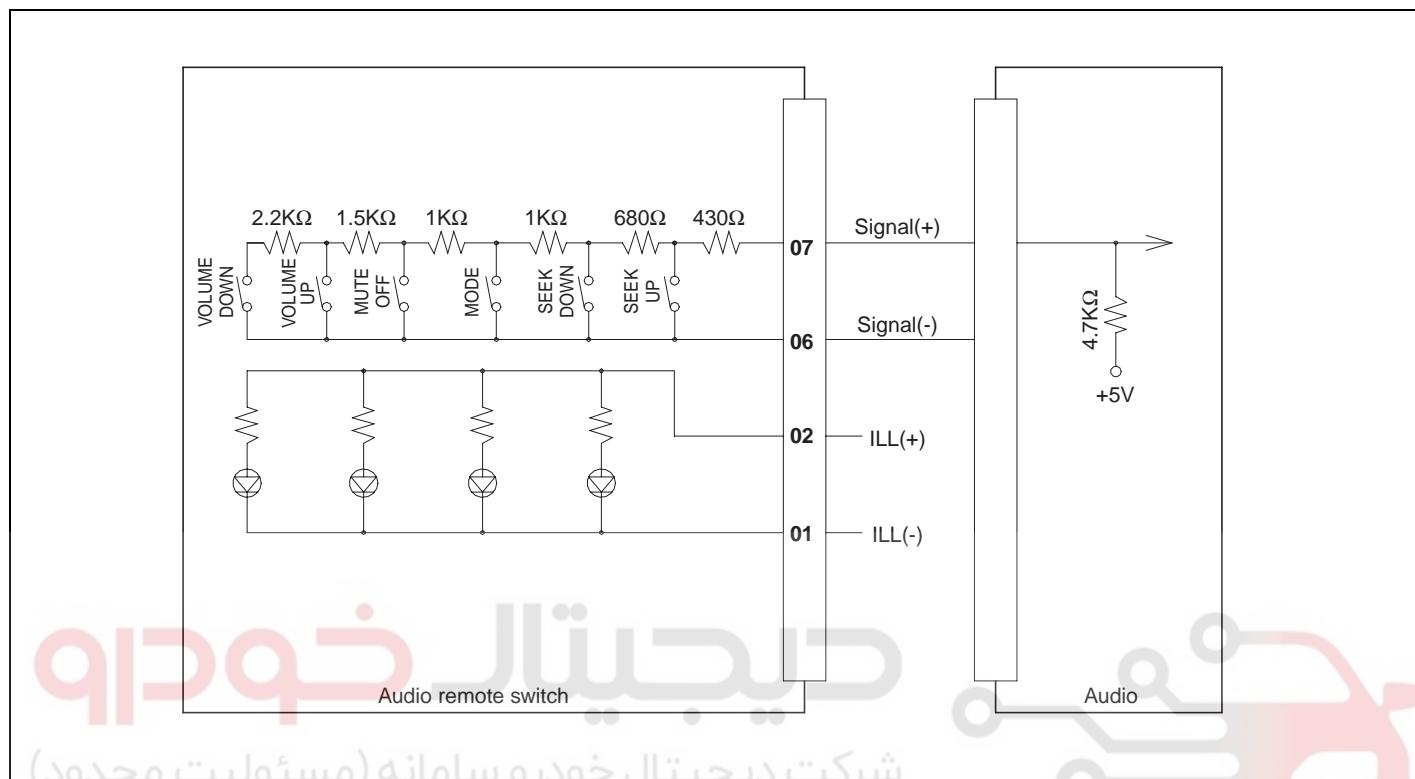

اولین سامانه دیجیتال تعمیر کاران خودرو در ایران


AUDIO SYSTEM

BE -31

INSPECTION

EA0BC62A

1. Check for resistance between No.6 and No.7 terminals in each switch position.

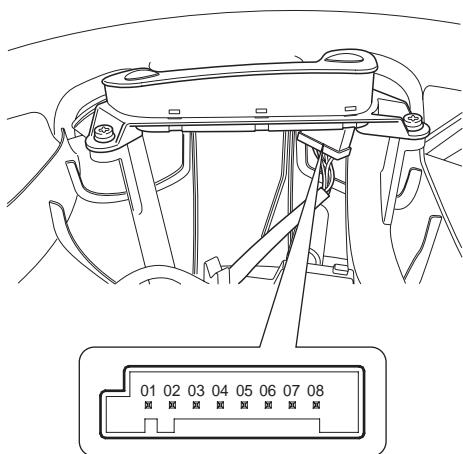


SCMBE6036D

REPLACEMENT

E2420AFD


1. Disconnect the negative (-) battery terminal.
2. Remove the driver airbag module.
(Refer to the Airbag group).

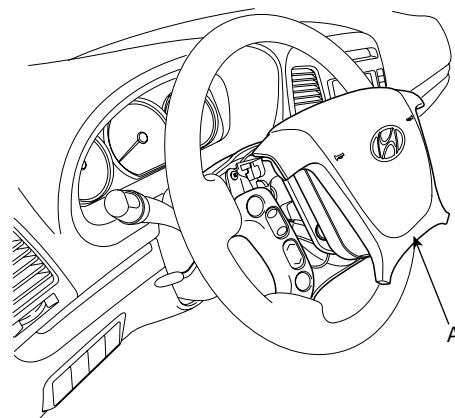

SCMBE6034D

Switch	Connector terminal	Resistance ($\pm 5\%$)
VOLUME DOWN	6 - 7	6.81 k
VOLUME UP	6 - 7	4.61 k
MODE	6 - 7	2.11 k
SEEK DOWN	6 - 7	1.11 k
SEEK UP	6 - 7	430
MUTE	6 - 7	3..11 k

3. Remove the audio remote control switch (B) after remove the steering wheel remote control switch connector (A) and 2 screws.

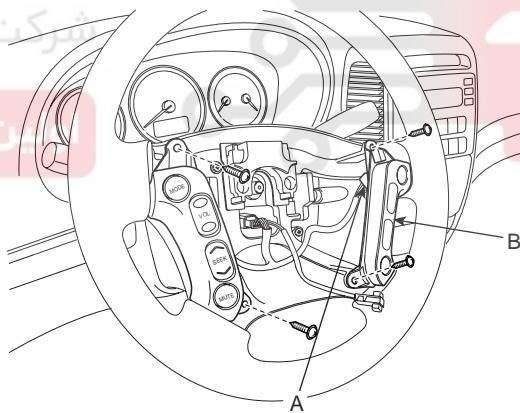

SCMBE6035D

4. Installation is the reverse of removal.

MULTI FUNCTION SWITCH

SPECIFICATIONS

E0A2FFD2

Items	Specifications
Rated voltage	DC 12V
Operating temperature range	-30°C ~ +80°C (-22 ~ +176°F)
Rated load	Dimmer & passing switch High : 1A (Relay load) Low : 1A (Relay load) Passing : 1A (Relay load)
	Lighting switch Lighting : 1A (Relay load)
	Turn signal switch 6.6 ± 0.5A (Lamp load)
	Wiper & mist switch Low, High : 4A (Motor load) Intermittent : 0.22 ± 0.05A (Relay load) Lock : Max. 23A (Motor load) Mist : 4A (Motor load)
	Washer switch 4A (Motor load)
	Variable intermittent volume switch Max. 25mA
	Rear wiper & washer switch Rear wiper : 200mA (Relay load) Rear washer : 4A (Motor load)

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

MULTI FUNCTION SWITCH


BE -33

COMPONENT


E42330BD

[LHD]


[Turn signal lamp switch]

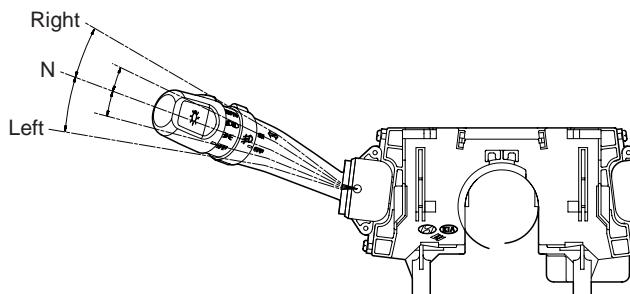


[Wiper switch]

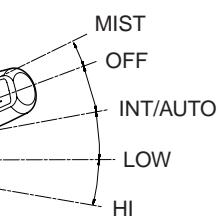


[Lighting switch]

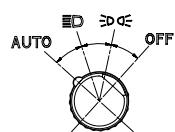

[Dimmer & Passing]

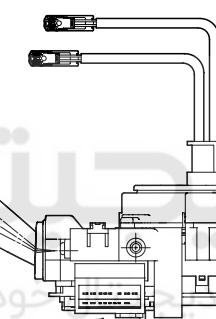P
HL
HU

[Intermittent volume]

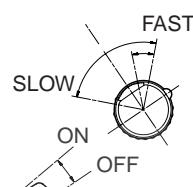

[Washer switch]

[Wiper]

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18


1	2	3	4	5	6	7
8	9	10	11	12	13	14

Circuit connection

Connector Name	Terminal No.	Description	Connector Name	Terminal No.	Description
Light	1	Head lamp passing	Wiper	1	Wiper high speed
	2	Head lamp high beam power		2	Wiper low speed
	7	Turn signal lamp (RH)		3	Wiper parking
	8	Flasher unit power		4	Mist switch
	9	Turn signal lamp (LH)		5	Wiper & washer power
	10	Head lamp low beam power		6	Intermittent wiper
	11	Dimmer & passing ground		7	Front washer switch
	12	-		8	-
	13	-		9	Rear washer & wiper switch
	14	Tail lamp switch		10	-
	15	Head lamp switch		11	Rear wiper
	16	Rear fog lamp/Auto light switch		12	Rear washer
	17	Lighting switch ground		13	Intermittent wiper volume
	18	-		14	Intermittent wiper ground

SCMBE6040L

[RHD]

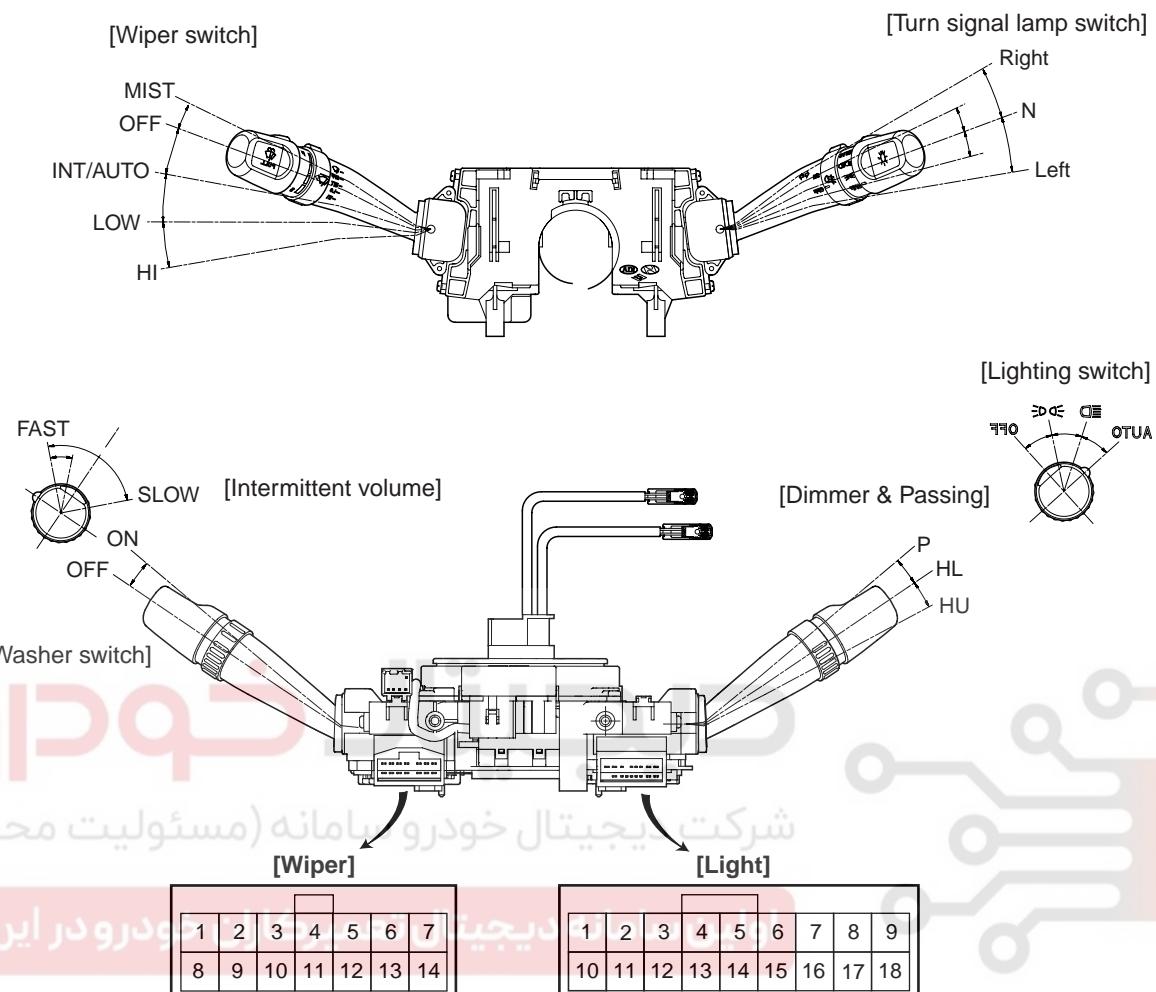

Circuit connection

Connector Name	Terminal No.	Description	Connector Name	Terminal No.	Description
Wiper	1	Front washer switch	Light	1	Turn signal lamp (RH)
	2	Intermittent wiper		2	Flasher unit power
	3	Wiper & washer power		3	Turn signal lamp (LH)
	4	Mist switch		8	Head lamp low beam power
	5	Wiper parking		9	Head lamp passing
	6	Wiper low speed		11	-
	7	Wiper high speed		12	-
	8	Intermittent wiper ground		13	Tail lamp switch
	9	Intermittent wiper volume		14	Head lamp switch
	10	Rear washer		15	Rear fog lamp/Auto light switch
	11	Rear wiper		16	Lighting switch ground
	12	-		17	Dimmer & passing ground
	13	Rear washer & wiper switch		18	Head lamp low beam power
	14	-		19	-

MULTI FUNCTION SWITCH


BE -35

INSPECTION E7E08FEB

LIGHTING SWITCH INSPECTION

- With the multi function switch in each position, make sure that continuity exists between the terminals below.
If continuity is not as specified, replace the multi-function switch

[LHD]

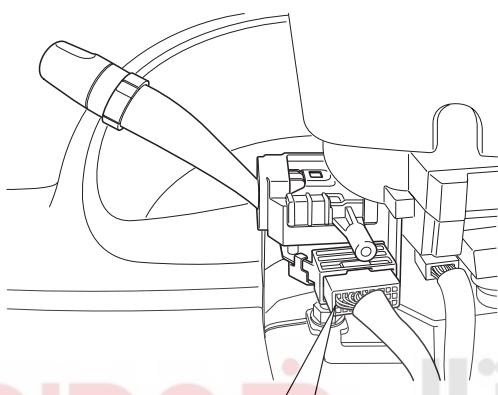

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18

LIGHTING SWITCH (AUTO LIGHT)

() : RHD

Terminal Position	14(13)	15(14)	16(15)	17(16)
OFF				
I	○			○
II	○	○		○
AUTO			○	○

SCMBE6045L

LIGHTING SWITCH

() : RHD

Terminal Position	14(13)	15(14)	16(15)	17(16)
OFF				
I	○			○
II	○	○	○	○

SCMBE6046L

DIMMER AND PASSING SWITCH

() : RHD

Terminal Position	1(9)	2(8)	10(18)	11(17)
HU		○		○
HL			○	○
P	○	○		○

HU : Head lamp high beam

HL : Head lamp low beam

P : Head lamp passing switch

SCMBE6047L

TURN SIGNAL SWITCH

() : RHD


Hazard switch	Turn signal switch	7(1)	8(2)	9(3)
OFF	L		○	○
	N			
	R	○	○	

SCMBE6048L

WIPER AND WASHER SWITCH INSPECTION


- With the multi function switch in each position, make sure that continuity exists between the terminals below.
If continuity is not as specified, replace the multi-function switch.

[LHD]

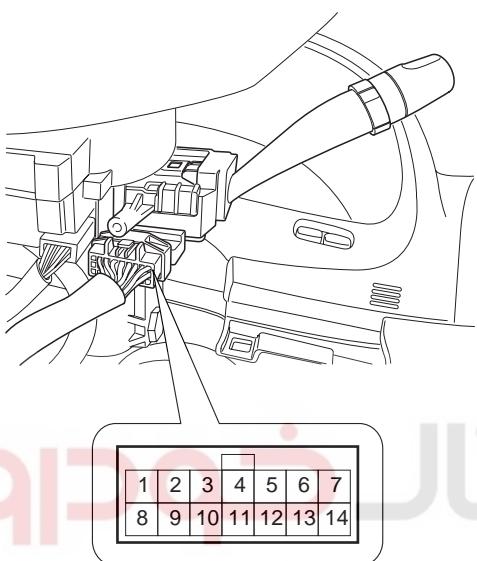

SCM6050D

[RHD]

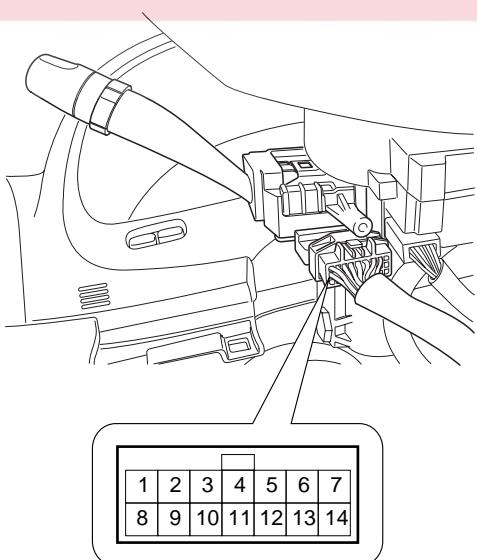

SCM6050R

WIPER SWITCH

[RAIN SENSOR]

() : RHD

Terminal \ Position	1 (7)	2 (6)	3 (5)	4 (4)	5 (3)	6 (2)	13 (9)	14 (8)
MIST				○	○			
OFF		○	○					
AUTO		○	○		○	○	○	○
LOW	○			○				
HI	○			○				

SCM6052L

[STANDARD]

() : RHD

Terminal \ Position	1 (7)	2 (6)	3 (5)	4 (4)	5 (3)	6 (2)	13 (9)	14 (8)
MIST				○	○			
OFF		○	○					
INT		○	○		○	○	○	○
LOW	○			○				
HI	○			○				

SCM6051L

WASHER SWITCH

() : RHD

Terminal \ Position	5(3)	7(1)
OFF		
ON	○	○

SCM6053L

REAR WIPER & WASHER SWITCH

() : RHD

Terminal \ Position	9(13)	11(11)	12(10)
Rear washer	○		○
OFF			
ON	○	○	
Rear washer	○		○

SCM6054L

MULTI FUNCTION SWITCH


BE -37

REPLACEMENT


E5E9CB1C

[RHD]

1. Disconnect the negative (-) battery terminal.
2. Remove the steering column upper and lower shrouds (A) after removing 3 screws.

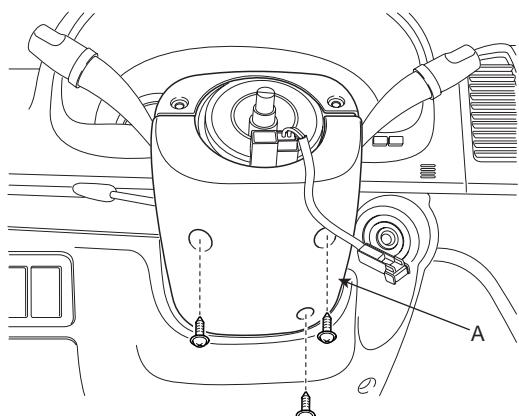

SCMBE6041D

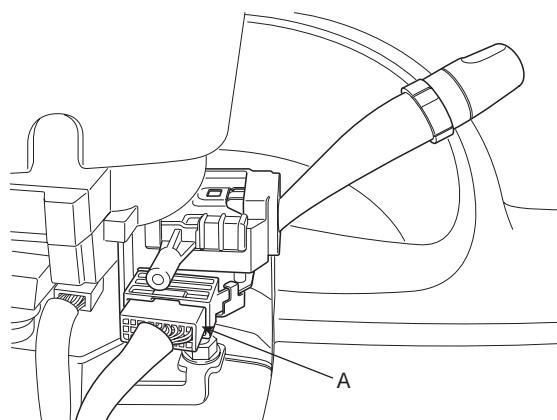


SCMBE6042R

4. Remove the wiper switch (A) by pushing the lock pin after disconnecting the connector.


[LHD]

3. Remove the light switch (A) by pushing the lock pin after disconnecting the connector.

[LHD]

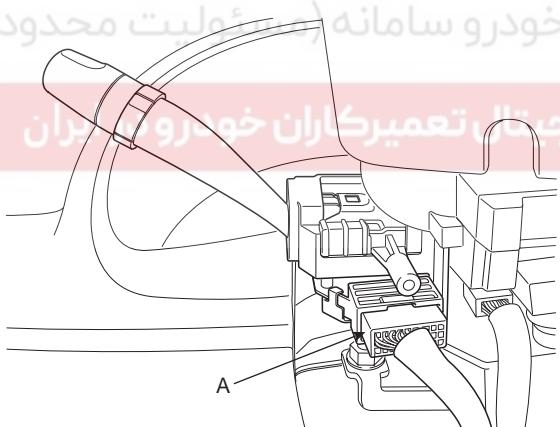


SCMBE6042D

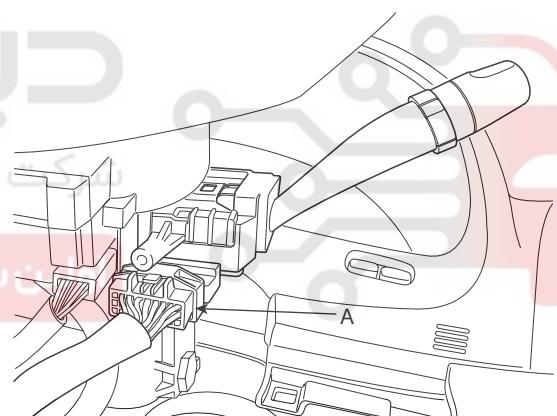

SCMBE6043D

[RHD]

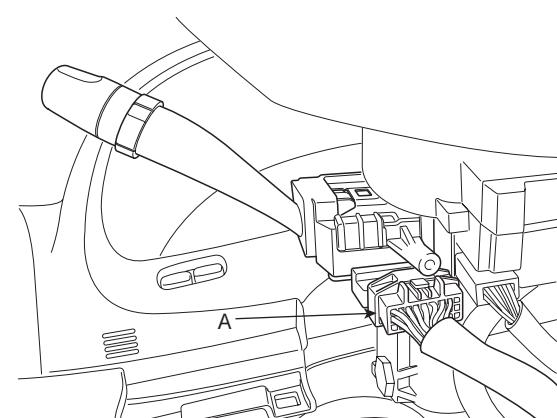

SCMBE6043R

5. Installation is the reverse of removal.

HORNS


COMPONENT LOCATION

E15C8F93

The parts with asterisk(*) :

This illustration shows the LHD type.

RHD type is symmetrical.

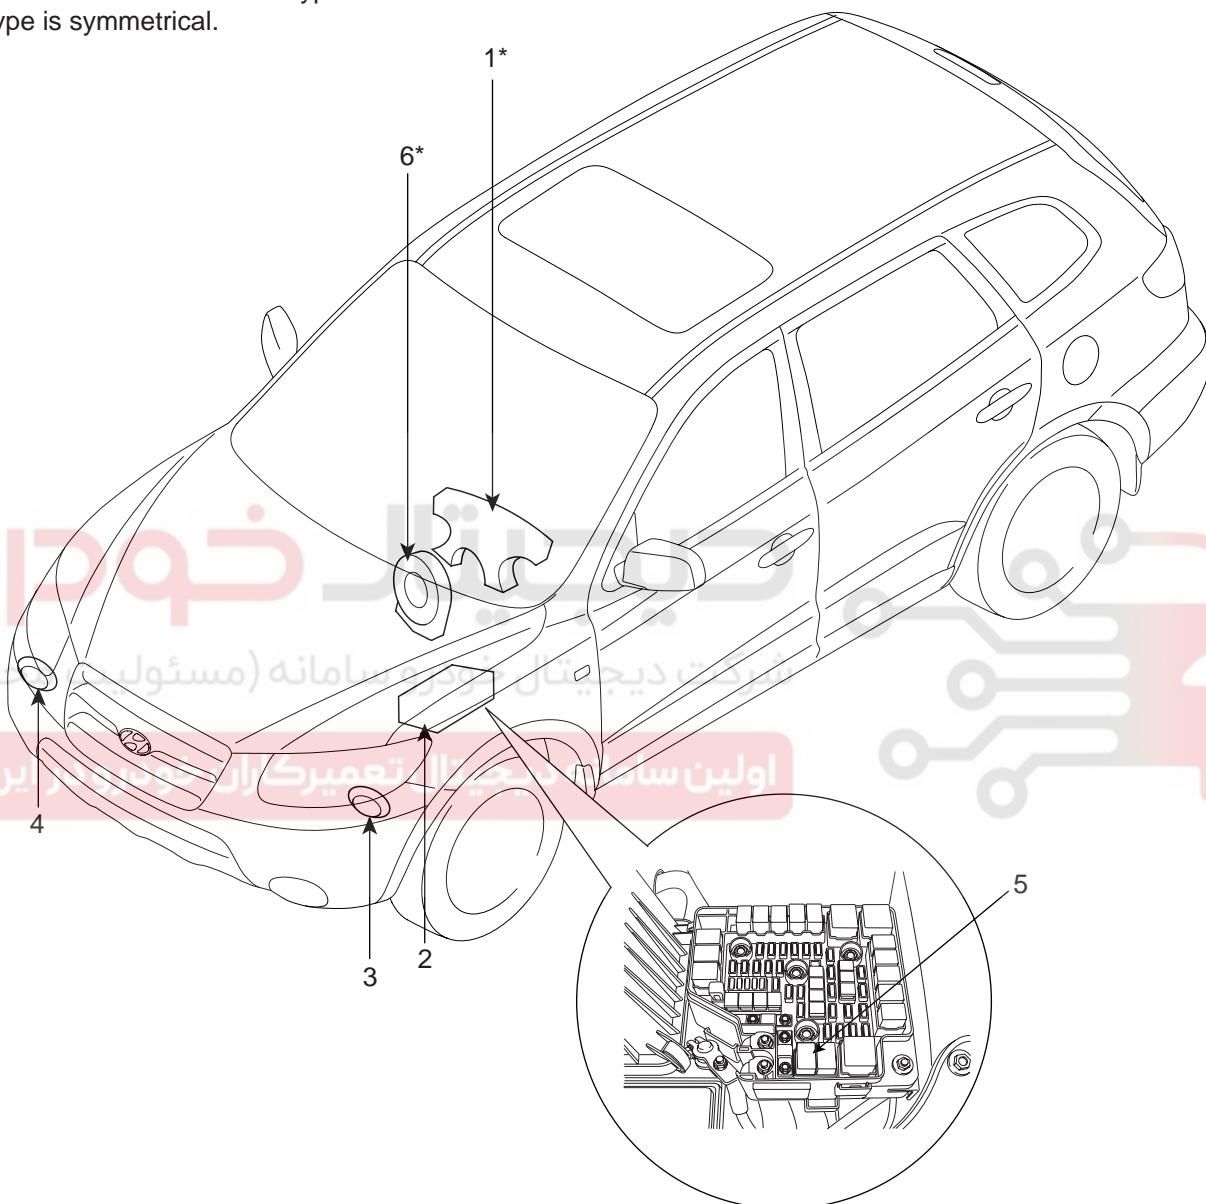

1. Horn switch
2. Relay box (Engine room compartment)
3. Horn (Low pitch)

4. Horn (High pitch)
5. Horn relay
6. Clock spring

SCMBE6060L

HORNS

BE -39




INSPECTION EC1AB8DD

Test the horn by connecting battery voltage to the 1 terminal and ground the 2 terminal.

The horn should make a sound. If the horn fails to make a sound, replace it.

HORN RELAY INSPECTION

1. Remove the horn relay (A) from the engine room relay box.
2. There should be continuity between the No.30 and No.87 terminals when power and ground are connected to the No.85 and No.86 terminals.
3. There should be no continuity between the No.30 and No.87 terminals when power is disconnected.

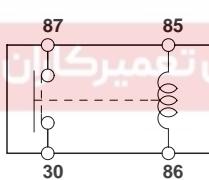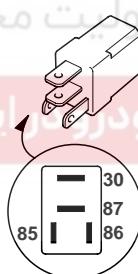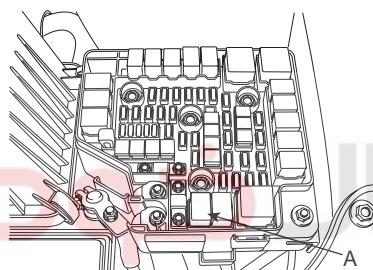



SCMBE6062D

Terminal Power	30	87	85	86
Disconnected			○	○
Connected	○	○	—	—

SCMBE6063L

REPLACEMENT ECB03EF0

1. Remove the front bumper. (Refer to the Body group - front bumper).
2. Remove the bolt and disconnect the horn connector, then remove the high pitch horn (A) and low pitch horn (B).

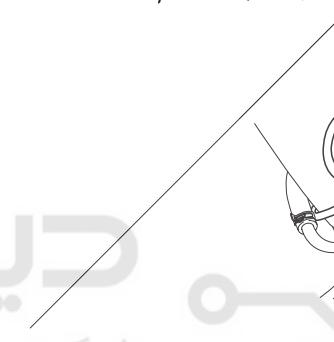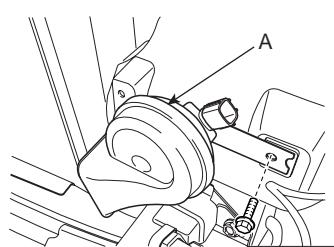

SCMBE6061D


3. Installation is the reverse of removal.

ADJUSTMENT E3F677F8

1. Operate the horn, and adjust the tone to a suitable level by turning the adjusting screw.



After adjustment, apply a small amount of paint around the screw head to keep it from loosening.

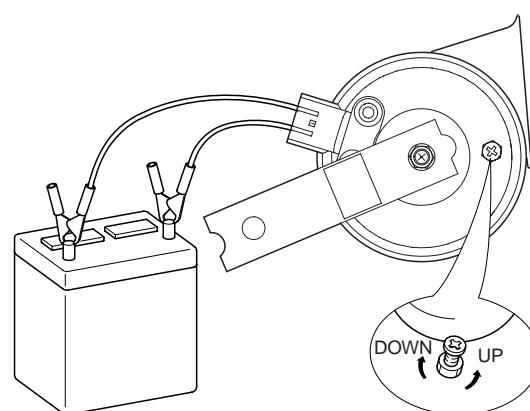

SCMBE6064D

KEYLESS ENTRY AND BURGLAR ALARM

COMPONENT LOCATION

E168CF7A

The parts with asterisk(*) :

This illustration shows the LHD type.

RHD type is symmetrical.

KEYLESS ENTRY AND BURGLAR ALARM

BE -41

DESCRIPTION E5FCECF8**BURGLAR ALARM SYSTEM**

The burglar alarm system is armed automatically after the doors, hood, and tailgate are closed and locked.

The system is set off when any of these things occur :

- A door is forced open.
- The tailgate is opened without using the key.
- The hood is opened.

When the system is set off, the alarm sounds and the hazard lamp flash for about 30 seconds or until the system is disarmed by unlocking the transmitter.

For the system to arm, the ignition switch must be off and the key removed. Then, the body control module must receive signals that the doors, hood, and tailgate are closed and locked. When everything is closed and locked, none of the control unit inputs are grounded.

The door switches, hood switch and tailgate switch are all close and lock the doors with the remote transmitter and then the system arms immediately.

If anything is opened after the system is armed, the body control module gets a ground signal from that switch, and the system is set off.

If one of the switches is misadjusted or there is a short in the system, the system will not arm. As long as the body control module continues to get a ground signal, it thinks the vehicle is not closed and locked and will not arm.

KEYLESS ENTRY SYSTEM

The burglar alarm system is integrated with the keyless entry system. The keyless entry system allows you to lock and unlock the vehicle with the remote transmitter. When you push the LOCK/UNLOCK button, all doors lock. When you push the LOCK/UNLOCK button again, all doors unlock.

The room lamp, if its switch is in the center position, will come on when you press the UNLOCK button. If you do not open a door, the light will go off in about 30 seconds, the doors will automatically relock, and the burglar alarm system will rearm. If you relock the doors with the remote transmitter within 30 seconds, the light will go off immediately.

You cannot lock or unlock the doors with the remote transmitter if the key is in the ignition switch.

The system will signal you when the doors lock and unlock by flashing the hazard lamp once when they lock, and twice when they unlock.




FUNCTION


E3F8A938

ANTI-THEFT WARNING SYSTEM


* Arm Mode

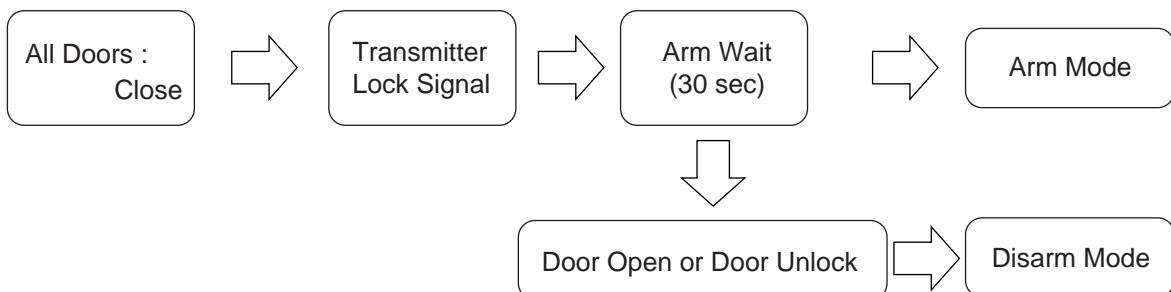


* Auto Lock Timer 1



* Auto Lock Timer 2

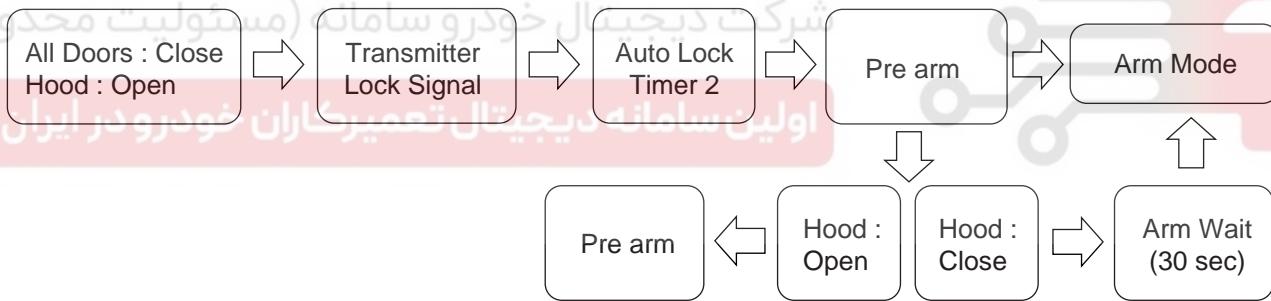

* Auto Lock Timer 2

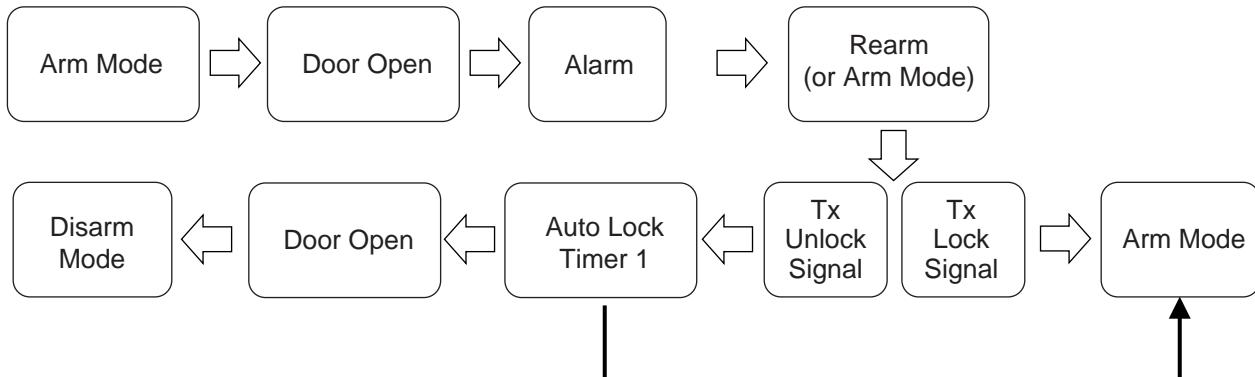

Tx : Transmitter


SCMBE6089L

KEYLESS ENTRY AND BURGLAR ALARM

BE -43

1. SECURITY LED CONTROL

- 1) If the KEY IN is ON or ACC is ON or IGN1 is ON or IGN2 is ON, the LED shall be OFF.
- 2) When entered into the ARM WAIT mode in the IGN KEY OUT state, control not only the FULL ON but also the BLINKING in the mode other than the ARM WAIT.
- 3) The BLINKING cycle is 2.3 seconds, and it is ON for 0.3 seconds and OFF for 2.0 seconds.

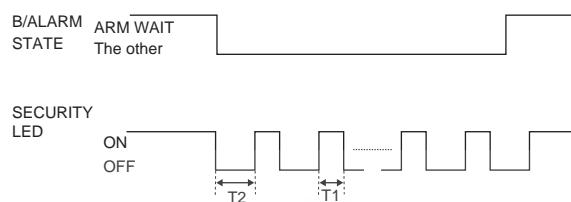

2. DISARM

CONDITION 1

State	Description
Initial Condition	ALARM
Transition Condition	<ul style="list-style-type: none"> - When 4DOOR or T/GATE is OPEN and TX(Transmitter) UNLOCK is input - After 30 seconds in the KEY IN ON and IGN1 ON and IGN2 ON states - When all doors are unlocked (LOCK FAIL) within 5 seconds after the TX(Transmitter) LOCK input
Operating	<ul style="list-style-type: none"> - ENTRY INTO THE DISARM STATE - HORN, HAZARD, B/ALARM output shall be OFF - In the case of the TX UNLOCK input, the HAZARD LAMP signal is output with the cycle of the ON/OFF of 0.5 seconds two times.

CONDITION 2

State	Description
Initial Condition	In the DISARM state and any one of the IGN KEY OUT & 4DOOR and T/GATE are opened
Transition Condition	When entering TX UNLOCK
Operating	<ul style="list-style-type: none"> - Maintain in the DISARM state - The HAZARD LAMP signal is output with the ON/OFF cycle of 0.5 seconds two times.

CONDITION 3

State	Description
Initial Condition	ARM WAIT state
Transition Condition	<ul style="list-style-type: none"> - When any one of the 4DOOR, HOOD or T/GATE is opened. - When at least one or more doors are unlocked. - In case of KEY IN. - When the DRIVER KEY UNLOCK(T/GATE KEY UNLOCK) signal is input
Operating	<ul style="list-style-type: none"> - ENTRY INTO THE DISARM STATE

CONDITION 4

State	Description
Initial Condition	AUTOLOCK TIMER1 state
Transition Condition	<ul style="list-style-type: none"> - When any one of the 4DOOR, HOOD or T/GATE is opened. - In case of KEY IN. - LOCK FAIL after the LOCK attempt by the AUTO LOCK. - LOCK FAIL after the LOCK attempt by the TX LOCK. - LOCK FAIL after the LOCK attempt by the DRIVER KEY LOCK(T/GATE KEY LOCK).
Operating	<ul style="list-style-type: none"> - ENTRY INTO THE DISARM STATE

KEYLESS ENTRY AND BURGLAR ALARM

BE -45

CONDITION 5

State	Description
Initial Condition	AUTOLOCK TIMER2 state
Transition Condition	<ul style="list-style-type: none"> - When any one of the 4DOOR, HOOD or T/GATE is opened. - In case of KEY IN. - LOCK FAIL after the LOCK attempt by the AUTO LOCK. - LOCK FAIL after the LOCK attempt by the TX LOCK. - LOCK FAIL after the LOCK attempt by the DRIVER KEY LOCK (In case of B_MECH_KEY=Enable)
Operating	<ul style="list-style-type: none"> - ENTRY INTO THE DISARM STATE

CONDITION 6

State	Description
Initial Condition	ARM state
Transition Condition	<ul style="list-style-type: none"> - IGN KEY ON - DRIVER KEY UNLOCK(T/GATE KEY UNLOCK) input.
Operating	<ul style="list-style-type: none"> - ENTRY INTO THE DISARM STATE

CONDITION 7

State	Description
Initial Condition	REARM state
Transition Condition	<ul style="list-style-type: none"> - After 30 seconds in the IGN KEY ON state. - LOCK FAIL after the LOCK attempt by the TX LOCK. - LOCK FAIL after the LOCK attempt by the DRIVER KEY LOCK. - When entering DRIVER KEY UNLOCK.
Operating	<ul style="list-style-type: none"> - ENTRY INTO THE DISARM STATE - B/ALARM RELAY OFF

CONDITION 8

State	Description
Initial Condition	REARM state
Transition Condition	<ul style="list-style-type: none"> - In case of TX UNLOCK INPUT in the state that any one of the 4DOOR or T/GATE is opened. - In case of KEY IN. - In case of the 4DOOR or T/GATE or HOOD is closed and at least one door is unlocked.
Operating	<ul style="list-style-type: none"> - ENTRY INTO THE DISARM STATE - In the case of the TX UNLOCK INPUT, the HAZARD LAMP signal is output two times with the ON/OFF cycle of 0.5 seconds.

3. ARM

CONDITION 1

State	Description
Initial Condition	ARM state
Transition Condition	When entering TX LOCK
Operating	<ul style="list-style-type: none"> - Keep the ARM state - The HAZARD LAMP signal is output for 1s once.

CONDITION 2

State	Description
Initial Condition	ARM WAIT state
Transition Condition	After the ARM WAIT TIMER completion
Operating	<ul style="list-style-type: none"> - ENTRY INTO THE ARM state

4. ALARM

CONDITION 1

State	Description
Initial Condition	ARM state
Transition Condition	In case of 4DOOR, T/GATE or HOOD is opened.
Operating	<ul style="list-style-type: none"> - ENTRY INTO THE ALARM state - The B/ALARM RELAY outputs is ON, and then, inhibit the start. - Non-EC area: the Horn alarm shall be output three times with the cycle consisting of the ON for 27s($\pm 2s$) and the OFF for 10s($\pm 1s$). (At this time, the Hazard Lamp signal shall also be output as the Horn alarm.) - EC and The Middle EAST: the HORN alarm output shall be ON for 27s($\pm 2s$) once. (At this time, the Hazard Lamp signal output shall also be ON as the Horn alarm.)


CONDITION 2

State	Description
Initial Condition	REARM state
Transition Condition	In case of 4DOOR, T/GATE or HOOD is opened.
Operating	<ul style="list-style-type: none"> - ENTRY INTO THE ALARM state - Non-EC area: the Horn alarm shall be output three times with the cycle consisting of the ON for 27s($\pm 2s$) and the OFF for 10s($\pm 1s$). (At this time, the Hazard Lamp signal shall also be output as the Horn alarm.) - EC and The Middle EAST: the HORN alarm output shall be ON for 27s($\pm 2s$) once. (At this time, the Hazard Lamp signal output shall also be ON as the Horn alarm.)


KEYLESS ENTRY AND BURGLAR ALARM

BE -47

■ Non-EC SPECIFICATION

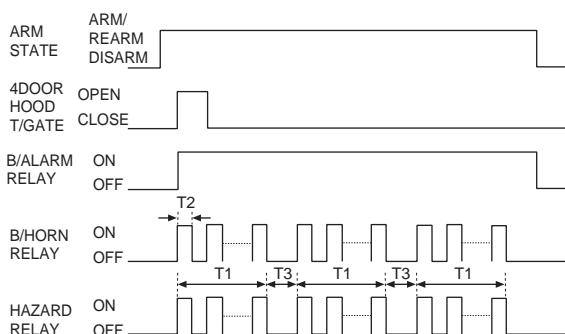

■ EC SPECIFICATION

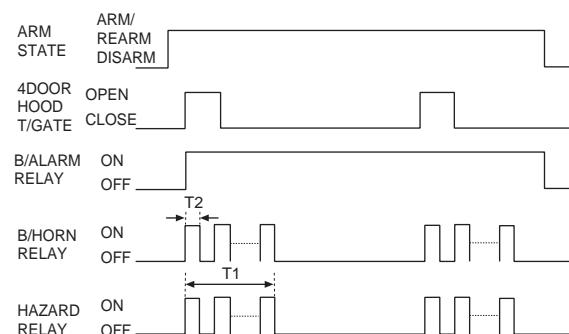

SCMBE6124L

SCMBE6119L

T1 : $27 \pm 2\text{sec}$, T2 : 0.4 ~ 0.5 sec,
T3 : $10 \pm 1\text{sec}$.

T1 : $27 \pm 2\text{sec}$, T2 : 0.4 ~ 0.5 sec.

5. ARM WAIT

CONDITION 1

State	Description
Initial Condition	ARM WAIT state
Transition Condition	When entering TX LOCK
Operating	<ul style="list-style-type: none"> - Keep ARM WAIT state - The HAZARD LAMP signal shall be output for 1s once.

اولین سامانه دیجیتال تعمیر کاران خودرو زیر

State	Description
Initial Condition	DISARM state & IGN KEY OUT & 4DOOR, T/GATE and HOOD CLOSE state
Transition Condition	<ul style="list-style-type: none"> - In case of LOCK SUCCESS after the LOCK attempt by the TX LOCK. - In case of LOCK SUCCESS after the LOCK attempt by the DRIVER KEY LOCK (T/GATE KEY LOCK) INPUT. - In case of 4DOOR, T/GATE, HOOD OPEN>CLOSE with all doors locked.
Operating	<ul style="list-style-type: none"> - Entry into the ARM WAIT state - The HAZARD LAMP signal shall be output for 1s once. - Start the ARMWAIT TIMER

CONDITION 3

State	Description
Initial Condition	ALARM state & IGN KEY OUT & 4DOOR, T/GATE and HOOD CLOSE state
Transition Condition	<ul style="list-style-type: none"> - In case of LOCK SUCCESS after the LOCK attempt by the TX LOCK. - In case of LOCK SUCCESS after the LOCK attempt by the DRIVER KEY LOCK (T/GATE KEY LOCK) INPUT.
Operating	<ul style="list-style-type: none"> - Entry into the ARM WAIT state - OFF the HORN, B/ALARM output. - The HAZARD LAMP signal shall be output for 1s once - Start the ARMWAIT TIMER

CONDITION 4

State	Description
Initial Condition	AUTOLOCK TIMER1 state
Transition Condition	<ul style="list-style-type: none"> - In case of LOCK SUCCESS after the LOCK attempt by the AUTOLOCK. - In case of LOCK SUCCESS after the LOCK attempt by the TX LOCK. - In case of LOCK SUCCESS after the LOCK attempt by the DRIVER KEY LOCK (T/GATE KEY LOCK) INPUT
Operating	<ul style="list-style-type: none"> - Entry into the ARM WAIT state - The HAZARD LAMP signal shall be output for 1s once. - Start the ARMWAIT TIMER

CONDITION 5

State	Description
Initial Condition	PREARM state
Transition Condition	<ul style="list-style-type: none"> - 4DOOR, T/GATE and HOOD are closed and all doors are locked.
Operating	<ul style="list-style-type: none"> - Entry into the ARM WAIT state - The HAZARD LAMP signal shall be output for 1s once. - Start the ARMWAIT TIMER

CONDITION 6

State	Description
Initial Condition	REARM state
Transition Condition	<ul style="list-style-type: none"> - LOCK SUCCESS after the LOCK attempt by the TX LOCK. - LOCK SUCCESS after the LOCK attempt by the DRIVER KEY LOCK (T/GATE KEY LOCK) INPUT.
Operating	<ul style="list-style-type: none"> - Entry into the ARM WAIT state - The HAZARD LAMP signal shall be output for 1s once. - B/ALARM RLY OFF - Start the ARMWAIT TIMER

6. REARM**CONDITION 1**

State	Description
Initial Condition	ALARM state
Transition Condition	4DOOR, T/GATE and HOOD are closed and after the ALARM PATTERN completion
Operating	<ul style="list-style-type: none"> - Entry into the REARM state

KEYLESS ENTRY AND BURGLAR ALARM

BE -49

7. AUTO-LOCK TIMER1**CONDITION 1**

State	Description
Initial Condition	ARM state
Transition Condition	TX UNLOCK INPUT
Operating	<ul style="list-style-type: none"> - Entry into the AUTO-LOCK TIMER1 state - The HAZARD LAMP signal shall be output with the ON/OFF cycle of 0.5s two times. - START the AUTOLOCK TIMER1

CONDITION 2

State	Description
Initial Condition	REARM state
Transition Condition	<ul style="list-style-type: none"> - AUTO-LOCK TIMER1 state. - TX UNLOCK INPUT.
Operating	<ul style="list-style-type: none"> - keep the AUTO-LOCK TIMER1 state - CASE1: AUTOLOCK TIMER1 COMPLETION LOCK ATTEMPT. - CASE2: TX UNLOCK - The HAZARD LAMP signal shall be output with the ON/OFF cycle of 0.5s two times - RESTART THE AUTOLOCK TIMER1

CONDITION 3

State	Description
Initial Condition	ARM WAIT state
Transition Condition	TX UNLOCK INPUT
Operating	<ul style="list-style-type: none"> - Entry into the AUTO-LOCK TIMER1 state - The HAZARD LAMP signal shall be output with the ON/OFF cycle of 0.5s two times. - START THE AUTOLOCK TIMER

CONDITION 4

State	Description
Initial Condition	The DISARM state and 4DOOR, T/GATE and HOOD are closed and IGN KEY OUT
Transition Condition	TX UNLOCK INPUT
Operating	<ul style="list-style-type: none"> - Entry into the AUTO-LOCK TIMER1 STATE - The HAZARD LAMP signal shall be output with the ON/OFF cycle of 0.5s two times. - START THE AUTOLOCK TIMER1

CONDITION 5

State	Description
Initial Condition	ALARM state, and 4DOOR, T/GATE and HOOD CLOSE state
Transition Condition	TX UNLOCK INPUT
Operating	<ul style="list-style-type: none"> - Entry into the AUTO-LOCK TIMER1 STATE - B/ALARM RELAY OFF - The HAZARD LAMP signal shall be output with the ON/OFF cycle of 0.5s two times. - START THE AUTOLOCK TIMER1

CONDITION 6

State	Description
Initial Condition	REARM state
Transition Condition	TX UNLOCK INPUT
Operating	<ul style="list-style-type: none"> - Entry into the AUTO-LOCK TIMER1 STATE - B/ALARM RELAY OFF - The HAZARD LAMP signal shall be output with the ON/OFF cycle of 0.5s two times. - START THE AUTOLOCK TIMER1

8. AUTO-LOCK TIMER 2

CONDITION 1

State	Description
Initial Condition	AUTO-LOCK TIMER2 state
Transition Condition	<ul style="list-style-type: none"> - AUTOLOCK TIMER2 COMPLETION. - TX UNLOCK INPUT.
Operating	<ul style="list-style-type: none"> - keep the AUTO-LOCK TIMER2 state - CASE1: AUTOLOCK TIMER1 COMPLETION LOCK ATTEMPT. - CASE2: TX UNLOCK - The HAZARD LAMP signal shall be output with the ON/OFF cycle of 0.5s two times - RESTART THE AUTOLOCK TIMER1

CONDITION 2

State	Description
Initial Condition	REARM state
Transition Condition	DISARM state AND 4DOOR & T/GATE CLOSE & HOOD OPEN AND IGN KEY OUT
Operating	<ul style="list-style-type: none"> - Entry into the AUTO-LOCK TIMER2 STATE - The HAZARD LAMP signal shall be output with the ON/OFF cycle of 0.5s two times. - START THE AUTOLOCK TIMER2

CONDITION 3

State	Description
Initial Condition	ALARM STATE AND 4DOOR & T/GATE CLOSE & HOOD OPEN STATE
Transition Condition	TX UNLOCK INPUT
Operating	<ul style="list-style-type: none"> - Entry into the AUTO-LOCK TIMER2 STATE - OFF the HORN, B/ALARM OUTPUT - The HAZARD LAMP signal shall be output with the ON/OFF cycle of 0.5s two times. - START THE AUTOLOCK TIMER2

KEYLESS ENTRY AND BURGLAR ALARM

BE -51

CONDITION 4

State	Description
Initial Condition	PREARM START AND 4DOOR & T/GATE CLOSE & HOOD OPEN STATE
Transition Condition	TX UNLOCK INPUT
Operating	<ul style="list-style-type: none"> - Entry into the AUTO-LOCK TIMER2 STATE - The HAZARD LAMP signal shall be output with the ON/OFF cycle of 0.5s two times. - START THE AUTOLOCK TIMER2

9. PREARM**CONDITION 1**

State	Description
Initial Condition	AUTO-LOCK TIMER2 state
Transition Condition	<ul style="list-style-type: none"> - LOCK SUCCESS after the LOCK attempt by the AUTO LOCK. - LOCK SUCCESS after the LOCK attempt by the TX LOCK. - LOCK SUCCESS after the LOCK attempt by the DRIVER KEY LOCK (T/GATE KEY LOCK) INPUT.
Operating	<ul style="list-style-type: none"> - Entry into the PREARM state

CONDITION 2

State	Description
Initial Condition	DISARM state & IGN KEY OUT
Transition Condition	<ul style="list-style-type: none"> - LOCK SUCCESS after the LOCK ATTEMPT by the TX LOCK in the state that 4 DOOR or T/GATE or HOOD is opened. - LOCK SUCCESS after the LOCK ATTEMPT by the DRIVER KEY LOCK (T/GATE KEY LOCK) INPUT in the state that 4 DOOR or T/GATE or HOOD is opened. - The DOOR is turned to the CLOSE state from the OPEN state in the state that all doors are locked. But, the HOOD is opened.
Operating	<ul style="list-style-type: none"> - Entry into the PREARM state

CONDITION 3

State	Description
Initial Condition	ALARM state & IGN KEY OUT & 4DOOR or T/GATE or HOOD OPEN
Transition Condition	<ul style="list-style-type: none"> - LOCK SUCCESS after the LOCK attempt by the TX LOCK. - LOCK SUCCESS after the LOCK attempt by the DRIVER KEY LOCK (T/GATE KEY LOCK) INPUT.
Operating	<ul style="list-style-type: none"> - Entry into the PREARM state - OFF the HORN, HAZARD, B/ALARM OUTPUT

10. RESET

CONDITION 1

State	Description
Initial Condition	ALARM, REARM state
Transition Condition	Insert after the BATTERY is withdrawn
Operating	<ul style="list-style-type: none"> - The B/ALARM RELAY shall be ON and the HORN ALARM shall be output three times again (EC SPEC ONCE).

CONDITION 2

State	Description
Initial Condition	ARM state
Transition Condition	Insert after the BATTERY is withdrawn
Operating	<ul style="list-style-type: none"> - Keep the ARM state.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




KEYLESS ENTRY AND BURGLAR ALARM

BE -53


TROUBLESHOOTING

EB6A7DD0

1. Alarm does not work. (Hazard lamps work)

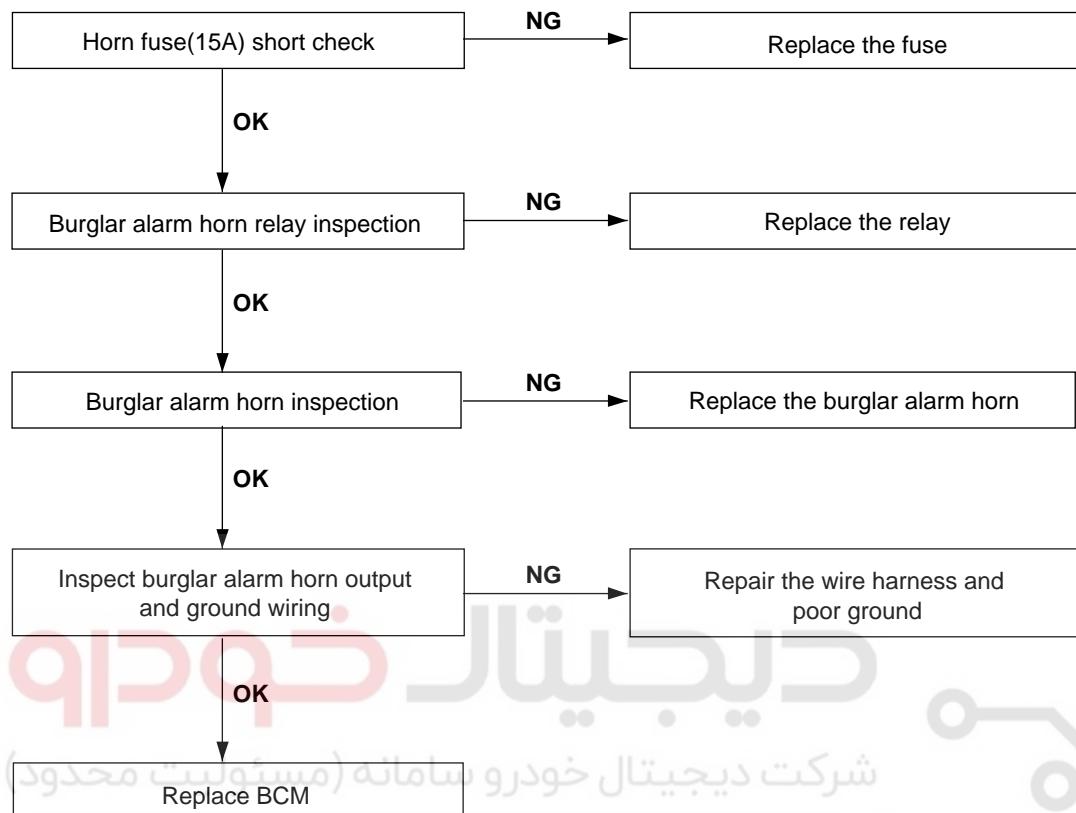


شرکت دیجیتال خودرو سامانه (مسازیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

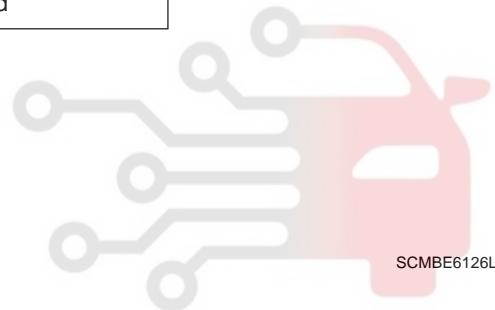


SCMBE6126L

2. When hood is opened in ARM mode, burglar horn does not work.

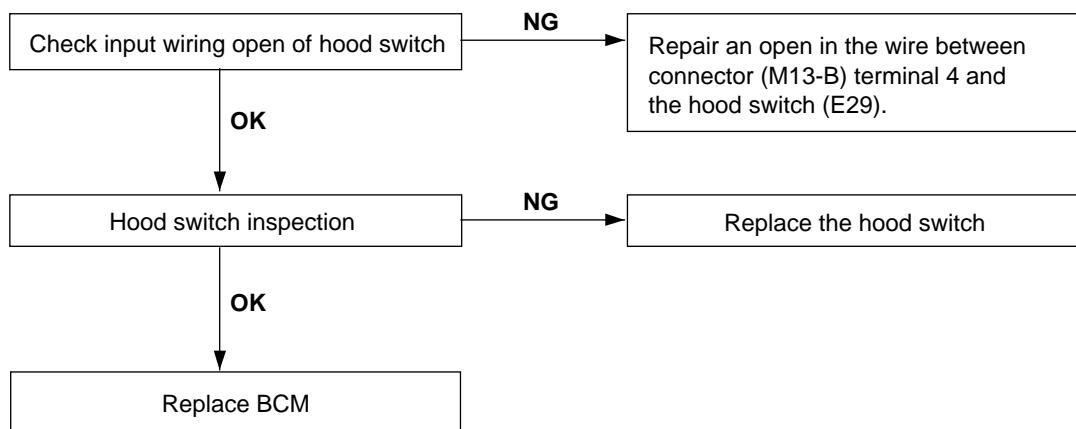


SCMBE6127L

3. When door is opened, burglar horn does not work. (If tailgate and hood is opened, alarm works)

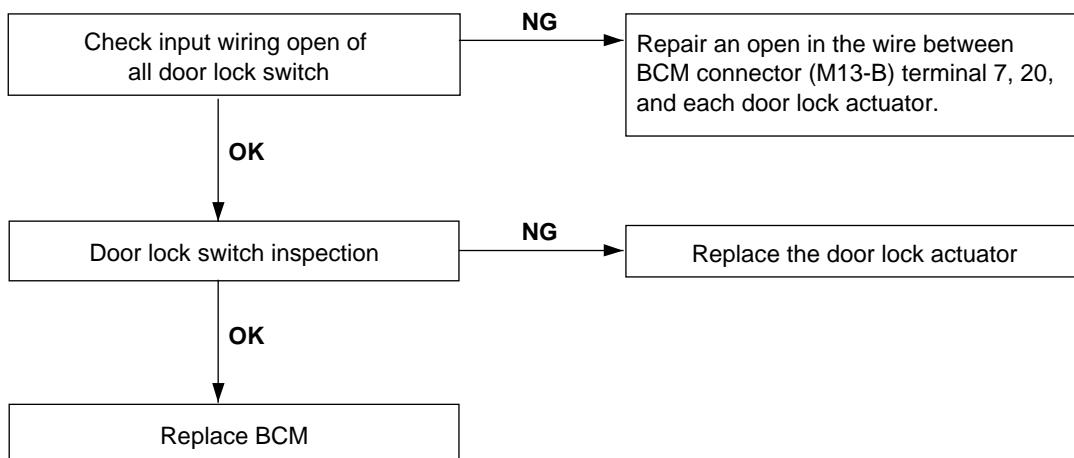

SCMBE6128L

4. When tailgate is opened in ARM mode, burglar horn does not work.

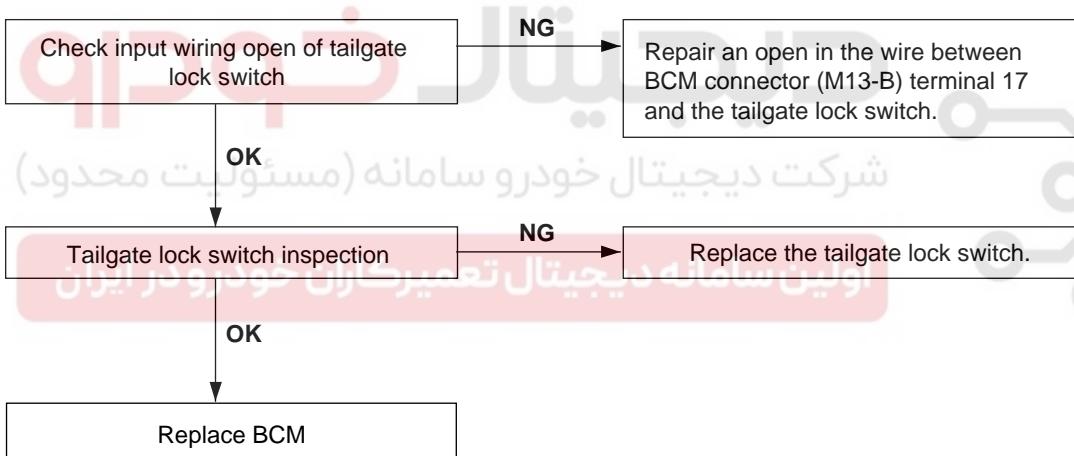


SCMBE6129L

KEYLESS ENTRY AND BURGLAR ALARM


BE -55

5. When the vehicle is locked by the transmitter, central door lock function works but hazard lamp doesn't blink.

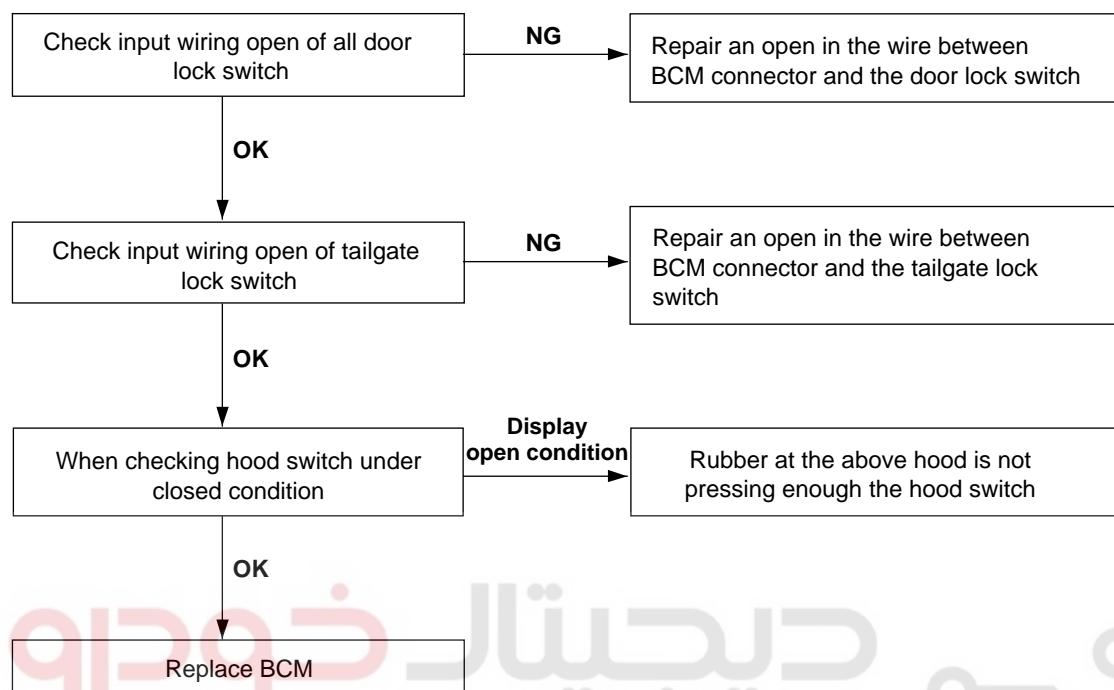


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

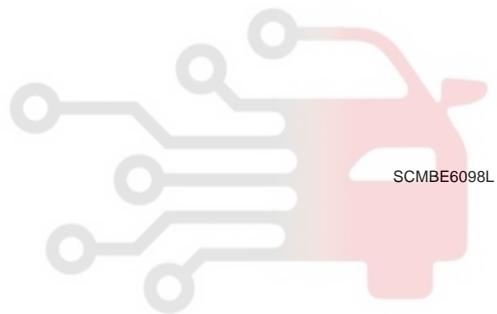

6. Central door lock function works, but keyless entry system does not work.

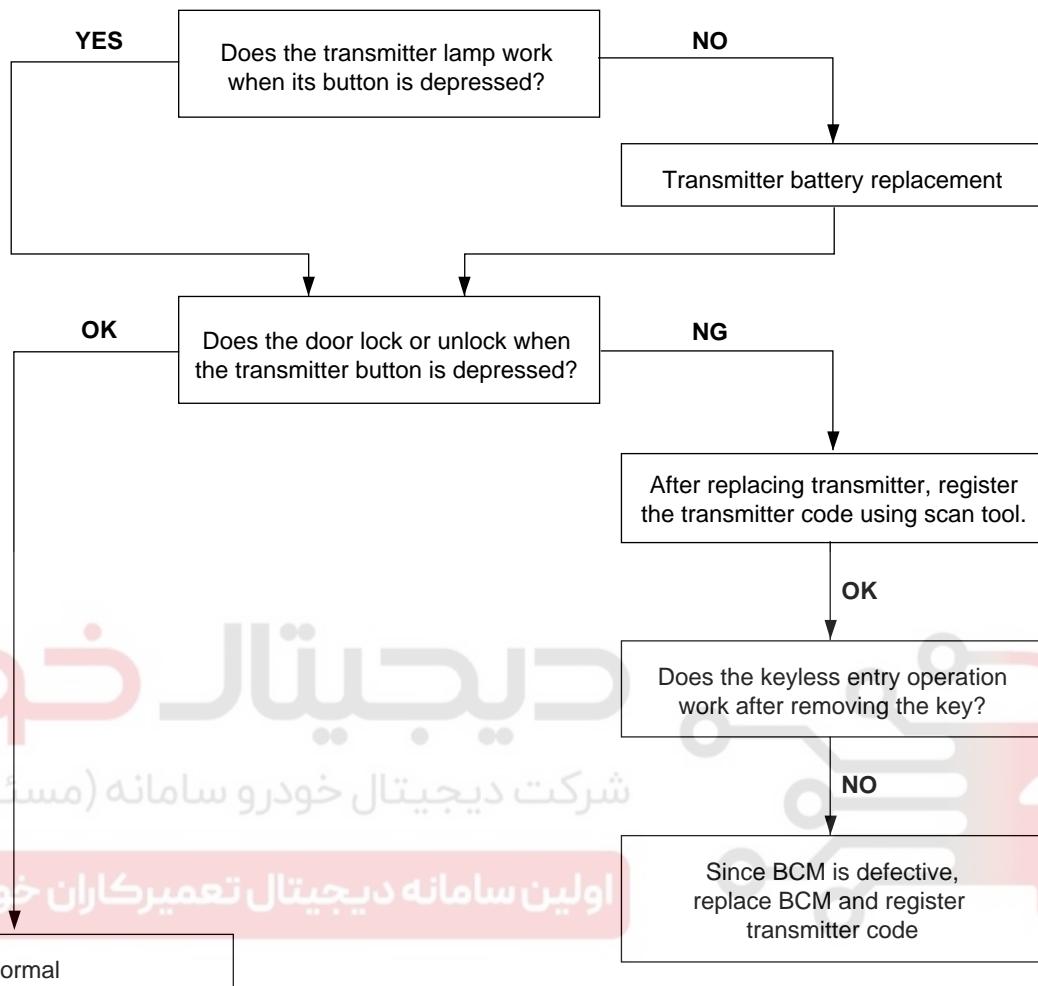

SCMBE6099L



KEYLESS ENTRY AND BURGLAR ALARM

BE -57

INSPECTION EAD8ECED

FRONT DOOR LOCK ACTUATOR

1. Remove the front door trim.
(Refer to the Body group - Front door)
2. Remove the front door module.
(Refer to the Body group - Front door).
3. Disconnect the connectors from the actuator.

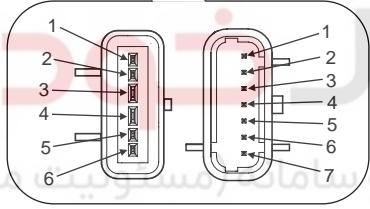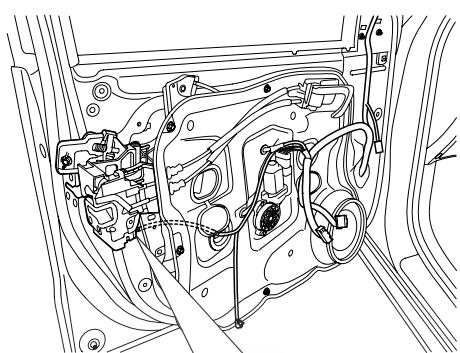

[CENTRAL LOCK] [DEAD LOCK]

SCM6130L

4. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

[CENTRAL LOCK]

Position		Terminal	4	3
Front left	Lock	⊕	⊖	
	Unlock	⊖	⊕	
Front right	Lock	⊖	⊕	
	Unlock	⊕	⊖	

SCM6131L

[DEAD LOCK]



Position		Terminal	5	6	7
Central Lock	Front left	Lock	⊕	⊖	⊖
		Unlock	⊖	⊕	⊕
	Front right	Lock	⊖	⊕	⊕
		Unlock	⊕	⊖	⊖
	Front left	Lock	⊖	⊕	⊕
		Unlock	⊖	⊕	⊖
	Front right	Lock	⊕	⊖	⊖
		Unlock	⊕	⊖	⊕

SCM6144L

اولین سامانه دیجیتال تعمیر کاران خودرو در ایران

REAR DOOR LOCK ACTUATOR

1. Remove the rear door trim.
(Refer to the Body group - Rear door)
2. Remove the rear door module.
(Refer to the Body group - Rear door)
3. Disconnect the connectors from the actuator.

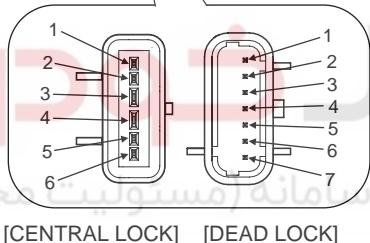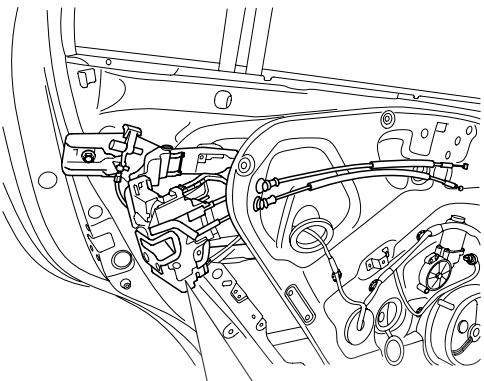

4. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

[CENTRAL LOCK]

Position	Terminal	4	3
Rear left	Lock	⊕	⊖
	Unlock	⊖	⊕
Rear right	Lock	⊖	⊕
	Unlock	⊕	⊖

SCMBE6133L

[DEAD LOCK]

Position	Terminal	5	6	7
Central Lock	Rear left	⊕	⊖	⊖
	Unlock	⊖	⊕	⊕
	Rear right	⊖	⊕	⊕
		⊕	⊖	⊖
	Dead Lock	⊖	⊖	⊕
		⊕	⊕	⊖
		⊕	⊕	⊖
	Rear right	⊖	⊖	⊕


SCMBE6145L

KEYLESS ENTRY AND BURGLAR ALARM

BE -59


TAILGATE LOCK ACTUATOR INSPECTION

1. Remove the tailgate trim. (Refer to the Body group - tailgate)
2. Disconnect the 4P connector from the actuator.

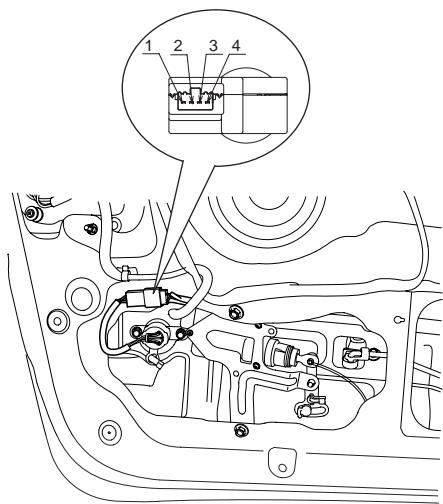

FRONT DOOR LOCK SWITCH

1. Remove the front door trim. (Refer to the Body group - Front door)
2. Remove the front door module. (Refer to the Body group - Front door).
3. Disconnect the connectors from the actuator.

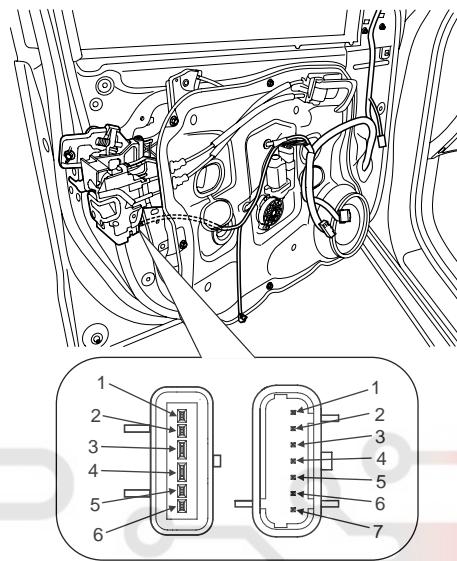

3. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

Position	Terminal	2	3
Lock	⊖	⊕	
Unlock	⊕	⊖	

SCMBE6135L

4. Check for continuity between the terminals in each switch position when inserting the key into the door according to the table.

[CENTRAL LOCK]

Position		Terminal	2	5	1
Central Lock	Front left	Clockwise			
		Counter-clockwise			
	Front right	Clockwise			
		Counter-clockwise			

SCMBE6136L

[CENTRAL LOCK]

Position		Terminal	1	5	2	6
Central Lock	Front left	Unlock				
	Front right	Lock				

SCMBE6148L

[DEAD LOCK]

Position		Terminal	3	2	4
Central Lock	Front left	Clockwise			
		Counter-clockwise			
	Front right	Clockwise			
		Counter-clockwise			

SCMBE6146L



[DEAD LOCK]

Position		Terminal	3	1	7	5
Central Lock	Front left	Unlock				
	Front right	Lock				

SCMBE6147L

REAR DOOR LOCK SWITCH

1. Remove the rear door trim.
(Refer to the Body group - Rear door)
2. Remove the rear door module.
(Refer to the Body group - Rear door)
3. Disconnect the connectors from the actuator.

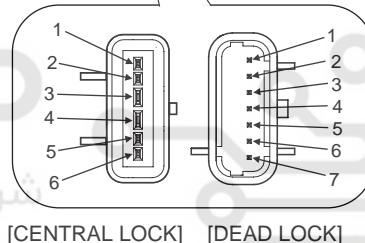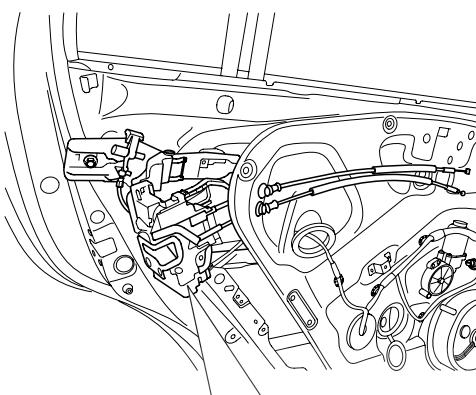

[CENTRAL LOCK] [DEAD LOCK]

SCMBE6132L

4. Check for continuity between the terminals in each switch position according to the table.

[CENTRAL LOCK]

Position		Terminal	1	5	2	6
Central Lock		Unlock				
		Lock				

SCMBE6122L


[DEAD LOCK]

Position		Terminal	3	1	7	5
Central Lock		Unlock				
		Lock				


SCMBE6142L

KEYLESS ENTRY AND BURGLAR ALARM**BE -61****TAILGATE SWITCH**

1. Remove the tailgate trim. (Refer to the Body group - Tailgate)
2. Disconnect the 4P connector from the actuator.

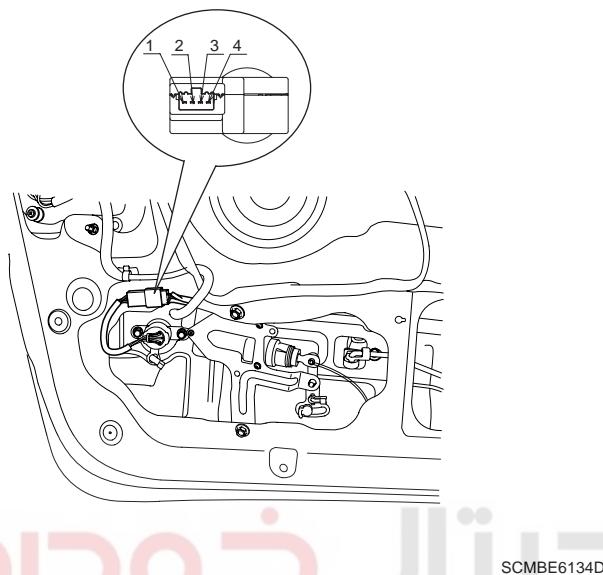**DOOR SWITCH**

Remove the door switch and check for continuity between the terminals.

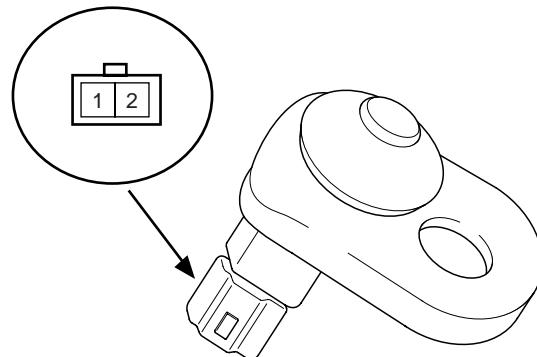

KTKD020A

Terminal Position	1	2	Body (Ground)
Free(Door open)	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>
Push(Door close)			

ETQF180D


3. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	1	4
Lock	<input type="circle"/>	<input type="circle"/>
Unlock		


SCMBE6138L

HOOD SWITCH

1. Remove the hood latch.
(Refer to the Body group - Hood)
2. Disconnect the connector from the hood switch.

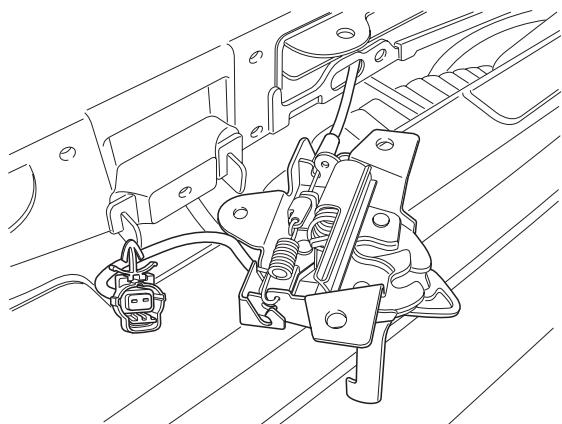

SCM6139D

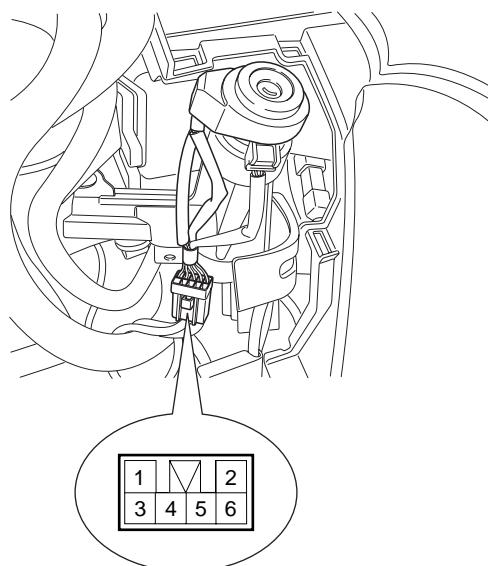

SCM6141D

3. Check for continuity between the terminals and ground according to the table.

Terminal Position	1	2
Hood open (Free)	○	○
Hood close (Push)		

ETBF180B


3. Check for continuity between the terminals in each position according to the table.

Terminal Key position	5	6
Insert	○	○
Removal		

ETQF180F

BURGLAR HORN**KEY WARNING SWITCH**

1. Remove the crash pad lower panel. (Refer to Body group-Crash pad)
2. Disconnect the 6P connector from the key warning switch.

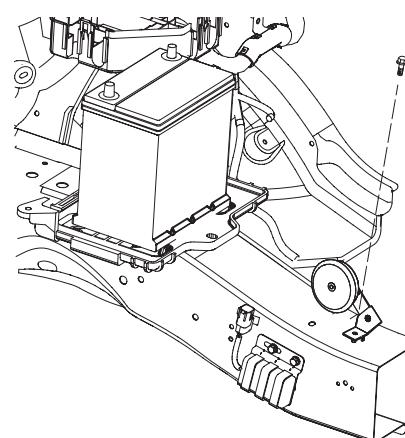

SCM6143D

3. The burglar horn should make a sound. If the burglar horn fails to make a sound replace it.

KEYLESS ENTRY AND BURGLAR ALARM

BE -63

TRANSMITTER


SPECIFICATION EB5DFE4B

Items	Specifications
Keyless entry transmitter	
Power source	Lithium 3V battery (1EA)
Transmissible distance	10m or more
Life of battery	2 years or more (at 10 times per a day)
Button	Door lock Door unlock
Transmission frequency	433.92 MHz(GEN, EUR), 315 MHz (JAPAN, CHINA)

INSPECTION E55ACB71

1. Check that the red light flickers when the door lock or unlock button is pressed on the transmitter.
2. Remove the battery and check voltage if the red light doesn't flicker.

Standard voltage : 3V

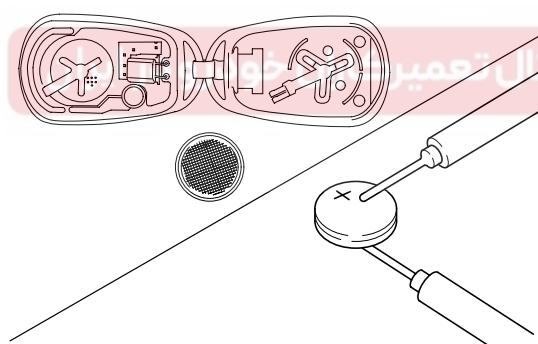


ATLG029A

TRANSMITTER CODE

REGISTRATION E059A767

1. Connect the DLC cable of scan tool to the data link connector (16 pins) in driver side crash pad lower panel, turn the power on scan tool.

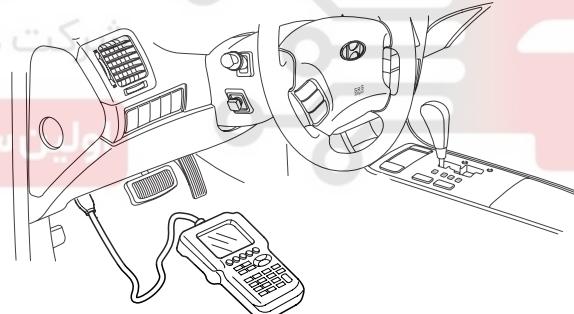

KTBF121T

2. Select the vehicle model and then do "CODE SAVING".

1. HYUNDAI VEHICLE DIAGNOSIS

MODEL : ALL

02. ENGINE
03. AUTOMATIC TRANSAXLE
04. ANTI-LOCK BRAKE SYSTEM

:


:

:

07. CODE SAVING

ETPD700I

3. After selecting "CODE SAVING" menu, push "ENTER" key, then the screen will be shown as below.

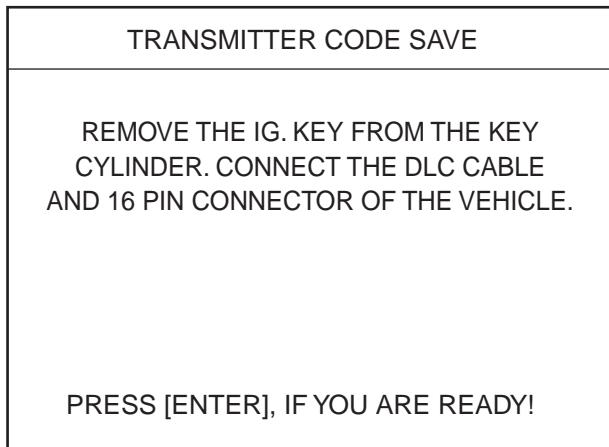


ETRF065M


4. After removing the ignition key from key cylinder, push "ENTER" key to proceed to the next mode for code saving. Follow steps 1 to 4 and then code saving is completed.




ETRF065N

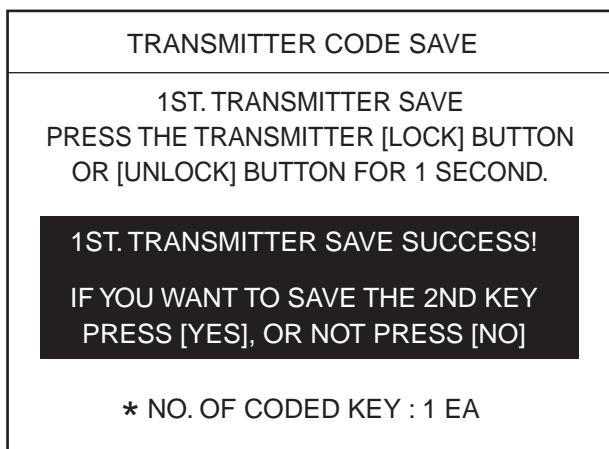

ETRF065O

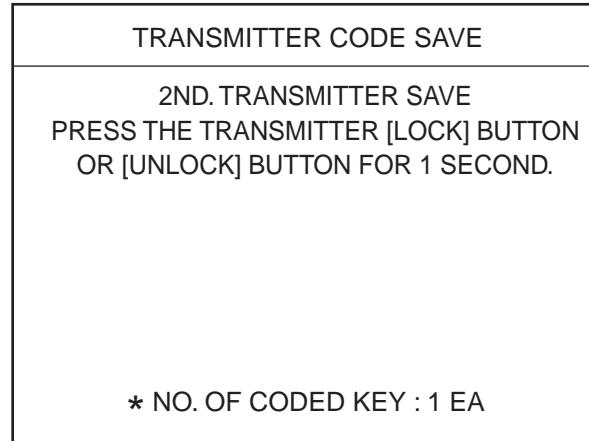

ETRF065P

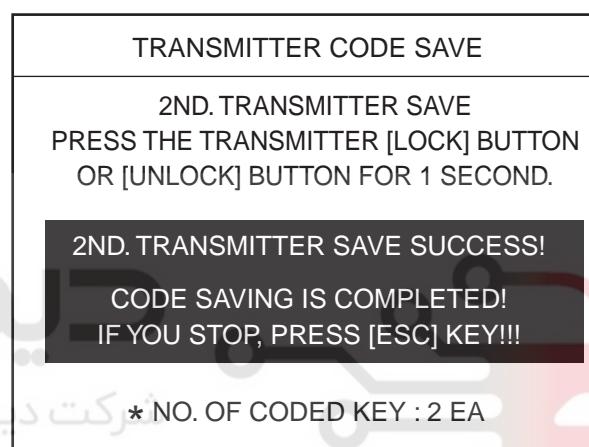


ETRF065Q

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BODY CONTROL MODULE

DESCRIPTION E7BADD35

Body control module (A) receives various input switch signals controlling time and alarm functions for tail lamp, rear fog lamp, tail lamp auto cut, auto light, DRL, seat belt reminder warning, key operated warning, parking brake warning, over speed warning, ignition key hole illumination, room lamp control, power window delay time control, keyless entry control, burgular alarm control, dead lock, auto door lock/crash door unlock, key reminder & front/rear heated control.

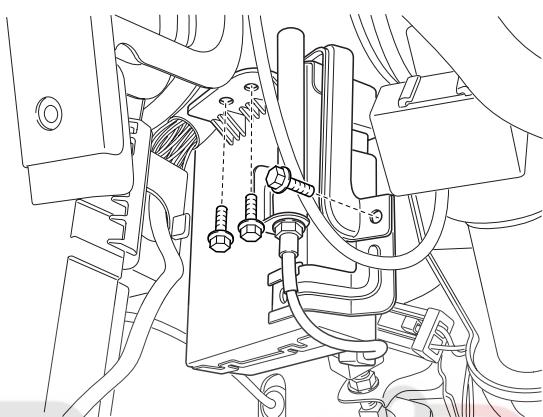


SCMBE6150D

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

BCM BLOCK DIAGRAM

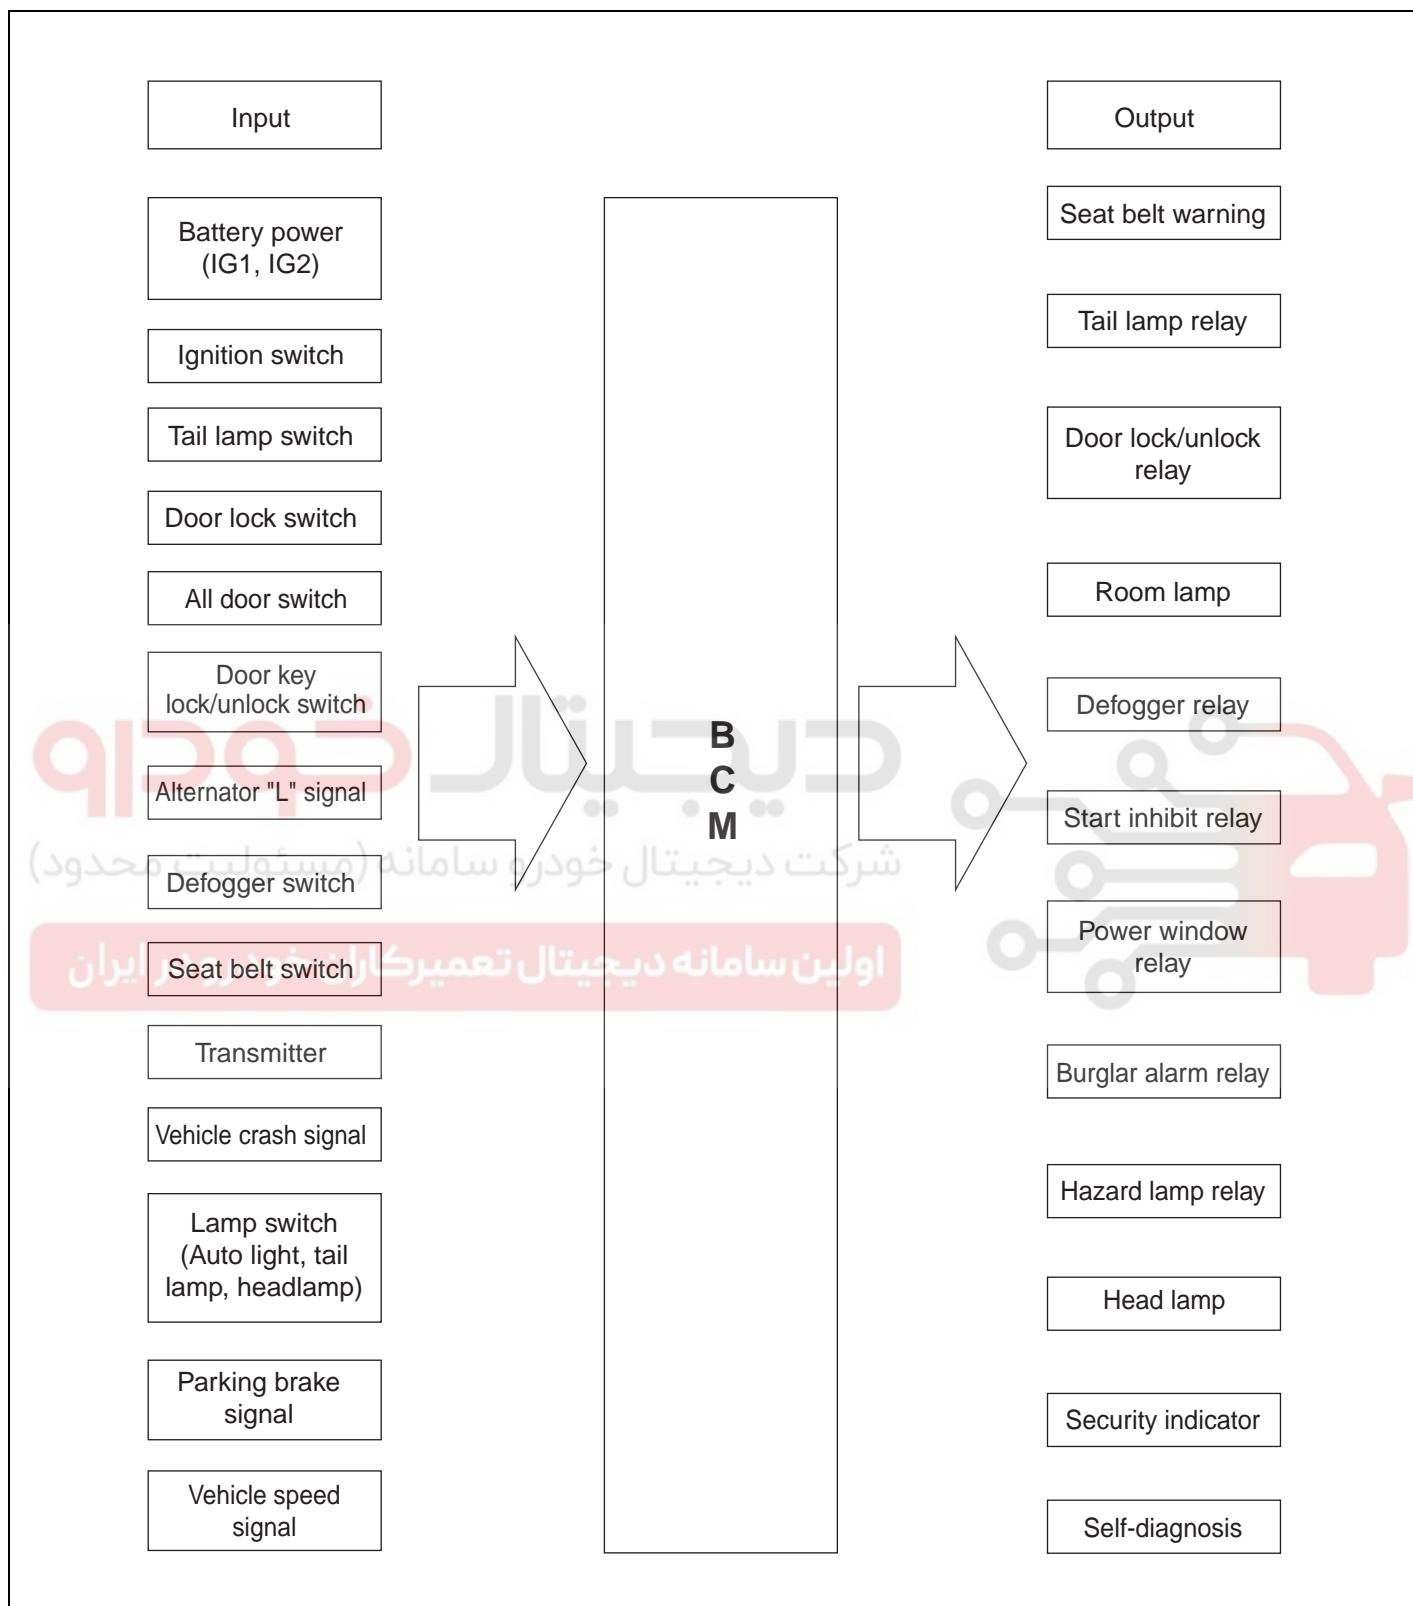

SCMBE6151L



ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -67

OPERATION EAE305E9

1. WASHER INTERLOCKING WIPER

1) If the Washer SW is ON in the IGN2 SW ON state, then the Wiper output shall be ON after T1, and if the Washer SW input is ON for 0.2~0.6 seconds, then the Wiper output shall be OFF after T3. However, WASHER SW input shall be disregarded during the Washer Wiper operating, but after operating the Washer Wiper, WASHER SW input shall be accepted first.

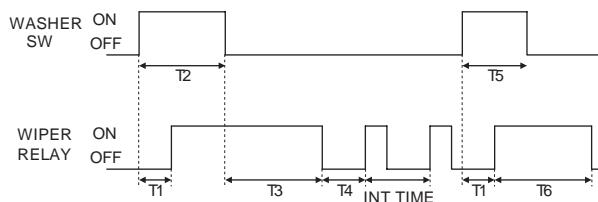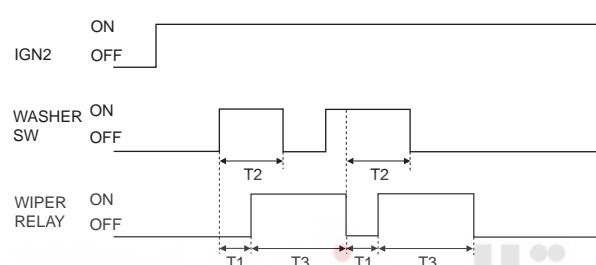


T1 : 0.3 ± 0.1 s, T2 : more than 0.6s
 T3 : $2.5 \sim 3.8$ s ± 0.1 s, T4 : INT TIME-0.7s,
 T5 : 0.2~0.6s, T6 : 0.7 ± 0.1 s

T1 : 0.3 ± 0.1 s, T2 : 0.2~0.6s, T3 : 0.7 ± 0.1 s

In case of T2 is less than 0.2s, T3=0

2) If the Washer SW is ON in the IGN2 SW ON state, then the Wiper output shall be ON after T1, and if the Washer SW is ON over 0.6 seconds, after the Washer SW is OFF and the Wiper output shall be ON for 2.5~3.8 seconds and then, the Wiper output shall be OFF. However, WASHER SW input shall be disregarded during the Washer Wiper operating, but after the Washer Wiper operating, WASHER SW input be accepted first.

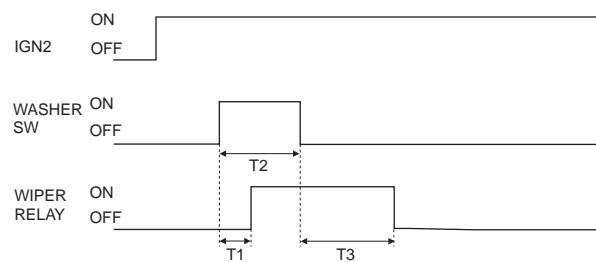

2. VEHICLE SPEED (SENSITIVE TYPE) INT WIPER
 According to the vehicle speed, control intermittent time of the Intermittent Wiper.

- IGN1 SW ON state
- WIPER SW INT state
- INPUT the vehicle speed, intermittent time set VOLUME value
 - Change the WIPER by calculating the intermittent time according to the vehicle speed.

1) Input of Vehicle speed

Calculate the vehicle speed by the number of Input PULSE for 1 second.

$$1 \text{ [PULSE/sec]} = (60[\text{Km/h}] \times 60[\text{sec}]) / (637 \times 4 \text{ PULSE}) \quad 1.41[\text{Km/h}]$$

2) Output of Vehicle speed

Count the number of the PULSE for 1 second, and compare with the former value, and then define the higher value of the vehicle speeds as the vehicle speed for intermittent time output.

$$V = \max (V_{\text{new}}, V_{\text{old}})$$

But, V_{new} : the present vehicle speed, V_{old} : the former vehicle speed

3) Output of Intermittent time ratio (vehicle speed: 0Km/h)
 Calculate the INT time rate by inputting the INT Time set Volume value (input voltage)
 The INT Time Rate is to indicate the position where the Volume is located from the Slow (100%) to the Fast (0%) of the Knob. Therefore the Volume shall be linearly calibrated about the input voltage.

4) Output of Standard Intermittent Time
 Calculate the intermittent time of the intermittent time ratio 100% and 0% at the vehicle speed (V) computed above by linear correction and then, calculate the standard intermittent time by the proportional distribution of the intermittent time ratio computed in (3) item.

- If the variation of the standard intermittent time is less than 0.3 sec, should not renew the intermittent time.
- If the standard intermittent time is less than 0.2 sec, continually operate.
- When the INT Time Timer (passed time) is over 10 seconds, if the vehicle is speeded up (from 0 km/h to 7km/h and more), then the Wiper shall be operated.

3. TAIL LAMP AUTO CUT


After Key IN SW is On, if Tail SW is On, then Key IN SW shall be OFF; when the driver's door is opened, then the Tail Lamp shall be OFF automatically.

Also, in the state that the KEY IN SW is ON, after the driver's door is opened, if the KEY IN SW is OFF, then the Tail Lamp shall be OFF automatically.

After the Auto Cut, if the Tail SW is ON after OFF again, the Tail Lamp shall be ON, and the Auto Cut function shall be canceled.


After the Auto Cut, when KEY IN SW is ON again, TAIL LAMP shall be ON, and the Auto Cut function shall be canceled.

In the state of the AUTO CUT, if mounting or removing the BATTERY, then the AUTO CUT state shall be continued.

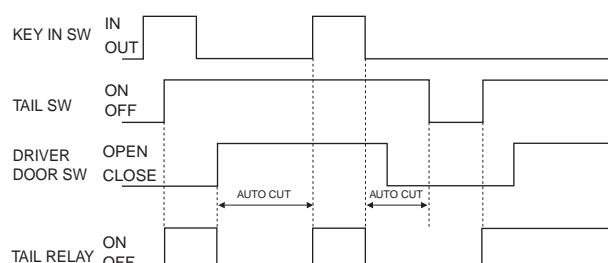

4. HEAD LAMP LOW CONTROL

If HEAD LAMP LOW SW is On in the IGN1 On state, HEAD LAMP HIGH RELAY shall be ON so that HEAD LAMP HIGH can be controlled by HEAD LAMP RELAY and M/F SW.

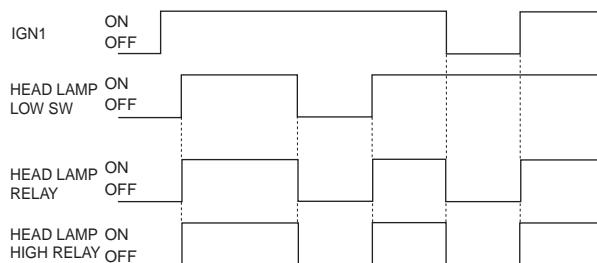

SCMBE6158L

5. AUTO LIGHT CONTROL

1) The AUTO LIGHT function shall not be applied in case of DRL OPTION of Europe spec(DRL OPTION LINE = GND).

2) It shall be able to operate only in case of B AUTO LIGHT is active, and comply with CALIBRAION PARAMETER TABLE of each spec.

3) In GN1 SW ON state, if the supply voltage of the AUTO LIGHT SENSOR is less than 4v or more than 6v, it is determined as the fault. In the fault state, in case of the AUTO LIGHT SW is ON, always HEAD LAMP RELAY shall be ON regardless of the Sensor value. FILTERING TIME for the fault and recovery with regard to the supply voltage is 300 msec respectively.

4) In the condition of LIGHT ON, when the AUTO LIGHT SENSOR value is entered into AUTO LIGHT control condition, then LIGHT shall be ON immediately.

5) If IGN1 SW is ON, and AUTO LIGHT SW is ON, and in LIGHT OFF state, and in case of AUTO LIGHT SENSOR value is the input value of the LIGHT ON, LIGHT shall be ON after 2.5 ± 0.2 sec.

SCMBE6157L

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -69


6) In LIGHT ON state, in case of the AUTO LIGHT SENSOR value is the input value of the LIGHT OFF, LIGHT shall be OFF after 2.5 ± 0.2 sec.

7) If the SENSOR value is the input value of the TAIL LAMP ON, then TAIL LAMP RELAY shall be ON only, and if it is the input value of the HEAD LAMP ON, then HEAD LAMP HIGH RELAY shall be ON so that HEAD LAMP HIGH can be controlled by TAIL LAMP RELAY, HEAD LAMP RELAY, and multifunction (M/F) SW.

8) In the condition of LIGHT ON, when AUTO LIGHT SW is ON, HEAD LAMP RELAY shall be ON immediately, and when AUTO LIGHT SW is OFF, LIGHT shall be OFF immediately.
The LIGHT ON value of the AUTO LIGHT SENSOR shall be complied with the table below.

	TAIL LAMP	HEAD LAMP
ON	0.81 ± 0.05 V	0.81 ± 0.05 V
OFF	1.41 ± 0.05 V	1.41 ± 0.05 V

9) The time chart according to filtering time and sensor for each applicable area shall be as follow.

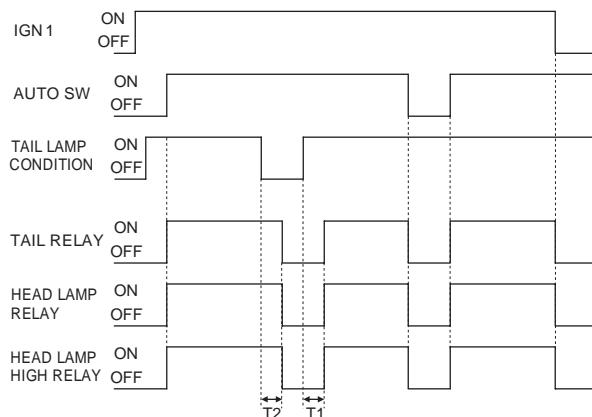

SCMBE6902L


T1 : 2.5 ± 0.2 s, T2 : 2.5 ± 0.2 s

6. DAYTIME RUNNING LIGHT

In the case of DRL EUROPE specification, by eliminating the SHUNT between the TAIL LAMP RELAY and the INTERIOR LAMP, the interior lamp is controlled by the DRL RALY.

If the IGN2 & ALT "L" are ON, the Tail Lamp RELAY and the Head Lamp LOW RELAY shall be ON ;
If TAIL LAMP LOW RELAY is ON by the TAIL SW, the DRL function shall be canceled.


SCMBE6159L

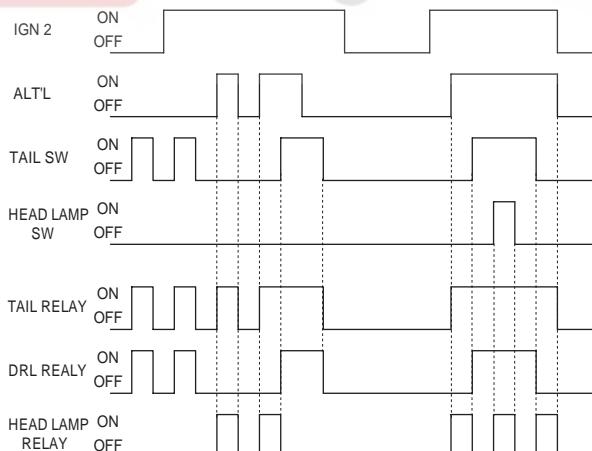

SCMBE6903L

7. REAR FOG LAMP

- 1) After the IGN1 is ON and the Tail Lamp SW is ON, in the state that the HEAD LAMP SW is ON, if the REAR FOG SW is pressed, the Rear Fog Lamp shall be ON.
- 2) In case of IGN1 ON and the TAIL LAMP and the HEADLAMP is pushing the REAR FOG SW by AUTO LIGHT function in state of ON, the REAR FOG LAMP shall be ON.
- 3) In case of IGN1 ON and the TAIL LAMP is ON by AUTO LIGHT function, and if FOG LAMP SW is pushing REAR FOG SW in state of ON, the REAR FOG LAMP shall be ON.

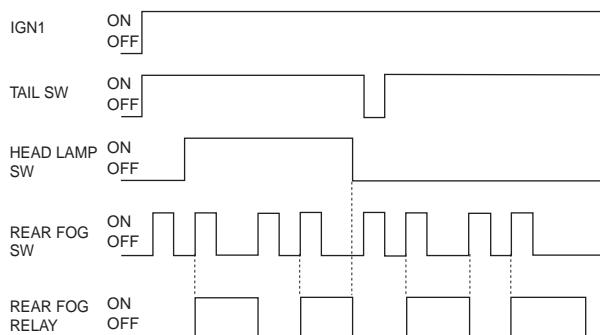


SCMBE6160L

8. BUZZER SOUND

1) BUZZER SOUND SPECIFICATION

	Frequency	Frequency DUTY	Cycle	Sound Pressure	Remark
SEAT BELT WARNING	800Hz	50%	1.0s	70±10Db	Damped Sound
KEY OPERATED	800Hz	50%	0.7s	70±10Db	Damped Sound
OVER SPEED WARNING / SEAT BELT REMINDER (EC)	800Hz	50%	1.0s	70±10Db	Continuous Sound
PARKING START WARINGI	800Hz	50%	1.0s	70±10Db	Continuous Sound

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

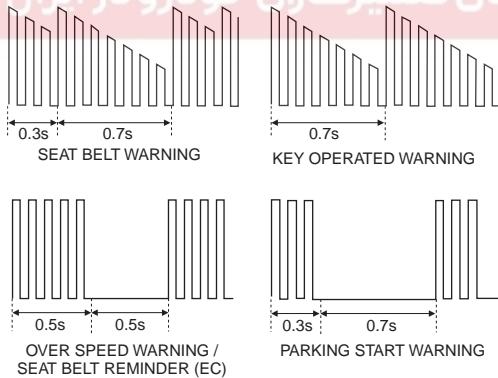

SCMBE6161L

- 2) The Priority Order: OVER SPEED WARNING > S/BELT WARNING > KEY OPERATED WARNING > PARKING START WARNING
- 3) If the output is OFF, maintain the output until the OFF cycle
- 4) Sound pressure measurement distance : 1.0 m

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -71

9. SEAT BELT WARNING TIMER

CONDITION 1

State	Description
Initial condition	IGN1 OFF
Transition condition	Driver side seat belt is belted and IGN1 is ON
Operating	<ul style="list-style-type: none"> - Start 6 seconds driver indicator blinking - The automaton state is changed to IGN1 ON DRIVER BELTED

CONDITION 2

State	Description
Initial condition	IGN1 OFF
Transition condition	Driver side seat belt is unbelted and IGN1 is ON
Operating	<ul style="list-style-type: none"> - Start 6 seconds driver indicator blinking - Start 6 seconds buzzer warning - The automaton state is changed to IGN1 ON DRIVER UNBELTED

CONDITION 3

State	Description
Initial condition	IGN1 ON DRIVER BELTED
Transition condition	IGN1 OFF
Operating	<ul style="list-style-type: none"> - Start 6 seconds driver indicator blinking - Start 6 seconds buzzer warning - The automaton state is changed to IGN1 OFF

CONDITION 4


State	Description
Initial condition	IGN1 ON DRIVER BELTED
Transition condition	Driver side seat belt is unbelted
Operating	<ul style="list-style-type: none"> - Start 6 seconds driver indicator blinking - Start 6 seconds buzzer warning - The automaton state is changed to IGN1 ON DRIVER UNBELTED

CONDITION 5

State	Description
Initial condition	IGN1 ON DRIVER BELTED
Transition condition	IGN1 OFF
Operating	<ul style="list-style-type: none"> - Start 6 seconds driver indicator blinking - Start 6 seconds buzzer warning - The automaton state is changed to IGN1 OFF

CONDITION 6

State	Description
Initial condition	IGN1 ON DRIVER BELTED
Transition condition	Driver side seat belt is belted
Operating	<ul style="list-style-type: none"> - Start 6 seconds buzzer warning - The automaton state is changed to IGN1 ON DRIVER BELTED

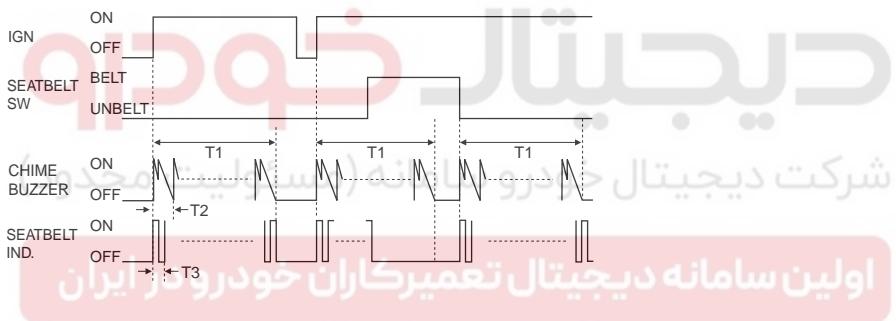

SCMBE6162L

$T_1 : 6 \pm 1 \text{ sec}$, $T_2 : 1 \pm 0.1 \text{ sec}$,
 $T_3 : 0.6 \pm 0.1 \text{ sec}$

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -73

10. SEAT BELT REMINDER

CONDITION 1

State	Description
Initial condition	IGN1 OFF
Transition condition	Driver side seat belt is belted and IGN1 is ON
Operating	<ul style="list-style-type: none"> - Start 6 seconds driver indicator ON - Start driver T1 timer IGN1 ON & DRIVER BELTED

CONDITION 2

State	Description
Initial condition	IGN1 OFF
Transition condition	Driver side seat belt is unbelted and IGN1 is ON and (T2 > 55s or T2 not started)
Operating	<ul style="list-style-type: none"> - Start 6 seconds driver indicator ON - Start infinite driver indicator ON - The automaton state is changed to IGN1 ON DRIVER UNBELTED1

CONDITION 3

State	Description
Initial condition	IGN1 OFF
Transition condition	Driver side seat belt is unbelted and IGN1 is ON and T2 < =55s
Operating	<ul style="list-style-type: none"> - Start 6 seconds driver indicator blinking - Start infinite driver indicator blinking - Start driver T3 Timer(55s) - The automaton state is changed to IGN1 ON DRIVER UNBELTED2

CONDITION 4

State	Description
Initial condition	IGN1 ON DRIVER BELTED
Transition condition	IGN1 OFF
Operating	<ul style="list-style-type: none"> - Stop 6 seconds driver indicator blinking - Stop driver T1 Timer - Start driver T2 Timer - Stop 6 seconds driver indicator ON - The automaton state is changed to IGN1 OFF

CONDITION 5

State	Description
Initial condition	IGN1 ON DRIVER BELTED
Transition condition	Driver side seat belt belted > unbelted and T1 > =9s and VS < 9kph
Operating	<ul style="list-style-type: none"> - Start infinite driver indicator blinking - Start driver T3 timer - Start 6s driver indicator blinking - Stop 6 seconds driver indicator ON - The automaton state is changed to IGN1 ON DRIVER UNBELTED2

CONDITION 6

State	Description
Initial condition	IGN1 ON DRIVER BELTED
Transition condition	Driver side seat belt belted > unbelted and T1 > =9s and VS > =9kph
Operating	<ul style="list-style-type: none"> - Start driver buzzer pattern (100sec ON) - Start infinite driver indicator blinking - Start 6s driver indicator blinking - The automaton state is changed to DRIVER PATTERN

CONDITION 7

State	Description
Initial condition	IGN1 ON DRIVER BELTED
Transition condition	Driver side seat belt belted > unbelted and T1 > =9s and VS > =9kph
Operating	<ul style="list-style-type: none"> - Start driver buzzer pattern (100sec ON) - Start infinite driver indicator blinking - Start 6s driver indicator blinking - The automaton state is changed to DRIVER PATTERN

CONDITION 8

State	Description
Initial condition	IGN1 ON DRIVER BELTED
Transition condition	Driver side seat belt unbelted > belted
Operating	<ul style="list-style-type: none"> - (Re)Start T1 timer(9sec)

CONDITION 9

State	Description
Initial condition	IGN1 ON DRIVER UNBELTED1
Transition condition	IGN1 OFF
Operating	<ul style="list-style-type: none"> - Stop 6 seconds driver indicator ON - Stop infinite driver indicator ON - The automaton state is changed to IGN1 OFF

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -75

CONDITION 10

State	Description
Initial condition	IGN1 ON DRIVER UNBELTED1
Transition condition	Driver side seat belt belted
Operating	<ul style="list-style-type: none"> - Stop infinite driver indicator ON - Start driver T1 timer - The automaton state is changed to IGN1 ON DRIVER BELTED

CONDITION 11

State	Description
Initial condition	IGN1 ON DRIVER UNBELTED1
Transition condition	Driver side seat belt unbelted and VS > 9kph
Operating	<ul style="list-style-type: none"> - Stop infinite driver indicator ON - Start infinite driver indicator blinking - Start driver T3 timer - The automaton state is changed to IGN1 ON DRIVER UNBELTED2

CONDITION 12

State	Description
Initial condition	IGN1 ON DRIVER UNBELTED2
Transition condition	IGN1 OFF
Operating	<ul style="list-style-type: none"> - Stop 6 seconds driver indicator blinking - Stop infinite driver indicator blinking - Stop driver T3 timer - Start driver T2 timer - Stop infinite driver indicator ON - The automaton state is changed to IGN1 OFF

CONDITION 13

State	Description
Initial condition	IGN1 ON DRIVER UNBELTED2
Transition condition	Driver side seat belt belted
Operating	<ul style="list-style-type: none"> - Stop infinite driver indicator blinking - Stop driver T3 timer - Start driver T1 timer - Stop infinite driver indicator ON - The automaton state is changed to IGN1 ON DRIVER BELTED

CONDITION 14

State	Description
Initial condition	IGN1 ON DRIVER UNBELTED2
Transition condition	Driver T3 timer started and elapsed
Operating	<ul style="list-style-type: none"> - Start driver buzzer pattern (90sec ON) - The automaton state is changed to DRIVER PATTERN

CONDITION 15

State	Description
Initial condition	PATTERN
Transition condition	IGN1 OFF
Operating	<ul style="list-style-type: none"> - Stop infinite driver indicator blinking - Stop driver Buzzer Pattern - Start driver T2 timer - Stop 6s driver indicator blinking - The automaton state is changed to IGN1 OFF

CONDITION 16

State	Description
Initial condition	PATTERN
Transition condition	Driver side seat belt belted
Operating	<ul style="list-style-type: none"> - Stop driver Buzzer Pattern - Stop infinite driver indicator blinking - Start driver T1 timer - The automaton state is changed to IGN1 ON DRIVER BELTED

CONDITION 17


State	Description
Initial condition	PATTERN
Transition condition	Driver Buzzer Pattern finished(90s elapsed)
Operating	<ul style="list-style-type: none"> - Stop driver Buzzer Pattern - Stop infinite driver indicator blinking - Start driver T1 timer - The automaton state is changed to IGN1 ON DRIVER UNBELTED2

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -77

11. KEY OPERATED WARNING


- 1) In state of KEY IN SW is IN, if the DRIVER DOOR is opened, then the CHIME BUZZER output shall be continued with the cycle of 0.7 seconds.
- 2) If KEY IN SW is OUT or the driver's door is closed during the Chime Buzzer output, then the output shall be OFF.

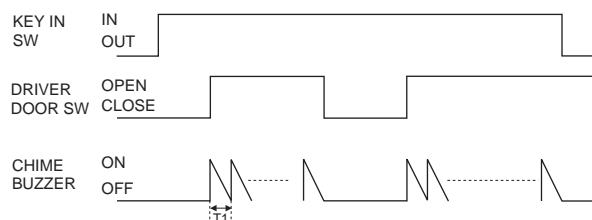

T1 : 0.7 ± sec.

12. OVER SPEED WARNING

In the IGN 2 ON state, if the over speed SW of the cluster is On, the chime buzzer output shall be ON. If the over speed SW is OFF, the chime buzzer output shall be OFF.

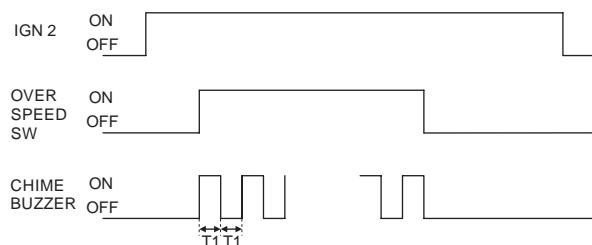


T1 : 0.5 ± 0.1 sec.

SCMBE6904L

13. PARKING START WARNING

In the state that the IGN1 is ON or the Parking Brake is pulled, if the speed of vehicle is maintained over 10 km/h for 2~3 seconds or more, then the Chime Buzzer output shall be continued with 1 second cycle of the ON/OFF (0.3/0.7 seconds). But, after the speed of vehicle is maintained over 10 km/h for 2~3 seconds or more, if the Parking Brake is pulled, output immediately.

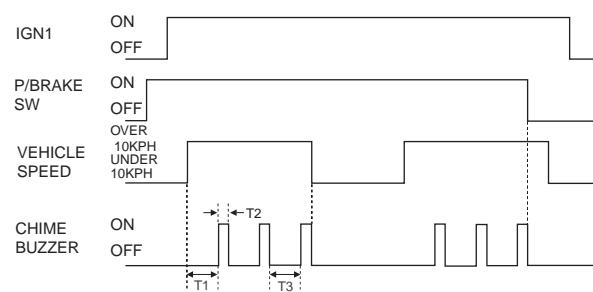


T1 : 2.5±0.5 sec, T2 : 0.3±0.1 sec,
T3 : 0.7±0.1 sec.

SCMBE6164L


14. IGN KEY HOLE ILLUMINATION

- 1) If the driver's door (or assist's door) is opened in the state that the IGN1 SW is OFF, then the IGN Key Hole Illumination shall be ON.
- 2) In the (1) state, if the driver's door (or assist's door) is closed, then the IGN Key Hole Illumination shall be OFF after it is in the ON state for 30 seconds.
- 3) During the (1) and (2) operating, if the IGN1 SW is On, the IGN Key Hole Illumination shall be OFF immediately.
- 4) But, if it is in the ARM Mode, then the IGN Key Hole Illumination shall be OFF immediately.

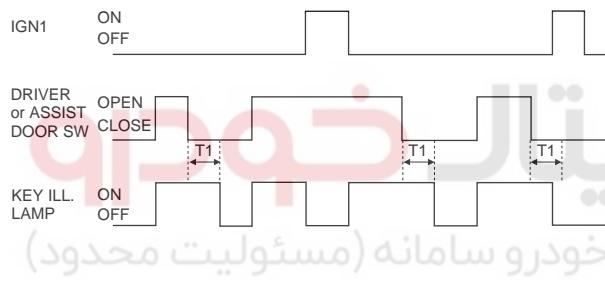T1 : 30 ± 1 sec.

15. DEFOGGER TIMER

- 1) If the Defogger SW is ON after the ALT "L" is ON in the state that the IGN1 SW is ON, then the Defogger output shall be ON for 20 minutes. (Operating in the state of the ENGINE RUNNING)
- 2) If the DEFOGGER SW is ON again while the DEFOGGER output is ON, then the DEFOGGER output shall be OFF.
- 3) If the ALT "L" is OFF or IGN1 is OFF while the DEFOGGER output is ON, then the DEFOGGER output shall be OFF.
- 4) If the ALT "L" > 10 volts, then it shall be in the Engine Running State (ALT "L" shall be ON); if the ALT "L" < 5 volts, then it shall be in the Engine Stop State (ALT "L" shall be OFF). Also, if the ALT "L" is more than 5 and less than 10 volts, then the former state shall be maintained.
- 5) If the defogger SW is pressed and the ALT "L" is ON, there shall be no the DEFOGGER RLY output.

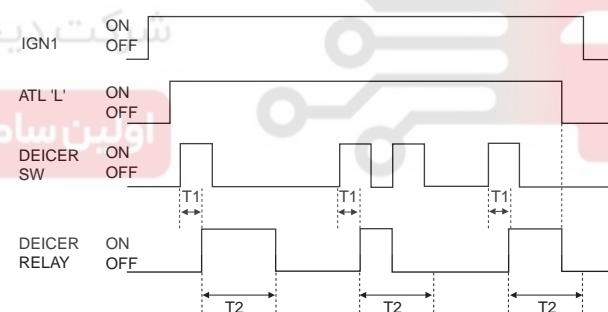T1 : 60 ± 20 msec, T2 : 20 ± 1 min.

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -79

16. DECAYED ROOM LAMP & KEYLESS UNLOCK
TIMER**CONDITION 1**

State	Description
Initial Condition	Room lamp OFF & IGN1 OFF & 4DOOR AND T/GATE CLOSE
Transition Condition	In the state that all doors are closed, the 4DOOR or T/GATE is opened over 0.1 seconds.
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state for 20 min - ROOM LAMP ON for 20 ± 1 min


CONDITION 2

State	Description
Initial Condition	Room lamp OFF & IGN1 OFF & 4DOOR AND T/GATE CLOSE
Transition Condition	In case of UNLOCK by the TX
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state for 30s - ROOM LAMP ON for 30 ± 3 seconds

CONDITION 3

State	Description
Initial Condition	Room lamp OFF & IGN1 OFF & 4DOOR AND T/GATE CLOSE
Transition Condition	IGN1 ON and 4 DOOR or T/GATE OPEN over 0.1 seconds
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state - ROOM LAMP ON

اولین سامانه دیجیتال نعمیرکاران خودرو در ایران

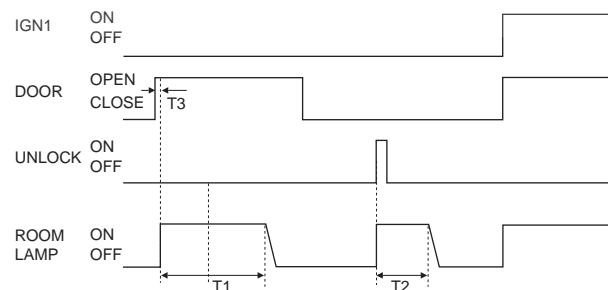

SCMBE6167L

T1 : 20 ± 1 min, T2 : 30 ± 3 sec,
T3 : 100 ms.

CONDITION 4


State	Description
Initial Condition	ROOM LAMP ON for 30s & IGN1 OFF
Transition Condition	In the state that all doors are closed, the 4DOOR or T/GATE is opened over 0.1 seconds.
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state for 20 min - ROOM LAMP ON for 20 ± 1 min.

CONDITION 5

State	Description
Initial Condition	ROOM LAMP ON for 30s & IGN1 OFF
Transition Condition	In case of UNLOCK by the TX.
Operating	<ul style="list-style-type: none"> - Maintain in the ROOM LAMP ON state for 30s - Extend the ROOM LAMP ON state for 30 seconds.

CONDITION 6

State	Description
Initial Condition	ROOM LAMP ON for 30s & IGN1 OFF
Transition Condition	IGN1 ON, or after 30 seconds, or when entered into the ARM state, or when all doors are locked.
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP DECAYING state - After the ROOM LAMP is decayed for 2 ± 0.2 seconds, it shall be OFF.

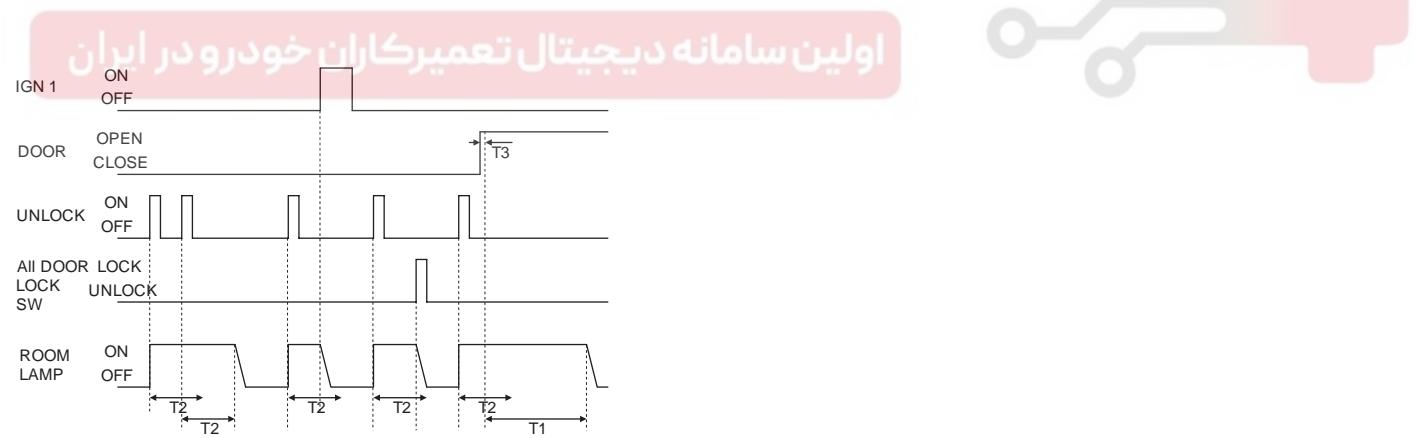

SCMBE6905L

T1 : 20 ± 1 min, T2 : 30 ± 3 sec,

T3 : 100 ms.

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -81

CONDITION 7

State	Description
Initial Condition	ROOM LAMP ON for 20min & IGN1 OFF
Transition Condition	IGN1 ON
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state - ROOM LAMP ON.

CONDITION 8

State	Description
Initial Condition	ROOM LAMP ON for 20min & IGN1 OFF
Transition Condition	4DOOR AND T/GATE CLOSE
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state for 30s. - ROOM LAMP ON for 30 ± 3 seconds.

CONDITION 9


State	Description
Initial Condition	ROOM LAMP ON for 20min & IGN1=OFF
Transition Condition	4DOOR AND T/GATE CLOSE & When All doors are locked, or After 20 minutes
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP DECAYING state - The ROOM LAMP is decayed for 2 ± 0.2 seconds and then, shall be OFF.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

IGN 1

ON

OFF

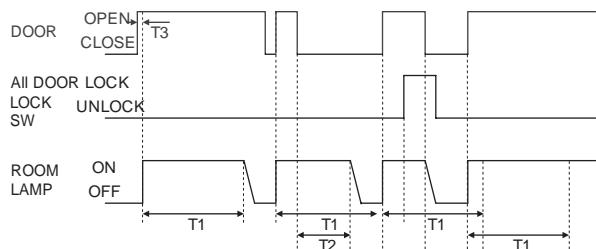

SCMBE6906L

T1 : 20 ± 1 min, T2 : 30 ± 3 sec,

T3 : 100 ms.

CONDITION 10

State	Description
Initial Condition	ROOM LAMP DECAYING & IGN1 OFF
Transition Condition	In the state that all doors are closed, 4DOOR or T/GATE OPEN over 0.1 seconds
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state for 20min - ROOM LAMP ON for 20 ± 1 minutes.

CONDITION 11


State	Description
Initial Condition	ROOM LAMP DECAYING & IGN1 OFF & 4DOOR AND T/GATE CLOSE
Transition Condition	In case of UNLOCK by the TX
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state for 30s - ROOM LAMP ON for 30 ± 3 seconds.

CONDITION 12

State	Description
Initial Condition	ROOM LAMP DECAYING
Transition Condition	After completing the decaying
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP OFF state - ROOM LAMP OFF.

CONDITION 13

State	Description
Initial Condition	ROOM LAMP DECAYING
Transition Condition	IGN1 ON and OPEN 4 DOOR or T/GATE for 0.1 seconds
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state - ROOM LAMP ON.

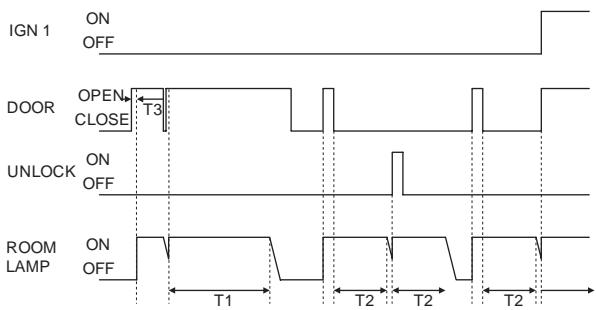

SCMBE6907L

$T_1 : 20 \pm 1$ min, $T_2 : 30 \pm 3$ sec,
 $T_3 : 100$ ms

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -83

CONDITION 14

State	Description
Initial Condition	ROOM LAMP ON & IGN1 ON & 4DOOR or T/GATE OPEN
Transition Condition	4DOOR AND T/GATE CLOSE
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP DECAYING state - The ROOM LAMP is decayed for 2 ± 0.2 seconds and then, shall be OFF.


CONDITION 15

State	Description
Initial Condition	ROOM LAMP ON & IGN1 ON & 4DOOR or T/GATE OPEN
Transition Condition	IGN1 OFF
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state for 20min - ROOM LAMP ON for 20 ± 1 minutes.

CONDITION 16

State	Description
Initial Condition	ROOM LAMP ON & IGN1 ON & 4DOOR or T/GATE OPEN
Transition Condition	4DOOR AND T/GATE CLOSE & IGN1 OFF
Operating	<ul style="list-style-type: none"> - Entry into the ROOM LAMP ON state for 30s - ROOM LAMP ON for 30 ± 3 seconds.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

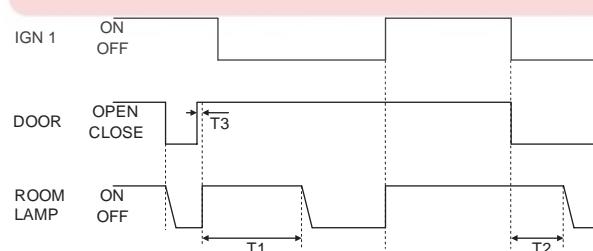

SCMBE6908L


T1 : 20 ± 1 min, T2 : 30 ± 3 sec,
T3 : 100ms

 **NOTE**

1. When the IGN1 is ON, there shall be no blinking of the ROOM LAMP.
2. The decaying of the ROOM LAMP should be more than 32 steps.

17. POWER WINDOW TIMER

- 1) When the IGN2 SW is ON, then the Power Window Relay output shall be ON.
- 2) When the IGN2 SW is OFF, then the Power Window output shall be OFF after the output is maintained ON for 30 seconds.
- 3) Maintained ON for 30 seconds.
- 4) In the condition of the above (2), if the driver's or assist's door is opened, then the output shall be OFF immediately.
- 5) In the state that the driver's or assist's door is opened, if the IGN is OFF, then the Power Window output shall be OFF.
- 6) The SAFTEY POWER WINDOW ECU Output-port shall be controlled the same as the POWER WINDOW RELAY does.

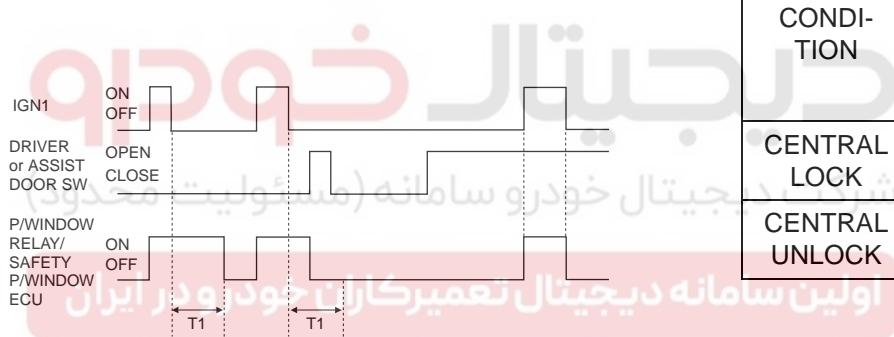


SCMBE6168L

T1 : 30 ± 3 sec.

18. DOOR LOCK/UNLOCK RELAY CONTROL

- 1) 2-TURN, DEAD LOCK NON-APPLICATION SPECIFICATION

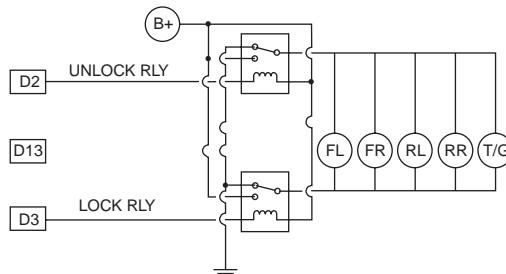


SCMBE6177L

CONDITION	UNLOCK RELAY	Dr UNLOCK / DEAD LOCK RELAY	LOCK RELAY
CENTRAL LOCK	OFF	NC	ON
CENTRAL UNLOCK	ON	NC	OFF

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -85

2) DEAD LOCK SPECIFICATION (EUROPE)

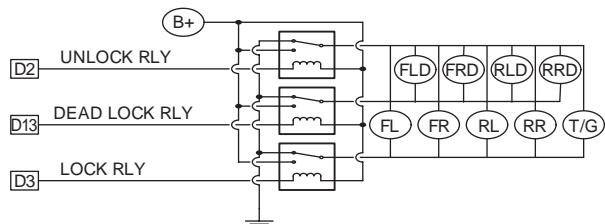


SCMBE6909L

CONDITION	UNLOCK RELAY	Dr UNLOCK / DEAD LOCK RELAY	LOCK RELAY
CENTRAL LOCK	OFF	OFF	ON
CENTRAL UNLOCK	ON	ON	OFF
DEAD LOCK	OFF	ON	OFF
DEAD UNLOCK	ON	OFF	ON

19. CENTRAL DOOR LOCK/UNLOCK

- 1) If the driver's door, the assist' door, T/GATE, the DOOR KEY LOCK SW are On, all DOOR Lock output shall be ON for T1. But, in case of KEY IN and IGN1 SW ON, output shall be inhibited.
- 2) If the driver's door, the assist' door, the DOOR KEY UNLOCK SW are On, all DOOR UNLOCK output shall be ON for T1.
- 3) When the TX (Transmitter) LOCK signal is received, all DOOR LOCK output shall be ON for T1.
- 4) When the TX UNLOCK signal is received, all DOOR UNLOCK output shall be ON for T1.
- 5) If the DR LOCK SW(P/WDW) is locked , all DOOR LOCK output shall be ON for T1.

- 6) If the DR UNLOCK SW(P/WDW) is unlocked, all DOOR UNLOCK output shall be ON for T1. But, in ARM state, the operation by POWER WINDOW UNLOCK Sw shall be inhibited.
- 7) The LOCK/UNLOCK by the SAFETY KNOB is non-interlocking. (Mechanical operation)
- 8) When connected to the BATTERY, there shall be no malfunction.(there shall be no malfunction in the KEY IN position)
- 9) Don't receive the input with less than 60msec(KEY LOCK/UNLOCK SW).
- 10) During output, if there are the output request, the current output shall be OFF immediately, and after 100ms delay, and then, perform the reverse direction output. But, if there are the output request during 100ms delay, perform the output for the last output request occurred.
- 11) In case of the Lock output and Unlock output condition are occurred at the same time, perform the lock output and disregard the unlock output.
- 12) In case of all DOOR UNLOCK(UNLOCK) SW is LOCK(UNLOCK) state, the LOCK(UNLOCK) request does not output.

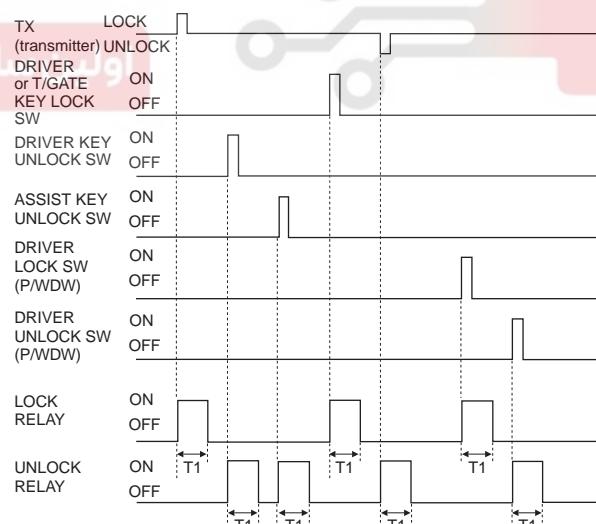

SCMBE6178L

T1 : 0.5 ± 0.1 sec.

20. IGN KEY REMINDER

- 1) If the Vehicle speed is over 3Km/h, then this function doesn't act on.
- 2) If KEY IN SW is IN and the driver's door is opened and the driver's DOOR UNLOCK SW is locked, then after 0.5 seconds, the unlock signal shall be output to all doors for 1s.
- 3) If KEY IN SW is IN and the assist's door is opened and the assist's DOOR UNLOCK SW is locked, then after 0.5 seconds and output DEAD UNLOCK for 0.5s. And then, the unlock signal shall be output to all doors for 1s.(only DEAD LOCK specification)
- 4) If it is in state of that KEY IN SW is IN and assist's DOOR is opened and assist's DOOR UNLOCK SW is locked, and after 0.5s, and then perform the ALL DOOR UNLOCK output for 1 second. (Except for DEAD LOCK spec)
- 5) If it is in state of that KEY IN SW is IN and assist's DOOR is opened and assist's DOOR UNLOCK SW is locked, and after 0.5s, and then output the DEAD UNLOCK for 0.5s, and then after 200msec, and then ALL DOOR UNLOCK signal output is ON for 1second. (only DEAD LOCK specification)
- 6) When (2), (3) items are met at the same time, after 0.5 seconds, the unlock signal shall be output to all doors for 1 second in conformity with (4) item.
- 7) When (3), (5) items are met at the same time, after 0.5 seconds and output DEAD UNLOCK for 0.5 seconds, and then after 200 msec, and then, all door unlock signal shall be output for 1 second in conformity with (5) item. (Only DEAD LOCK specification)
- 8) Although the unlock signal is output for 1 s by the (2), (3) items, if the lock state is maintained, the unlock signal shall be output at maximum three times (except for 1s output). (1s cycle: 0.5s ON/OFF, except for DEAD LOCK specification)
- 9) Even if the unlock is output for 1s by (3), (5) items, if the lock state is maintained, and after output the dead unlock for 0.5 seconds, and after 200msec, and then perform the ALL DOOR UNLOCK output maximum 3 times.(1s cycle : as 0.5s ON/OFF, DEAD LOCK specification)

- 10) After perform (8), (9) items, in case of LOCK state is maintained, and in case of DOOR CLOSE, and then attempt the ALL DOOR UNLOCK one time.
- 11) In the KEY IN SW IN state, if the driver's door is closed within 0.5 seconds as soon as the driver's DOOR UNLOCK SW is turned to the LOCK from the UNLOCK, the unlock signal shall be output to all doors for 1 s one time.
- 12) In the KEY IN SW IN state, if the driver's door is closed within 0.5 seconds as soon as the driver's DOOR UNLOCK SW is turned to the LOCK from the UNLOCK, and after output DEAD UNLOCK for 0.5 s and 20 msec, and then, the unlock signal output shall be ON to all doors for 1 s one time.
- 13) In the KEY IN SW IN state, if the assist's door is closed within 0.5 seconds as soon as the assist's DOOR UNLOCK SW is turned to the LOCK from the UNLOCK, the unlock signal shall be output to all doors for 1 s one time. (Except for DEAD LOCK SPEC)
- 14) In the KEY IN SW IN state, if the assist's door is closed within 0.5 seconds as soon as the assist's DOOR UNLOCK SW is turned to the LOCK from the UNLOCK and after output DEAD UNLOCK for 0.5 s and 20 msec, and then, the unlock signal output shall be ON to all doors for 1 s one time. (Only DEAD LOCK spec)
- 15) In the KEY IN SW IN state, if the driver's DOOR UNLOCK SW is turned to the LOCK from the UNLOCK within 0.5 seconds as soon as the driver's door is turned to the closed state from the opened state, then the Unlock signal shall be output to all doors for 1 second one time.(DEAD LOCK)
- 16) In the KEY IN SW IN state, if the driver's DOOR UNLOCK SW is turned to the LOCK from the UNLOCK within 0.5 seconds as soon as the driver's door is turned to the closed state from the opened state, then the signal output of the ALL DOOR UNLOCK shall be ON for 1 second after outputting the DEAD UNLOCK for 0.5 seconds and 200msec. (only DEAD LOCK specification)
- 17) In the KEY IN SW IN state, if the assist's DOOR UNLOCK SW is turned to the LOCK from the UNLOCK within 0.5 seconds as soon as the assist's door is turned to the closed state from the opened state, then the Unlock signal shall be output to all doors for 1 second one time. (Except for DEAD LOCK spec)

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -87

18) In the KEY IN SW IN state, if the assist' s DOOR UNLOCK SW is turned to the LOCK from the UNLOCK within 0.5 seconds as soon as the assist' s door is turned to the closed state from the opened state, then the signal output of the ALL DOOR UNLOCK shall be ON for 1 second after outputting the DEAD UNLOCK for 0.5 seconds and 200msec. (only DEAD LOCK specification)

19) In the KEY IN state, after the DRIVER DOOR or ASSIST DOOR are opened, if the doors are locked by the P/W LOCK SW, the unlock signal shall be output to all doors.

20) To determine whether the RETRY signal is output or not performs at the beginning time of the RETRY output. (After 1.5 seconds from the first UNLOCK output)

21) Even if the condition is not maintained for 0.5s after the UNLOCK condition is satisfied, the unlock signal shall be output. But, after the condition is satisfied as the result that the DOOR LOCK SW is turned to the LOCK from the UNLOCK, if the KEY IN SW is OFF at the passage time of 0.5s, the unlock signal shall not be output.


4) After the UNLOCK output, if the DRIVER or ASSIST, REAR DOOR LOCK SW are turned to the LOCK from the UNLOCK, the unlock signal shall be output for T3.

5) The AUTO DOOR LOCK function is not performed in the CRASH UNLOCK condition.

6) The CENTRAL DOOR LOCK function is not performed during the CRASH UNLOCK output or after it. But, after the IGN is OFF, if the crash unlock function is reset, the CENTRAL DOOR LOCK function is normally performed.

7) The CRASH DOOR UNLOCK function is prior to the LOCK/UNLOCK control by the other functions.


8) The LOCK/UNLOCK requirement by the other functions is disregarded during the CRASH DOOR UNLOCK output or after it. But, if the IGN1 SW is OFF and IGN2 SW is OFF, the LOCK/UNLOCK control by the other functions shall be performed.

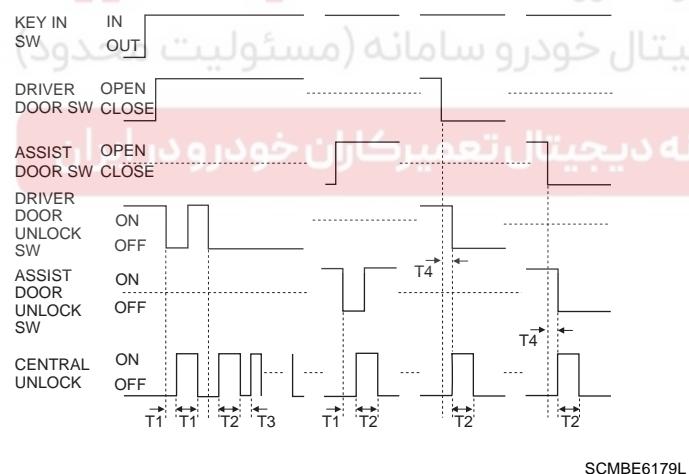

T1, T3 : 0.5 ± 0.1 sec, T2 : 1 ± 0.1 sec,
T4 : 0.5 sec Max.

21. CRASH DOOR UNLOCK

- In the IGN SW ON state, whenever the AIR BAG signal is received, the unlock signal shall be output always.
- During the unlock output, even if the IGN SW is turned to the OFF from the ON, the unlock output is maintained for the remained time.
- If the air bag signal is received first and then, the IGN SW is turned to the ON from the OFF, the unlock signal shall not be output.

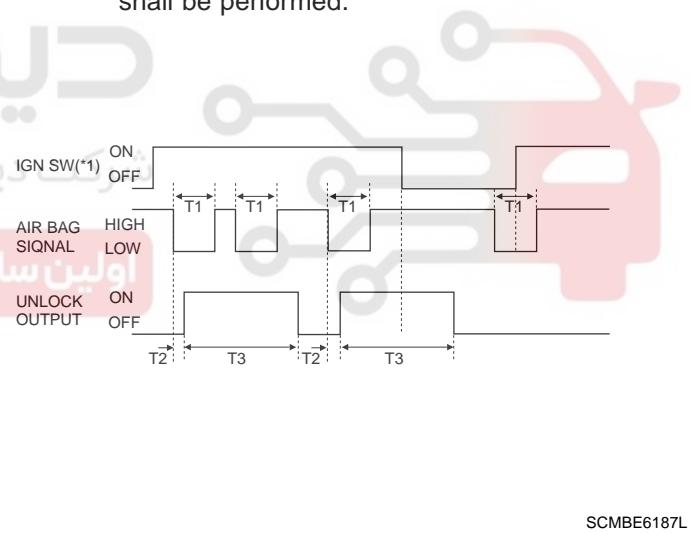


T1 : 0.2 sec, T2 : 40 msec,

T3 : 5 ± 0.5 sec.

*1 ON : IGN1 ON or IGN2 ON
OFF : IGN1 OFF and IGN2 OFF

22. AUTO DOOR LOCK

- 1) The function of the AUTO DOOR LOCK shall be operated in case of the AUTO DOOR LOCK is active only.
- 2) In case of the vehicle speed set in the state of that IGN1 SW is ON than the standard is maintained for 2~3 seconds, perform the LOCK output. But, if the all DOOR is LOCK state, or all DOOR is FAIL, do not perform the LOCK output.
- 3) After the lock output of the (1) item, if any one of all doors is unlocked, the lock signal shall be output at maxim three times. (1s cycle) But, during the 3-output operating, if the door state is turned to the LOCK from the UNLOCK, disregard it.
- 4) After the 3-output operating, if a door is Unlocked, the door equivalent for the UNLOCK state shall be treated as FAIL.
- 5) After the door treated as Fail is turned to the LOCK from the UNLOCK, and then if the door is unlocked, the lock signal shall be output once.
- 6) After the LOCK output of (2) item, if the locked door is unlocked, the lock signal shall be output once.
- 7) But, after the LOCK output, even if the unlock state is maintained, the lock signal shall be output to the door (the unlock state) once.
- 8) When the IGN SW is OFF, the door treated as Fail performs the CLEAR function.
- 9) The AUTO DOOR LOCK function is not performed in the CRASH UNLOCK condition.

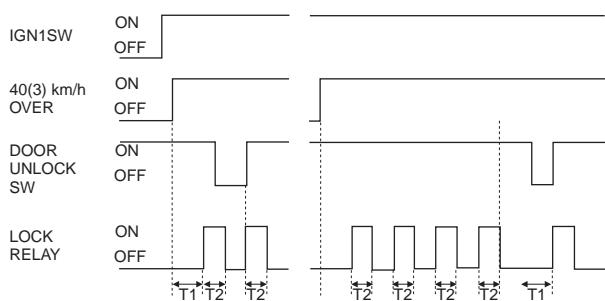

* 1 ON (UNLOCK): DRIVER or ASSIST or REAR DOOR UNLOCK SW = UNLOCK
OFF (LOCK): DRIVER and ASSIST and REAR DOOR UNLOCK SW = LOCK

SCMBE6188L

T1 : 2.5 ± 0.5 sec, T2 : 0.5 ± 0.1 sec.

23. DEAD LOCK (EUROPE OPTION)

- 1) In case of the execution condition of the ALL DOOR LOCK is met by KEY LOCK, TX(Transmitter) LOCK, AUTO LOCK TIMER1, AUTO LOCK TIMER2 in driver's seat/assist's seat, and then after outputting the all door lock for 0.5 seconds, and then after checking the state (after 200msec), and then, DEAD LOCK signal output shall be ON for 0.52 seconds.
- 2) In case of the execution condition of the ALL DOOR LOCK is met by central door LOCK SW of P/WDW SW, and then after outputting the ALL DOOR LOCK, and then do not perform the DEAD LOCK. (No Safety/KNOB)
- 3) In case of the execution condition of the ALL DOOR UNLOCK is met by KEY or TX in driver's seat/assist's seat, and then after outputting the DEAD UNLOCK for 0.5 seconds, and then 200msec, and then ALL DOOR UNLOCK signal output shall be ON for 0.5 seconds.
- 4) In case of the execution condition of the ALL DOOR UNLOCK is met by central door UNLOCK SW of P/WDW SW, perform ALL DOOR UNLOCK only, and do not perform DEAD UNLOCK. But, in DEAD LOCK state, do not perform ALL DOOR UNLOCK by central door UNLOCK SW of P/WDW SW.
- 5) DEAD LOCK/UNLOCK shall be performed regardless of DR OPEN/CLOSE.
- 6) During the ALL DOOR LOCK/UNLOCK output by KEY or TX, and in case of the 'ALL DOOR LOCK/UNLOCK' command, end the current output immediately, and after 200msec, and then output it by a new input condition.
- 7) During DEAD LOCK output after ALL DOOR LOCK by KEY or TX, in case of entering 'ALL DOOR UNLOCK' command, end the current output immediately, and after 200msec, and then output it by a new input condition. Also, During ALL DOOR UNLOCK output after DEAD UNLOCK by KEY or TX, in case of entering 'ALL DOOR LOCK' command, end the current output immediately, and after 200msec, and then output it by a new input condition.


ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -89


- 8) In case of the LOCK/UNLOCK is performed at the same time, perform the LOCK function first.
- 9) In case of entering at the same time by KEY/TX/DR LOCK SW, the priority order shall be TX > KEY > DR LOCK SW.
- 10) In case of the same condition for (8), (9) items is occurred, (9) item shall be the first.
- 11) In case of DEAD LOCK is performed, if ACTUATOR UNLOCK SW is lock, and then output the DEAD LOCK without 200msec delay.
- 12) In case of DEAD UNLOCK is performed, if ACTUATOR UNLOCK SW is unlock, and then execute the DEAD UNLOCK, not CENTRAL UNLOCK.
- 13) In DEAL LOCK state, in case of KEY IN and IGN1 SW state is turned to ON from OFF, and then output the DEAD UNLOCK for 0.5 seconds.

24. 3KM SIGNAL OUTPUT CONTROL

If the vehicle speed is maintained at more than 3km/h for 2~3 seconds in the IGN1 ON state, the signal of 3 KM Output-port shall be ON.

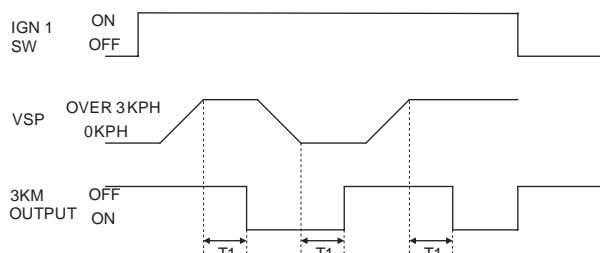

SCMBE6911L

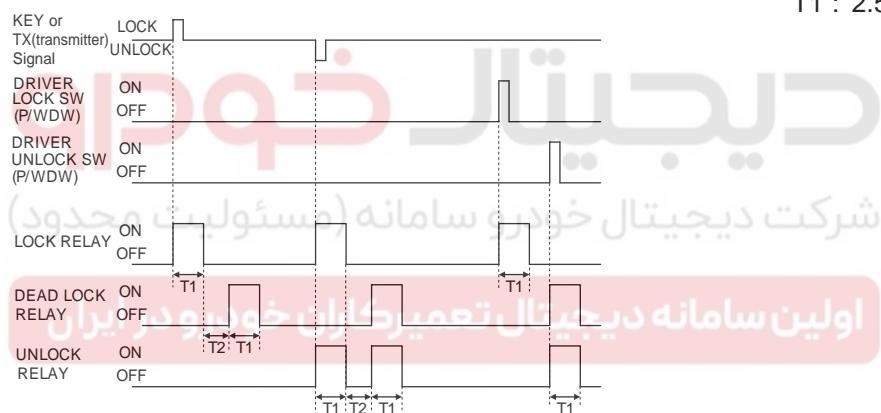
T1 : 2.5 ± 0.5 sec.

SCMBE6910L

T1 : 0.5 ± 0.1 sec, T2 : 0.2 ± 0.05 sec.

CIRCUIT DIAGRAM


E6C22B36

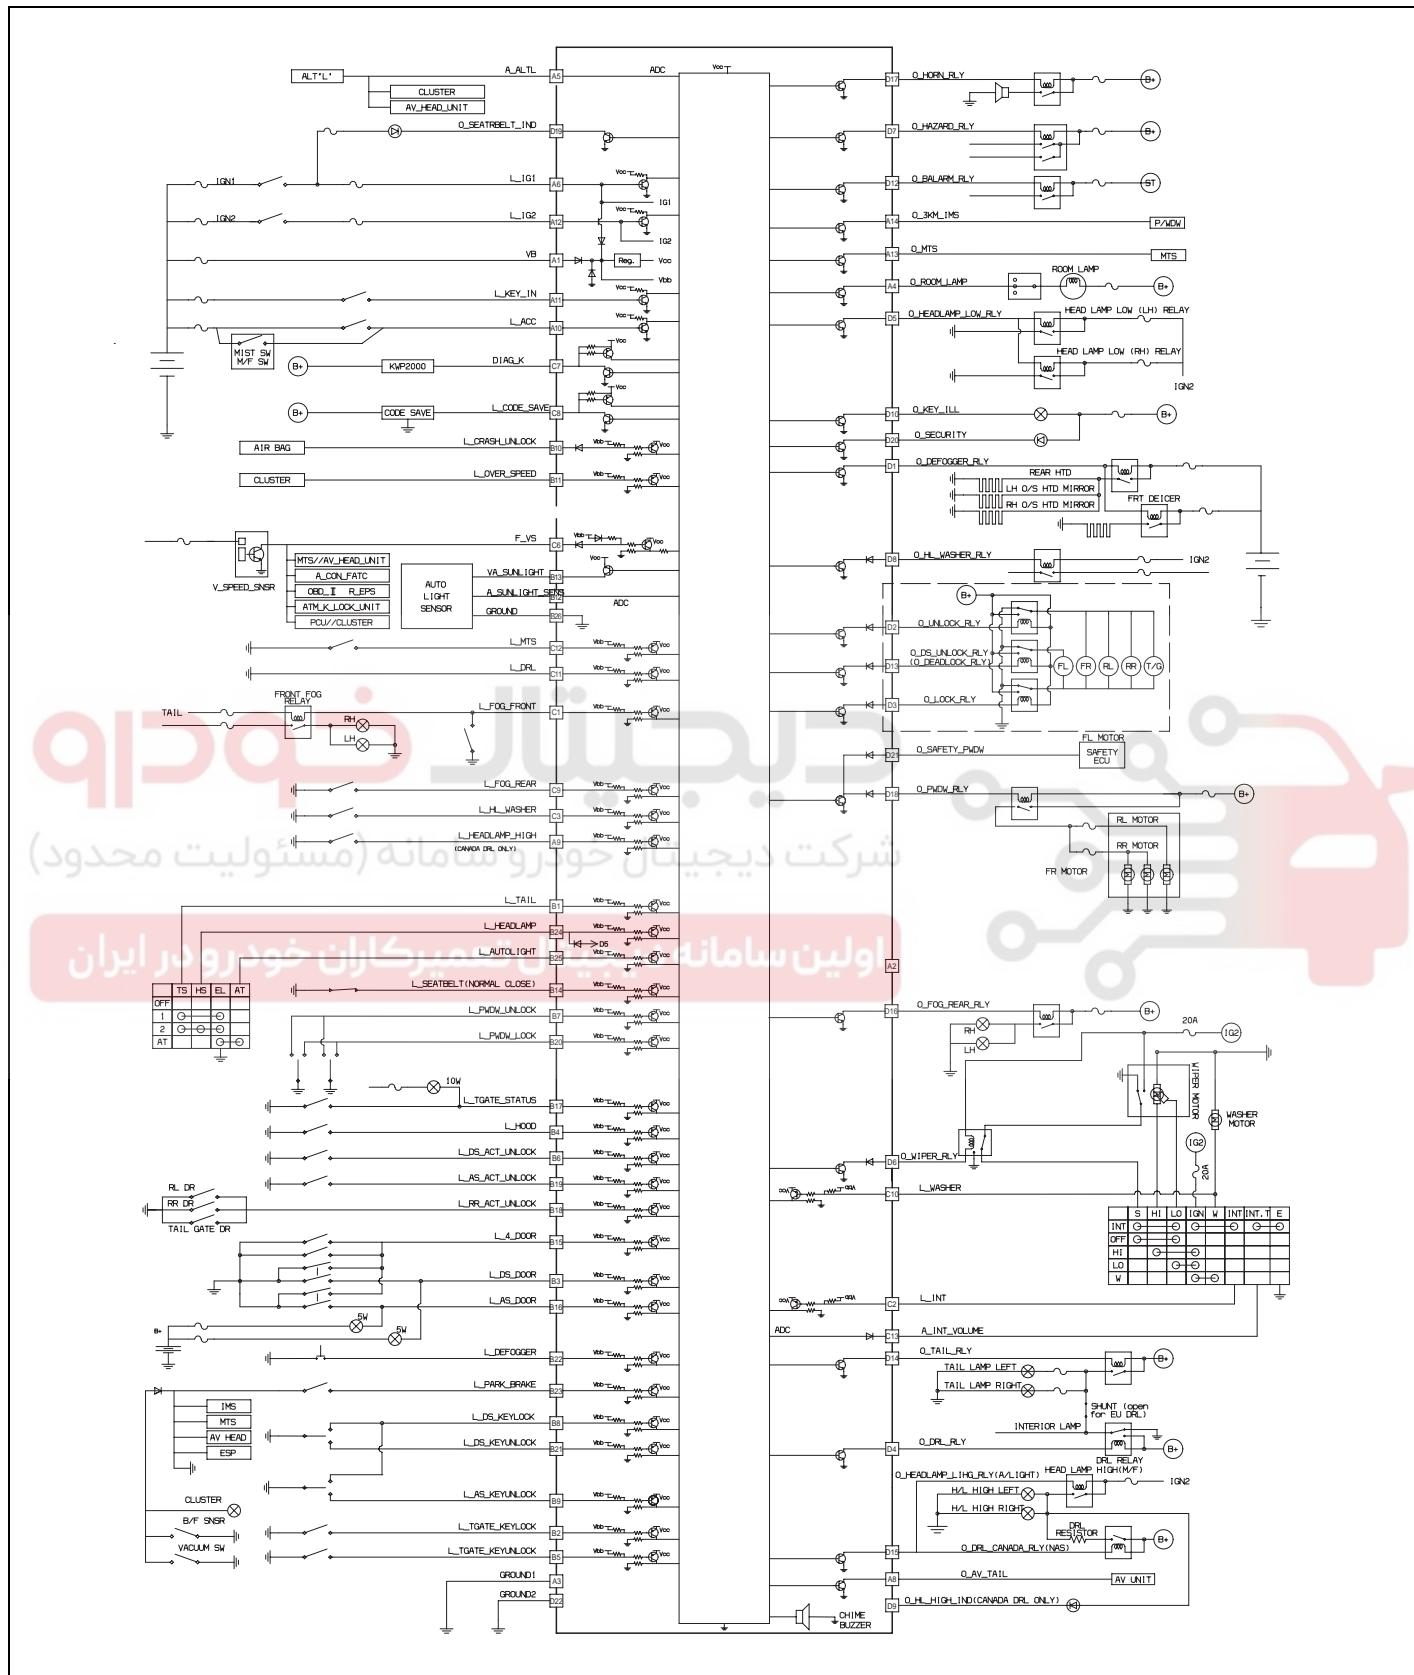

SCMBE6149D

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -91

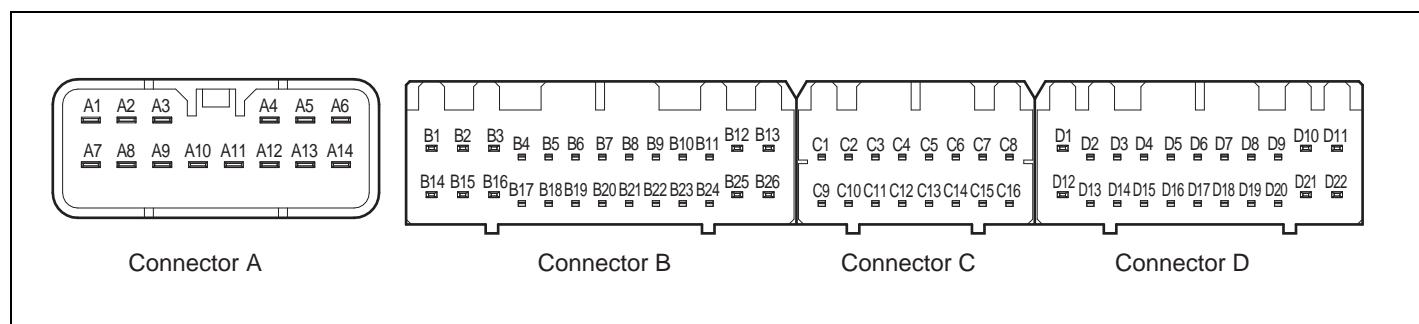INSPECTION E90F6A81**BCM CONNECTORS**

SCMBE6152L

PIN NO	CONNECTOR A	CONNECTOR B	CONNECTOR C	CONNECTOR D
1	Battery voltage	Tail switch	Front fog lamp switch	Defogger switch
2	-	Tailgate key lock switch	INT switch	Unlock relay
3	Ground 1	Drive door switch	-	Lock relay
4	Room lamp	Hood switch	-	DRL relay
5	ALT "L"	Tailgate key unlock switch	-	Head lamp low relay
6	IGN1	Drive actuator unlock switch	Vehicle speed	Wiper relay
7	ARM buzzer	Power window unlock switch	K-line	Hazard relay
8	AV tail output	Drive key lock switch	Code save	-
9	Head lamp high switch	Assistant key unlock switch	Rear fog lamp switch	Head lamp high indicator
10	ACC(L_MIST)	Crash unlock	Washer switch	Key illumination lamp
11	Key IN switch	Overspeed input	DRL switch	-
12	IGN2	Sunlight sensor	-	Burglar alarm relay
13	-	Sunlight sensor power	INT volume	Driver unlock relay
14	3KM to IMS	Seat belt switch	-	Tail relay
15		4Door switch	-	Head lamp high relay
16		Assistant door switch	-	Rear fog lamp relay
17		Tailgate switch		Horn relay
18		Rear actuator unlock switch		Power window relay
19		Assistant actuator unlock switch		Seat belt indicator
20		Power window lock switch		Security indicator
21		Driver key unlock switch		Safety power window
22		Defogger switch		Ground 1
23		Parking brake switch		
24		Head lamp switch		

PIN NO	CONNECTOR A	CONNECTOR B	CONNECTOR C	CONNECTOR D
25		Auto light switch		
26		Sunlight switch		

BCM INPUT/OUTPUT SPECIFICATION

CONNECTOR A

PIN NO.	PIN NAME	Input acquisition threshold voltage (Operating Voltage 9V to 16V at normal temperature / Output type)	
A01	BATTERY VOLTAGE	9V ~ 16V	
A02	-	-	
A03	GROUND 1	GND	
A04	ROOM LAMP	Low side / FET	
A05	ALT "L"	Analog input	
A06	IGN1 SW	ON	6V above
		OFF	2V below
A07	ARM BUZZER	10V above	
A08	AV TAIL OUTPUT	1V below	
A09	HEAD LAMP HIGH SW	ON	6V above
		OFF	2V below
A10	ACC (L_MIST)	ON	6V above
		OFF	2V below
A11	KEY IN SW	ON	6V above
		OFF	2V below
A12	IGN2 SW	ON	6V above
		OFF	2V below
A13	-	-	
A14	3KM TO IMS	Low side / FET	

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -93

CONNECTOR B

PIN NO.	PIN NAME	Input acquisition threshold voltage (Operating Voltage 9V to 16V at normal temperature / Output type)	
B01	TAIL SW	ON	6V above
		OFF	2V below
B02	TAILGATE KEY LOCK SW	ON	6V above
		OFF	2V below
B03	DRIVER DOOR SW	ON	6V above
		OFF	2V below
B04	HOOD SW	ON	6V above
		OFF	2V below
B05	TAILGATE KEY UNLOCK SW	ON	6V above
		OFF	2V below
B06	DRIVER ACTUATOR UNLOCK SW	ON	6V above
		OFF	2V below
B07	POWER WINDOW UNLOCK SW	ON	6V above
		OFF	2V below
B08	DRIVER KEY LOCK SW	ON	6V above
		OFF	2V below
B09	ASSISTANT KEY UNLOCK SW	ON	6V above
		OFF	2V below
B10	CRASH UNLOCK	ON	6V above
		OFF	2V below
B11	OVERSPEED INPUT	ON	6V above
		OFF	2V below
B12	SUNLIGHT SENSOR	Analog input	
B13	SUNLIGHT SENSOR POWER	5V output, Analog input	
B14	SEAT BELT SW	ON	6V above
		OFF	2V below
B15	4DOOR SW	ON	6V above
		OFF	2V below
B16	ASSISTANT DOOR SW	ON	6V above
		OFF	2V below
B17	TAILGATE SW	ON	6V above
		OFF	2V below
B18	REAR ACTURATOR UNLOCK SW	ON	6V above
		OFF	2V below
B19	ASSISTANT ACTUATOR UNLOCK SW	ON	6V above
		OFF	2V below

PIN NO.	PIN NAME	Input acquisition threshold voltage (Operating Voltage 9V to 16V at normal temperature / Output type)	
B20	POWER WINDOW LOCK SW	ON	6V above
		OFF	2V below
B21	DRIVER KEY UNLOCK SW	ON	6V above
		OFF	2V below
B22	DEFOGGER SW	ON	6V above
		OFF	2V below
B23	PARK BRAKE SW	ON	6V above
		OFF	2V below
B24	HEAD LAMP SW	ON	6V above
		OFF	2V below
B25	AUTO LIGHT SW	ON	6V above
		OFF	2V below
B26	SUNLIGHT SENSOR GROUND	GND	

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -95

CONNECTOR C

PIN NO.	PIN NAME	Input acquisition threshold voltage (Operating Voltage 9V to 16V at normal temperature / Output type)	
C01	FRONT FOG SW	ON	6V above
		OFF	2V below
C02	INT SW	ON	6V above
		OFF	2V below
C03	-	-	
C04	-	-	
C05	-	-	
C06	VEHICLE SPEED	Frequency Input	
C07	DIAGNOSIS LINE	Communication Line	
C08	CODE SAVE	ON	6V above
		OFF	2V below
C09	REAR FOG SW	ON	6V above
		OFF	2V below
C10	WASHER SW	ON	6V above
		OFF	2V below
C11	DRL OPTION LINE	ON	6V above
		OFF	2V below
C12	-	-	
C13	INT VOLUME	Analog input	
C14	-	-	
C15	-	-	
C16	-	-	

CONNECTOR D

PIN NO.	PIN NAME	Input acquisition threshold voltage (Operating Voltage 9V to 16V at normal temperature / Output type)
D01	DEFOGGER RELAY	Low side / FET
D02	UNLOCK RELAY	Low side / FET
D03	LOCK RELAY	Low side / FET
D04	DRL RELAY	Low side / FET
D05	HEAD LAMP LOW RELAY	Low side / FET
D06	WIPER RELAY	Low side / FET
D07	HAZARD RELAY	Low side / FET
D08	-	-
D09	HEAD LAMP HIGH INDICATOR	Low side / TR
D10	KEY ILLUMINATION LAMP	High side / TR
D11	-	-
D12	BURGLAR ALARM RELAY	Low side / FET
D13	DRIVER UNLOCK RELAY	Low side / FET
D14	TAIL RELAY	Low side / FET
D15	DRL CANADA RELAY	Low side / FET
D16	REAR FOG RELAY	Low side / FET
D17	HORN RELAY	Low side / FET
D18	POWER WINDOW RELAY	Low side / FET
D19	SEATBELT INDICATOR	Low side / TR
D20	SECURITY INDICATOR	Low side / TR
D21	SAFETY POWER WINDOW	Low side / FET
D22	GROUND1	GND

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -97

BCM CURRENT DATA

The body control module can diagnose with the diagnosis tool more quickly.

The BCM communicates with the diagnosis tool and then reads the input/output value and drives the actuator.

INPUT/OUTPUT VALUE

SECTION	BCM DISPLAY	ABBREVIATION	UNIT	REMARKS
POWER	IGN1	IG1	OFF/ON	INPUT
	IGN2	IG2	OFF/ON	INPUT
	ALT L	ALT VOLT	OFF/ON	INPUT
	KEY IN SW	KEY IN	OUT/IN	INPUT
	STARTER INHIBIT RELAY(+RK)	INHIBIT	ENABLE/STOP	OUTPUT
	POWER WINDOW RELAY	P/WDW RLY	OFF/ON	OUTPUT
	AUTO LIGHT POWER	LIGHT PWR	OFF/ON	
LAMP	TAIL LAMP SW	TAIL SW	OFF/ON	INPUT
	AUTO LIGHT SW(-DRL)	LIGHT SW	OFF/ON	INPUT
	HEAD LAMP SW	HEAD/L SW	OFF/ON	INPUT
	FRONT FOG SW	FF FOG SW	OFF/ON	INPUT
	H/LAMP HIGH SW	H/LAMP HI	OFF/ON	INPUT
	DRL OPTION LINE SW	DRL	NONE/DRL	INPUT
	TAIL LAMP RELAY	TAIL RLY	OFF/ON	OUTPUT
	HEAD LAMP RELAY	H/L RLY	OFF/ON	OUTPUT
	HAZARD LAMP RELAY(+RK)	HAZARD RL	OFF/ON	OUTPUT
	DRIVER SEAT BELT IND.	D S/BELT	OFF/ON	OUTPUT
	ROOM LAMP	ROOM LAMP	OFF/ON	OUTPUT
	IGN KEY HOLE ILL.	KEY ILL.	OFF/ON	OUTPUT
	SECURITY INDICATOR	S/IND.	OFF/ON	OUTPUT
	DRL RELAY	DRL RLY	OFF/ON	OUTPUT
ENTER ANCE	H/LAMP HIGH RLY	H/L RLY	OFF/ON	OUTPUT
	H/LAMP HIGH IND.	H/L IND.	OFF/ON	OUTPUT
	DRIVER DOOR OPEN SW	D/DOOR SW	CLOSED/OPEN	INPUT
	ASSIST DOOR OPEN SW	A/DOOR SW	CLOSED/OPEN	INPUT
	4 DOOR SWITCH	4DOOR SW	CLOSED/OPEN	INPUT
	TAIL GATE SW	TAIL	CLOSED/OPEN	INPUT
	HOOD SWITCH(+RK)	HOOD SW	CLOSED/OPEN	INPUT

SECTION	BCM DISPLAY	ABBREVIATION	UNIT	REMARKS
LOCK / UNLOCK	DR.Door ACT.POSI.SW	D/DR ACT	UNLOCK/LOCK	INPUT
	AS.Door ACT.POSI.SW	A/DR ACT	UNLOCK/LOCK	INPUT
	RH,RR,T/GATE ACT POSI.SW	ACT SW	UNLOCK/LOCK	INPUT
	DR.Door KEY LOCK SW	DR KEY SW	OFF/ON	INPUT
	DR.Door KEY UNLOCK SW	D/DR KEY	OFF/ON	INPUT
	AS.Door KEY UNLOCK SW	A/DR KEY	OFF/ON	INPUT
	T/GATE KEY UNLOCK SW	TRUNK SW	OFF/ON	INPUT
	CTRL DOOR LOCK SW	CTRL D/LO	OFF/ON	INPUT
	CTRL DOOR UNLOCK SW	CTRL D/UN	OFF/ON	INPUT
	CRASH UNLOCK SIGNAL	CRASH SIG	OFF/ON	INPUT
	DOOR LOCK RELAY	DR L/RLY	OFF/ON	OUTPUT
	DOOR UNLOCK RELAY	DR U/RLY	OFF/ON	OUTPUT
WIPER DEFO GER	T/GATE KEY LOCK SW	TRUNK SW	OFF/ON	OUTPUT
	DEAD LOCK RELAY		OFF/ON	OUTPUT
	WASHER SWITCH	WASHER SW	OFF/ON	INPUT
	INT.WIPER SWITCH	INT SW	OFF/ON	INPUT
	REAR DEFOGGER SW	RR DEF SW	OFF/ON	INPUT
	H/LAMP WASHER SW	H/WASHER	OFF/ON	INPUT
	WIPER RELAY	WIPER RLY	OFF/ON	OUTPUT
	REAR DEFOGGER RELAY	RR DEF RLY	OFF/ON	OUTPUT
WARNING	H/LAMP WASHER RLY	H/L RLY	OFF/ON	OUTPUT
	MIST SW	MIST SW	OFF/ON	INPUT
	OVER SPEED INPUT	O/SPEED	OFF/ON	INPUT
	DRIVER SEAT BELT SW	D S/B SW	UNBUCKLED /BUCKLED	INPUT
	P/BRAKE SW	P/BRAKE	UNPARK/ PARK	INPUT
ANALOG INPUT SIGNAL	BUGLAR HORN RELAY	BUR. RLY	OFF/ON	OUTPUT
	CHIME BELL	CHIM. BELL	OFF/ON	OUTPUT
	INT. VOLUME(-RAIN)	INT. VOL	V	INPUT
ETC	AUTO LIGHT SNSR	A/LIGHT	V	INPUT
	SPEED SIGNAL	VSS	Km/h	INPUT
ETC	SAFETY P/W ECU	P/W ECU	OFF/ON	INPUT

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)

BE -99

BCM ACTUATOR OPERATION

SCAN tool can operates all actuators controlled by BCM by force.

NO.	BCM DISPLAY
1	Tail lamp
2	Head lamp low
3	Head lamp high
4	Head lamp high indicator
5	Front fog lamp
6	Front fog lamp indicator
7	Rear fog lamp
8	Day Running light
9	Low speed wiping relay
10	High speed wiping relay
11	Defroster relay
12	Trunk release
13	B/A Horn
14	Room Lamp
15	Hazard Lamp + Flasher Buzzer Output
16	Left turn signal + Flasher Buzzer Output
17	Right turn signal + Flasher Buzzer Output
18	Buzzer
19	Key illumination
20	Seat Belt Indicator(Driver side and Assist side)
21	Head Lamp Washer
22	Start Inhibition output
23	External Buzzer output
24	Security Led output
25	Rear RH Power window Up
26	Rear RH Power Window Down
27	Rear LH Power window Up
28	Rear LH Power Window Down
29	Foot lamp output
30	AV TAIL output

BCM DIAGNOSIS WITH SCAN TOOL

1. It will be able to diagnose defects of BCM with scan tool quickly. Scan tool can operates actuator forcefully, input/output value monitoring and self diagnosis.
2. Select model and menu.

1. HYUNDAI VEHICLE DIAGNOSIS ▼
MODEL : SANTAFE 06-
01. ENGINE (GASOLINE)
02. ENGINE (DIESEL)
03. AUTOMATIC TRANSAXLE
04. ABS/ESP
05. SRS-AIRBAG
06. ELEC. POWER STEERING
07. FULL AUTO AIR/CON.
08. BODY CONTROL MODULE

SCMBE6385L

3. Select "Current data", if you will check current data of BCM. It provides power supply status, multi function status, lamp status, door status, lock system status, wiper, auto light status and so on.

1. HYUNDAI VEHICLE DIAGNOSIS
MODEL : SANTAFE 06-
SYSTEM : BODY CONTROL MODULE
01. DIAGNOSTIC TROUBLE CODES
02. CURRENT DATA
03. FLIGHT RECORD
04. ACTUATION TEST
05. SIMU-SCAN
06. DATA SETUP(UNIT CONV.)

SCMBE6356L

1.11 CURRENT DATA		01/13
WASHER SW	OFF	▲
WIPER INT SW	OFF	■
DEFROSTER SW	OFF	
HEAD LAMP WASH SW	OFF	
DEFROSTER REPLAY	OFF	
HEAD LAMP WASH RLY	OFF	
MIST SW	OFF	▼
FIX	SCRN	FULL
PART	GRPH	HELP

SCMBE6358L

4. If you will check BCM data operation forcefully, select "Actuation test".

1. HYUNDAI VEHICLE DIAGNOSIS	
MODEL	: SANTAFE 06-
SYSTEM	: BODY CONTROL MODULE
01. DIAGNOSTIC TROUBLE CODES	
02. CURRENT DATA	
03. FLIGHT RECORD	
04. ACTUATION TEST	
05. SIMU-SCAN	
06. DATA SETUP (UNIT CONV.)	

SCMBE6218L

1.3 ACTUATION TEST		09/21
TAIL LAMP RELAY/DRL UNIT		
DURATION	1 SECONDS	
METHOD	ACTIVATION	
CONDITION	ENGINE : IDLE TRANSAXLE RANGE : P	
PRESS [STRT], IF YOU ARE READY !		
SELECT TEST ITEM USING UP/DOWN KEY		
STRT		

SCMBE6219L

5. You can turn ON/OFF as below option function with the user option program.

- 1) LOCK / UNLOCK confirming alarm: Alarm sound ON/OFF control when you LOCK/UNLOCK doors with transmitter.
- 2) Mechanical LOCKING system: Arm/Disarm ON/OFF when you lock the door with the mechanical key.
- 3) AUTO DOOR LOCK/UNLOCK system ON/OFF.
 - Vehicle speed gearing AUTO DOOR LOCK (more than 20km/h)
 - AUTO DOOR LOCK non application
 - Shift lever gearing AUTO DOOR LOCK
 - Driver seat AUTO DOOR LOCK
 - AUTO DOOR UNLOCK non application
 - All doors UNLOCK in the case of driver door UNLOCK
 - All doors UNLOCK in the case of IGN key separation.
- 4) Riding & Getting off gearing
 - Seat installation state ON/OFF
 - Seat riding & getting off gearing ON/OFF
 - Column installation state ON/OFF
 - Column riding & getting off gearing ON/OFF

ETACS (ELECTRONIC TIME AND ALARM CONTROL SYSTEM)


BE -101

REPLACEMENT


E59EEA1A

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad lower panel (A). Avoid damaging retaining clip. (Refer to the Body group - Crash pad)


[LHD]

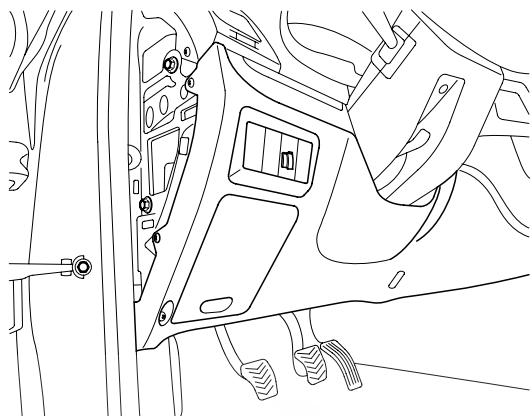

[RHD]

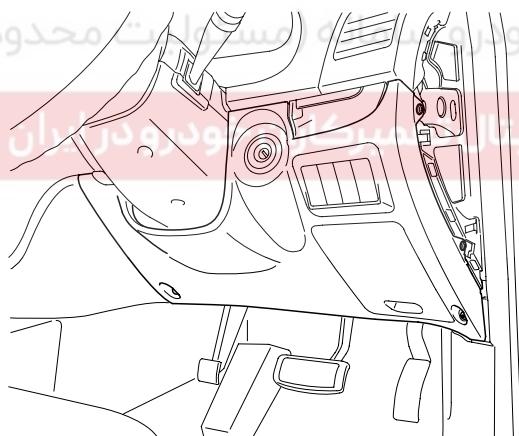


3. Remove the body control module (A) and antenna cable after loosening 3 bolts and disconnecting connector.

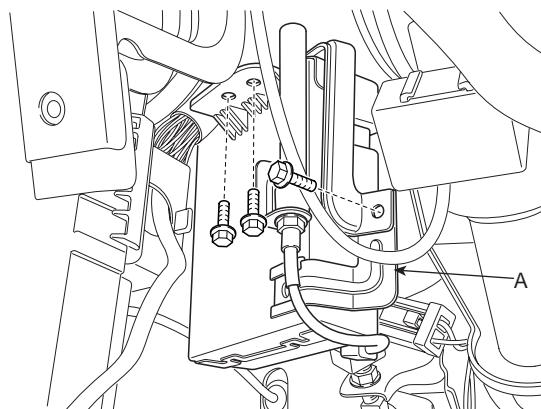

SCMBE6153D

4. Installation is the reverse of removal.

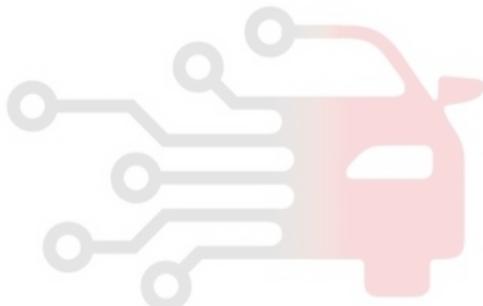

SCMBE6154L


SCMBE6154R

FUEL FILLER DOOR OPENER

COMPONENT LOCATION

E6EB50CF

The parts with asterisk(*) :
This illustration shows the LHD type.
RHD type is symmetrical.

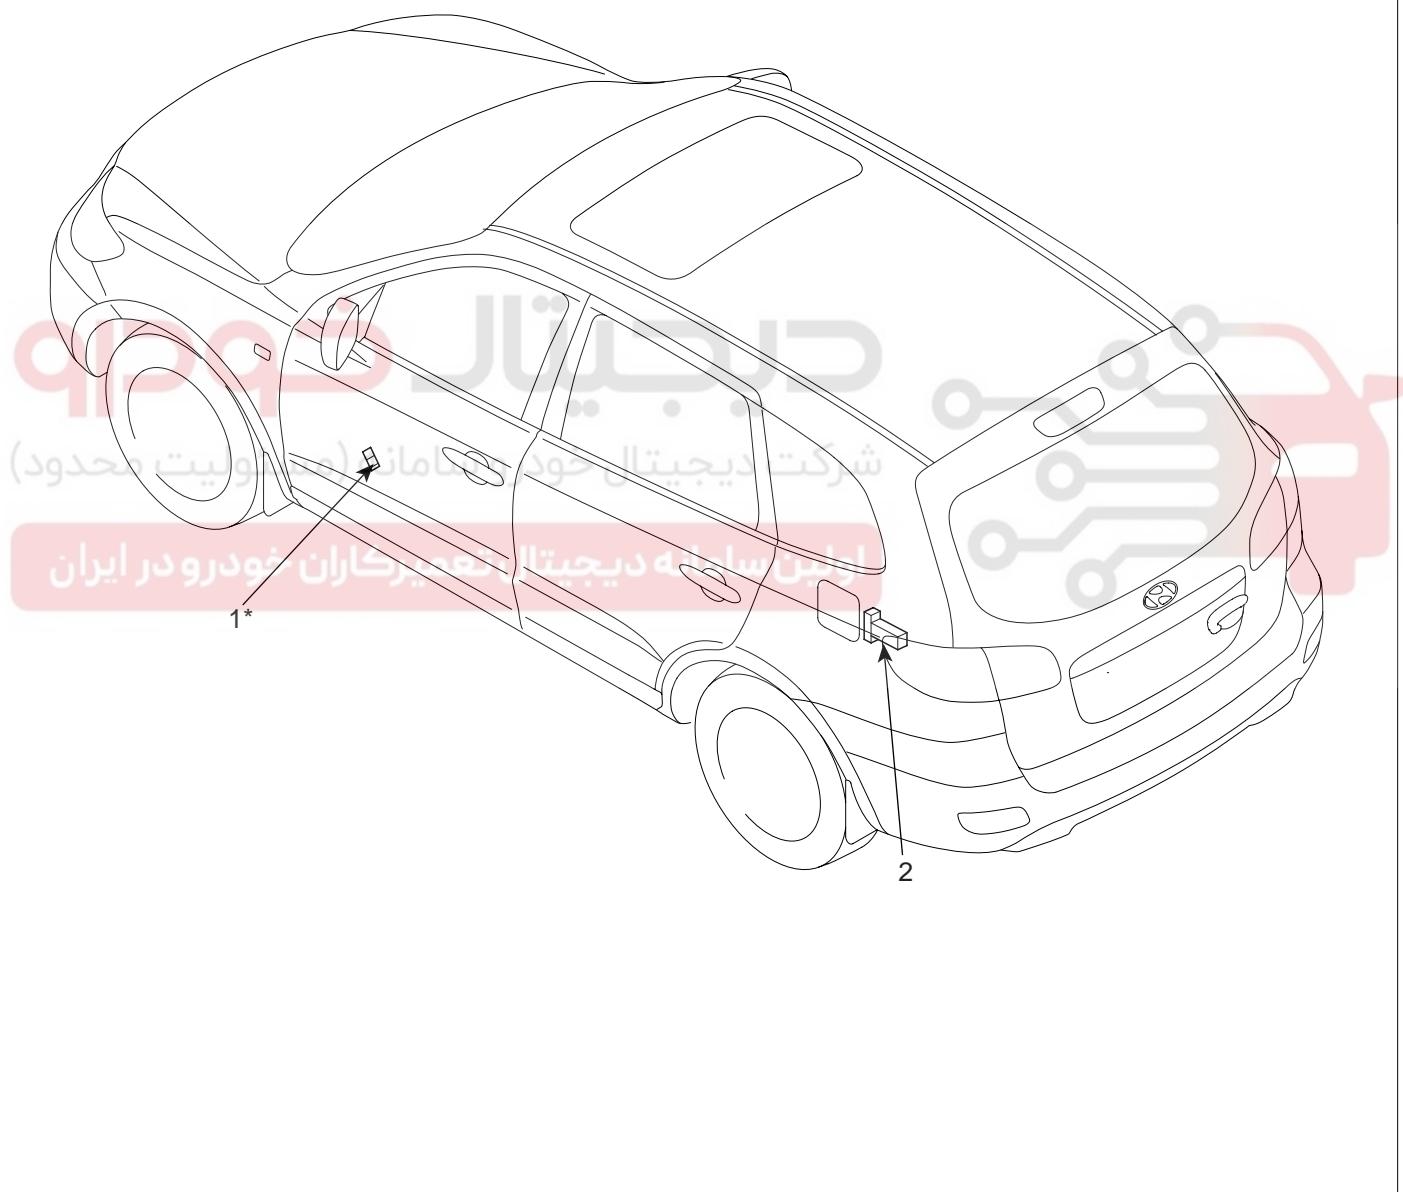

1. Fuel filler door open switch

2. Fuel filler door release actuator


SCMBE6180L

FUEL FILLER DOOR OPENER

BE -103

FUEL FILLER DOOR RELEASE
ACTUATORINSPECTION E2F1D93F

1. Remove the rear seat. (Refer to the Body group - Rear seat).
2. Remove the luggage side trim. (Refer to the internal trim)
3. Open the fuel filter door and disconnect the wiring connector after loosening 2 nuts.
4. Check for continuity between terminal No. 1 and No. 2. If there is no continuity replace the fuel filler door release actuator (A).

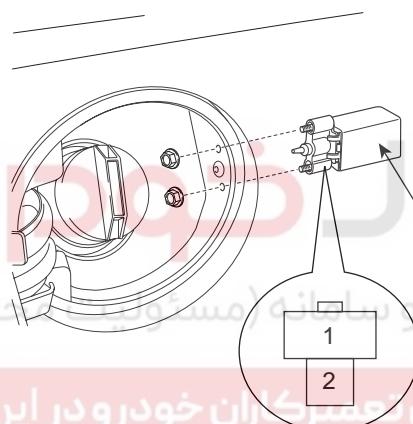

ATKF181A



شرکت دیجیتال خودرو سازانه (مسنونه محدود)

اولین سامانه دیجیتال خودرو ایران

FUEL FILLER DOOR OPEN SWITCH

INSPECTION

EE6CC63B

1. Remove the front door trim panel. (Refer to the Body group - front door)
2. Disconnect the switch connector (4P) from wiring.
3. Check the switch for continuity between the No. 1 and No. 2 terminals.
4. If the continuity is not as specified, replace the switch.




FUSES AND RELAYS

COMPONENT LOCATION

EB826186

[Engine room relay box]

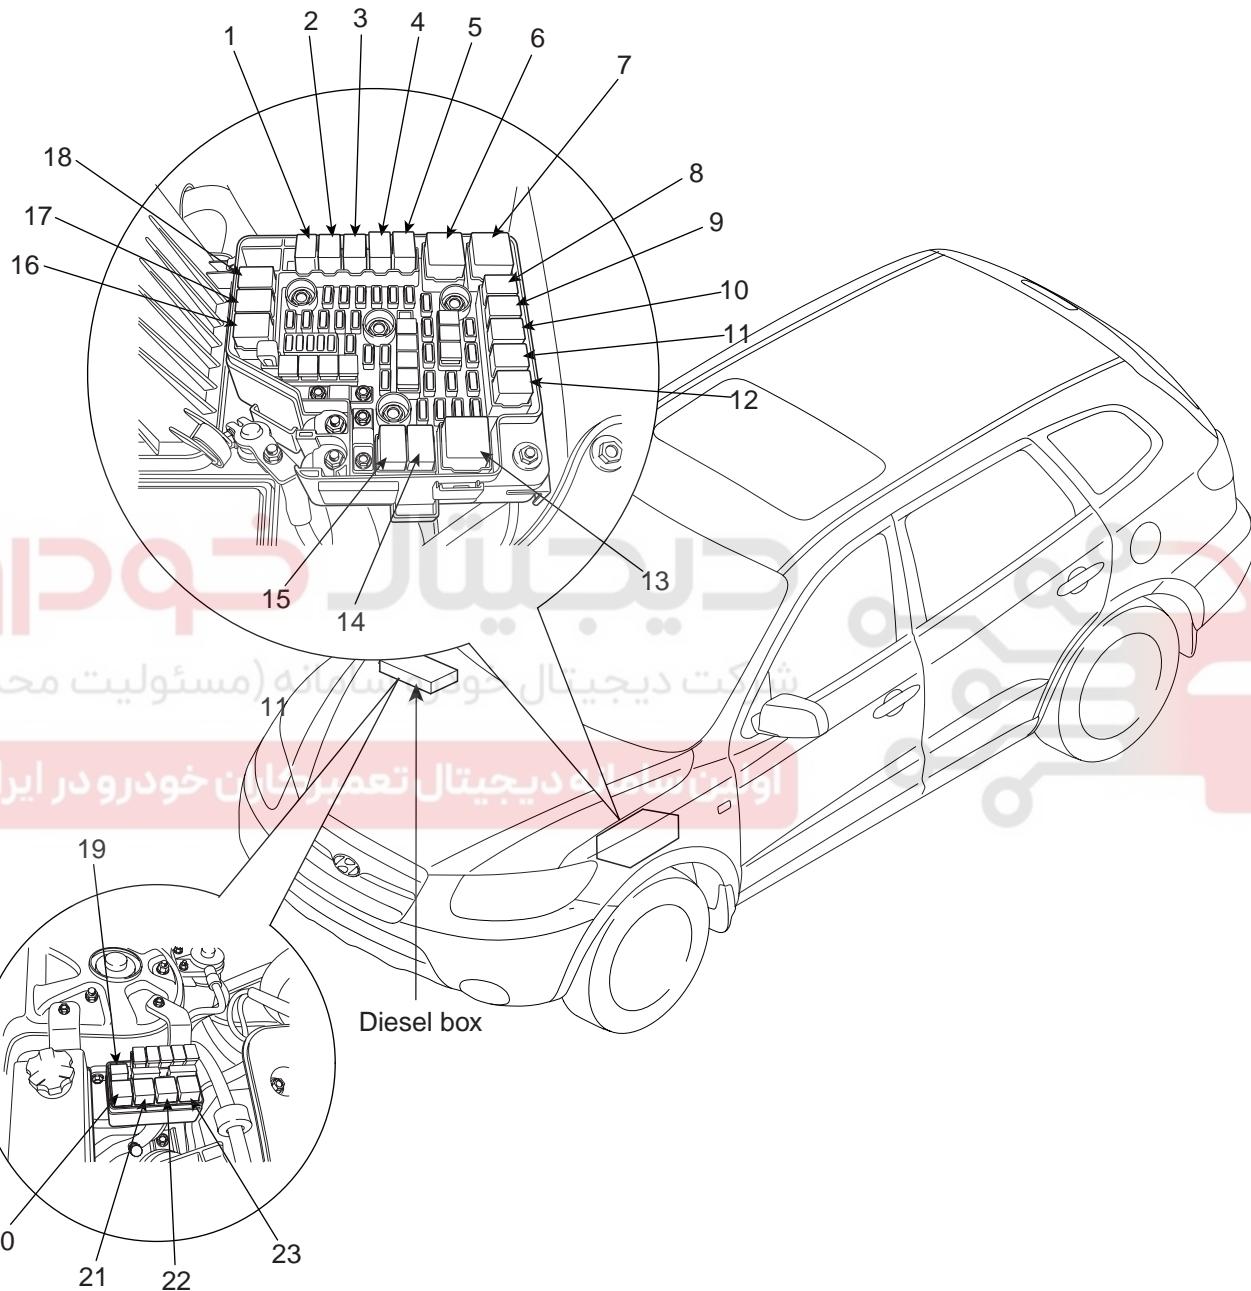

1. A/T control relay
2. Cooling pan relay
3. Front fog lamp relay
4. A/C relay
5. Head lamp relay (High)
6. Main relay
7. Start relay
8. Condenser pan 2 relay

9. Condenser pan 1 relay
10. Tail lamp relay
11. Head lamp relay (Low-left side)
12. Head lamp relay (Low-right side)
13. Rear defogger relay
14. Windshield relay
15. Horn relay
16. Wiper relay


17. Rain sensor relay
18. Fuel pump relay
19. Fuel filter heater relay
20. PTC heater relay #2
21. Glow relay
22. PTC heater relay #1
23. PTC heater relay #3

[Passenger compartment relay]

The parts with asterisk(*) :
 This illustration shows the LHD type.
 RHD type is symmetrical.

Passenger compartment junction box*

ICM relay box*

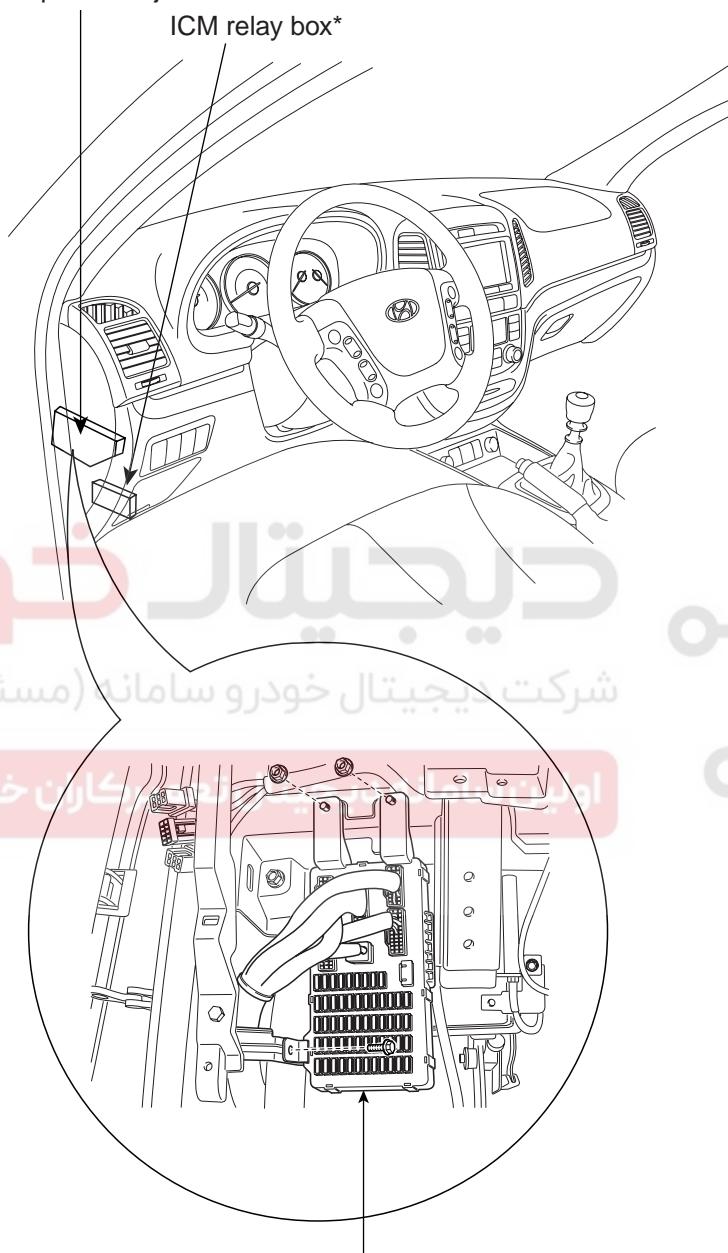


Door unlock relay, Door lock relay, Hazard relay, Buglar alarm horn relay,
 Blow relay, Power window relay; Buglar alarm start relay (Built-in-junction box)

SCMBE6191L

FUSES AND RELAYS

RELAY BOX (ENGINE COMPARTMENT)

COMPONENT LOCATION

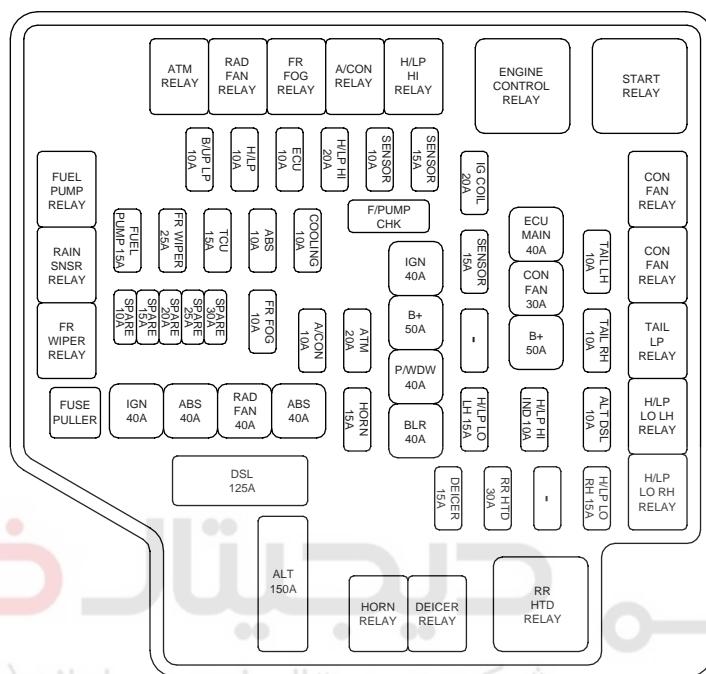


CIRCUIT

FUSE	(A)	Circuit Protected
DSL	125A	FUSIBLE LINK BOX
ALT	150A	GENERATOR
A/CON	10A	A/CON RELAY
RR HTD	30A	RR HTD RELAY
BLR	40A	I/P JUNCTION BOX
B+ #2	50A	I/P JUNCTION BOX
P/WDW	40A	I/P JUNCTION BOX
ABS #1	40A	ABS CONTROL MODULE, ESP CONTROL MODULE, MULTIPURPOSE CHECK CONNECTOR
ABS #2	40A	ABS CONTROL MODULE, ESP CONTROL MODULE, MULTIPURPOSE CHECK CONNECTOR
DEICER	15A	DEICER RELAY
ECU MAIN	40A	ENGINE CONTROL RELAY
HORN	15A	HORN RELAY
IG COIL	20A	IGNITION COIL #1~#6(GSL), CONDENSER(GSL), ECM(DSL)
SENSOR #3	15A	ECM(DSL), PURGE CONTROL SOLENOID VALVE(GSL), VARIABLE INTAKE MANIFOLD VALVE(GSL), PCM(GSL), OIL CONTROL VALVE(GSL)
RAD FAN	40A	RAD FAN RELAY
CON FAN	30A	CON FAN #1 RELAY, CON FAN #2 RELAY
SENSOR #2	15A	MASS AIR FLOW SENSOR(GSL), OXYGEN SENSOR #1~#4(GSL), EGR ACTUATOR(DSL), BOOST PRESSURE ACTUATOR(DSL), CAM SHAFT POSITION SENSOR(DSL), FUSIBLE LINK BOX(DSL), THROTTLE FLAP ACTUATOR(DSL), PCM(GSL)
SENSOR #1	10A	IMMOBILIZER MODULE, INJECTOR #1~#6(GSL), PCM(GSL) STOP LAMP SWITCH(DSL), A/CON RELAY, FUEL PUMP RELAY
FUEL PUMP	15A	FUEL PUMP RELAY
H/LP LO LH	15A	H/LP LO LH RELAY
H/LP LO RH	15A	H/LP LO RH RELAY

FUSE	(A)	Circuit Protected
H/LP	10A	I/P JUNCTION BOX
FR WIPER	25A	FR WIPER RELAY, RAIN SNSR RELAY, FRONT WIPER MOTOR, MULTIFUNCTION SWITCH
H/LP HI	20A	H/LP HI RELAY
H/LP HI IND	10A	HEAD LAMP, INSTRUMENT CLUSTER
IGN #1	40A	IGNITION SWITCH
IGN #2	40A	IGNITION SWITCH, START RELAY
B+ #1	50A	I/P JUNCTION BOX
ATM	20A	ATM RELAY(GSL), 4WD ECM, ATM CONTROL RELAY(DSL)
TCU	15A	PCM(GSL), TCM(DSL)
ALT DSL	10A	GENERATOR
ECU	10A	VEHICLE SPEED SENSOR, MASS AIR FLOW SENSOR(DSL), ECM(DSL), SEMI ACTIVE CONTROL MODULE(GSL), PCM(GSL)
COOLING	10A	CON FAN #1 RELAY, CON FAN #2 RELAY
B/UP UP	10A	INPUT SPEED SENSOR, OUTPUT SPEED SENSOR, TCM(DSL), TRANSAXLE RANGE SWITCH, BACK-UP LAMP SWITCH
ABS	10A	ABS CONTROL MODULE, ESP CONTROL MODULE, YAW RATE SENSOR, 4WD ECM, STOP LAMP SWITCH(GSL), FUSIBLE LINK BOX(DSL), FUEL FILTER WARNING SWITCH(DSL), CLUTCH SWITCH(GSL), MULTIPURPOSE CHECK CONNECTOR
TAIL LH	10A	REAR COMBINATION LAMP LH, POSITION LAMP LH
TAIL RH	10A	REAR COMBINATION LAMP RH, POSITION LAMP RH, GLOVE BOX LAMP, ICM RELAY BOX
FR FOG	10A	FR FOG RELAY
SPARE	10A	-
SPARE	15A	-
SPARE	20A	-
SPARE	25A	-
SPARE	30A	-

※ USE THE DESIGNATED FUSE ONLY

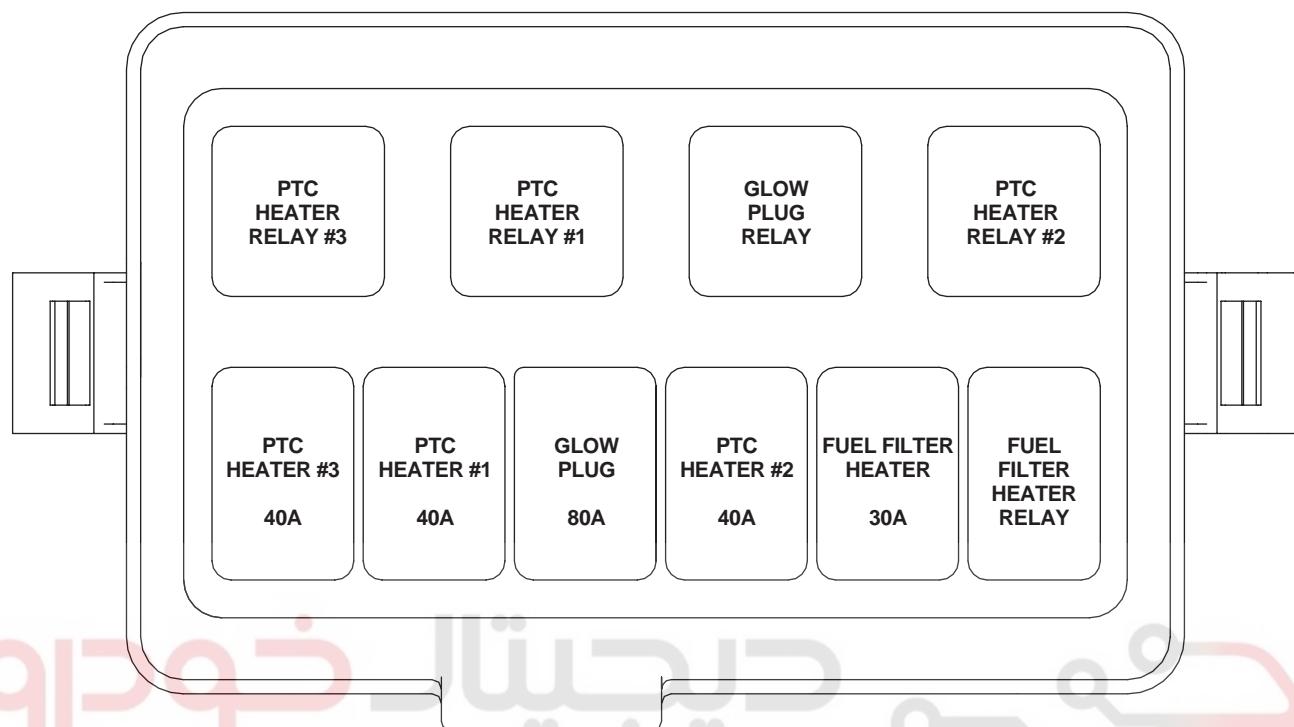

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

※ USE THE DESIGNATED FUSE ONLY

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

SCMBE6193L


FUSES AND RELAYS

BE -109

INSPECTION EE70B5AD**POWER RELAY (TYPE A)**

Check for continuity between the terminals.

1. There should be continuity between the No.30 and No.87 terminals when power and ground are connected to the No.85 and No.86 terminals.
2. There should be no continuity between the No.30 and No.87 terminals when power is disconnected.

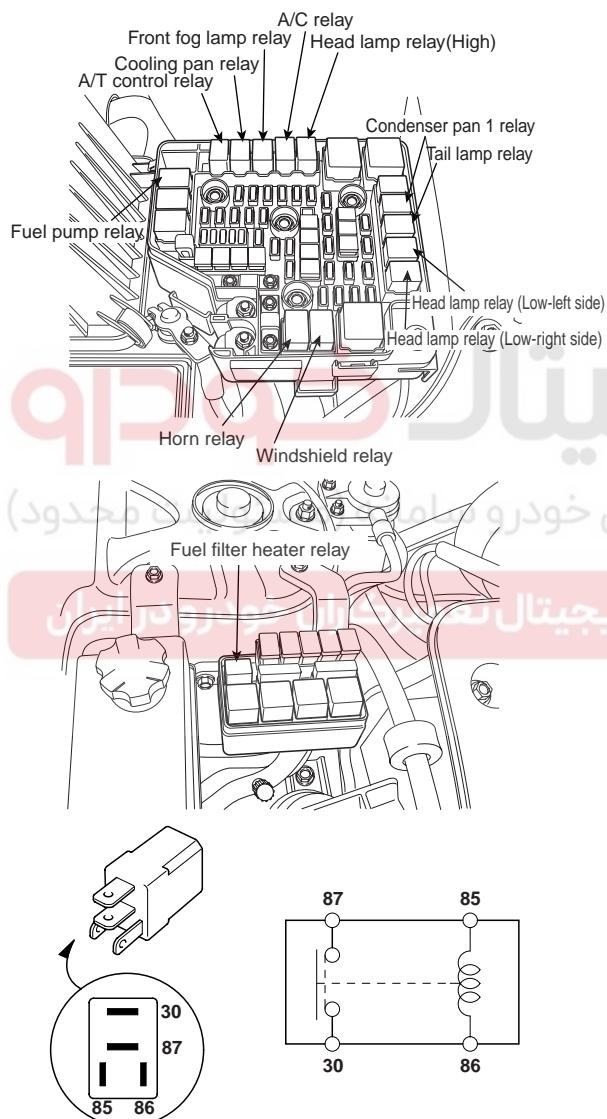

SCMBE6194L


Terminal Power	30	87	85	86
Disconnected			<input type="circle"/>	<input type="circle"/>
Connected	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>

SCMBE6195L

POWER RELAY (TYPE B)

Check for continuity between the terminals.

1. There should be continuity between the No.30 and No.87 terminals when power and ground are connected to the No.85 and No.86 terminals.
2. There should be continuity between the No.30 and No.87 terminals when power is disconnected.

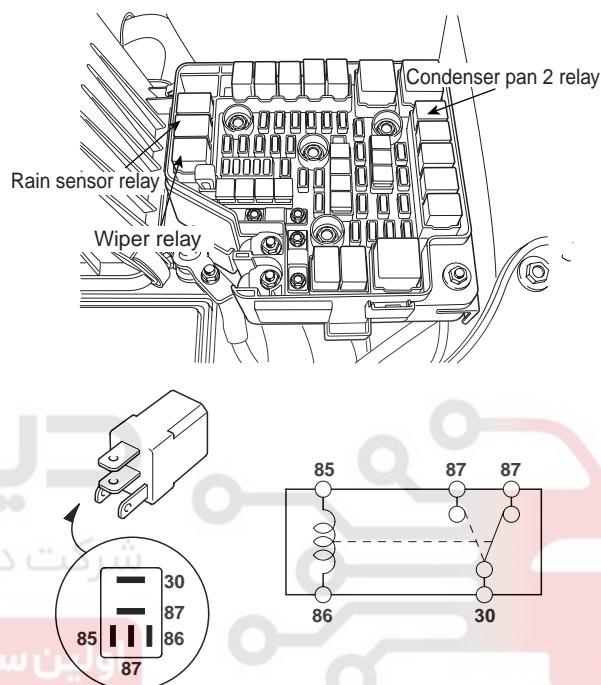

SCMBE6196L





Terminal Power	85	86	30	87	87
Disconnected			<input type="circle"/>	<input type="circle"/>	<input type="circle"/>
Connected	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>	

SCMBE6197L

POWER RELAY (TYPE C)

Check for continuity between the terminals.

1. There should be continuity between the No.30 and No.87 terminals when power and ground are connected to the No.85 and No.86 terminals.
2. There should be no continuity between the No.30 and No.87 terminals when power is disconnected.

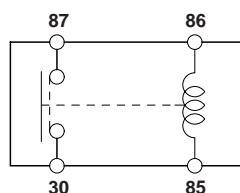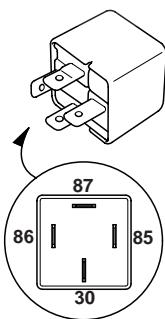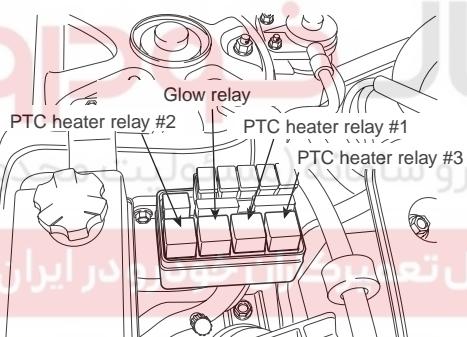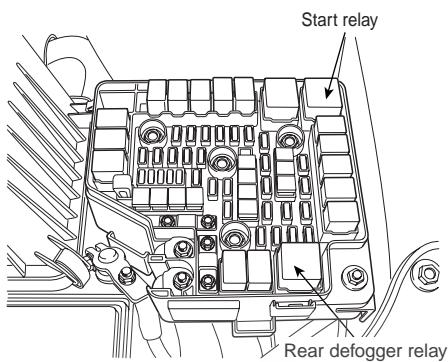

SCMBE6198L



Terminal Power	86	85	87	30
Disconnected	<input type="circle"/>	<input type="circle"/>		
Connected	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>

SCMBE6199L

POWER RELAY (TYPE D)

Check for continuity between the terminals.

1. There should be continuity between the No.30 and No.87 terminals when power and ground are connected to the No.85 and No.86 terminals.
2. There should be continuity between the No.30 and No.87 terminals when power is disconnected.

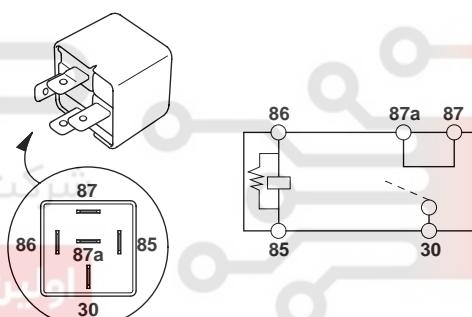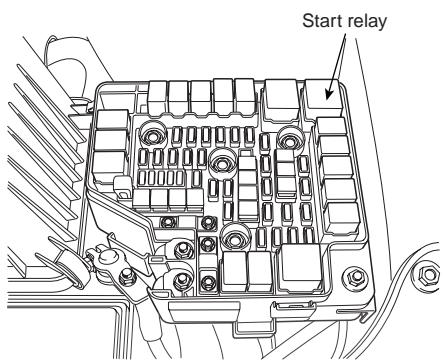

SCMBE6200L

Terminal Power	86	85	87	87a	30
Disconnected	<input type="circle"/>	<input type="circle"/>			
Connected	<input type="circle"/>				

SCMBE6201L

FUSE

1. Be sure there is no play in the fuse holders, and that the fuses are held securely.
2. Are the fuse capacities for each circuit correct?
3. Are there any blown fuses?
If a fuse is to be replaced, be sure to use a new fuse of the same capacity. Always determine why the fuse blew first and completely eliminate the problem before installing a new fuse.


FUSES AND RELAYS

BE -111

RELAY BOX (PASSENGER COMPARTMENT)

COMPONENT LOCATION

EBFFF18D

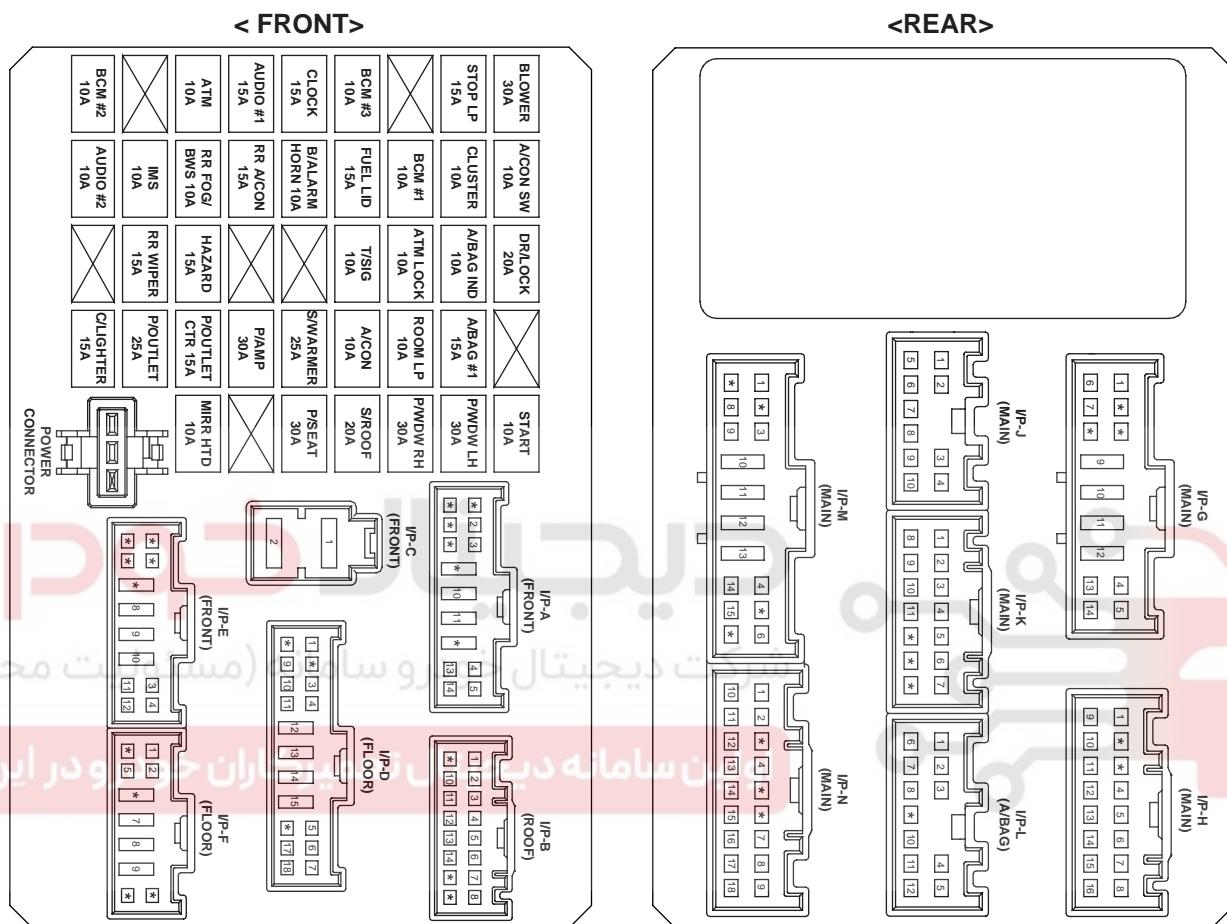

※ USE THE DESIGNATED FUSE ONLY

SCMBE6210L

CIRCUIT

FUSE	(A)	Circuit Protected
C/LIGHTER	15A	CIGARETTE LIGHTER
P/OUTLET	25A	FRONT POWER OUTLET, REAR POWER OUTLET
P/OUTLET CTR	15A	CENTER POWER OUTLET
AUDIO #2	10A	POWER OUTSIDE MIRROR SWITCH, AUDIO, DIGITAL CLOCK, ATM KEY LOCK CONTROL MODULE
RR WIPER	15A	MULTIFUNCTION SWITCH, REAR WIPER CONTROL MODULE, REAR WIPER MOTOR
IMS	10A	RAIN SENSOR
BCM #2	10A	RHEOSTAT, BCM, INSTRUMENT CLUSTER
A/CON	10A	A/C CONTROL MODULE, INCAR & HUMIDITY SENSOR, HIGH BLOWER RELAY, REAR A/CON SWITCH, ICM RELAY BOX, AQS SENSOR, FUSIBLE LINK BOX (DSL), SUNROOF MOTOR, BLOWER RELAY, ELECTRO CHROMIC MIRROR
BLOWER	30A	BLOWER RELAY, BLOWER MOTOR, A/C CONTROL MODULE
A/CON SW	10A	A/C CONTROL MODULE
A/BAG #1	15A	SRS CONTROL MODULE
A/BAG IND	10A	PAB CUT OFF SWITCH, INSTRUMENT CLUSTER
T/SIG	10A	HAZARD SWITCH
ATM LOCK	10A	MULTIFUNCTION SWITCH, STEERING ANGLE SENSOR, ESP SWITCH, ATM KEY LOCK CONTROL MODULE, SEAT WARMER MODULE
BCM #1	10A	OIL LEVEL SENSOR MODULE, BCM
CLUSTER	10A	INSTRUMENT CLUSTER, PRE-EXCITATION RESISTOR, BCM, SEMI ACTIVE ENGINE MOUNTING CONTROL MODULE (GSL), GENERATOR
START	10A	BURGLAR ALARM RELAY
P/AMP	30A	DELPHI AMP, MOBIS AMP
S/WARMER	25A	SEAT WARMER CONTROL MODULE
P/SEAT	30A	POWER SEAT SWITCH
RR A/CON	15A	ICM RELAY BOX
RR FOG/BWS	10A	ICM RELAY BOX
S/ROOF	20A	SUNROOF MOTOR
B/ALARM HORN	10A	BURGLAR ALARM HORN RELAY
MIRR HTD	10A	REAR DEFOGGER SWITCH, POWER OUTSIDE MIRROR MOTOR
DR/LOCK	20A	DOOR LOCK (UN) RELAY, ICM RELAY BOX
STOP LP	15A	STOP LAMP SWITCH
FUEL LID	15A	FUEL LID SWITCH
ATM	10A	KEY SOLENOID, SEMI ACTIVE SOLENOID (GSL), SPORTS MODE SWITCH, INSTRUMENT CLUSTER, LUGGAGE LAMP, MAP LAMP, REAR PERSONAL LAMP,
ROOM LP	10A	ROOM LAMP, FRONT DOOR LAMP, CARGO LAMP, VANITY LAMP SWITCH
BCM #3	10A	IGNITION KEY ILL. & DOOR WARNING SWITCH, BCM, SECURITY INDICATOR
CLOCK	15A	A/C CONTROL MODULE, DATA LINK CONNECTOR, DIGITAL CLOCK
AUDIO #1	15A	DELPHI AUDIO, MOBIS AUDIO
HAZARD	15A	HAZARD SWITCH, HAZARD RELAY
P/WDW LH	30A	POWER WINDOW MAIN SWITCH, REAR POWER WINDOW SWITCH LH
P/WDW RH	30A	POWER WINDOW MAIN SWITCH, REAR POWER WINDOW SWITCH RH

※ USE THE DESIGNATED FUSE ONLY

INSPECTION

ED3ADA2E

FUSE

1. Be sure there is no play in the fuse holders, and that the fuses are held securely.
2. Are the fuse capacities for each circuit correct?
3. Are there any blown fuses?

If a fuse is to be replaced, be sure to use a new fuse of the same capacity. Always determine why the fuse blew first and completely eliminate the problem before installing a new fuse.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




ICM (INTEGRATED CIRCUIT MODULE) RELAY BOX


DESCRIPTION

EDD82CCE


The ICM is united with many kinds of relays and installed below the body control module. relay box (Assist compartment).

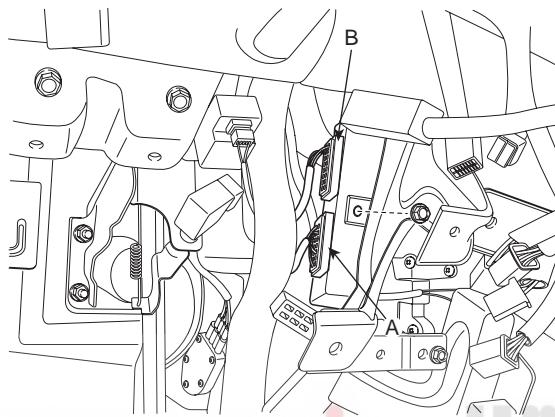

SCMBE6212D



[A]



[B]

SCMBE6213L

INSPECTION

E04C6F4C

REAR AIRCONDITION

Check for continuity between the terminals.

1. There should be continuity between the No.2 and No.3 terminals when power and ground are connected to the No.1 and No.11 in the ICM-B.
2. There should be no continuity between the No.2 and No.3 terminals when power is disconnected.

ADJUST PEDAL

Check for continuity between the terminals.

1. There should be no continuity between the No.12 and No.13 terminals when power and ground are connected to the No.12 and No.15 in the ICM-B.
2. There should be continuity between the No.12 and No.13 terminals when power is disconnected.

DEAD LOCK

Check for continuity between the terminals.

1. There should be continuity between the No.9 and No.10 terminals when power and ground are connected to the No.18 and No.19 in the ICM-B.
2. There should be no continuity between the No.11 and No.10 terminals when power is disconnected.

DRL

Check for continuity between the terminals.

1. There should be continuity between the No.8 and No.9 terminals when power and ground are connected to the No.4 and No.11 terminals in the ICM-A.
2. There should be no continuity between the No.8 and No.9 terminals when power is disconnected.

REAR FOG LAMP

Check for continuity between the terminals.

1. There should be continuity between the No.6 and No.7 terminals when power and ground are connected to the No.3 and No.10 terminals in the ICM-A.
2. There should be no continuity between the No.6 and No.7 terminals when power is disconnected.

INDICATORS AND GAUGES


COMPONENT LOCATION

E09EAE88

The parts with asterisk(*) :

This illustration shows the LHD type.

RHD type is symmetrical.

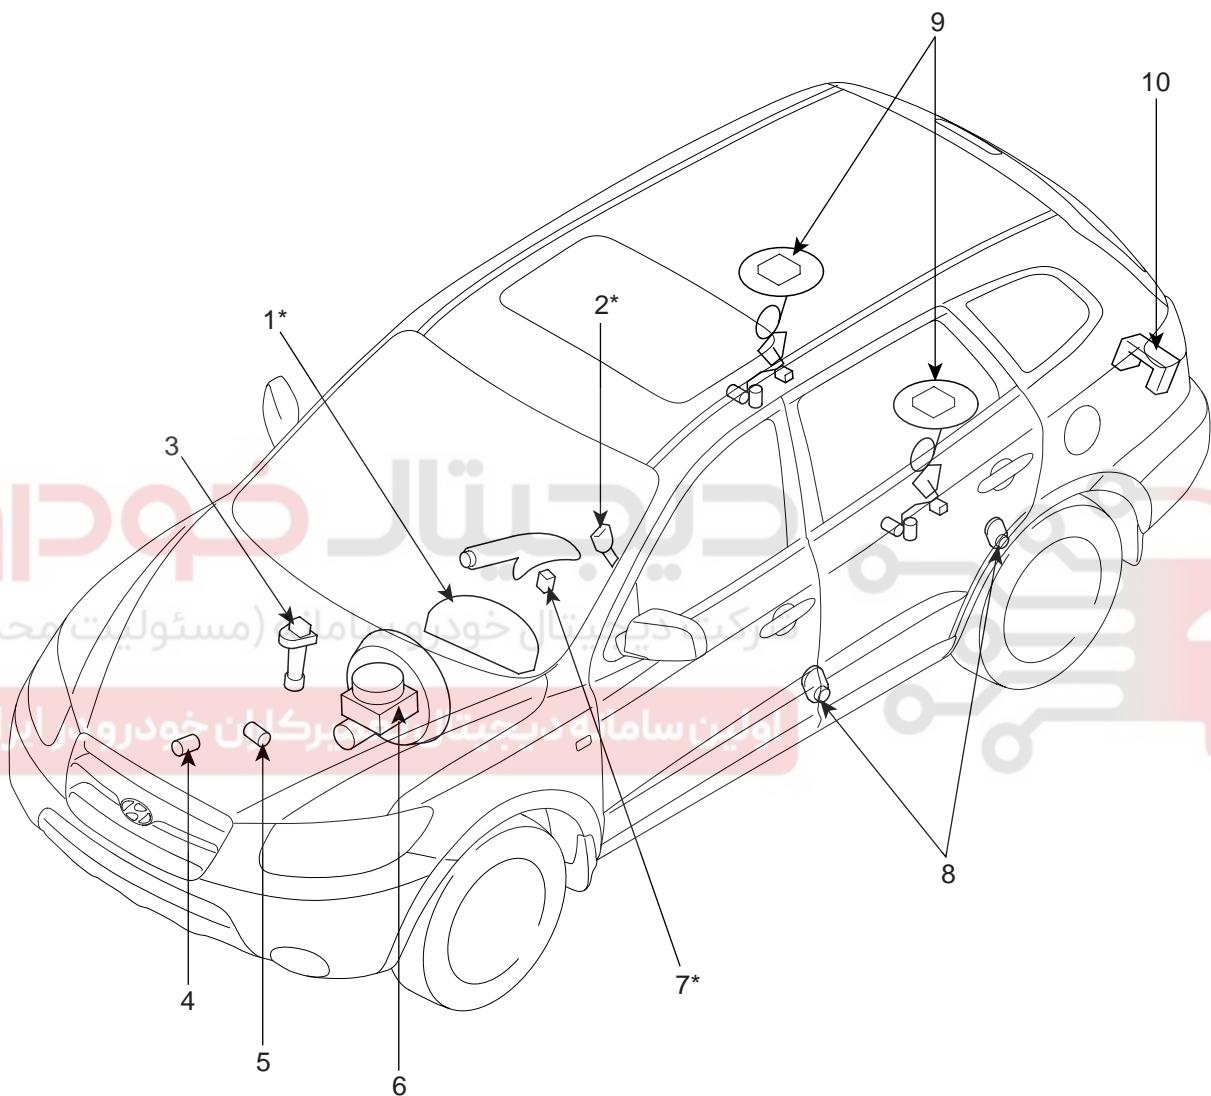

1. Cluster assembly

2. Seat belt switch

3. Vehicle speed sensor

4. Engine coolant temperature sender

5. Oil pressure switch

6. Brake fluid level warning switch

7. Parking brake switch

8. Door switch

9. Fuel gauge sender

10. Tailgate switch

SCMBE6220L

TROUBLESHOOTING

E78F78F1

Symptom	Possible cause	Remedy
Speedometer does not operate	Cluster fuse (10A) blown	Check for short and replace fuse
	Speedometer faulty	Check speedometer
	Vehicle speed sensor faulty	Check vehicle speed sensor
	Wiring or ground faulty	Repair if necessary
Tachometer does not operate	Cluster fuse (10A) blown	Check for short and replace fuse
	Tachometer faulty	Check tachometer
	Wiring or ground faulty	Repair if necessary
Fuel gauge does not operate	Cluster fuse (10A) blown	Check for short and replace fuse
	Fuel gauge faulty	Check gauge
	Fuel sender faulty	Check fuel sender
	Wiring or ground faulty	Repair if necessary
Low fuel warning lamp does not light up	Cluster fuse (10A) blown	Check for short and replace fuse
	Bulb burned out	Replace bulb
	Fuel sender faulty	Check fuel sender
	Wiring or ground faulty	Repair if necessary
Water temperature gauge does not operate	Cluster fuse (10A) blown	Check for short and replace fuse
	Water temperature gauge faulty	Check gauge
	Water temperature sender faulty	Check sender
	Wiring or ground faulty	Repair if necessary
Oil pressure warning lamp does not light up	Cluster fuse (10A) blown	Check for short and replace fuse
	Bulb burned out	Replace bulb
	Oil pressure switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Parking brake warning lamp does not light up	Cluster fuse (10A) blown	Check for short and replace fuse
	Bulb burned out	Replace bulb
	Brake fluid level warning switch faulty	Check switch
	Parking brake switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Open door warning lamp and trunk lid warning lamp do not light up	Memory fuse (15A) blown	Check for short and replace fuse
	Bulb burned out	Replace bulb
	Door switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Seat belt warning lamp does not light up	Cluster fuse (10A) blown	Check for short and replace fuse
	Bulb burned out	Replace bulb
	Seat belt switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary


INDICATORS AND GAUGES

BE -117


INSTRUMENT CLUSTER

COMPONENTS E5E2EEB4



<STANDARD>

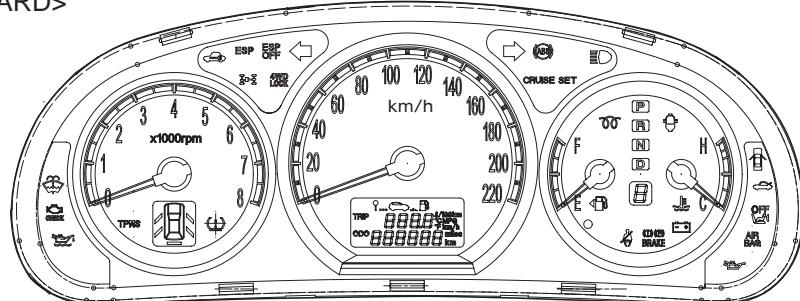


<SUPER VISION>

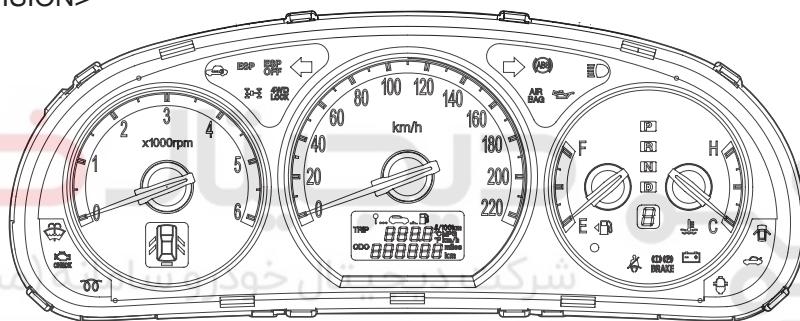


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

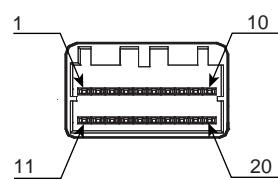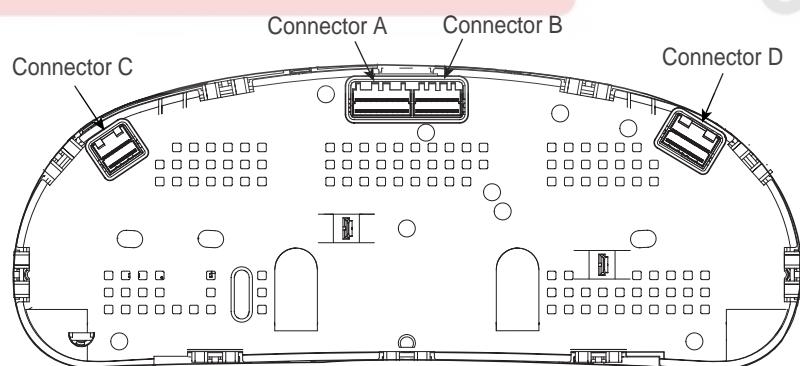


Connector A

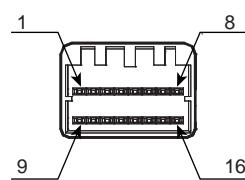

Connector B

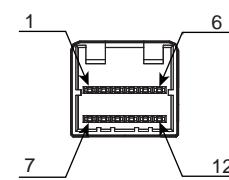


Connector C

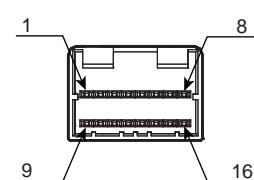

Connector D

SCMBE6221L

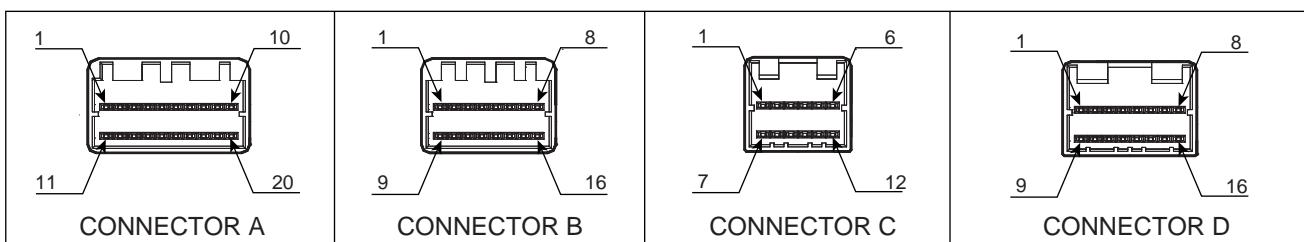

NO	CONNECTOR A	CONNECTOR B	CONNECTOR C	CONNECTOR D
1	Turn signal-right	Washer level	Door	P
2	ABS	Immobilizer	Trunk open	R
3	High beam(-)	ESP	PAB CUT OFF(-)	N
4	High beam(+)	ESP OFF	Air bag off(+)	D
5	-	Fuel GND(MICOM)	Air bag(-)	PWM signal(AT)
6	Fuel sender	Turn signal-left	EBD	-
7	Termperture sender	4WD LOCK	Battery charge	-
8	-	4WD	Brake	-
9	Oil level	Injection signal	seat belt	-
10	CHECK ENGINE	AMBIENT sensor	Oil pressure	-
11	Cruise	Trip computer mode sw	W/SEPERATOR	-
12	SET	Trip reset sw	Glow	Front left door
13	Power GND(-)	IGN2+		Front right door
14	-	GND(signal)		Rear left door
15	Illumination(+)	IGN+		Rear right door
16	Illumination(-)	Battery		-
17	High speed(BCM)			
18	Speed signal			
19	Tachometer signal			
20	-			

INDICATORS AND GAUGES

BE -119

INSPECTION E52DCCC6

SPEEDOMETER


1. Adjust the pressure of the tires to the specified level.
2. Drive the vehicle onto a speedometer tester. Use wheel chocks as appropriate.
3. Check if the speedometer indicator range is within the standard values.

 CAUTION

Do not operate the clutch suddenly or increase/decrease speed rapidly while testing.

 NOTE

Tire wear and tire over or under inflation will increase the indication error.

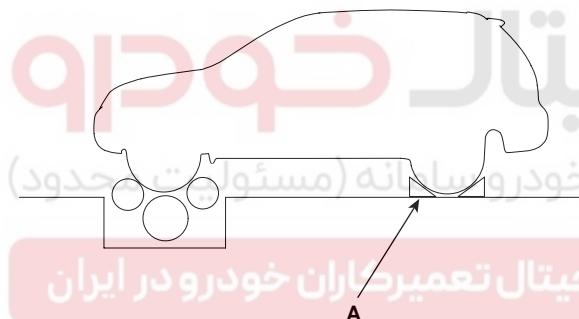

SCMBE6203L

[AUSTRALIA- KM/H]


Velocity (km/h)	20	40	60	80	100
Tolerance (km/h)	+2.9 -0.4	+2.9 -0.4	+4.0 -0.5	+4.4 -0.6	+4.3 -0.7
Velocity (km/h)	120	140	160	180	220
Tolerance (km/h)	+4.2 -0.8	+4.1 -0.9	+4.0 -1.0	+3.9 -1.1	+3.7 -1.3

[MPH]

Velocity (MPH)	10	20	40	60
Tolerance (MPH)	+2.6 +0.1	+2.9 +0.4	+3.7 +0.7	+4.0 +1.0
Velocity (MPH)	80	100	120	140
Tolerance (MPH)	+4.3 +1.3	+4.6 +1.6	+4.9 +1.9	+5.2 +2.2

VEHICLE SPEED SENSOR

1. Connect the positive (+) lead from battery to terminal 2 and negative (-) lead to terminal 1.
2. Connect the positive (+) lead from tester to terminal 3 and the negative (-) lead to terminal 1.
3. Rotate the shaft.
4. Check that there is voltage change from approx. 0V to 11V or more between terminals 3 and 1.
5. The voltage change should be 4 times for every revolution of the speed sensor shaft.
If operation is not as specified, replace the sensor.

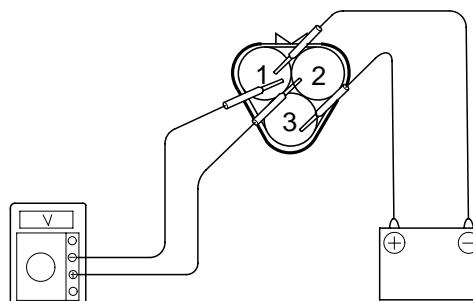

[EXCEPT AUSTRALIA - KM/H]

Velocity (km/h)	20	40	60	80	100
Tolerance (km/h)	+4.6 +0.5	+5.1 +1.1	+6.6 +1.1	+7.1 +2.1	+7.6 +2.6
Velocity (km/h)	120	140	160	180	220
Tolerance (km/h)	+8.1 +3.1	+8.6 +3.6	+9.1 +4.1	+9.6 +4.6	+10.6 +5.5

ETKD330A

TACHOMETER

1. Connect the scan tool to the diagnostic link connector or install a tachometer.
2. With the engine started, compare the readings of the tester with that of the tachometer. Replace the tachometer if the tolerance is exceeded.


 **CAUTION**

- a. **Reversing the connections of the tachometer will damage the transistor and diodes inside.**
- b. **When removing or installing the tachometer, be careful not to drop it or subject it to severe shock.**

Revolution (rpm)	1,000	2,000	3,000	4,000	Re-mark
Tolerance (rpm)	± 100	± 125	± 150	± 150	Gasoline
Tolerance (rpm)	± 100	± 125	± 150	± 150	Diesel
Revolution (rpm)	5,000	6,000	7,000	-	Re-mark
Tolerance (rpm)	± 150	± 180	± 210	-	Gasoline
Tolerance (rpm)	± 150	± 180	-	-	Diesel

FUEL GAUGE


1. Disconnect the fuel sender connector from the fuel sender.
2. Connect a 3.4 wattages, 12V test bulb to terminals 1 and 3 on the wire harness side connector.
3. Turn the ignition switch to the ON, and then check that the bulb lights up and the fuel gauge needle moves to full.

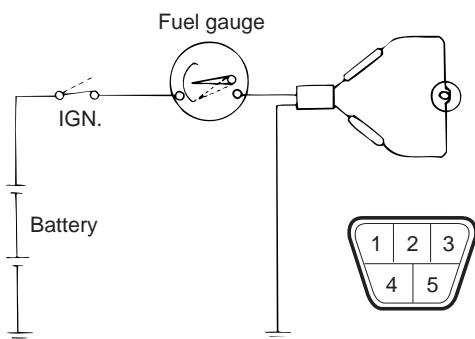

SCMBE6226L

FUEL GAUGE SENDER

1. Using an ohmmeter, measure the resistance between terminals 1 and 3 of sender connector (A) at each float level.

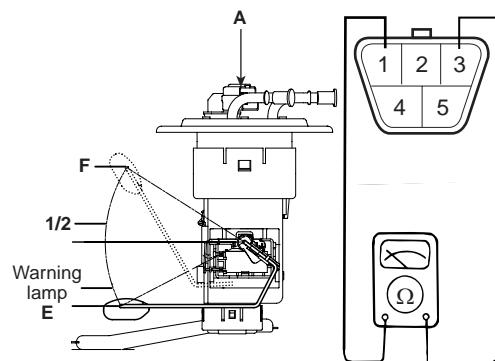

SCMBE6227L

2. Also check that the resistance changes smoothly when the float is moved from "E" to "F".

Position	Resistance()
E	104.8 ± 1
Warning lamp	89.9 ± 1
1/2	13.7 ± 1
Sender (F)	4.2 ± 1

3. If the height resistance is unsatisfied, replace the fuel sender as an assembly.

 **CAUTION**


After completing this test, wipe the sender dry and reinstall it in the fuel tank.

INDICATORS AND GAUGES


BE -121

FUEL GAUGE SERVO SENDER

1. Using an ohmmeter measure the resistance between terminals 1 and 2 of servo sender connector (A) at each float level.

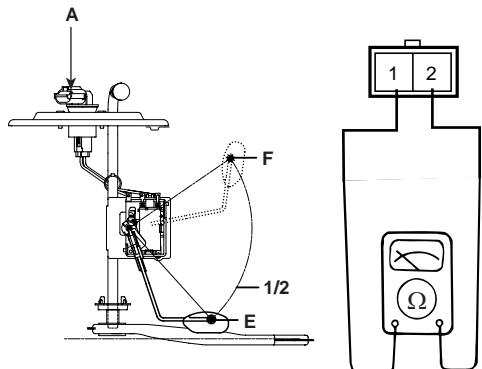

ATIE262C

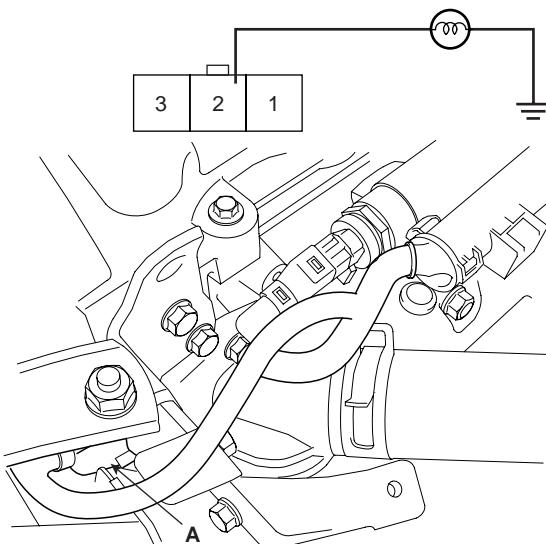

SCMBE6228D

2. Also check that the resistance changes smoothly when the float is moved from "E" to "F".


Position	Resistance ()
E	95.2 ± 1
1/2	90.2 ± 1
F	3.8 ± 1

ENGINE COOLANT TEMPERATURE GAUGE

1. Disconnect the wiring connector (A) from the engine coolant temperature sender in the engine compartment.
2. Connect a 12V, 3.4 wattages test bulb between the harness side connector 2 terminal and ground.
3. Turn the ignition switch ON.
4. Verify that the test bulb flashes and that the indicator moves to HOT position.
If operation is not as specified, replace the cluster (Engine coolant temperature gauge). Then recheck the system.

ENGINE COOLANT TEMPERATURE SENDER

1. Using an ohmmeter, measure the resistance between the terminal 2 and ground.

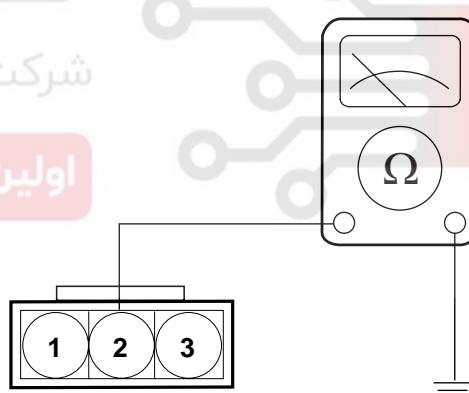


ETKE110I

2. If the resistance value is not as shown in the table, replace the temperature sender.


Tempera-ture [°F(°C)]	140 (60)	185 (85)	230 (110)	257 (127.4)	E/G
Resis-tance ()	128.5	53.8	23.0	16.1	Gaso-line
	195 (49°C)	86.5 (71°C)	23.0	16.1	Diesel

OIL PRESSURE SWITCH

1. Check that there is continuity between the oil press switch terminal and ground with the engine off.
2. Check that there is no continuity between the terminal (A) and ground with the engine running.
3. If operation is not as specified, replace the switch.

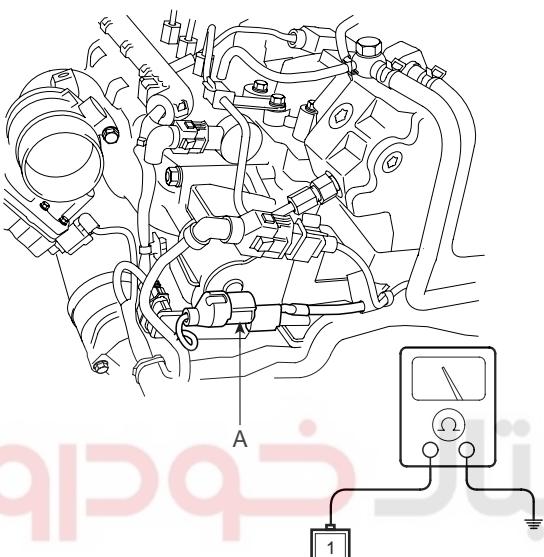

SCMBE6229D

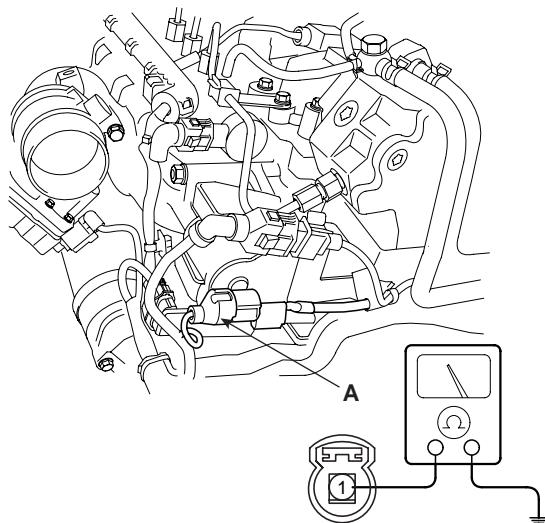


SCMBE6230D

BRAKE FLUID LEVEL WARNING SWITCH

1. Remove the connector (A) from the switch located at the brake fluid reservoir.
2. Verify that continuity exists between switch terminals 1 and 2 while pressing the switch (float) down with a rod.

OIL PRESSURE WARNING LAMP

1. Disconnect the connector (A) from the warning switch and ground the terminal on the wire harness side connector.
2. Turn the ignition switch ON. Check that the warning lamp lights up. If the warning lamp doesn't light, test the bulb or inspect the wire harness.

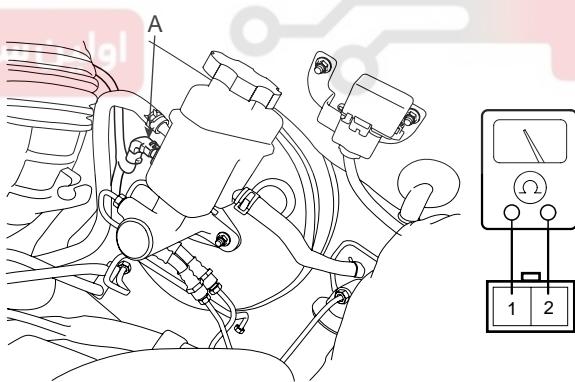

SCMBE6231D

INDICATORS AND GAUGES

BE -123

BRAKE FLUID LEVEL WARNING LAMP


1. Ignition "ON".
2. Release the parking brake.
3. Remove the connector from the brake fluid level warning switch.
4. Ground the connector at the harness side.
5. Verify that the warning lamp lights.

PARKING BRAKE SWITCH

The parking brake switch is a push type. It is located at the side of the parking brake pedal.

1. Check that there is continuity between the terminal and switch body with the switch (A) ON.
2. Check that there is no continuity between the terminal and switch body with the switch OFF.


If continuity is not as specified, replace the switch or inspect its ground connection.

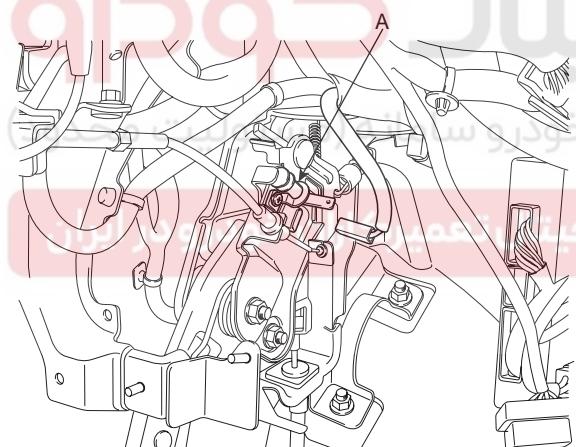

ATKF262D

DOOR SWITCH

Remove the door switch and check for continuity between the terminals.

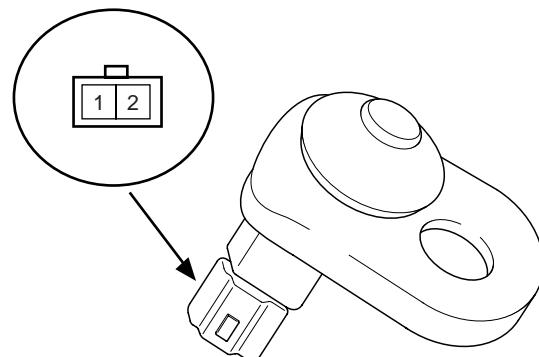

ATIE121Q


Terminal Position	1	2	Body (Ground)
Free(Door open)	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>
Push(Door close)			

ETQF180D

SEAT BELT SWITCH

1. Remove the connector from the switch.
2. Check for continuity between terminals.

Seat belt condition	Continuity
Fastened	Non-conductive ()
Not fastened	Conductive ()

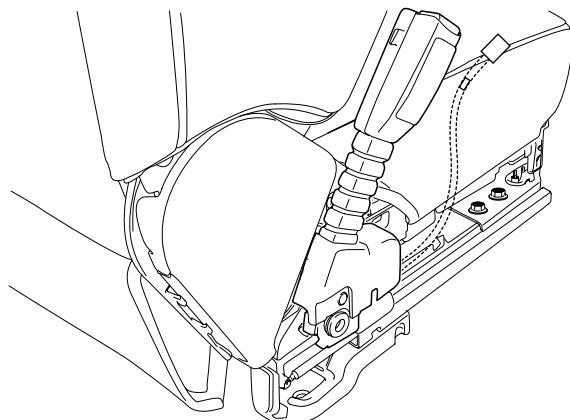

ETBF260G


SEAT BELT WARNING LAMP

With the ignition switch turned ON, verify that the lamp glows.

Seat belt condition	Warning lamp
Fastened	OFF
Not fastened	ON

TRIP SWITCH

1. Disconnect the negative (-) battery terminal.
2. Remove the trip switch (A) from the cluster facia panel (B).

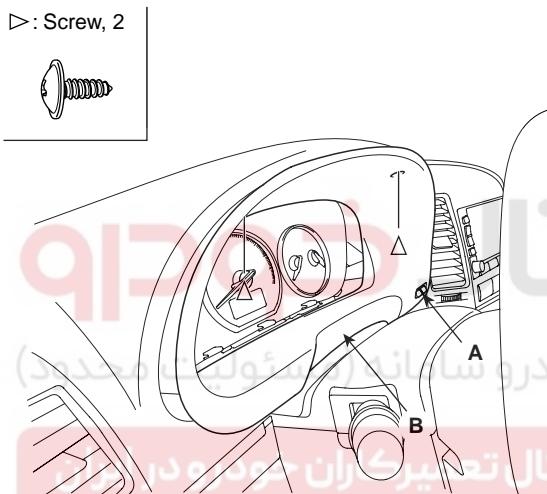

SCMBE6234L

3. Check for continuity between the terminals in each switch position according to the table.



Terminal Position	2	3	4
MODE(PUSH)		○	○
RESET(PUSH)	○	○	

ETBF260I

REPLACEMENT


E9AE5508

1. Disconnect the negative (-) battery terminal.
2. Remove the center facia panel (A) after and loosening 2 screws.

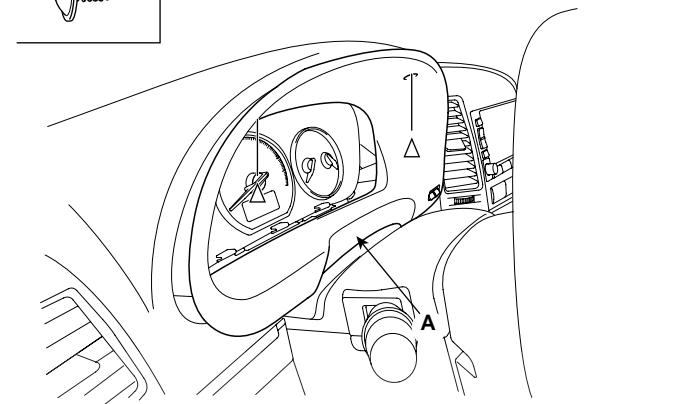

SCMBE6223L

3. Disconnect trip switch connector.
4. Pull out the cluster (A) from the housing after removing 4 screws.

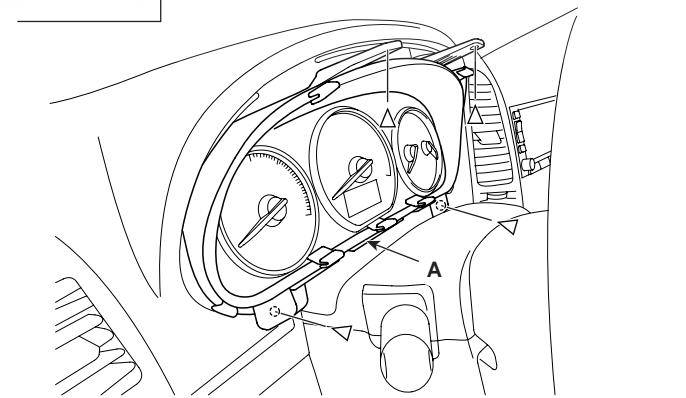


SCMBE6224L

INDICATORS AND GAUGES

BE -125

5. Disconnect the cluster connectors (A) and then remove the cluster (B).

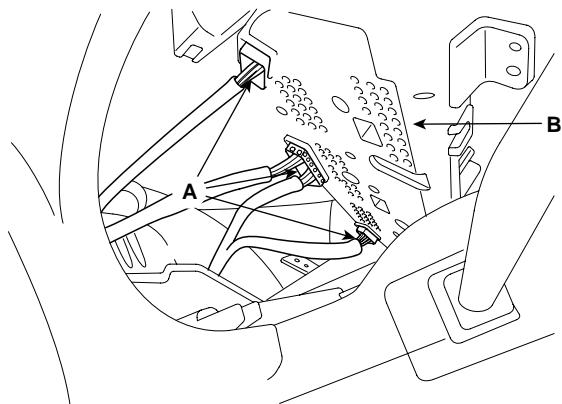

SCMBE6225D

6. Installation is the reverse of removal.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



POWER DOOR LOCKS


COMPONENT LOCATION

EFF8DAEC

The parts with asterisk(*) :

This illustration shows the LHD type.

RHD type is symmetrical.

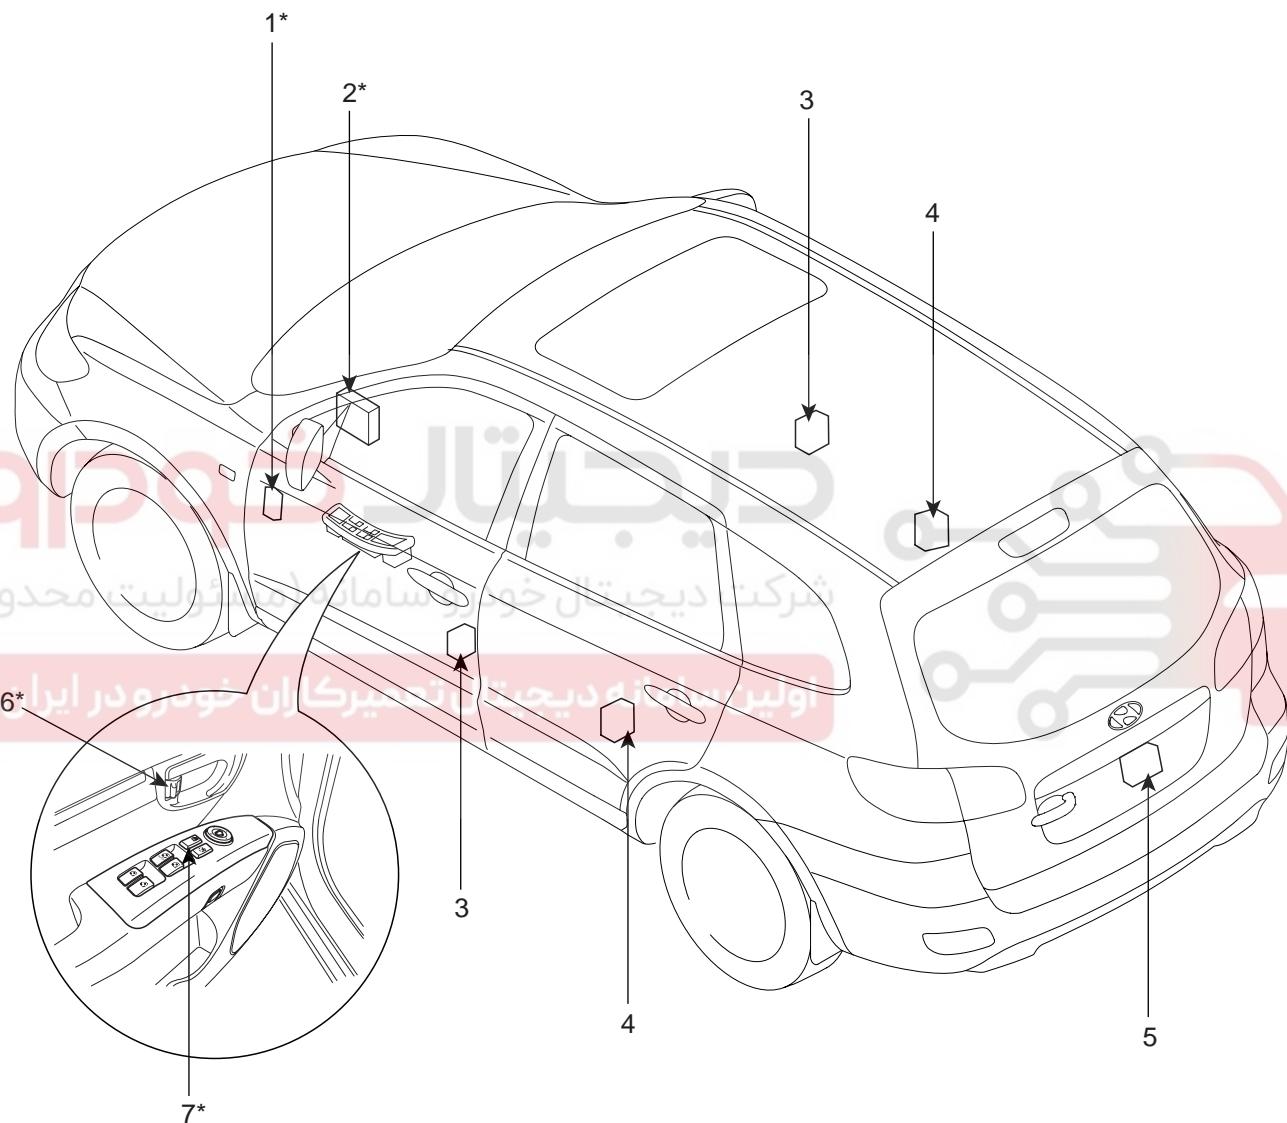

1. ICM relay box (Door lock/unlock relay)
2. Body control module (BCM)
3. Front door lock actuator & switch
4. Rear door lock actuator & switch
- 7*

5. Tailgate & switch
6. Door lock knob
7. Door lock switch

SCMBE6240L

POWER DOOR LOCKS


BE -127

TROUBLESHOOTING

E3BBBBF42


1. Lock function works but unlock function does not work. Since door unlock relay is malfunction, replace the door unlock relay.
2. Unlock function works but lock function does not work. Since door lock relay is malfunction, replace the door lock relay.

3. When passenger side knob is controlled, all doors locks, but when driver side knob is controlled, all doors do not lock.

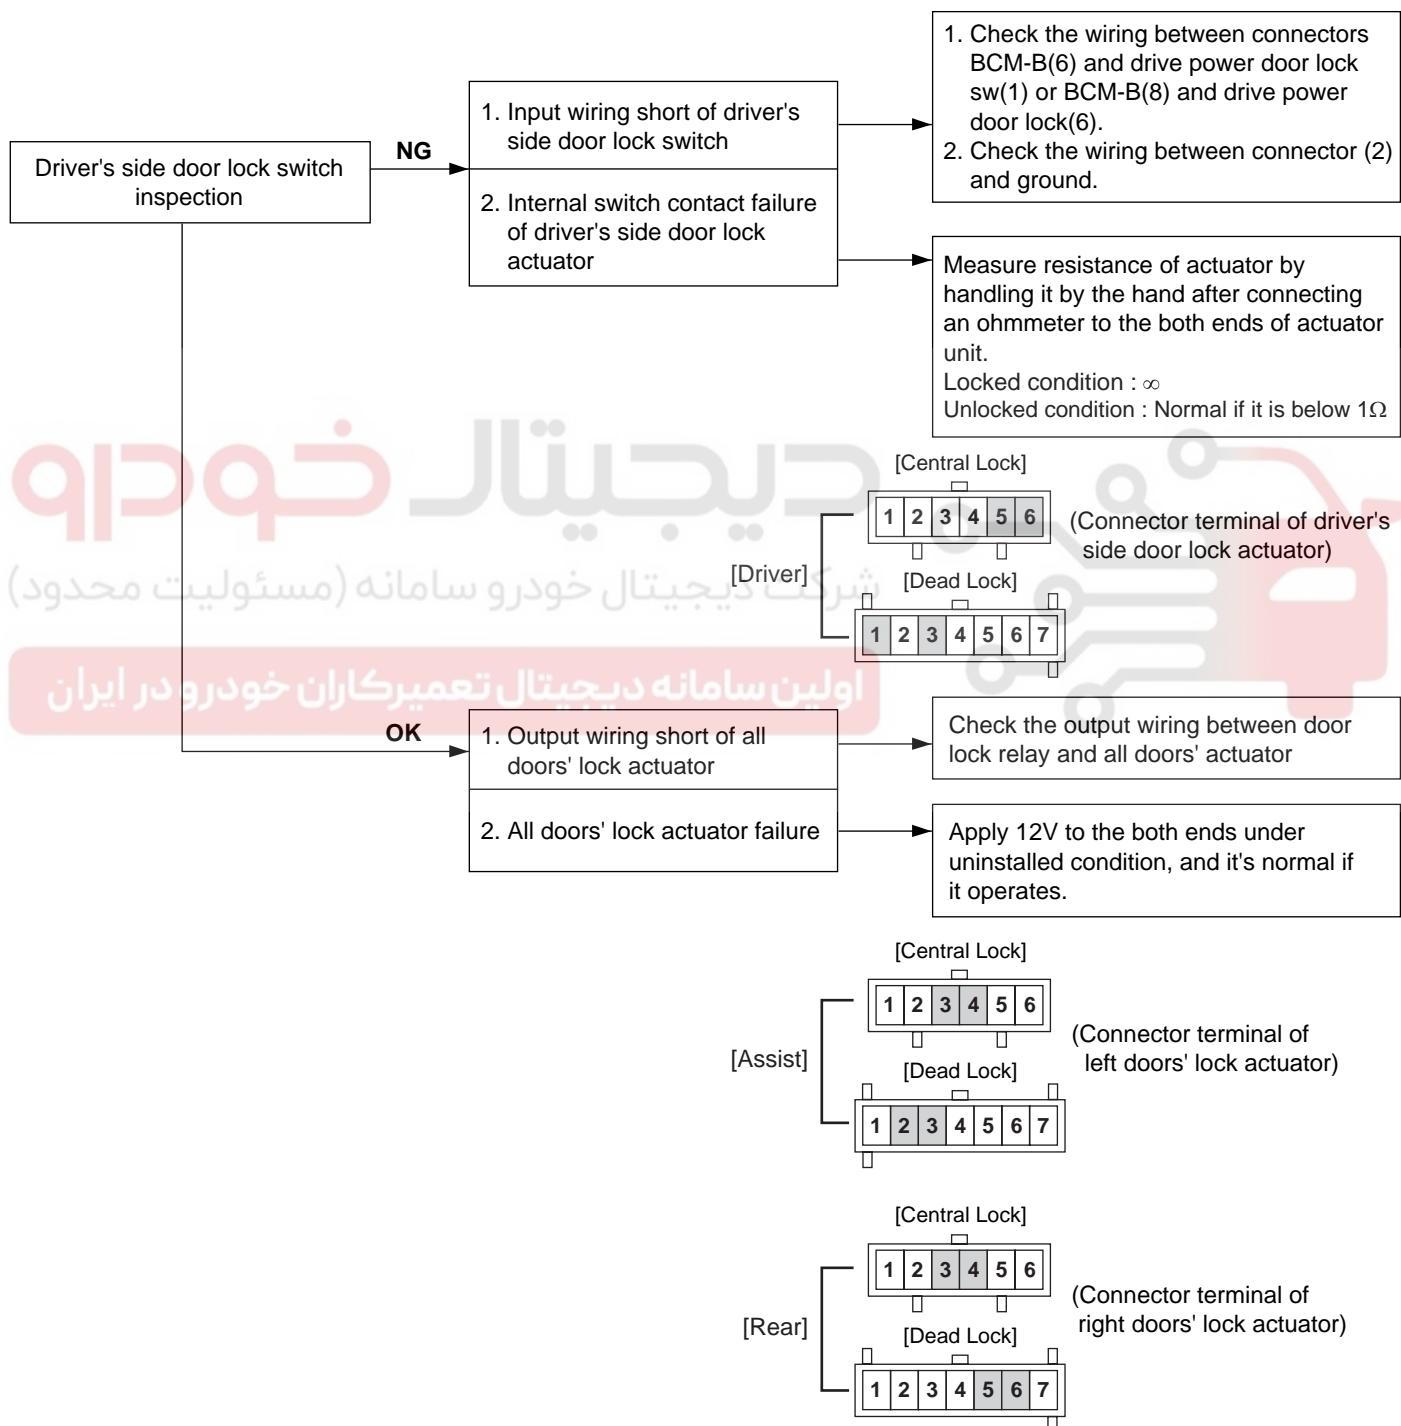

SCMBE6252L

4. When driver side knob is controlled. All doors lock. But when the passenger side knob is controlled, all doors do not lock.

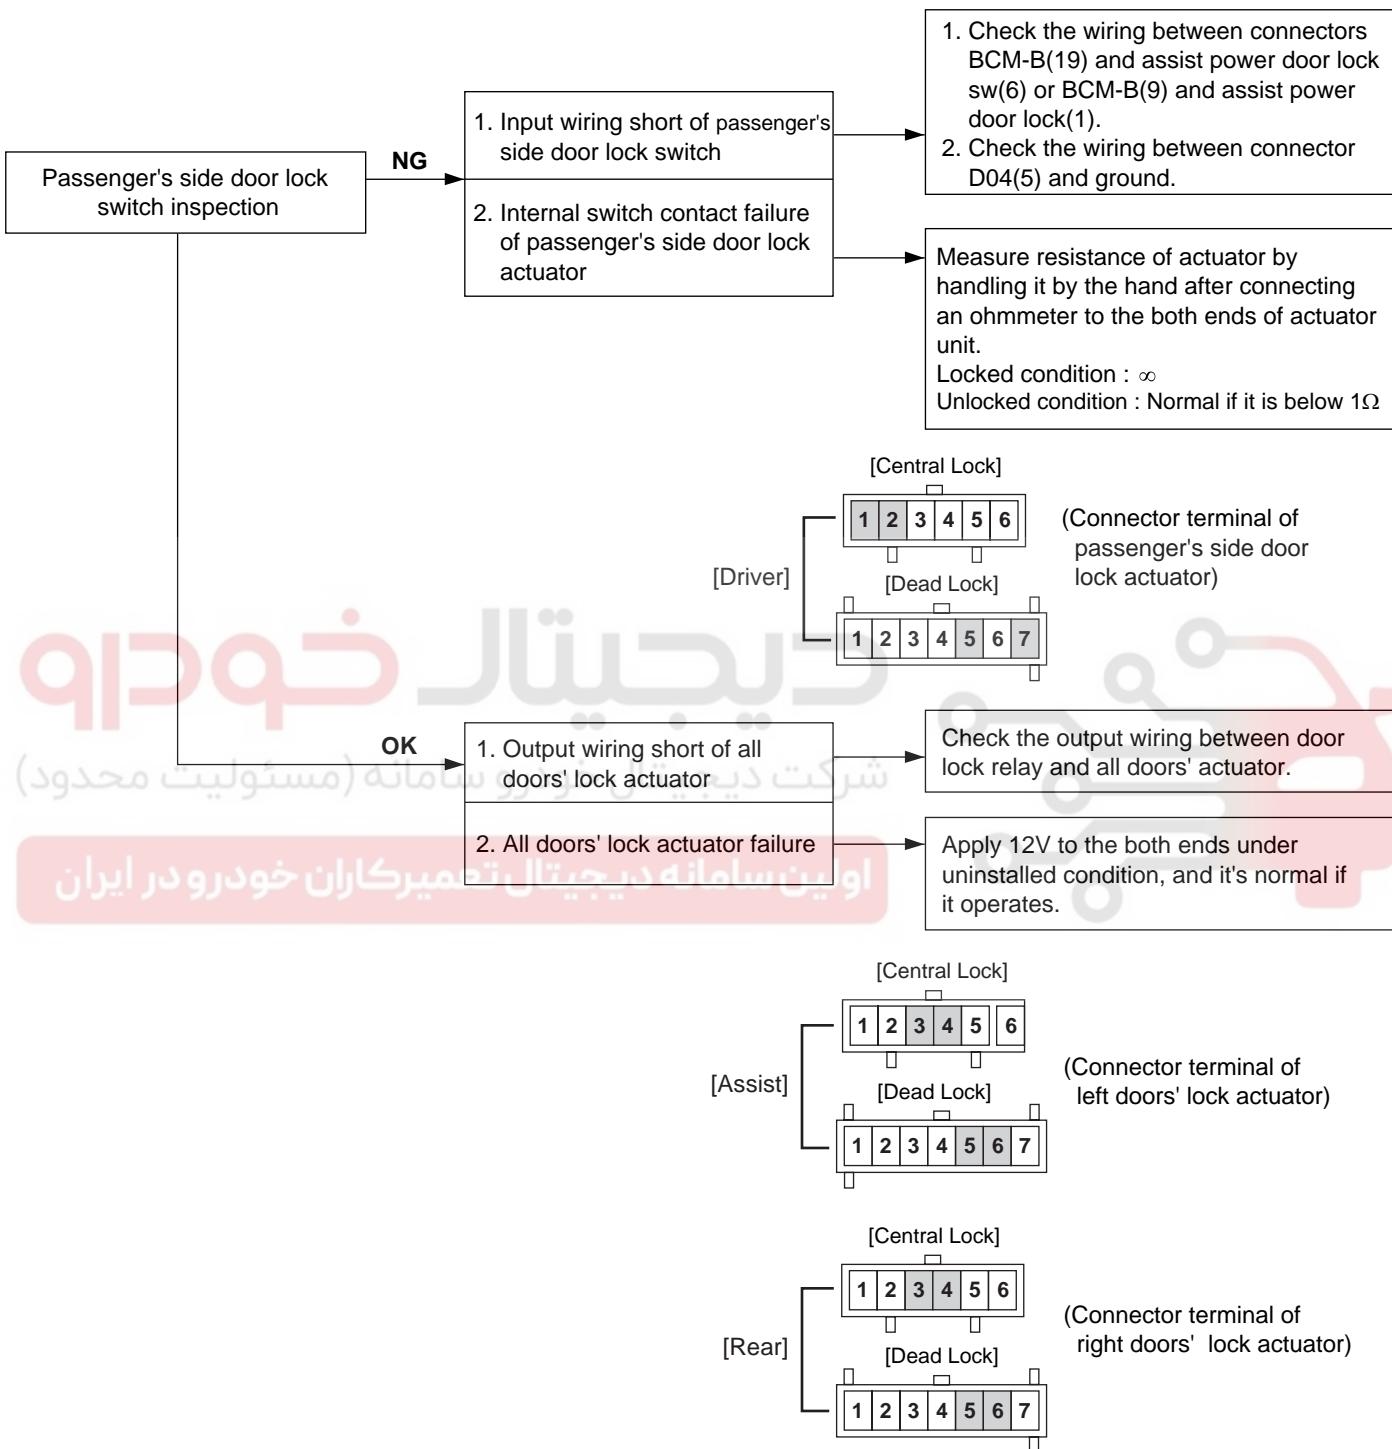


SCMBE6253L

POWER DOOR LOCKS

BE -129

5. Both sides do not lock either.

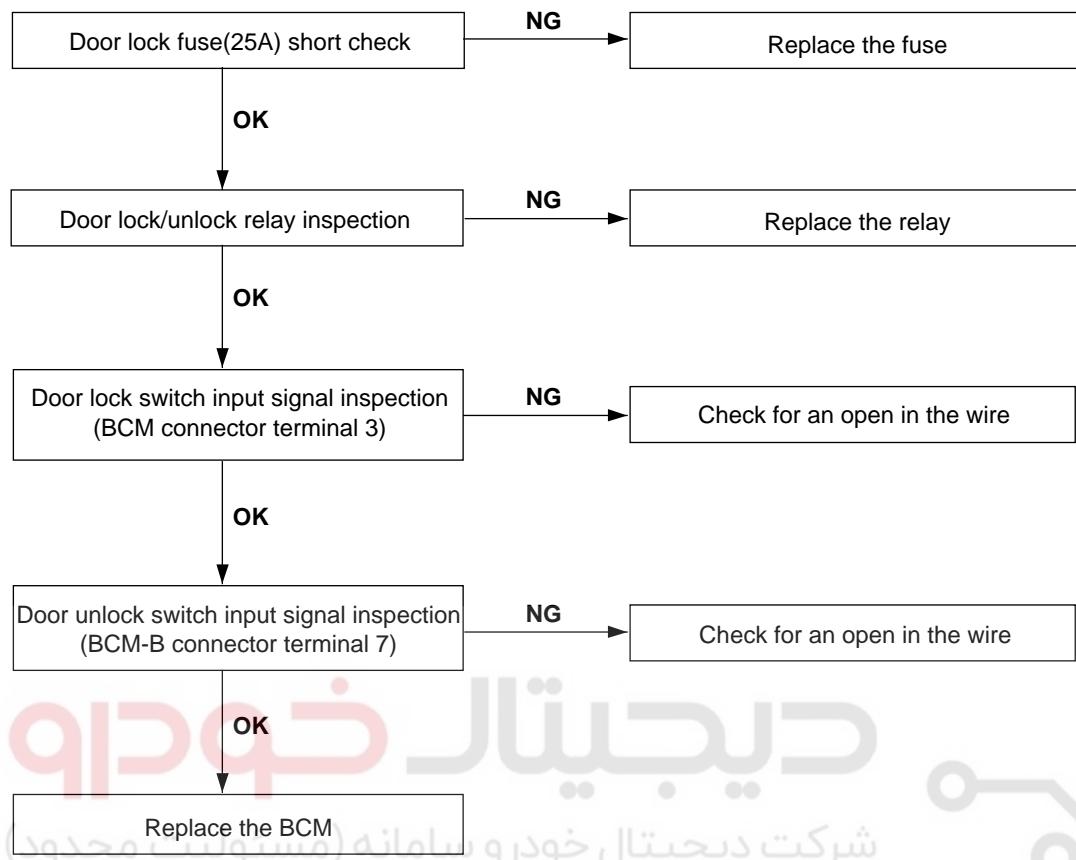

POWER DOOR LOCK ACTUATORS

INSPECTION EEF47A4B

FRONT DOOR LOCK ACTUATOR


1. Remove the front door trim. (Refer to the Body group - Front door)
2. Remove the front door module. (Refer to the Body group - Front door).
3. Disconnect the connectors from the actuator.

4. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

[CENTRAL LOCK]

Position	Terminal		4	3
	Lock	Unlock		
Front left	⊕	⊖		
	⊖	⊕		
Front right	⊖	⊕		
	⊕	⊖		

SCMBE6131L

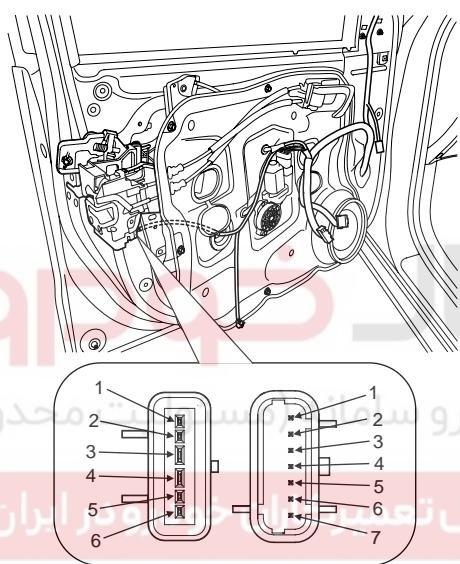

[CENTRAL LOCK] [DEAD LOCK]

[DEAD LOCK]

Position	Terminal		5	6	7
	Front left	Front right			
Central Lock	Lock	Lock	⊕	⊖	⊖
	Unlock	Unlock	⊖	⊕	⊕
	Lock	Lock	⊖	⊕	⊕
	Unlock	Unlock	⊕	⊖	⊖
Dead Lock	Lock	Lock	⊖	⊕	⊕
	Unlock	Unlock	⊖	⊕	⊖
	Lock	Lock	⊕	⊖	⊖
	Unlock	Unlock	⊕	⊖	⊕

SCMBE6144L


SCMBE6130L

POWER DOOR LOCKS

BE -131

REAR DOOR LOCK ACTUATOR

1. Remove the rear door trim panel. (Refer to the Body group - Rear door)
2. Remove the rear door module. (Refer to the Body group - Rear door)
3. Disconnect the connectors from the actuator.

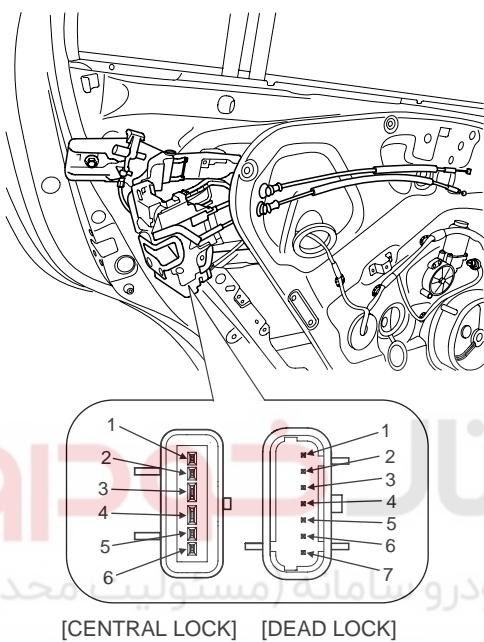

4. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

[CENTRAL LOCK]

Terminal		4	3
Position			
Rear left	Lock	⊕	⊖
	Unlock	⊖	⊕
Rear right	Lock	⊖	⊕
	Unlock	⊕	⊖

SCMBE6133L

[DEAD LOCK]

Terminal		5	6	7
Position				
Central Lock	Rear left	Lock	⊕	⊖
		Unlock	⊖	⊕
	Rear right	Lock	⊖	⊕
		Unlock	⊕	⊖
Dead Lock	Rear left	Lock	⊖	⊕
		Unlock	⊕	⊕
	Rear right	Lock	⊕	⊕
		Unlock	⊖	⊕


SCMBE6145L

اولین سامانه دیجیتال تعمیر کاران خودرو در ایران

SCMBE6132L

TAILGATE LOCK ACTUATOR

1. Remove the tailgate trim. (Refer to the Body group - Tailgate)
2. Disconnect the 4P connector from the actuator.

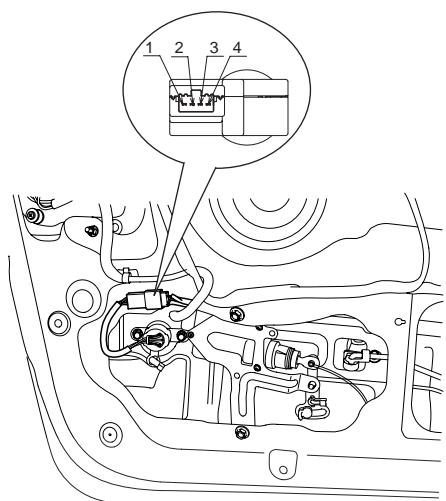

SCMBE6134D



3. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

Position	Terminal	2	3
Lock		⊖	⊕
Unlock		⊕	⊖

SCMBE6135L

FRONT DOOR LOCK SWITCH

1. Remove the front door trim. (Refer to the Body group - Front door)
2. Remove the front door module. (Refer to the Body group - Front door).
3. Disconnect the connectors from the actuator.

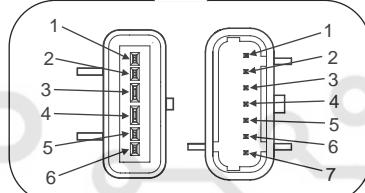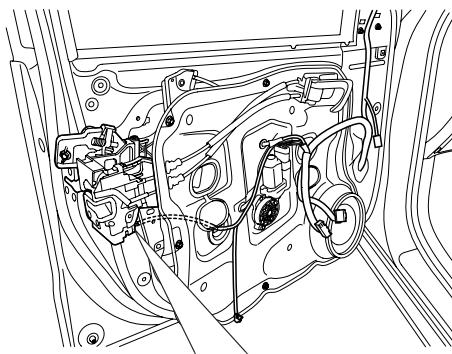

[CENTRAL LOCK] [DEAD LOCK]

SCMBE6130L

POWER DOOR LOCKS

BE -133

4. Check for continuity between the terminals in each switch position when inserting the key into the door according to the table.


[CENTRAL LOCK]

Position		Terminal	2	5	1
Central Lock	Front left	Clockwise			
		Counter-clockwise			
	Front right	Clockwise			
		Counter-clockwise			

SCM6136L

REAR DOOR LOCK SWITCH

1. Remove the rear door trim panel. (Refer to the Body group - Rear door)
2. Remove the rear door module. (Refer to the Body group - Rear door)
3. Disconnect the connectors from the actuator.

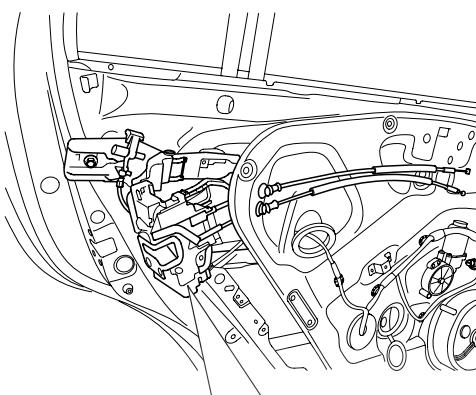

[CENTRAL LOCK]


Position		Terminal	1	5	2	6
Central Lock	Front left	Unlock				
	Front right	Lock				

SCM6148L

[DEAD LOCK]

Position		Terminal	3	2	4
Central Lock	Front left	Clockwise			
		Counter-clockwise			
	Front right	Clockwise			
		Counter-clockwise			

SCM6146L

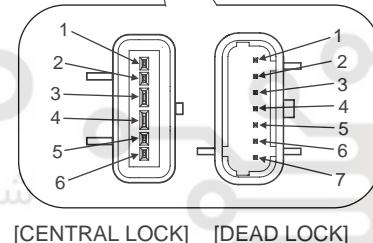

[CENTRAL LOCK] [DEAD LOCK]

SCM6132L

4. Check for continuity between the terminals in each switch position according to the table.

[CENTRAL LOCK]

Position		Terminal	1	5	2	6
Central Lock	Unlock					
	Lock					

SCM6122L


[DEAD LOCK]

Position		Terminal	3	1	7	5
Central Lock	Unlock					
	Lock					

SCM6142L

TAILGATE LOCK SWITCH

1. Remove the tailgate trim. (Refer to the Body group - Tailgate)
2. Disconnect the 4P connector from the actuator.

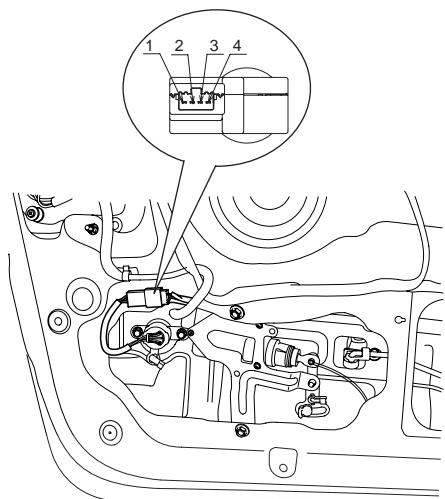


SCMBE6134D

3. Check for continuity between the terminals in each switch position according to the table.

Position	Terminal	1	4
Lock		○	○
Unlock			

SCMBE6138L

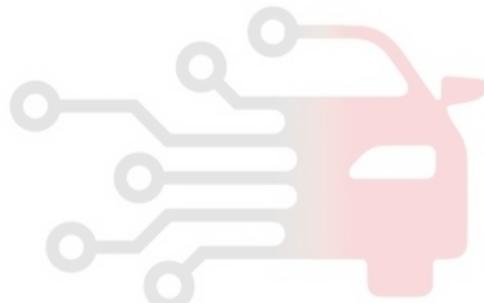

POWER DOOR LOCKS

BE -135

POWER DOOR LOCK RELAY

INSPECTION E7A48CBC

1. Disconnect the negative (-) battery terminal.
2. Remove the junction box.
3. Check for continuity between the terminals.

DOOR LOCK



1. There should be continuity between the No.5 in the I/P-J and No.18 terminals in the I/P-D when power and ground are connected to the No.2 terminal in the I/P-C and No.9 terminal in the I/P-J.
2. There should be no continuity between the No.5 terminal in the I/P-J and No.18 terminal in the I/P-D when power is disconnected.



SCMBE6243D

DOOR UNLOCK


1. There should be continuity between the No.5 terminal in the I/P-J and No.7 terminal in the I/P-K when power and ground are connected to the No.2 terminal in the I/P-C and No.1 terminal in the I/P-K.
2. There should be no continuity between the No.5 terminal in the I/P-J and No.7 terminal in the I/P-D when power is disconnected.

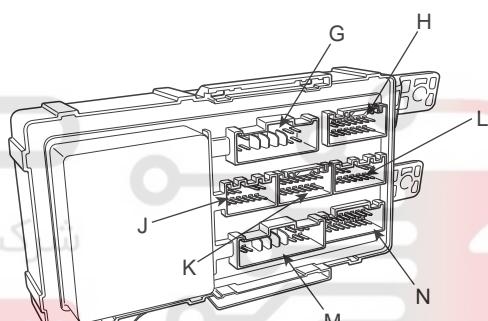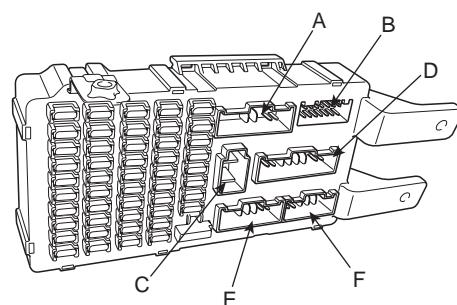

SCMBE6244L

Terminal Power	I/P-D (7)	I/P-J (5)	I/P-C (2)	I/P-K (1)
Disconnected			<input type="circle"/>	<input type="circle"/>
Connected	<input type="circle"/>	<input type="circle"/>	<input type="circle"/> -	<input type="circle"/> +

SCMBE6244L

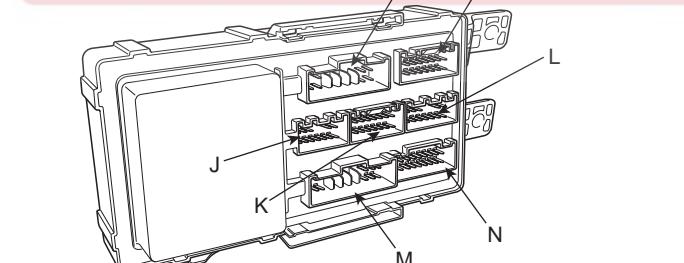

SCMBE6241D

Terminal Power	I/P-D (18)	I/P-J (5)	I/P-C (2)	I/P-J (9)
Disconnected			<input type="circle"/>	<input type="circle"/>
Connected	<input type="circle"/>	<input type="circle"/>	<input type="circle"/> -	<input type="circle"/> +

SCMBE6242L

POWER DOOR LOCK SWITCH


3. Disconnect the connector from the switch.

INSPECTION ECAB726B

DRIVER DOOR LOCK SWITCH


1. Disconnect the negative (-) battery terminal.
2. Remove the front door trim and power window switch module. (Refer to the Body group - front door)

[LHD]

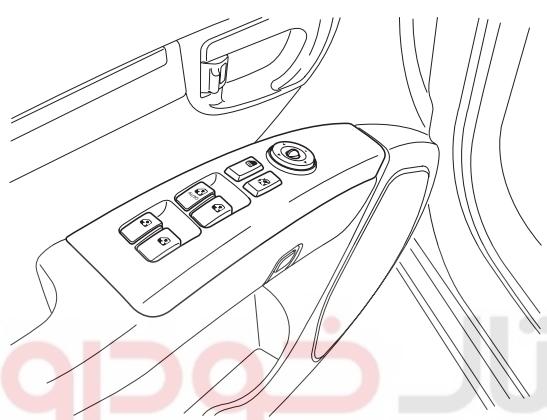


SCMBE6246L

[RHD]

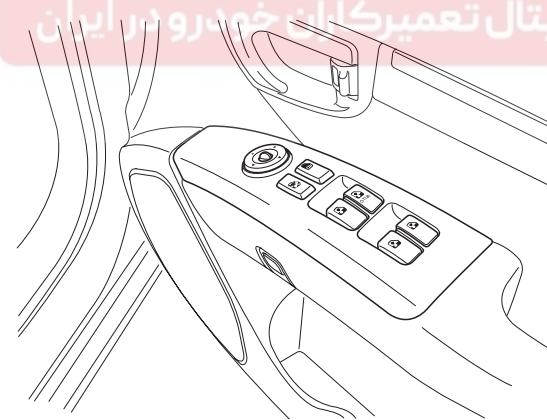

SCMBE6246R

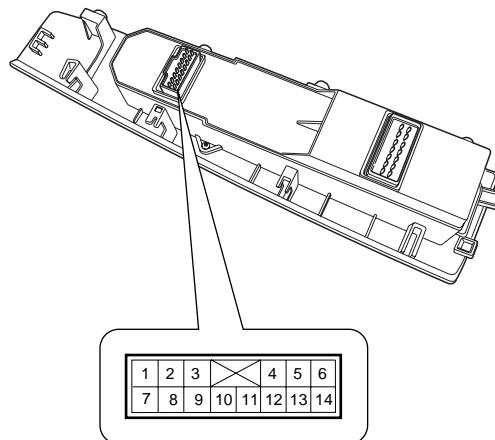

SCMBE6247L

4. Check for continuity between the terminals in each switch position according to the table.

() : RHD

Terminal Position	4(4)	10(10)	11(11)
Lock		<input type="circle"/>	<input type="circle"/>
Unlock	<input type="circle"/>	<input type="circle"/>	

SCMBE6248L


اولین سامانه دیجیتال تعمیر کالا خودرو در ایران

POWER DOOR LOCKS

BE -137

ASSIST DOOR LOCK SWITCH

1. Disconnect the negative (-) battery terminal.
2. Remove the front door trim and power window switch module. (Refer to the Body group - front door)
3. Disconnect the connector from the switch.

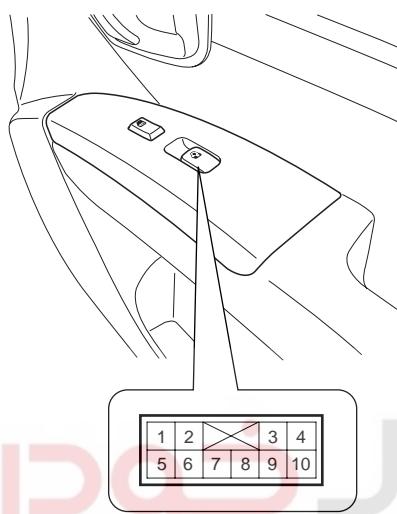

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

4. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	3	4	7
Lock		○	○
Unlock	○		○

SCMBE6251L


POWER DOOR MIRRORS

COMPONENT LOCATION E5B25FCD

The parts with asterisk(*) :

This illustration shows the LHD type.

RHD type is symmetrical.

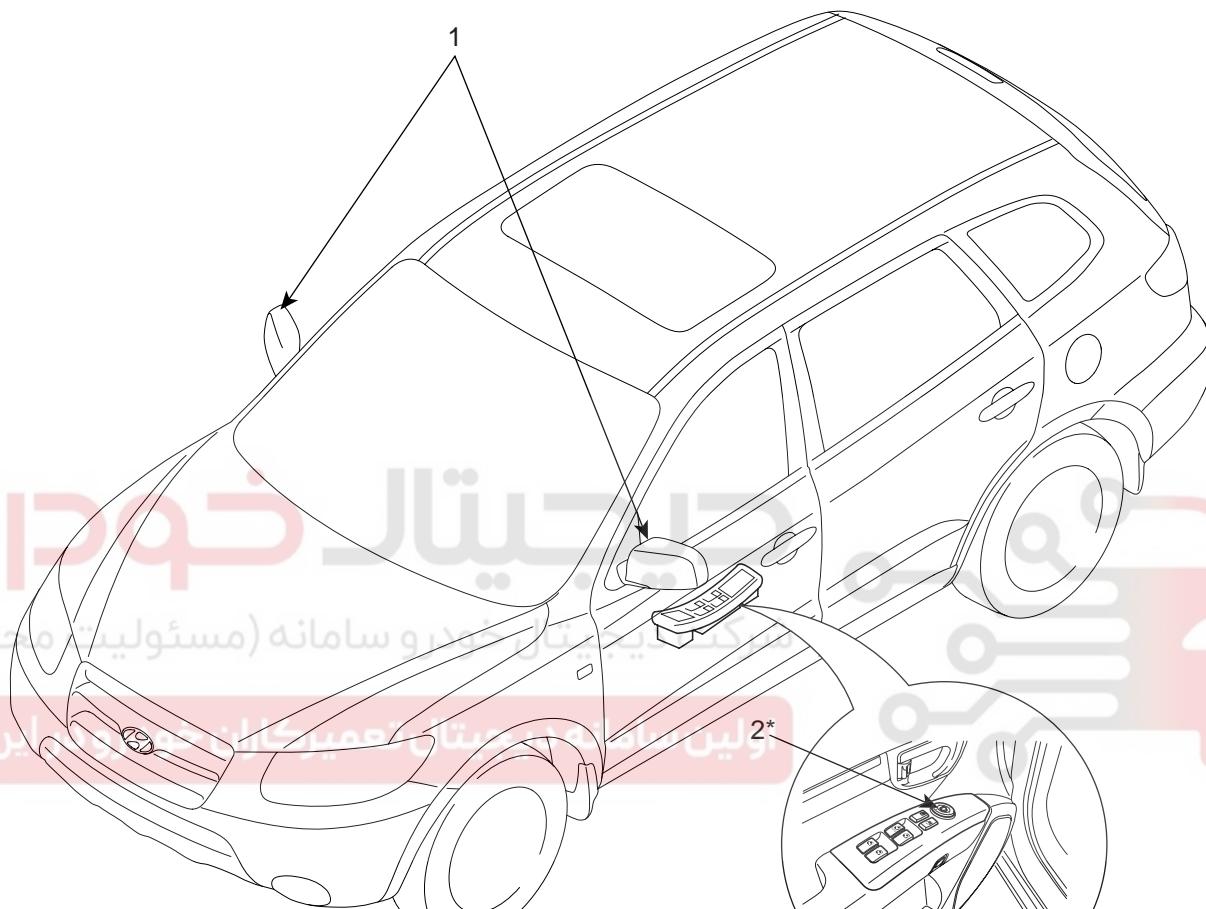

1. Power door mirror

2. Power door mirror switch

SCMBE6260L

POWER DOOR MIRRORS


BE -139

POWER DOOR MIRROR SWITCH


COMPONENTS

E98FAE26



Power outside mirror switch

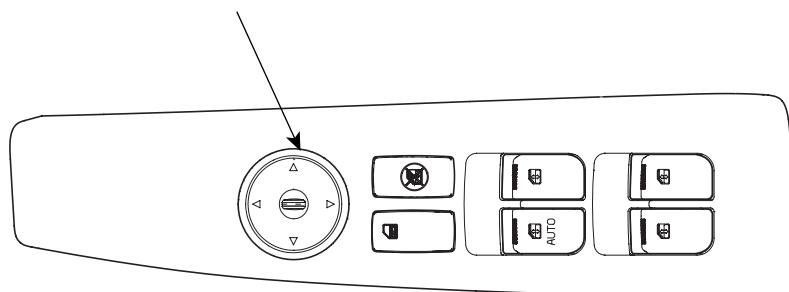

Power outside mirror switch connector (12 Pin)

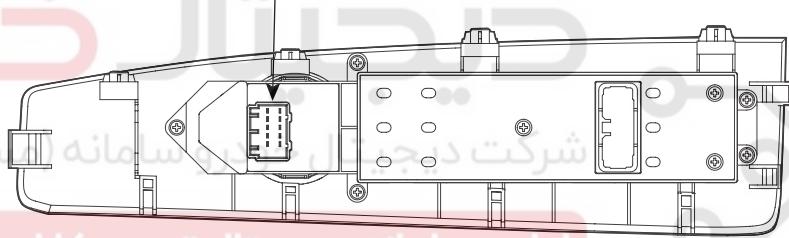

اولین سامانه دیجیتال تعمیر کاران خودرو در ایران

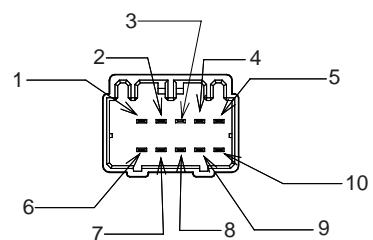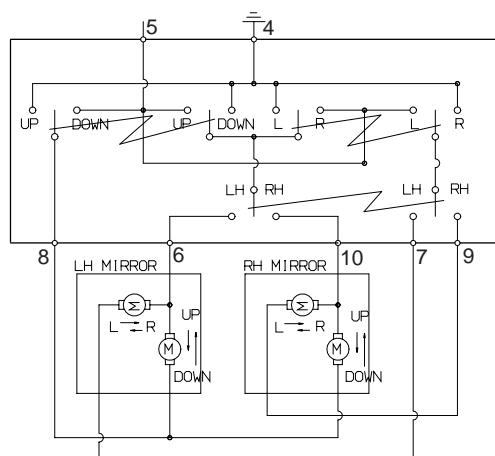


INSPECTION


E4439FF6

1. Disconnect the negative (-) battery terminal.
2. Remove the front door trim and power window switch module. (Refer to the Body group-front door)


[LHD]

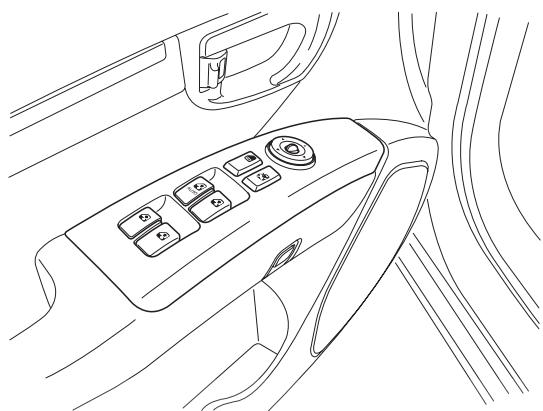

[RHD]

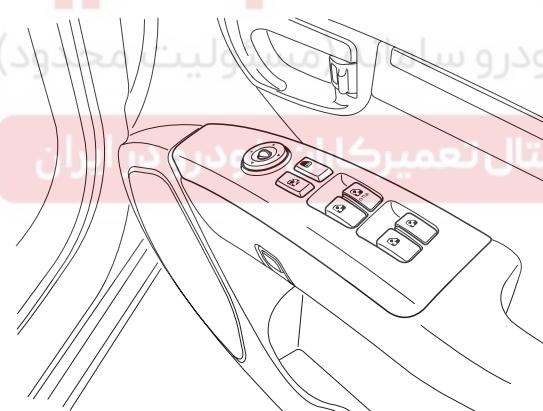

3. Check for the continuity between terminals of power door lock switch according to the table.

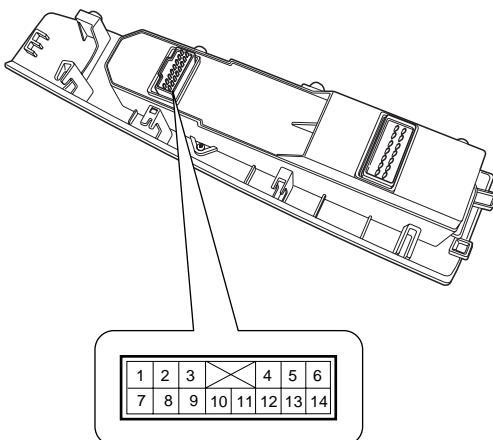

SCMBE6247L

() : RHD

Terminal Position	4(4)	10(10)	11(11)
Lock		○	○
Unlock	○	○	

SCMBE6248L

4. Check for continuity between the terminals in each switch position according to the table.

SCMBE6246R

Item	Terminal Direction	5	4	6	7	8	9	10
Left	UP	○	○	○	○	○		
	DOWN	○	○	○	○	○		
	OFF		○	○	○	○		
	LEFT	○	○	○	○	○		
	RIGHT	○	○	○	○	○		
Right	UP	○	○	○	○	○	○	○
	DOWN	○	○	○	○	○	○	○
	OFF		○	○	○	○	○	○
	LEFT	○	○	○	○	○	○	○
	RIGHT	○	○	○	○	○	○	○

SCMBE6256L


POWER DOOR MIRRORS

BE -141

POWER DOOR MIRROR ACTUATOR

INSPECTION EAE14156

1. Remove the front door quadrant inner cover (A). Take care not to damage fixing clips. (Refer to the Body group - front door)

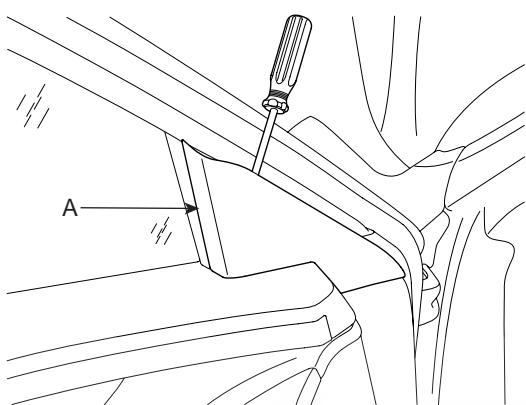

ETBF302F

Terminal Position	6	7	8
UP	(-)	(+)	(+)
DOWN	(+)	(-)	(-)
OFF	(-)	(+)	(+)
LEFT	(-)	(+)	(-)
RIGHT	(+)	(-)	(+)

SCMBE6264L

MIRROR HEATER



Terminal Position	1	2
Heater	○	—

SCMBE6265L

2. Disconnect the power door mirror connector from the harness.

3. Apply battery voltage to each terminal as shown in the table and verify that the mirror operates properly.

اولین سامانه دیجیتال تعییرکاران خودرو در ایران

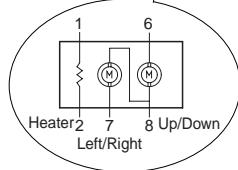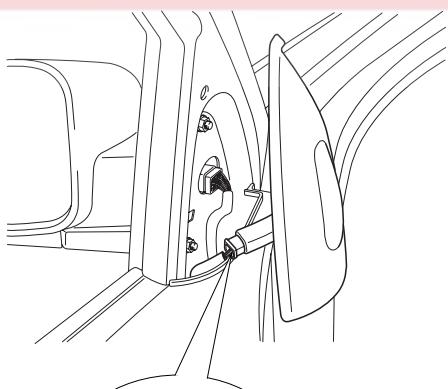

SCMBE6263L




POWER WINDOWS

COMPONENT LOCATION EAA7E4EF

The parts with asterisk(*) :

This illustration shows the LHD type.

RHD type is symmetrical.

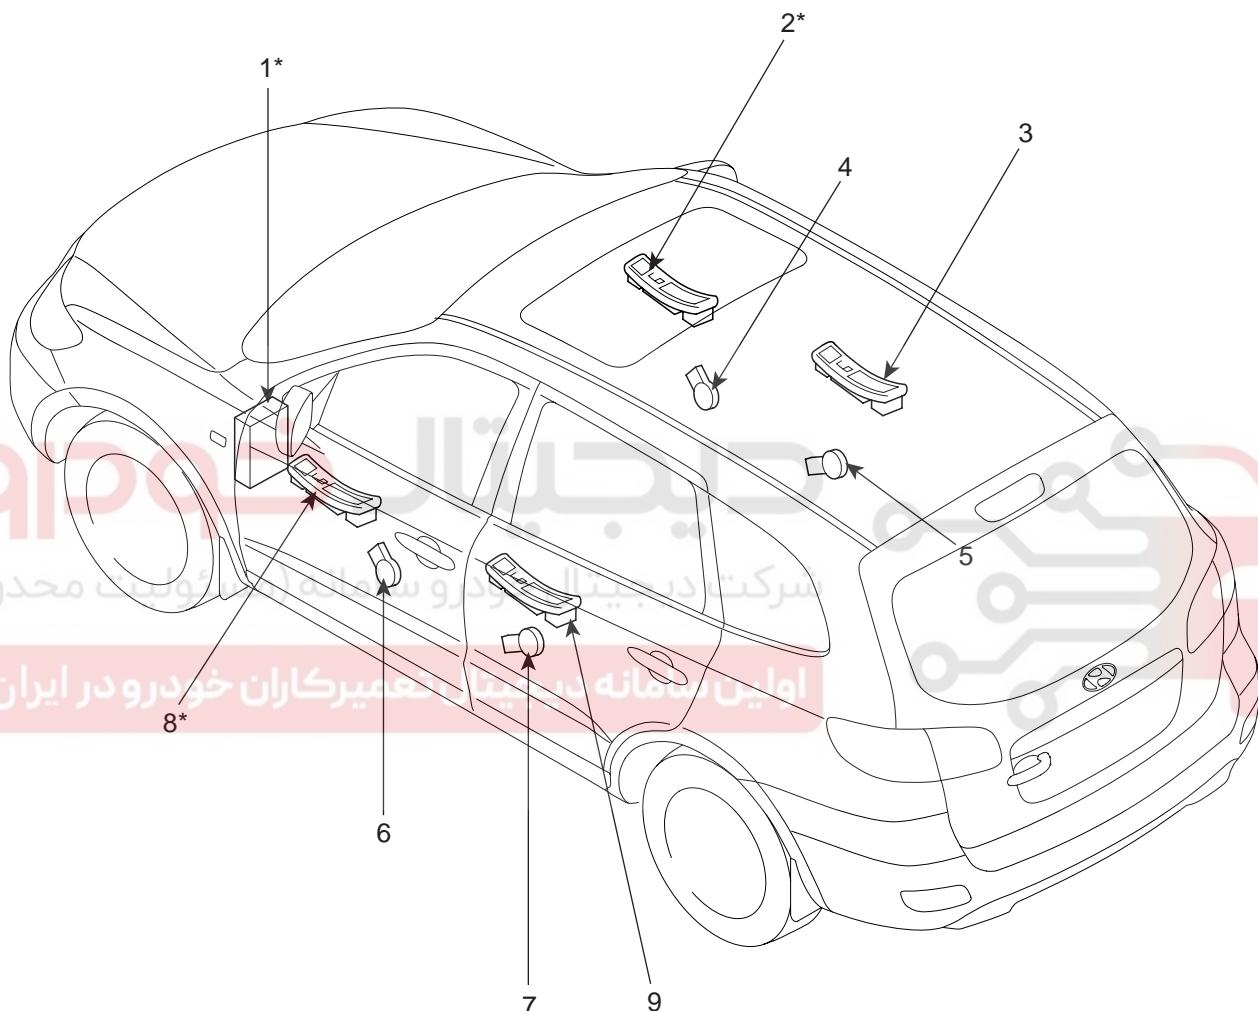

1. Instrument panel junction box (Power window relay)
2. Assist window switch
3. Rear window switch
4. Front window motor
5. Rear window motor

6. Front window motor
7. Rear window motor
8. Driver power window main switch
9. Rear window switch

SCMBE6270L


POWER WINDOWS

BE -143


TROUBLESHOOTING

E016BF36

- No windows operate from the main switch on the driver's door.

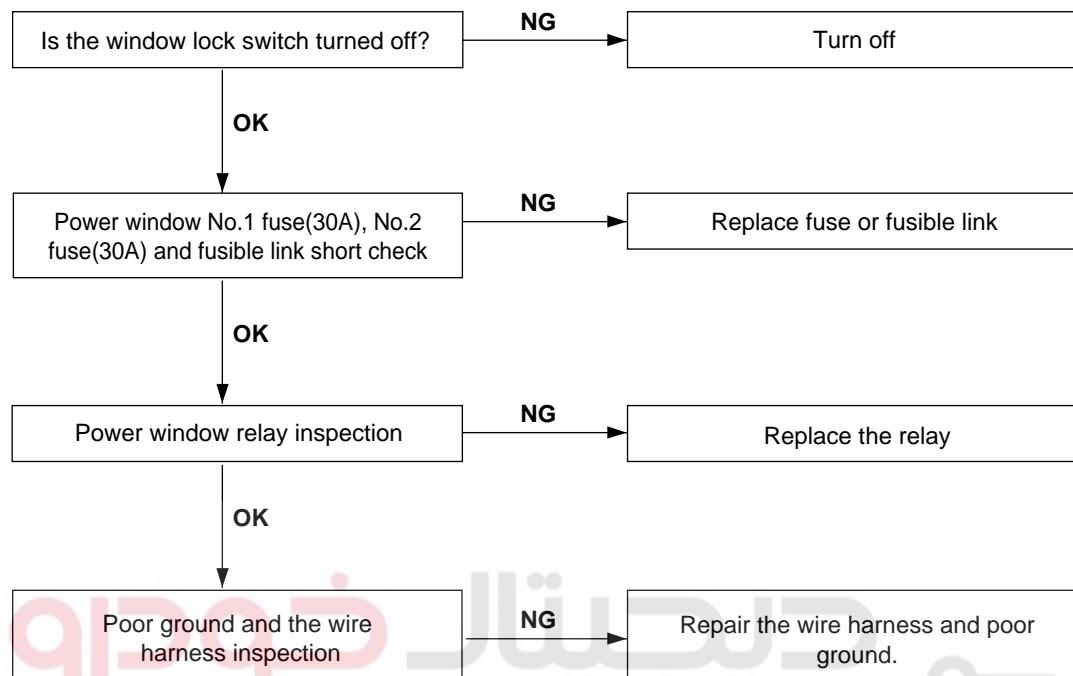


- Driver's side window does not operate.

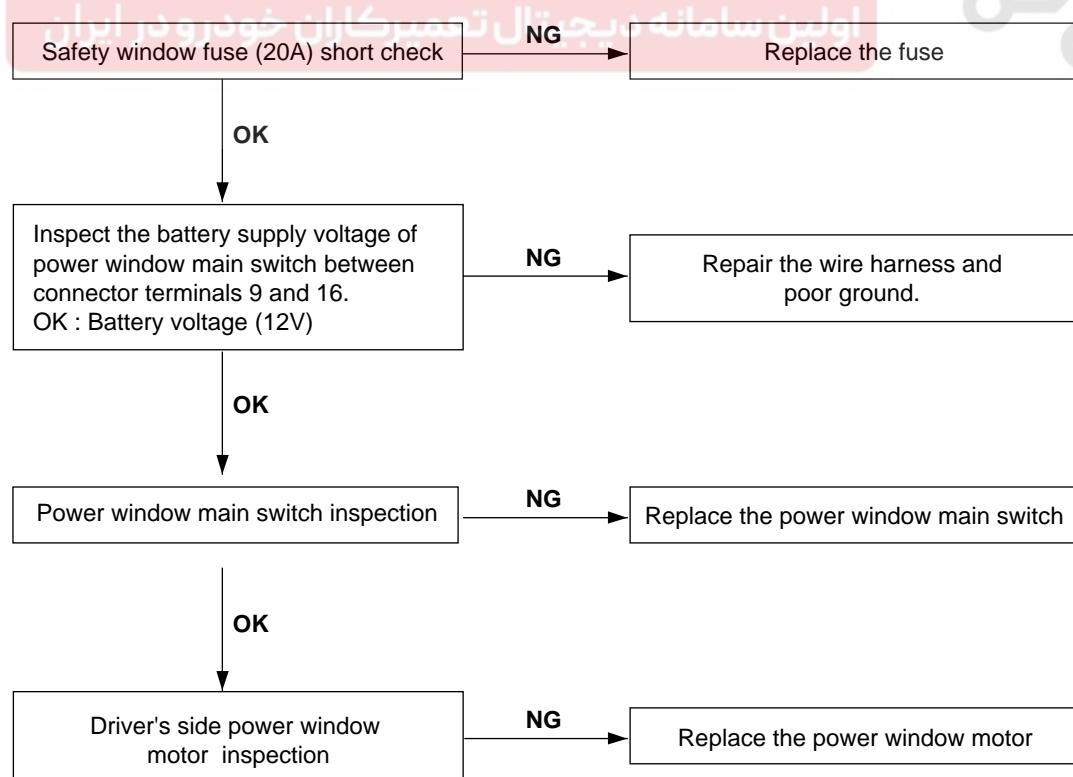

SCM6276L

SCM6277L

3. Passenger's side window does not operate.

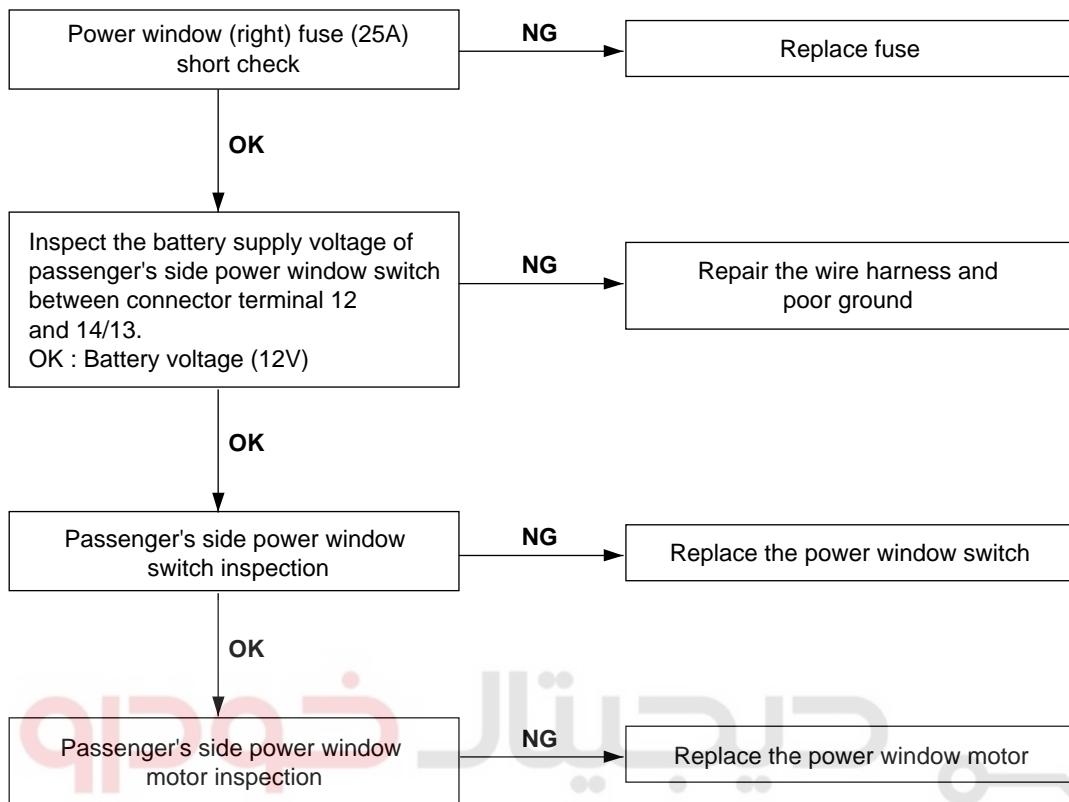

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

SCMBE6278L

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

POWER WINDOWS


BE -145

POWER WINDOW MOTOR

INSPECTION E10408D5

FRONT POWER WINDOW MOTOR


1. Remove (-) negative battery terminal.
2. Remove the front door trim. (Refer to the Body group-front door)
3. Disconnect the connector (2P) from the motor.

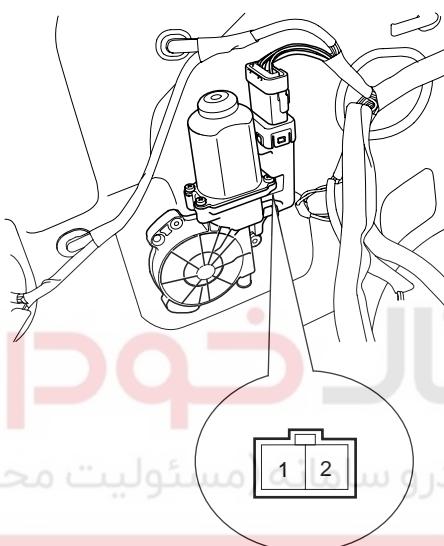

SCMBE6271L

REAR POWER WINDOW MOTOR

1. Remove (-) negative battery terminal.
2. Remove the rear door trim. (Refer to the Body group-rear door)
3. Disconnect the 2P connector from the motor.

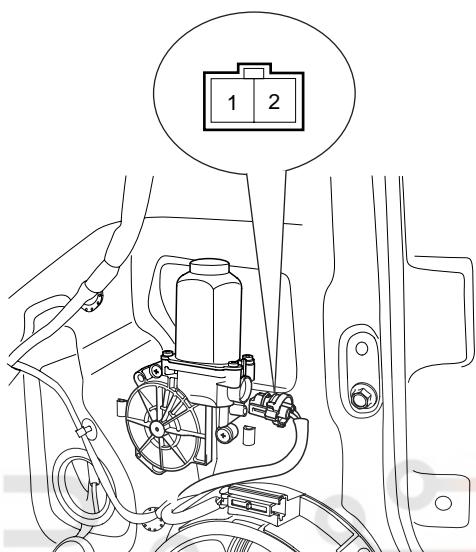

SCMBE6274D

4. Connect the motor terminals directly to battery voltage (12V) and check that the motor operates smoothly. Next, reverse the polarity and check that the motor operates smoothly in the reverse direction. If the operation is abnormal, replace the motor.

Position		Terminal		1	2
Position	UP	Clockwise	⊖	⊕	
		DOWN	⊕	⊖	
Position	DOWN	Clockwise	⊕	⊖	
		UP	⊖	⊕	

SCMBE6272L

Position		Terminal		1	2
Position	UP	Clockwise	⊖	⊕	
		DOWN	⊕	⊖	
Position	DOWN	Clockwise	⊕	⊖	
		UP	⊖	⊕	


SCMBE6272L

POWER WINDOW SWITCH



COMPONENTS ED0ABABA

POWER WINDOW MAIN SWITCH

[LHD]

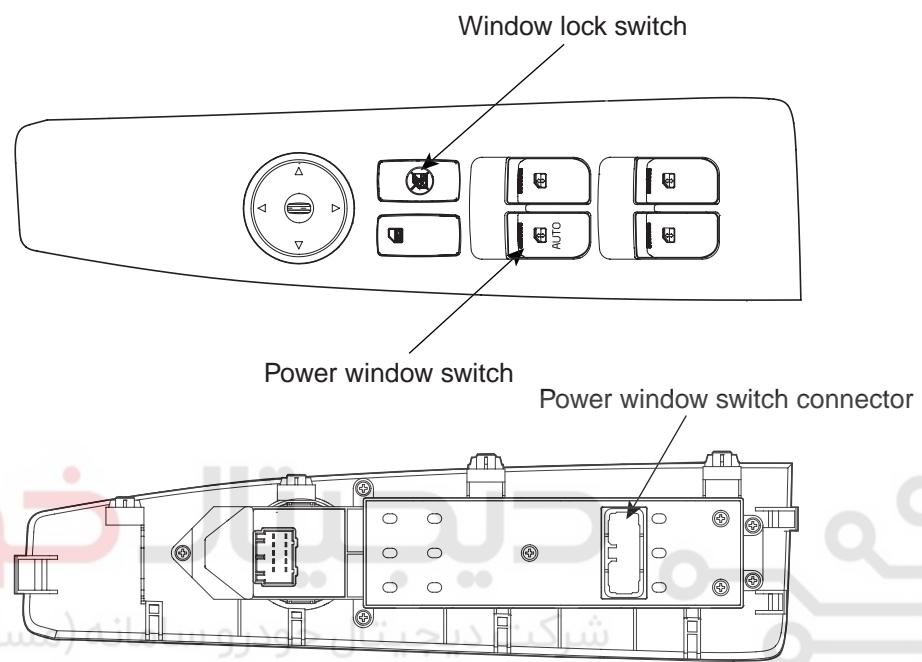


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

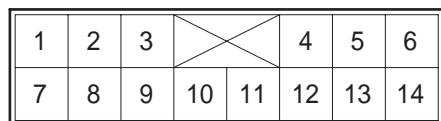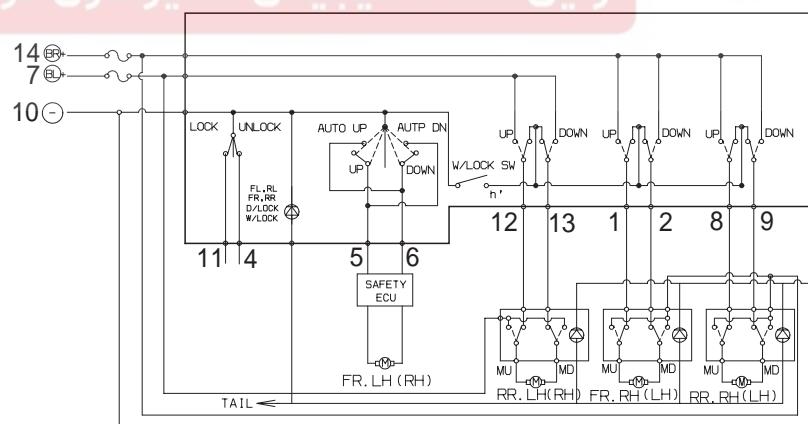



SCMBE6280L

[RHD]

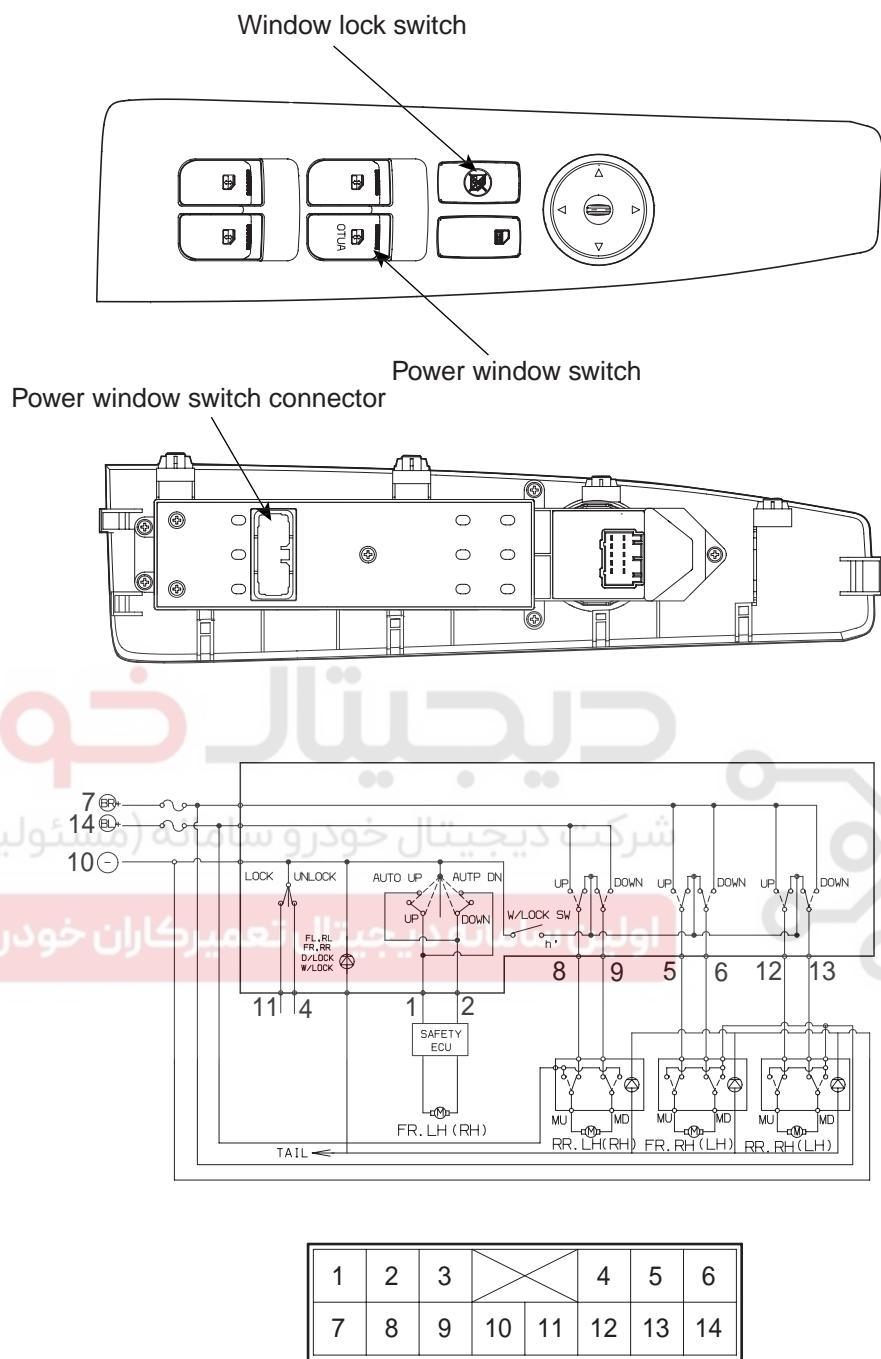

SCMBE6280R


ASSIST POWER WINDOW SWITCH

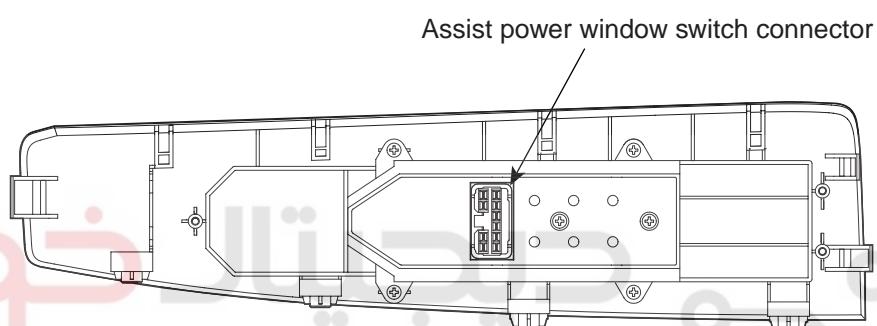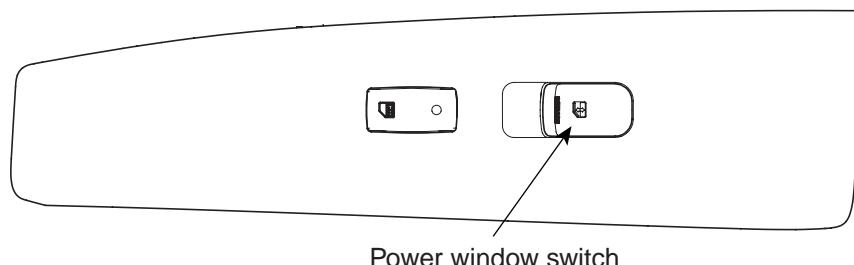

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اتال تعمیرکاران خودرو در ایران



1	2		3	4
5	6	7	8	9 10

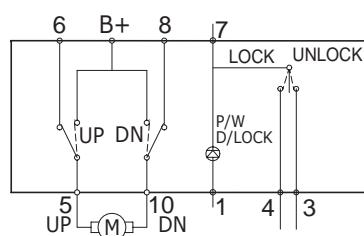


SCMBE6281L

POWER WINDOWS

BE -149

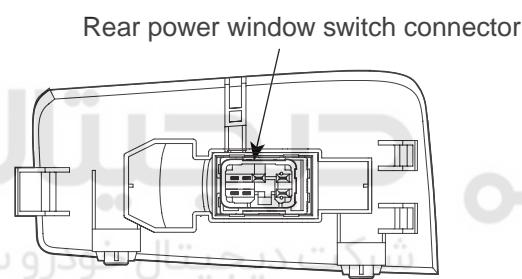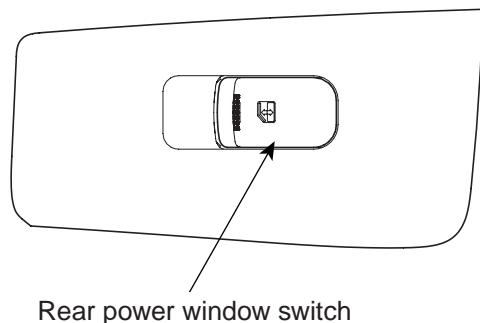REAR POWER WINDOW SWITCH


1	X	2	3
4	5	6	7

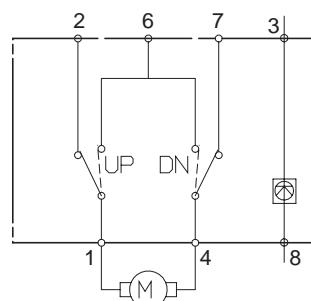


SCMBE6282L

INSPECTION E3DB1E58**POWER WINDOW MAIN SWITCH INSPECTION**

1. Disconnect the negative (-) battery terminal.
2. Remove the front door trim. (Refer to the Body group - front door)
3. Disconnect the 14P connector from the switch.

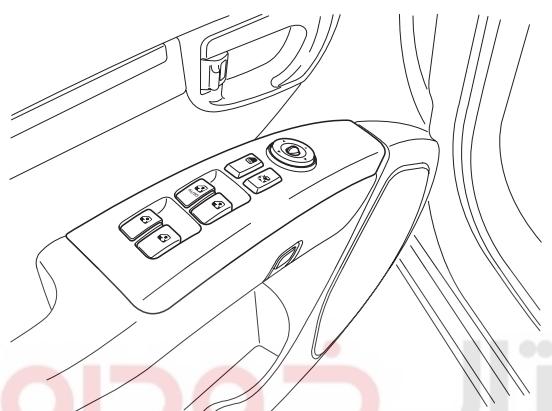
[LHD]

SCM6246L

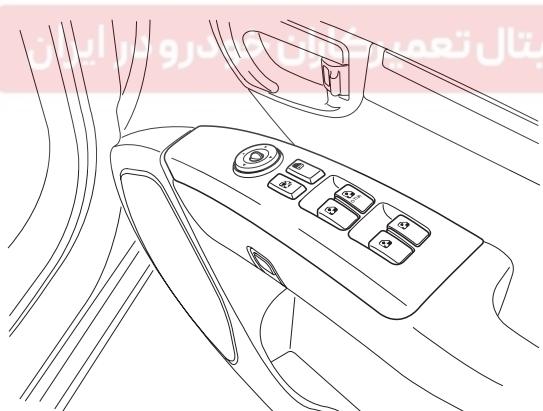[RHD]

SCM6246R

4. Check for continuity between the terminals in each switch position according to the table. If the continuity condition is not normal, replace the switch.

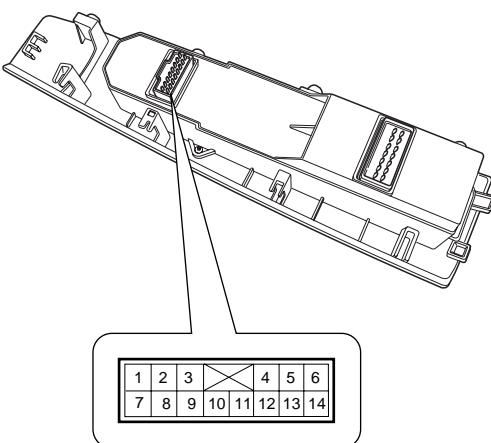

SCM6247L

[LHD]

Position	Terminal	Front left				Front right			
		6	10	5	14	1	2	10	7
UP		○	○	○	○	○	○	○	○
OFF		○	○	○		○	○	○	
DOWN		○		○	○	○	○	○	
Position	Terminal	Rear left				Rear right			
		12	13	10	7	9	7	8	10
UP		○	○	○	○	○	○	○	
OFF		○	○	○		○	○	○	
DOWN		○	○	○	○	○	○	○	

SCM6285L

[RHD]

Position	Terminal	Front left				Front right			
		2	10	1	7	5	6	10	14
UP		○	○	○	○	○	○	○	○
OFF		○	○	○		○	○	○	
DOWN		○		○	○	○	○	○	
Position	Terminal	Rear left				Rear right			
		8	9	10	14	13	14	12	10
UP		○	○	○	○	○	○	○	○
OFF		○	○	○		○	○	○	
DOWN		○	○	○	○	○	○	○	

SCM6285R

POWER WINDOWS

BE -151


POWER WINDOW LOCK SWITCH

Terminal Position	12(8)	10(10)
NORMAL		
LOCK		

SCMBE6284L

REAR POWER WINDOW SWITCH INSPECTION

1. Disconnect the negative (-) battery terminal.
2. Remove the rear door trim. (Refer to the Body group - rear door)
3. Disconnect the 8P connector from the switch.

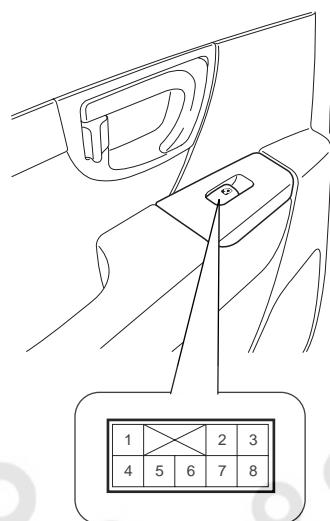

SCMBE6289L



SCMBE6249L

4. Check for continuity between the terminals in each switch position according to the table. If the continuity condition is not normal, replace the switch.

Terminal Position	6	7	2	1	4
UP					
OFF					
DOWN					

SCMBE6291L


Terminal Position	8	10	6	9	5
UP					
OFF					
DOWN					

SCMBE6288L


POWER WINDOW RELAY

INSPECTION EBFFD3A3

1. Disconnect the negative (-) battery terminal.
2. Remove the junction box.
3. Check for continuity between the terminals.
4. There should be continuity between the No.6 in the I/P-F and No.14 terminal in the I/P-D when power and ground are connected to the No.10 terminal in the I/P-E and No.2 terminal in the I/P-J.
5. There should be no continuity between the No.6 terminal in the I/P-F and No.14 terminal in the I/P-D when power is disconnected.

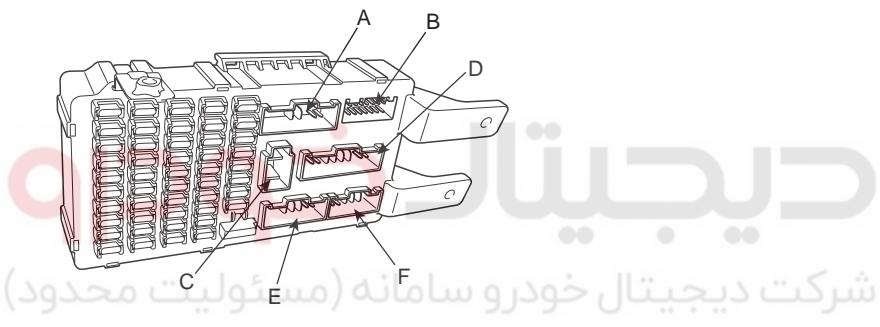

اولین سامانه دیجیتال خودرو در ایران

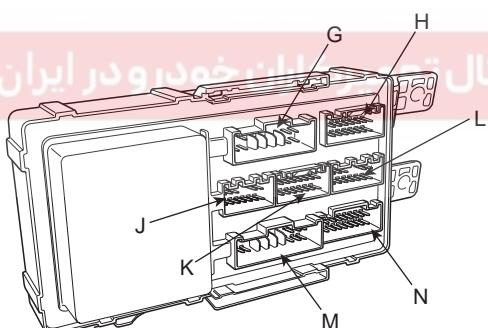

SCMBE6292D

Terminal Position	I/P-D (14 or 15)	I/P-F (6)	I/P-J (2)	I/P-E (10)
Disconnected			<input type="circle"/>	<input type="circle"/>
Connected	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>

SCMBE6293L

WINDSHIELD DEICER


COMPONENT LOCATION

E58B0AF7

The parts with asterisk(*) :

This illustration shows the LHD type.

RHD type is symmetrical.

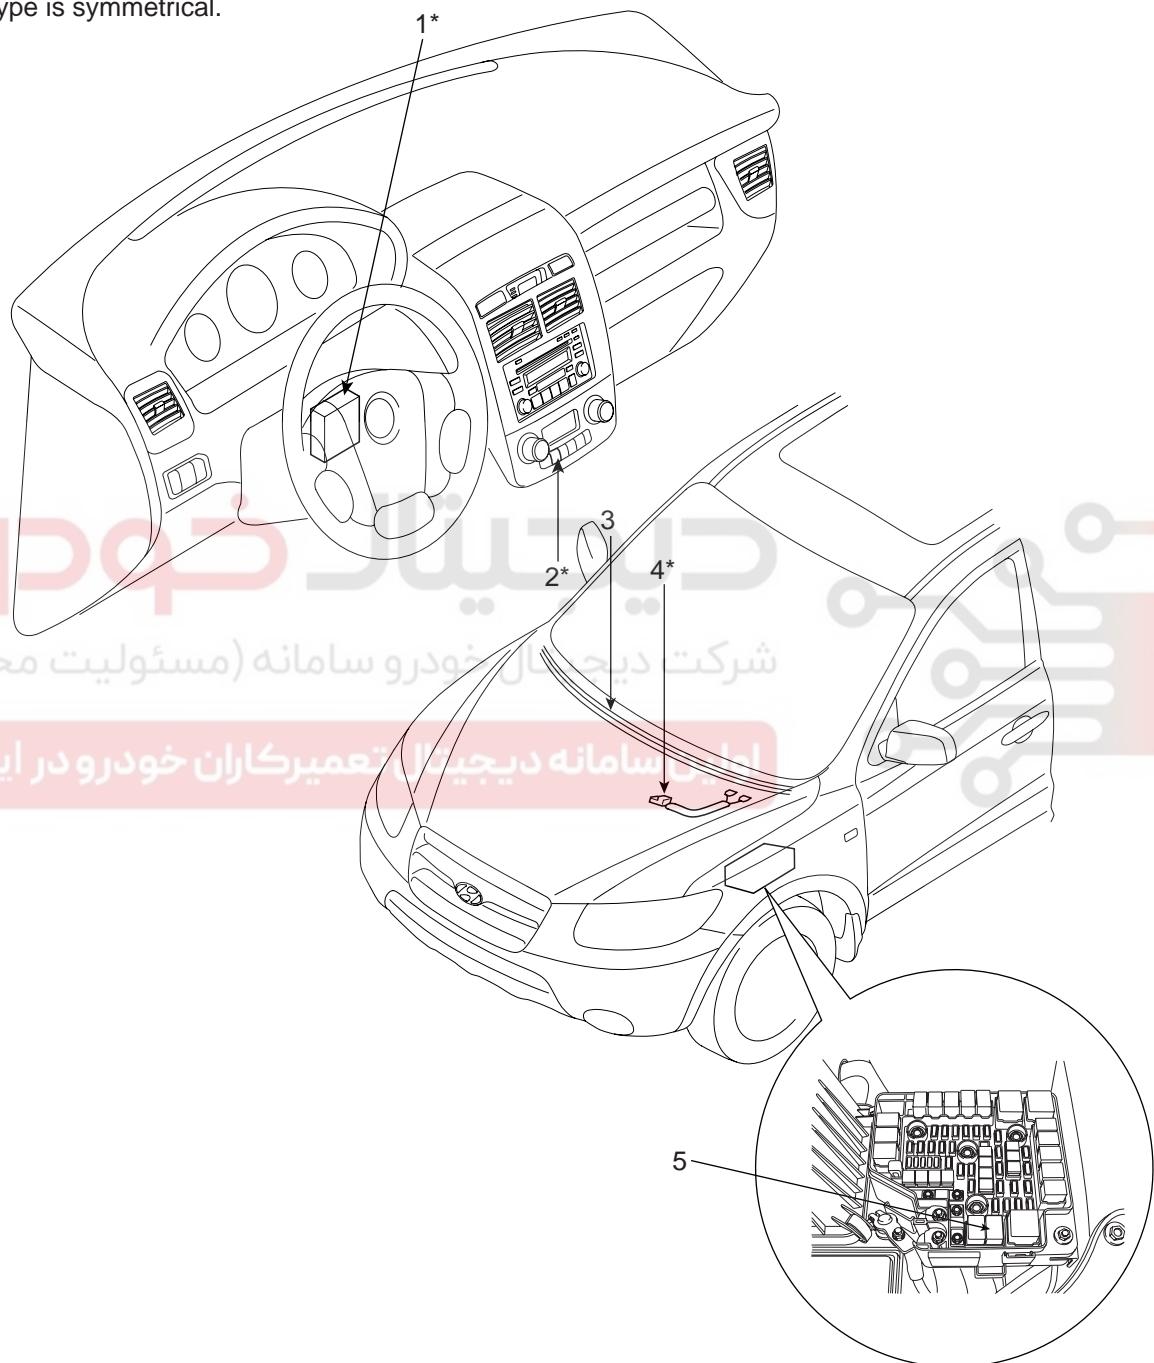

1. Body control module
2. Windshield deicer switch
3. Windshield deicer

4. Deicer connector
5. Windshield deicer relay

SCMBE6300L

DESCRIPTION

EA1AF9C9


Windshield deicer system prevent windshield wiper from freezing in the winter season. It consists of deicer in the lower part of windshield, switch and relay. Body control module receives an input signal from the deicer switch, then controls relay. Operating condition is the same that of rear window defogger system.

Since the generator "L" is switched ON, if the deicer switch is ON, then deicer output is ON for 20 minutes.

WINDSHIELD DEICER**INSPECTION**


E516D0CB

1. Remove the cowl top cover.(Refer to the wiper)
2. Disconnect the windshield deicer connector (A) from the wiper motor linkage.

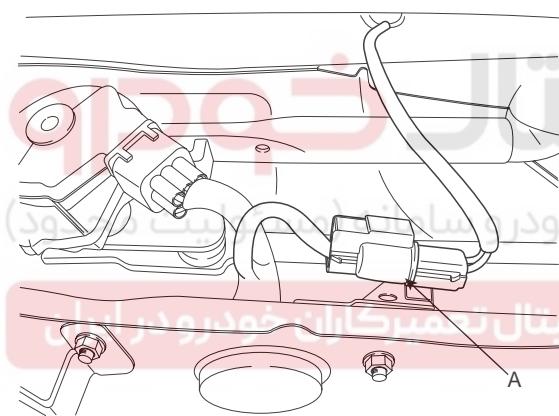

SCMBE6301D


3. Check for continuity between the terminals of deicer lines.

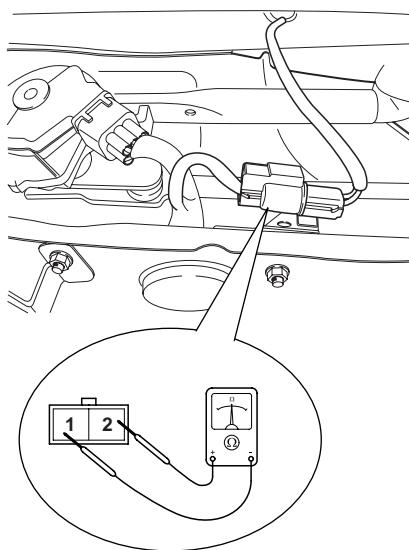

SCMBE6302D

4. Turn the ignition switch ON and the windshield deicer switch ON, then measure the voltage between the terminals of harness side deicer connector.

O K : approx. Battery voltage (12V)

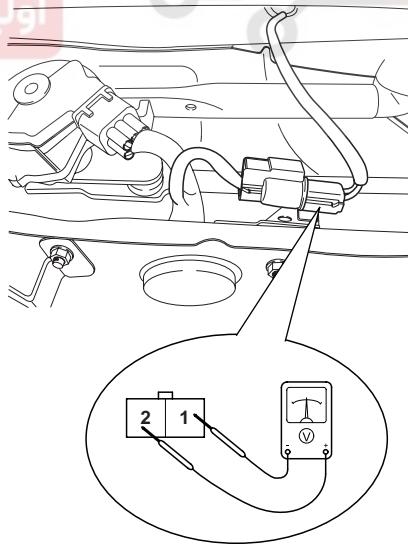

SCMBE6303D


WINDSHIELD DEICER

BE -155

WINDSHIELD DEICER SWITCH


INSPECTION EA198B67

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad center speaker grill (A).

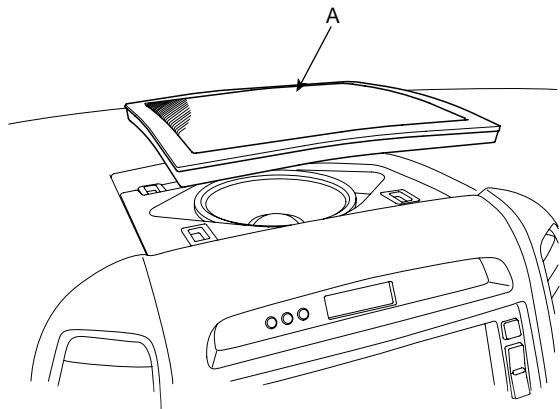


4. Remove the center facia panel(A) after loosening 2 screws. Take care not to damage fixing clips. (Refer to the Body group - Crash pad)

▷: Screw, 2

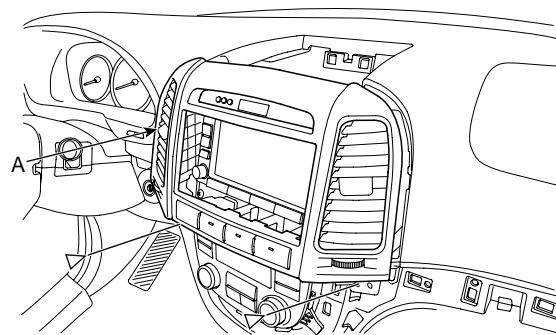

SCMBE6010L

3. Remove the crash pad center speaker (A) after loosening 2 screws.

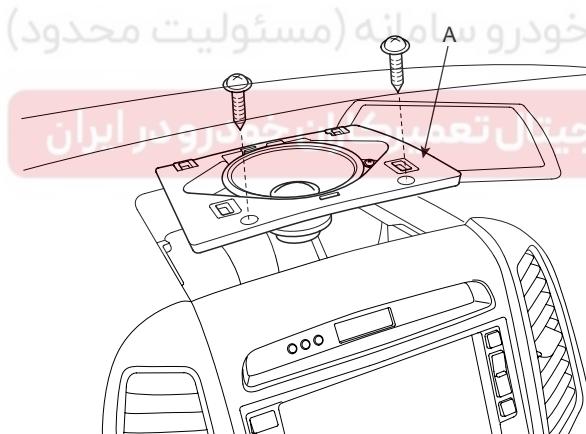



SCMBE6014D

5. Disconnect connectors.

6. Using an ohmmeter, inspect the continuity between the terminals after removing controller.


[LHD]

SCMBE6015D

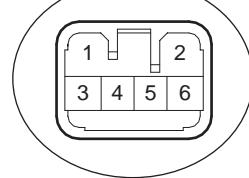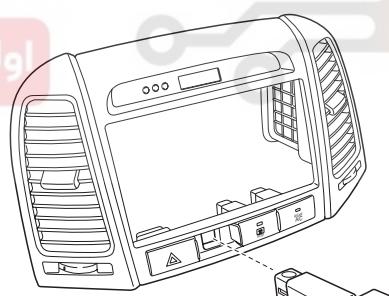

SCMBE6304D

[RHD]

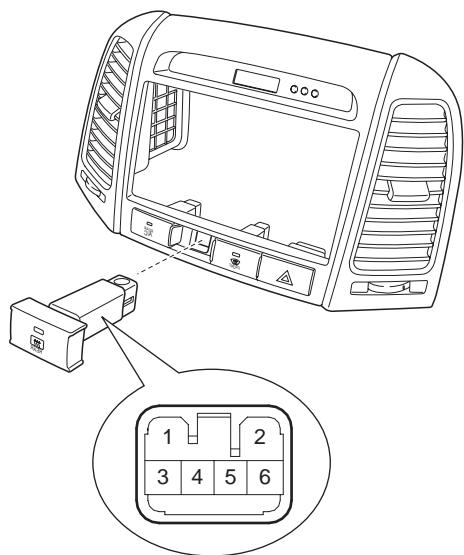

SCMBE6304R

Position Terminal	ON(PUSH)	OFF(FREE)	Remark
1	○		
4	○	○	
3	○	○	IND+
2	○	○	ILL-
6	○	○	ILL+

SCMBE6305L





WINDSHIELD DEICER

BE -157

WINDSHIELD DEICER RELAY


INSPECTION EF0EF7EE

1. Disconnect the negative (-) battery terminal.
2. Remove the windshield deicer relay from the engine room relay box.
3. There should be continuity between the No.30 and No.87 terminal when power and ground are connected to the No.85 terminal and No.86 terminal.
4. There should be no continuity between the No.30 terminal and No.87 terminal when power is disconnected.

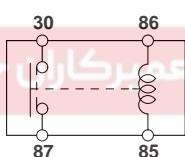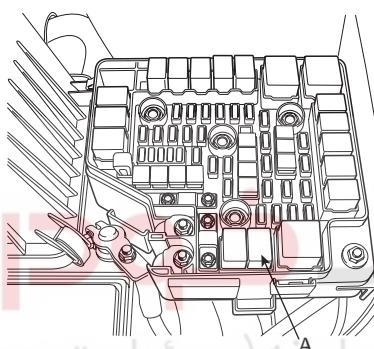

شرکت دیجیتال خودرو سامانه (مسئلہ محدود)

اولین سامانه دیجیتال خودرو سامانه



SCMBE6306D

Terminal Power	85	86	30	87
Disconnected	<input type="circle"/>	<input type="circle"/>		
Connected	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>

SCMBE6307L


REAR WINDOW DEFOGGER

COMPONENT LOCATION EED7B9CA

The parts with asterisk(*) :

This illustration shows the LHD type.

RHD type is symmetrical.

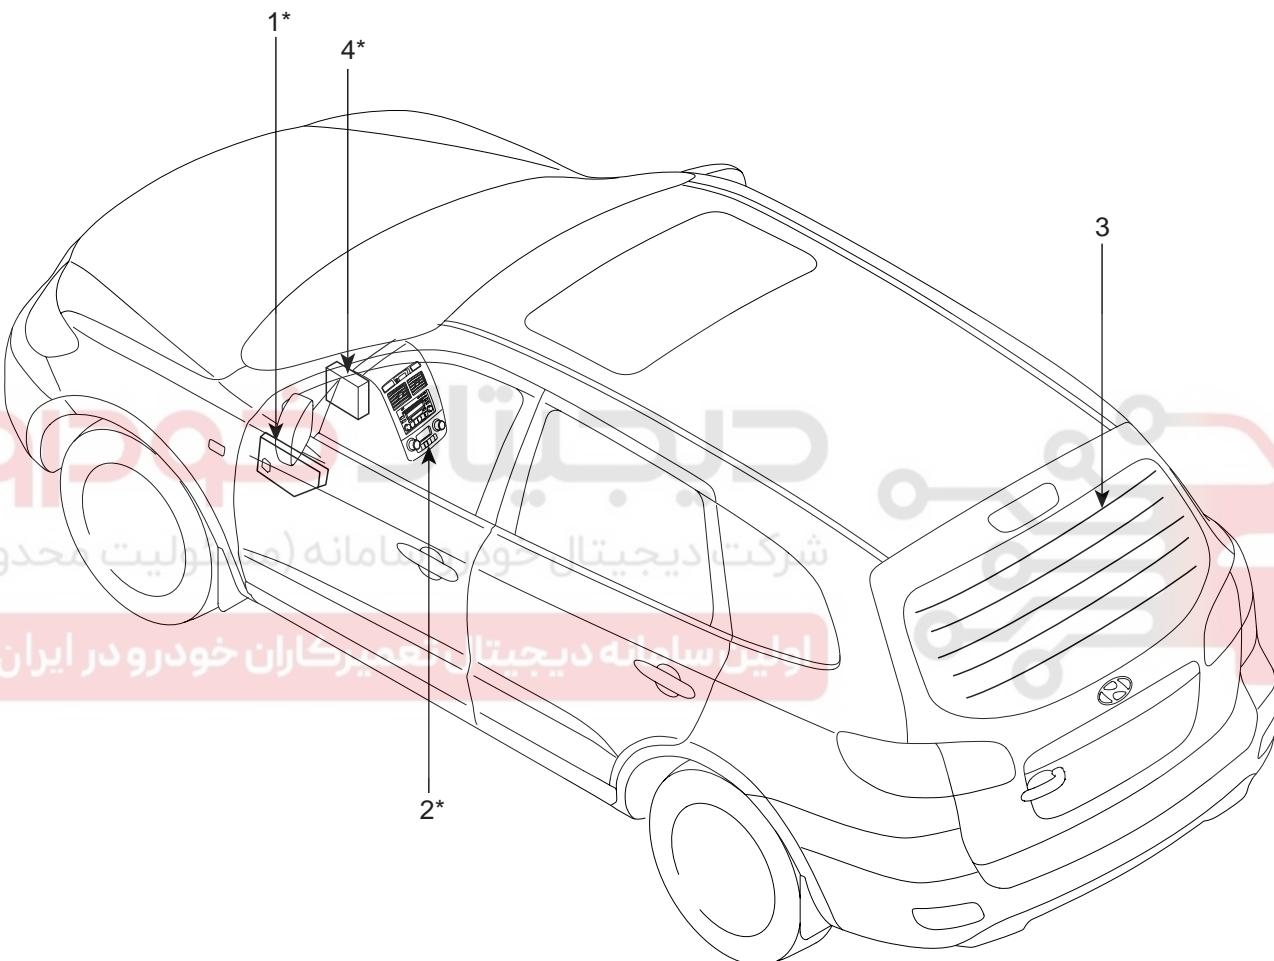

1. Junction box (Rear window defogger)
 2. Rear window defogger switch

3. Rear window defogger
 4. Body control module

SCMBE6310L

REAR WINDOW DEFOGGER


BE -159

REAR WINDOW DEFOGGER
PRINTED HEATER


INSPECTION EF6BBBEE

CAUTION

Wrap tin foil around the end of the voltmeter test lead to prevent damaging the heater line. Apply finger pressure on the tin foil, moving the tin foil along the grid line to check for open circuits.

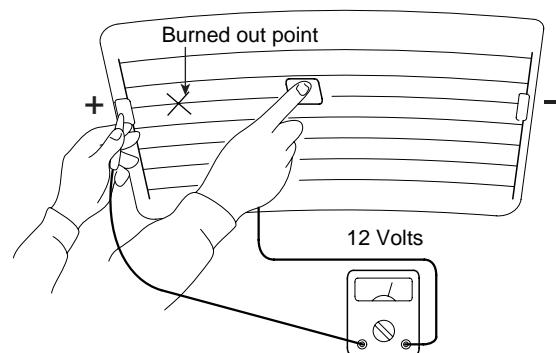


ETA9165C

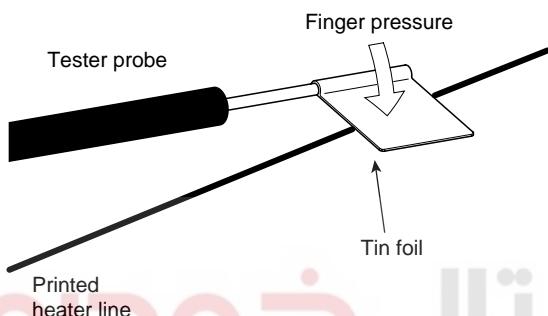


1. Turn on the defogger switch and use a voltmeter to measure the voltage of each heater line at the glass center point. If a voltage of approximately 6V is indicated by the voltmeter, the heater line of the rear window is considered satisfactory.

3. If a heater line is burned out between the center point and (-) terminal, the voltmeter will indicate 0V.

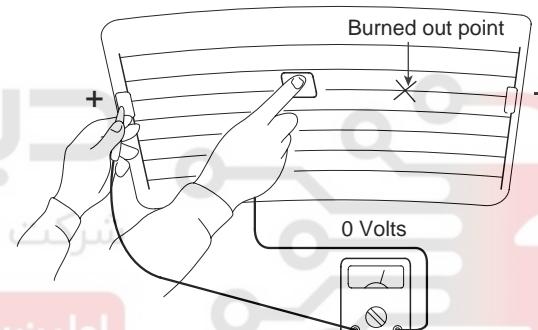

ETA9165D

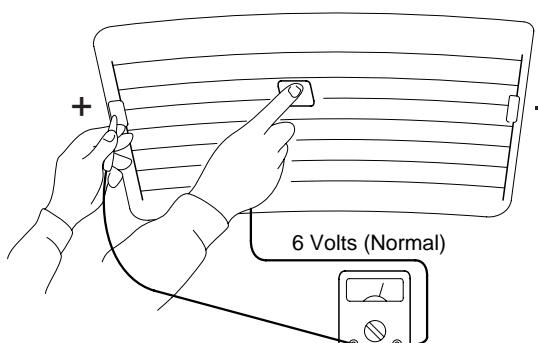


ETA9165B

2. If a heater line is burned out between the center point and (+) terminal, the voltmeter will indicate 12V.


4. To check for open circuits, slowly move the test lead in the direction that the open circuit seems to exist. Try to find a point where a voltage is generated or changes to 0V. The point where the voltage has changed is the open-circuit point.

Voltage changes before and after open circuited point

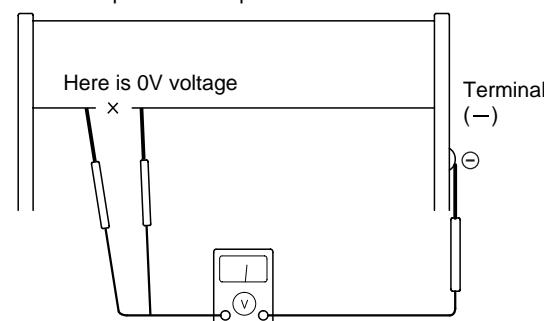

ETA9165E

5. Use an ohmmeter to measure the resistance of each heater line between a terminal and the center of a grid line, and between the same terminal and the center of one adjacent heater line. The section with a broken heater line will have a resistance twice as that in other sections. In the affected section, move the test lead to a position where the resistance sharply changes.

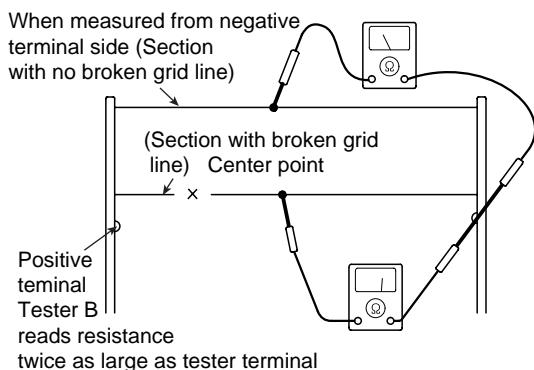

REPAIR OF BROKEN HEATER LINE

Prepare the following items :

1. Conductive paint.
2. Paint thinner.
3. Masking tape.
4. Silicone remover.
5. Using a thin brush :

Wipe the glass adjacent to the broken heater line, clean with silicone remover and attach the masking tape as shown. Shake the conductive paint container well, and apply three coats with a brush at intervals of about 15 minutes apart. Remove the tape and allow sufficient time for drying before applying power. For a better finish, scrape away excess deposits with a knife after the paint has completely dried. (Allow 24 hours).




ETA9165G

REAR WINDOW DEFOGGER

BE -161

REAR WINDOW DEFOGGER
SWITCHINSPECTION E2FDCAC7


1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad center speaker grill (A).

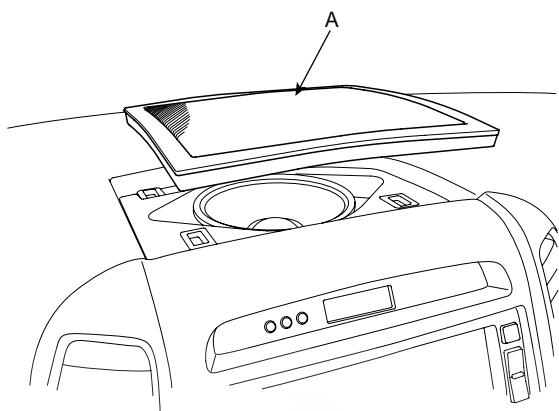

SCMBE6014D

4. Remove the center facia panel(A) after loosening 2 screws. Take care not to damage fixing clips. (Refer to the Body group - Crash pad)


▷ : Screw, 2

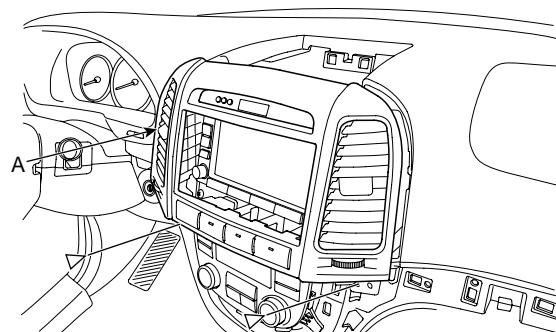

SCMBE6010L

3. Remove the crash pad center speaker (A) after loosening 2 screws.


شركة ديجيتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال خودرو در ایران

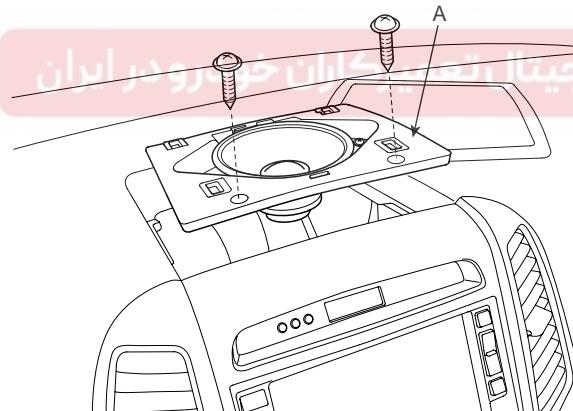

SCMBE6015D


5. Disconnect connectors.
6. Using an ohmmeter, inspect the continuity between the terminals after removing controller.

[LHD]

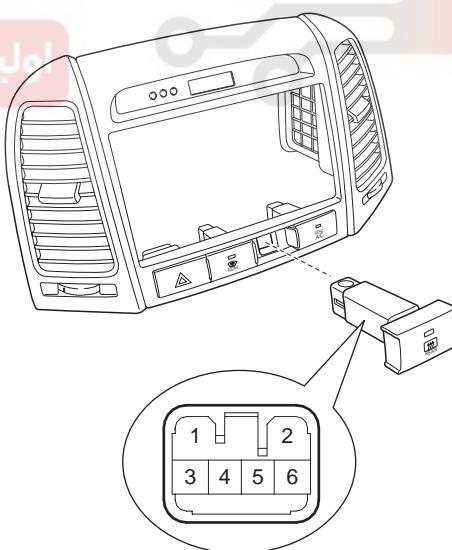

SCMBE6311D

[RHD]

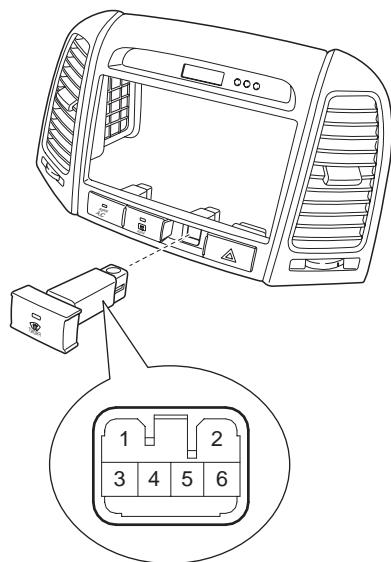

SCMBE6311R

Position Terminal	ON(PUSH)	OFF(FREE)	Remark
1	○		
4	○	○	
3	○	○	IND+
2	○	○	ILL-
6	○	○	ILL+

SCMBE6305L




REAR WINDOW DEFOGGER


BE -163

REAR WINDOW DEFOGGER
RELAYINSPECTION EBA31AE2

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad lower panel. (Refer to the Body group- Crash pad)
3. Remove the junction box.
4. There should be continuity between the No.6 of I/P-F and No.14 terminal of I/P-F when power and ground are connected to the No.10 terminal of I/P-E and No.2 terminal of I/P-J.
5. There should be no continuity between the No.6 terminal of I/P-F and No.14 terminal of I/P-D when power is disconnected.

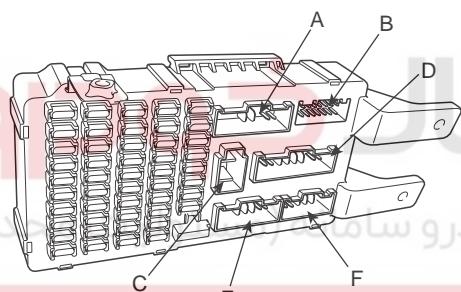

اولین سامانه دیجیتال تعمیر کاران خودرو در ایران

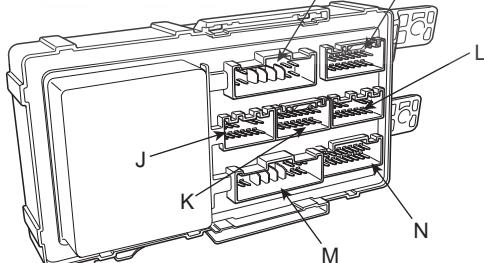

SCMBE6292D

Terminal Position	I/P-D (14 or 15)	I/P-F (6)	I/P-J (2)	I/P-E (10)
Disconnected			<input type="circle"/>	<input type="circle"/>
Connected	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>	<input type="circle"/>

SCMBE6293L

REAR WINDOW DEFOGGER TIMER


INSPECTION

E39E3E4B

1. If the Defogger SW is ON after the ALT "L" is ON in the state that the IGN1 SW is ON, then the Defogger output shall be ON for 20 minutes. (Operating in the state of the ENGINE RUNNING)
2. If the DEFOGGER SW is ON again while the DEFOGGER output is ON, then the DEFOGGER output shall be OFF.
3. If the ALT "L" is OFF or IGN1 is OFF while the DEFOGGER output is ON, then the DEFOGGER output shall be OFF.
4. If the ALT "L" > 10 volts, then it shall be in the Engine Running State (ALT "L" shall be ON); if the ALT "L" < 5 volts, then it shall be in the Engine Stop State (ALT "L" shall be OFF). Also, if the ALT "L" is more than 5 and less than 10 volts, then the former state shall be maintained.
5. If the defogger SW is pressed and the ALT "L" is ON, there shall be no the DEFOGGER relay output.



اولین سامانه دیجیتال خودرو سامانه (مسئولیت محدود)

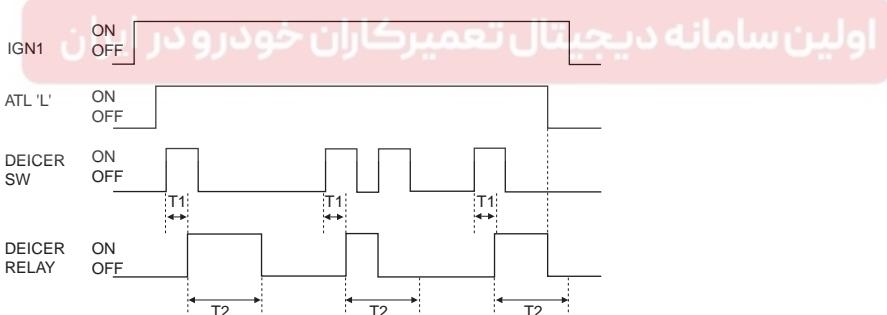

SCMBE6166L


T1 : 60 ± 20 msec, T2 : 20 ± 1 min.

WINDSHIELD WIPER / WASHER

COMPONENT LOCATION

E2A93BAD

The parts with asterisk(*) :
 This illustration shows the LHD type.
 RHD type is symmetrical.

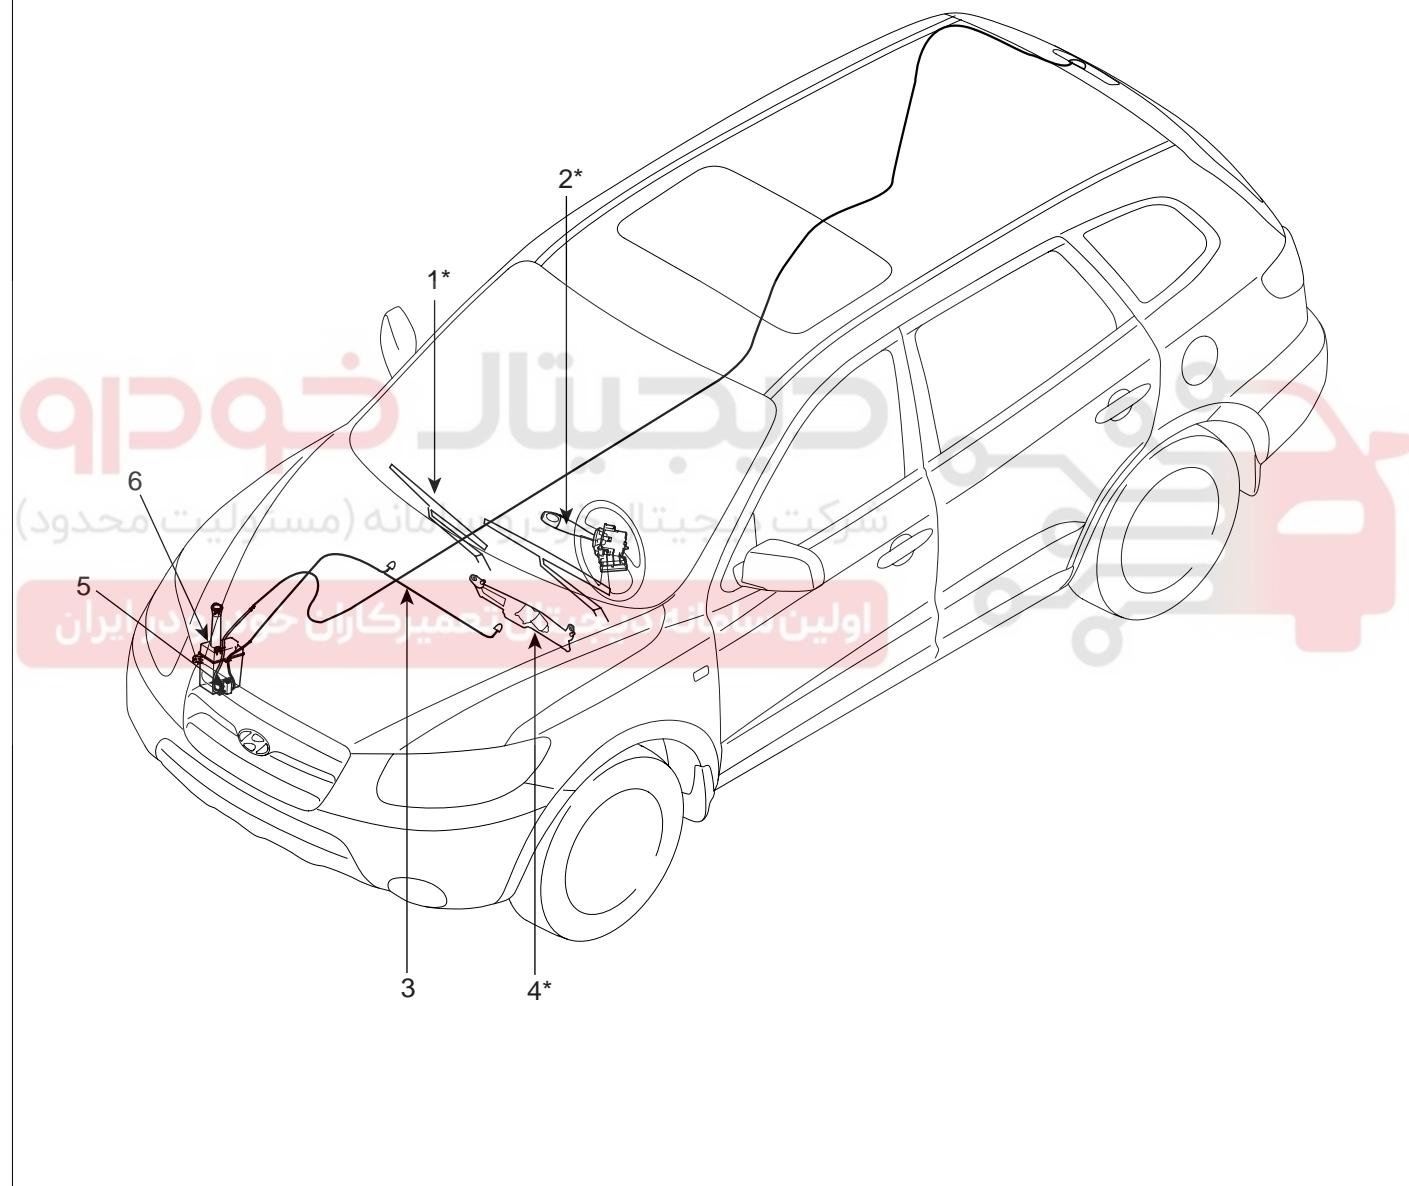

1. Windshield wiper arm & blade
2. Wiper & washer switch
3. Windshield washer hose


4. Windshield wiper motor & linkage
5. Washer motor
6. Washer reservoir

SCMBE6320L


TROUBLESHOOTING

E70074B4

1. Wiper low and wiper high do not work.

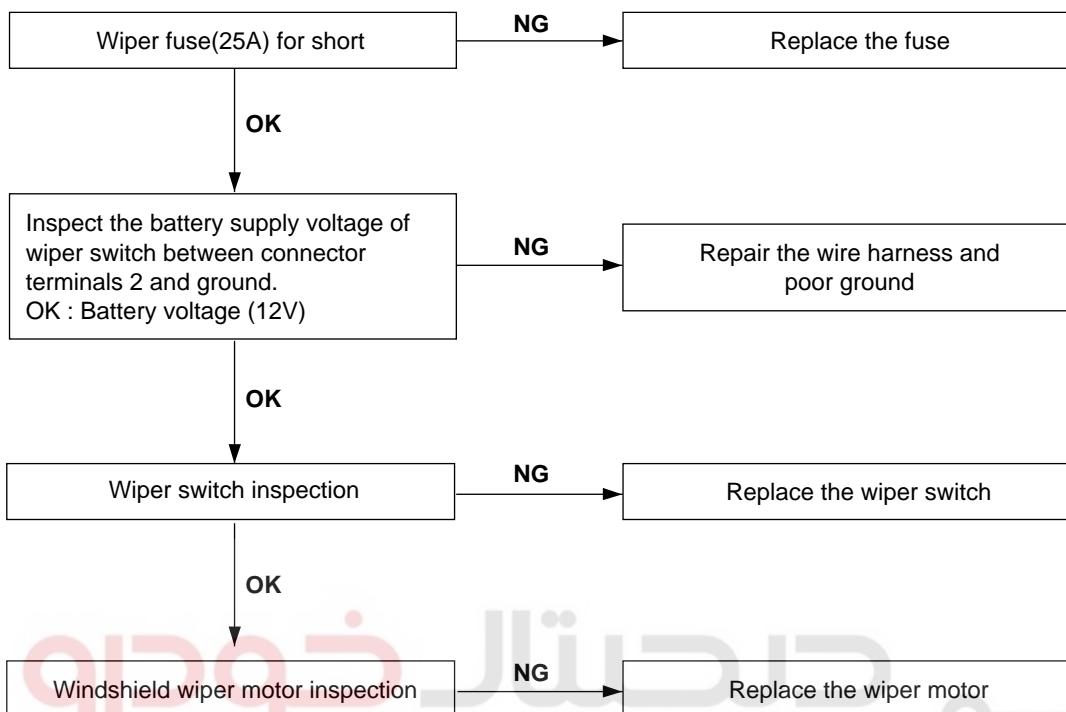

2. When washer switch is on, wiper does not work.

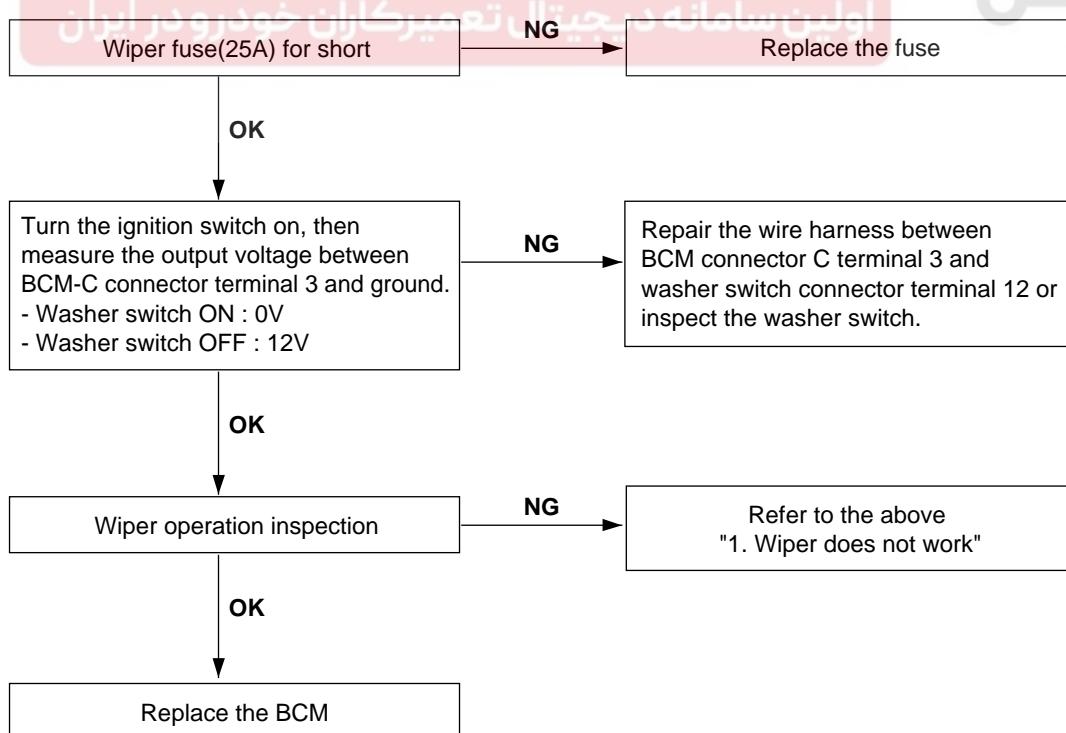

SCMBE6333L


WINDSHIELD WIPER / WASHER SWITCH

[RHD]


REPLACEMENT

E64A45F0

1. Disconnect the negative (-) battery terminal.
2. Remove the steering column upper and lower shrouds (A) after removing 3 screws.

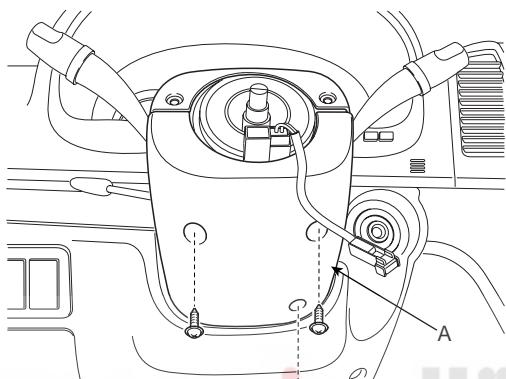

SCMBE6321D

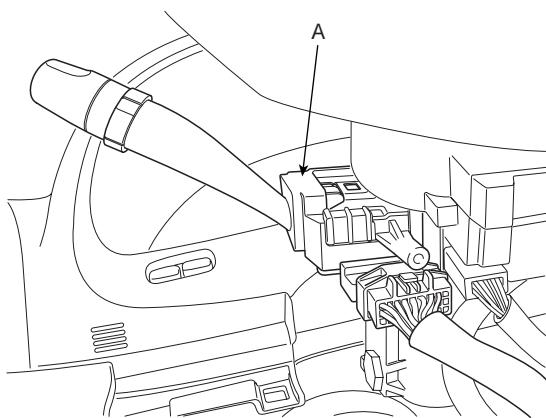

SCMBE6322R


4. Installation is the reverse of removal.

کیفیتی الکترونیک
شرکت دیجیتال تعمیرکاران خودرو در ایران



[LHD]

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

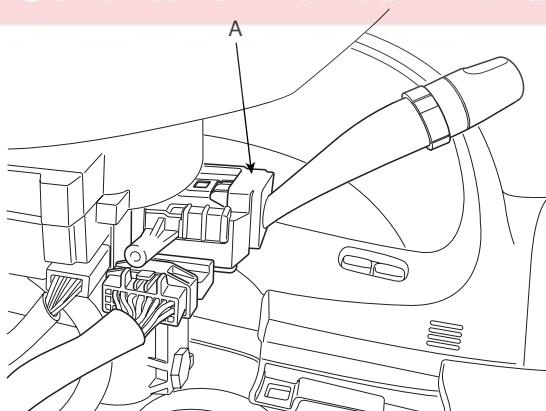


SCMBE6322D

INSPECTION

E7A21203


1. Check for continuity between the terminals while operating the wiper and washer switch. If it is not normal condition, replace wiper and wiper switch.

[LHD]

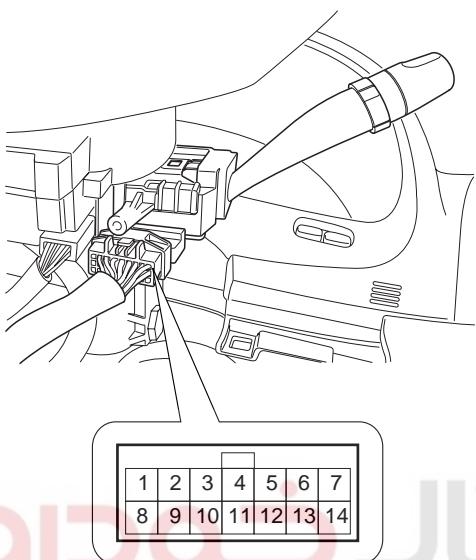

SCMBE6050D

[RHD]

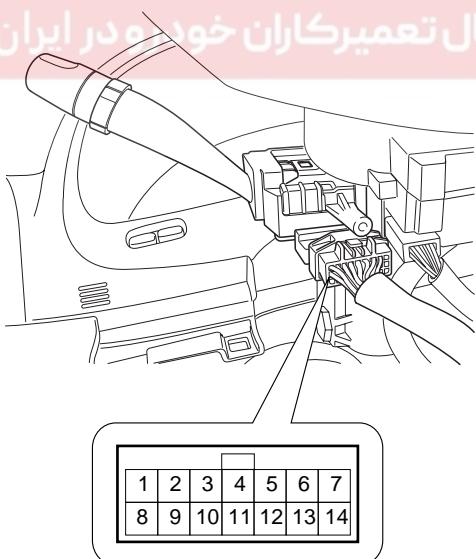

SCMBE6050R

WIPER SWITCH

[STANDARD]

() : RHD

Terminal Position	1 (7)	2 (6)	3 (5)	4 (4)	5 (3)	6 (2)	13 (9)	14 (8)
MIST					○—○			
OFF		○—○						
INT	○—○			○—○	○—○	○—○	○—○	○—○
LOW	○—○		○—○					
HI	○—○		○—○					

SCMBE6051L

[RAIN SENSOR]

() : RHD

Terminal Position	1 (7)	2 (6)	3 (5)	4 (4)	5 (3)	6 (2)	13 (9)	14 (8)
MIST					○—○			
OFF		○—○						
AUTO	○—○			○—○	○—○	○—○	○—○	○—○
LOW	○—○		○—○					
HI	○—○		○—○					

SCMBE6052L

WASHER SWITCH

() : RHD

Terminal Position	5(3)	7(1)
OFF		
ON	○—○	○—○

SCMBE6053L

WINDSHIELD WIPER / WASHER

BE -169

INSPECTION E8B9F4EC

1. Multifunction switch operates head lamps and wiper by communicating with BCM through LIN communication.
2. Check BCM input/output value of each position of multifunction switch when you inspect the module whether faulty or not.
3. Select model and BCM menu.

1. HYUNDAI VEHICLE DIAGNOSIS ▼
MODEL : SANTAFE 06-
01. ENGINE (GASOLINE)
02. ENGINE (DIESEL)
03. AUTOMATIC TRANSAXLE
04. ABS/ESP
05. SRS-AIRBAG
06. ELEC.POWER STEERING
07. FULL AUTO AIR/CON.
08. BODY CONTROL MODULE

SCMBE6385L

1. HYUNDAI VEHICLE DIAGNOSIS ▼
MODEL : SANTAFE 06-
SYSTEM : BODY CONTROL MODULE
01. GENERAL
02. NAS

SCMBE6355L

4. Select "Current data" and wiper.

1. HYUNDAI VEHICLE DIAGNOSIS
MODEL : SANTAFE 06-
SYSTEM : BODY CONTROL MODULE
01. DIAGNOSTIC TROUBLE CODES
02. CURRENT DATA
03. FLIGHT RECORD
04. ACTUATION TEST
05. SIMU-SCAN
06. DATA SETUP(UNIT CONV.)

SCMBE6356L

5. Check input/output value of washer & wiper switch.

1.11 CURRENT DATA 01/13	
WASHER SW	OFF
WIPER INT SW	OFF
DEFROSTER SW	OFF
HEAD LAMP WASH SW	OFF
DEFROSTER REPLAY	OFF
HEAD LAMP WASH RLY	OFF
MIST SW	OFF
FIX	SCRN
FULL	PART
GRPH	HELP


SCMBE6358L

FRONT WIPER MOTOR

COMPONENT LOCATION EDBF6DB7

This illustration shows the LHD type.

RHD type is symmetrical.

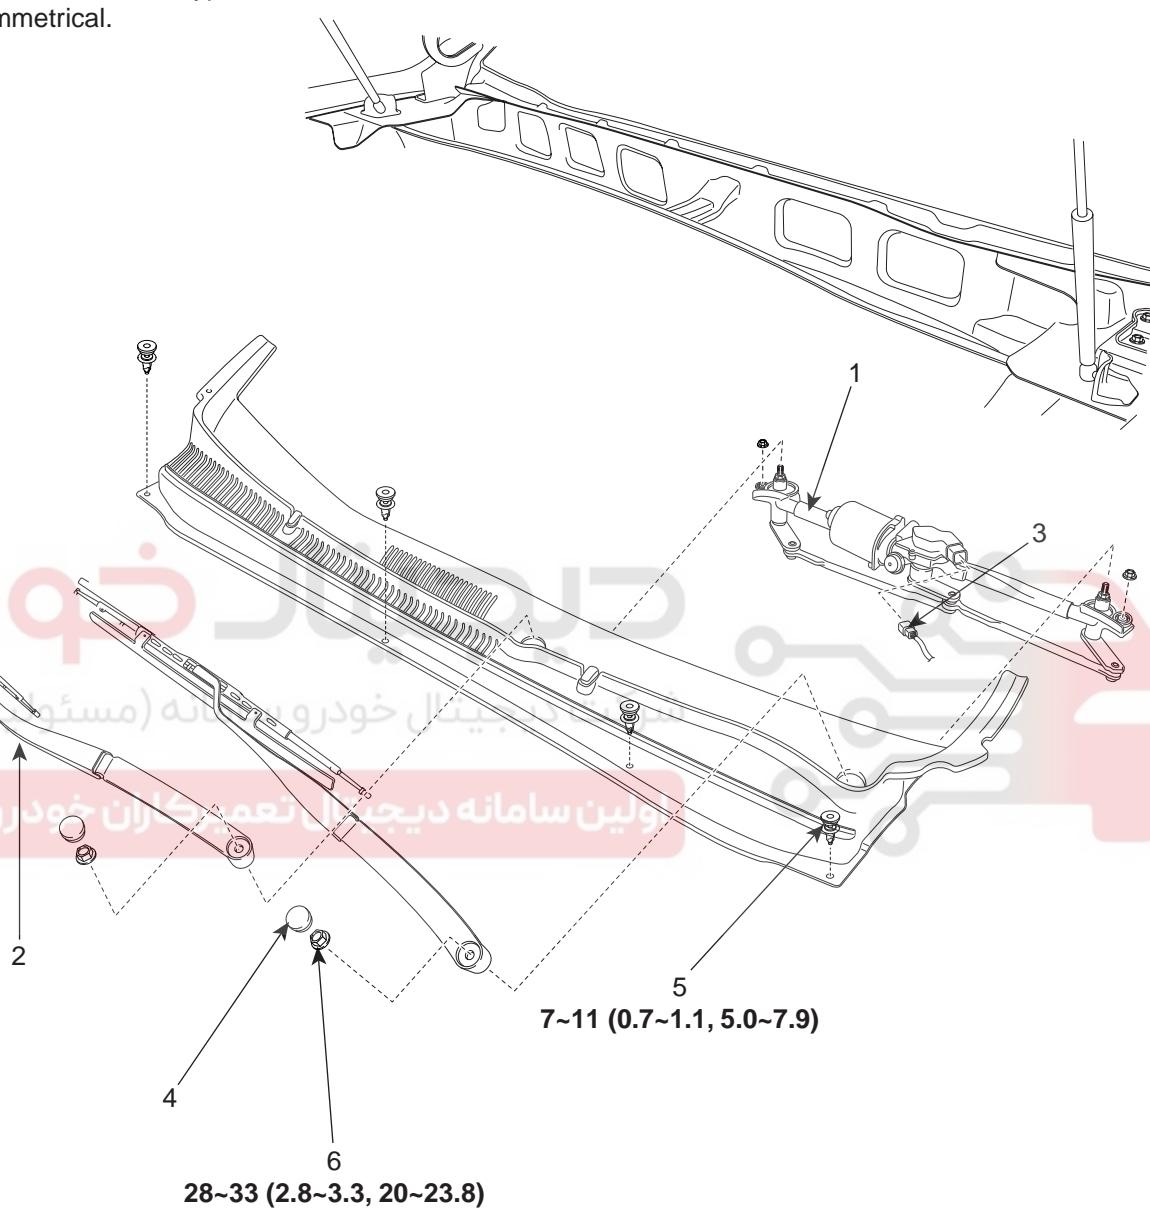

TORQUE : Nm (kgf·m, lbf·ft)

- 1. Wiper motor & linkage assembly
- 2. Wiper arm & blade
- 3. Wiper motor connector

- 4. Cap
- 5. Rivet
- 6. Nut

SCMBE6340L

WINDSHIELD WIPER / WASHER

BE -171


INSPECTION EF6CA691

SPEED OPERATION CHECK


1. Remove the connector from the wiper motor.
2. Attach the positive (+) lead from the battery to terminal 6 and the negative (-) lead to terminal 5.
3. Check that the motor operates at low speed.
4. Connect the positive (+) lead from the battery to terminal 4 and the negative (-) lead to terminal 5.
5. Check that the motor operates at high speed.

AUTOMATIC STOP OPERATION CHECK

1. Operate the motor at low speed using the stalk control.
2. Stop the motor operation anywhere except at the off position by disconnecting terminal 6.
3. Connect terminals 3 and 6.
4. Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 5.
5. Check that the motor stops running at the off position.

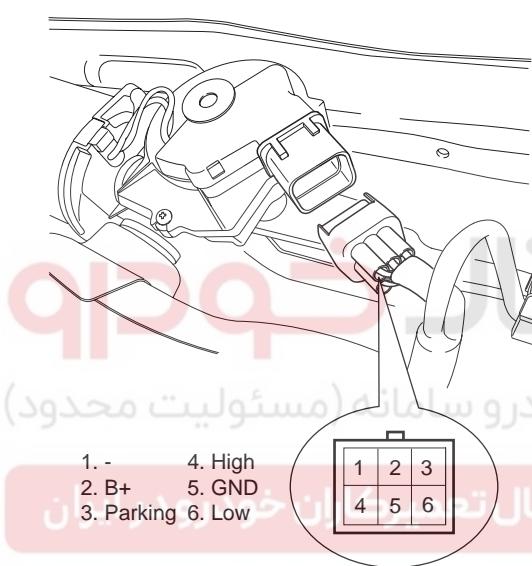

SCMBE6343L

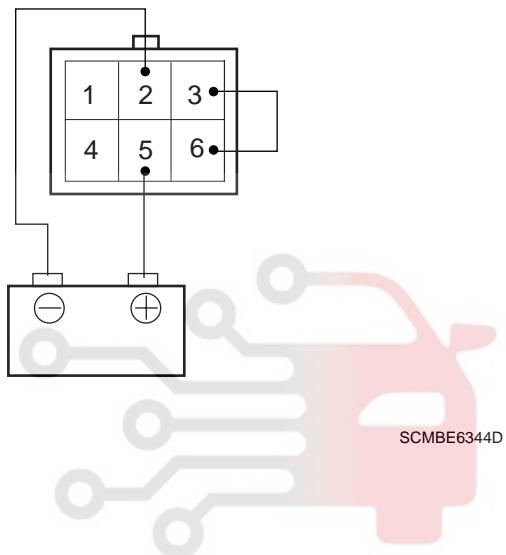


REPLACEMENT

EAC38CCF

1. Remove the windshield wiper arm and blade after removing a nut (A).


TORQUE: 28~32 Nm (2.8~3.2 kgf.m, 20~23.1 lbf.ft)

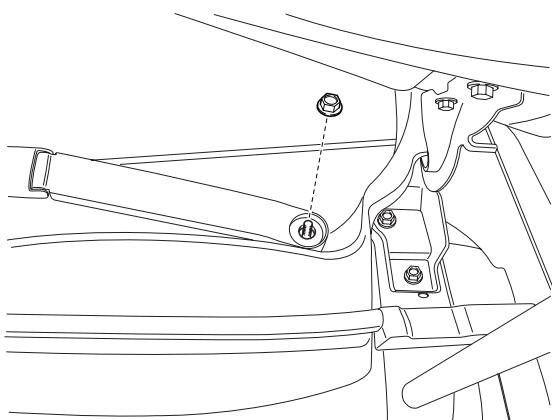

SCMBE6341D

3. Remove the windshield wiper motor and linkage assembly after removing 2 bolts. Disconnect the wiper motor connector and windshield deicer connector from the wiper motor & linkage assembly.

TORQUE: 7-11Nm (0.7-1.1, kgf.m, 5.0-7.9 lbf.ft)

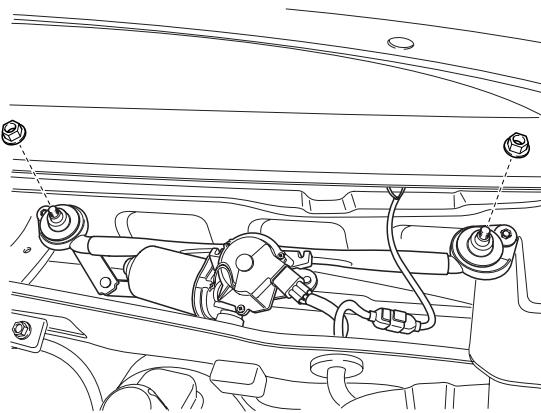

SCMBE6342D


2. Remove the weather strip and the cowl top cover (A) after removing 4 rivets.

4. Installation is the reverse of removal.


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو ایران

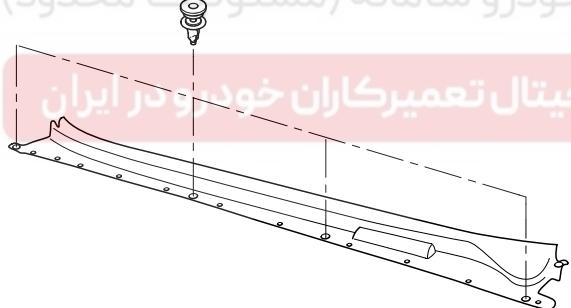

ATIE362C

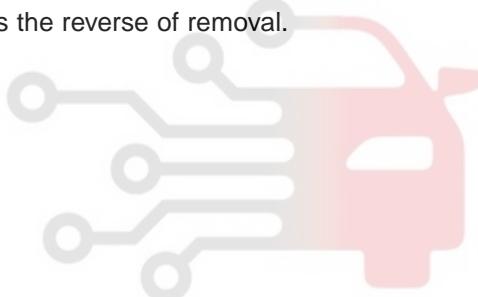


WINDSHIELD WIPER / WASHER

BE -173

INSPECTION EBFE4E3A

1. Install the wiper arm and blade to the specified position.



Specified position	A	B
Distance [in (mm)]	1.18 ± 0.2 (30 ± 5)	1.18 ± 0.2 (30 ± 5)

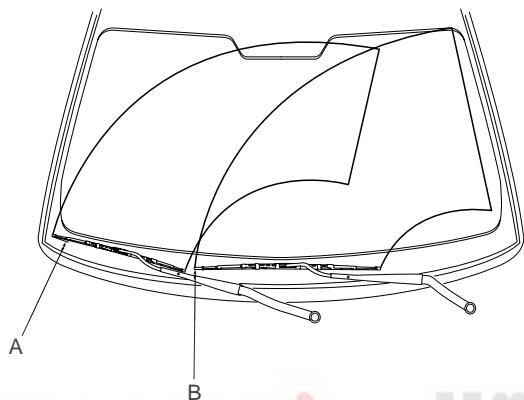

ATGE362C

2. Set the washer nozzle on the specified spray position.

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

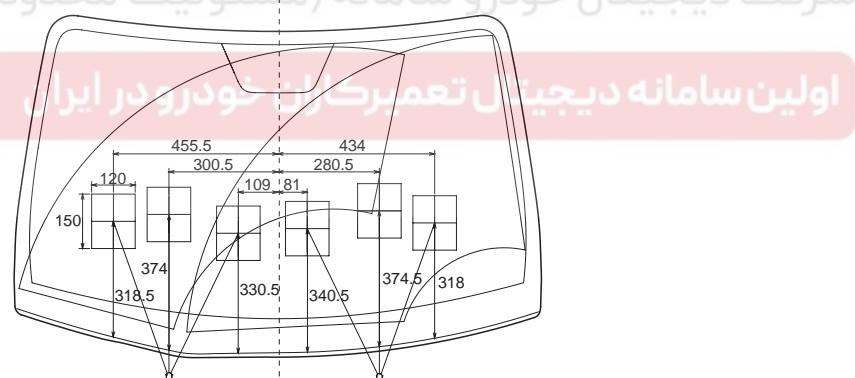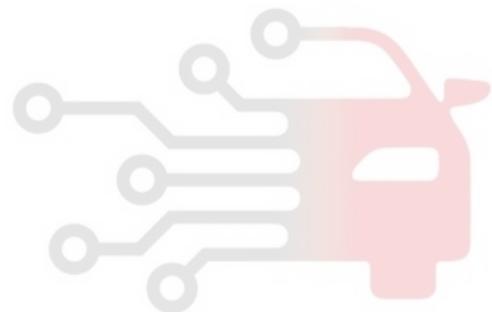


Unit : mm

SCMBE6345L

FRONT WASHER MOTOR

INSPECTION E40BA24E

1. With the washer motor connected to the reservoir tank, fill the reservoir tank with water.
2. Connect positive (+) battery cables to terminal 1 and negative (-) battery cables to terminal 2 respectively.
3. Check that the motor operates normally and the washer motor runs and water sprays from the front nozzles.
4. If they are abnormal, replace the washer motor.

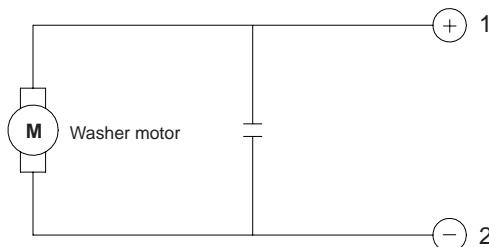


[Windshield washer motor]

SCMBE6346L


WASHER FLUID LEVEL SENSOR SWITCH

1. Disconnect the negative(-) battery terminal.
2. Drain the washer fluid less than 650 cc.
3. Check for continuity between the No. 1 and No.2 terminal in each float position.
There should be continuity when the float is down.
There should be no continuity when the float is up.
4. If the continuity is not as specified, replace the washer fluid level switch

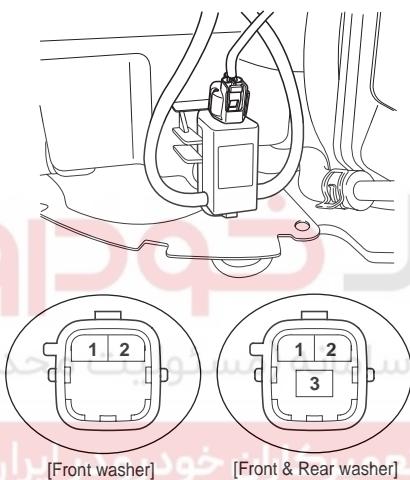

[Front washer] [Front & Rear washer]
 1. Windshield washer (+) 1. Windshield washer (+)
 2. Ground 2. Ground
 3. Rear washer (+) 3. Rear washer (+)

SCMBE6348L

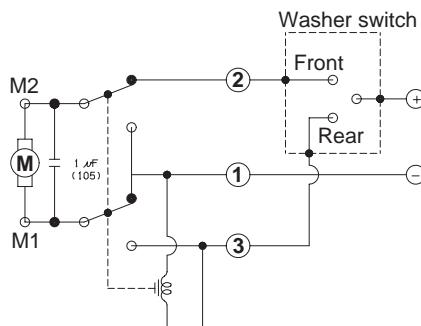

<Windshield & Rear washer motor>

SCMBE6349L

Terminal Position	1	2
Over 650cc		
Under 650cc	○	○

(Tolerance : -50cc ~ +100cc)

SCMBE6352D


WINDSHIELD WIPER / WASHER

BE -175

REPLACEMENT


EF02B9DF

1. Disconnect the negative (-) battery terminal.
2. Remove the front bumper cover. (Refer to Body group - Front bumper)
3. Remove the washer hose (A) and the washer motor connector (B).

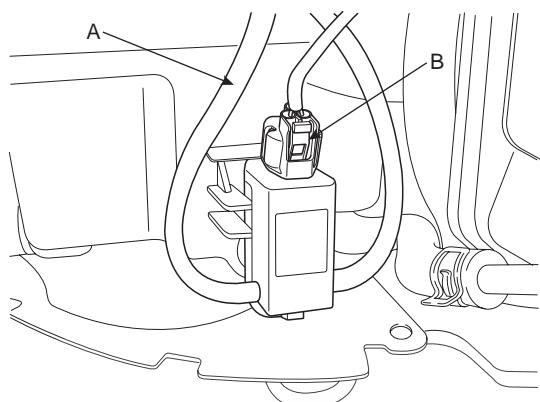

SCMBE6335D

5. Remove the washer reservoir after removing 3 bolts.

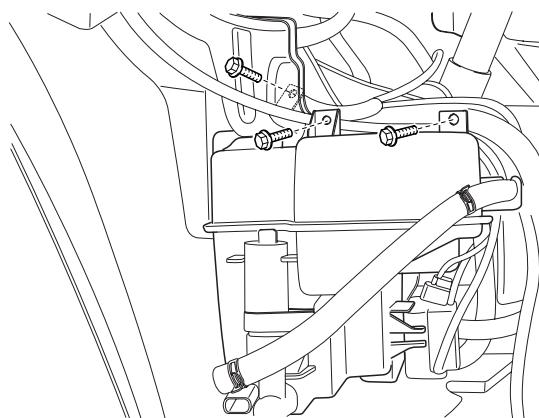


SCMBE6347D

6. Installation is the reverse of removal.

دیجیتال خودرو
SCMBE6335D


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال تعمیر خودرو ایران

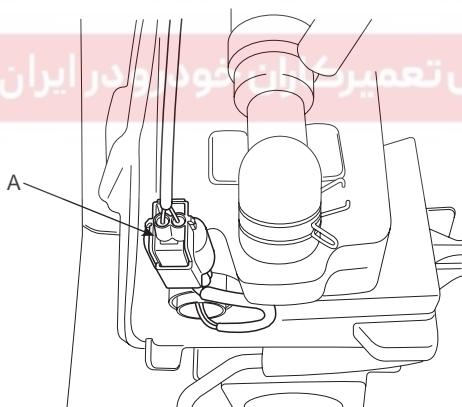

SCMBE6346D

RAIN SENSOR

CIRCUIT DIAGRAM E27A55E1

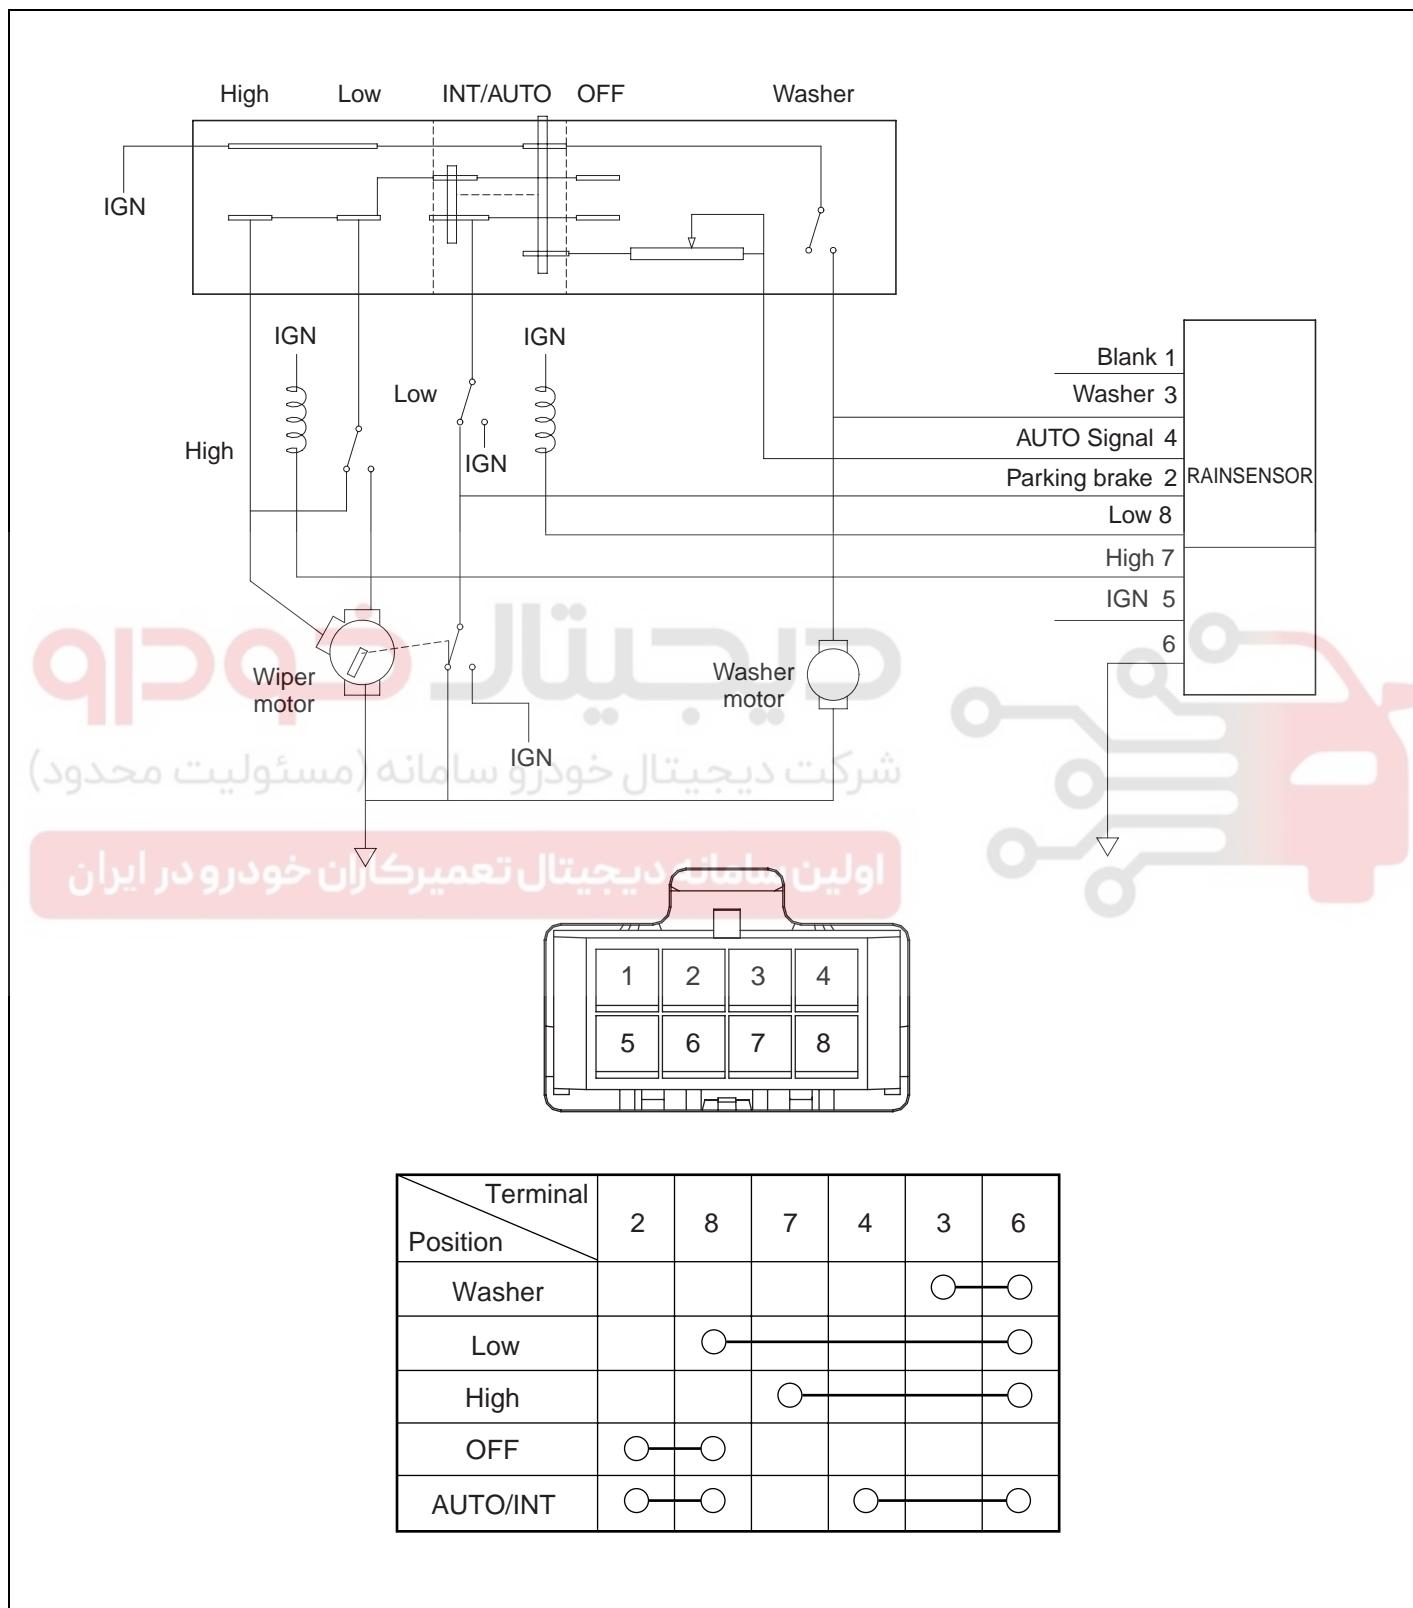


WINDSHIELD WIPER / WASHER

BE -177

DESCRIPTION E65E5882

The Rain sensing windshield wiper system is a wiper system that, in addition to providing normal wiper functions off, mist, manual low speed, manual high speed, and wash, provides automatic control of automatic intermittent automatic low, and automatic high speeds.

When the ignition key is in the ON position, the rain sensor (A) will be activated.

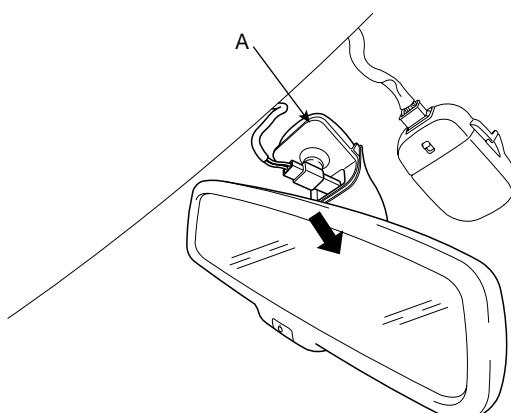

SCMBE6354D

OPERATING MODES - RAINSENSING
WINDSHIELD WIPER SYSTEM E72BA1AD

MULTIFUNCTION SWITCH POSITION	RAINSENSOR OPERATING MODE	SENSOR ACTION
MIST	MIST	Mist is controlled by the column switch. The sensor has no affect on this function
OFF	OFF	If not already parked, wiper motor runs in low speed until blades are in the depressed park position.
AUTOMATIC Automatic mode has 5 SENSITIVITY settings. This is further defined in par 84.	AUTOMATIC	AUTOMATIC Automatic INT/speed control. The sensitivity to raindrop accumulation on the windshield is set by the MULTIFUNCTION SWITCH sensitivity adjustment.
LOW SPEED	MANUAL	Wiper motor runs continuously in low speed, for example 45 wipes/minute. The sensor has no affect on this function
HI SPEED	MANUAL	Wiper motor runs continuously in high speed, for example 60 wipes/minute. The sensor has no affect on this function
WASH - DEMAND WASHER SW 0.6 SEC	WASH	If washer sw on after 0.6 sec then wipes during 2.5 to 3.8 sec. The rain sensor enables the wipers and controls the after wipes.
WASH - DEMAND WASHER SW < 0.6 SEC	WASH	If washer sw on less than 0.2 to 0.6 sec then once wipes

OFF MODE

With the wipe switch in the OFF position and the ignition switch in the ON positions, the Rainsensor is considered to be in "OFF" mode. In this mode, the sensor commands the wiper to be off.

The Rainsensor monitors the state of the windshield during OFF mode so that knowledge of the state of the windshield is present when the MULTIFUNCTION SWITCH is moved to any SENSITIVITY setting. This optimizes the performance of the sensor when moving from the OFF condition to an AUTOMATIC mode. The algorithm assumes the nominal sensitivity setting when in the OFF mode.

AUTOMATIC MODE

When the MULTIFUNCTION SWITCH is moved to AUTO position and the ignition switch is in the RUN or ACCES-SORY positions, the Rainsensor is considered to be in "AUTOMATIC" mode. Once a single "Instant wipe" as described in par 8.8 has occurred, the wipers remain at "Innerwiper/park" until the Rainsensor determines that the dwell time at that position is appropriate for the amount of precipitation on the windshield, considering the driver input from the switch SENSITIVITY setting. After the dwell time the Rainsensor provides input to the wiper motor to activate the wipers to clear the precipitation from the windshield.

AUTOMATIC INT

For all AUTOMATIC INT operations the Rainsensor commands the wipers to operate in LOW SPEED for one wipe, followed by a variable dwell period in the inner wipe position.

AUTOMATIC LOW

AUTOMATIC LOW SPEED operation is utilized when the amount of precipitation imping on the windshield exceeds the AUTOMATIC INT TO AUTOMATIC LOW threshold. This threshold includes sufficient hysteresis to prevent cycling between AUTOMATIC INT and AUTOMATIC LOW SPEED operation with a steady amount of precipitation accumulation on the windshield.

AUTOMATIC HIGH

AUTOMATIC HIGH SPEED operation is utilized when the amount of precipitation imping on the windshield exceeds the AUTOMATIC LOW to AUTOMATIC HIGH threshold. This threshold includes sufficient hysteresis to prevent cycling between AUTOMATIC LOW to AUTOMATIC HIGH operation with a steady amount of precipitation accumulation on the windshield.

WASH MODE

The Rainsensor monitors the MULTIFUNCTION SWITCH to determine if the wash function is selected. Rainsensor enables the wiper motor to run in low speed during the wash mode and performs follow up wipes during 2.5 to 3.8 sec.

MANUAL MODE

The Rainsensor determines when a manual mode such as manual low, Mist, Off or manual high is selected. The column switch performs these modes and the rain sensor has no affect.




WINDSHIELD WIPER / WASHER

BE -179


INSPECTION EF3F0CB0

RAIN SENSING WIPER

1. In IGN2 ON state, if auto switch input (LIN communication) is ON then both wiper low relay and wiper high relay outputs are controlled by the rain sensor input signal.
2. If the wiper switch has been left in automatic mode with the vehicle ignition OFF, and then the vehicle ignition switch is turned on, a single wipe will be performed.


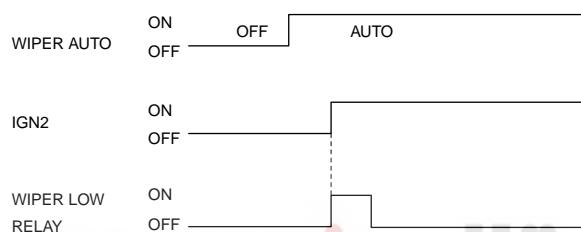


4. The drive may adjust the rain sensor performance by adjusting the sensitivity input. When in automatic mode, the BCM will perform a single wipe each time the sensitivity is adjusted upward to a more sensitive setting (downward more than one step). This single wipe will only be performed if Rain Detected signal is being received from the Rain sensor. If the sensitivity adjustment is adjusted upward more than one sensitivity, the BCM will only perform a single wipe unless the time between increases is more than 2 seconds.

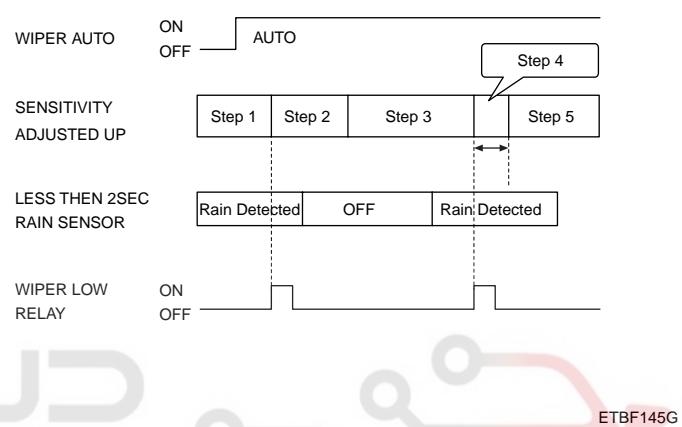

3. A single wipe will be performed whenever rain has been detected (Rain Detected signal from Rain sensor) and the wiper switch is moved to the AUTO position. But a single wipe will not be performed when the wiper switch is moved to the AUTO position and OFF signal is being received from Rain sensor. But if the wiper switch is moved to AUTO position for the first time since vehicle ignition switch is turned on then a single wipe will be performed regardless of Rain Detected or OFF signal.


5. Fault strategy for the rain sensor
Rain Sensor Fault 1 - Internal Fault Detected
This failure is detected when the wiper is in automatic mode and the input faulty rain sensor from the rain sensor has a duty cycle corresponding to Fault 1. The confirmation delay for the failure is of 1 sec. When this failure is detected, the wiper outputs are OFF and the wiper will also do a wipe in slow speed on the transition from sensitivity 3 to sensitivity 2 (Step 2 to 3) in order to signal the presence of this fault. If another sensitivity is set, the wiper won't make any additional wipe.

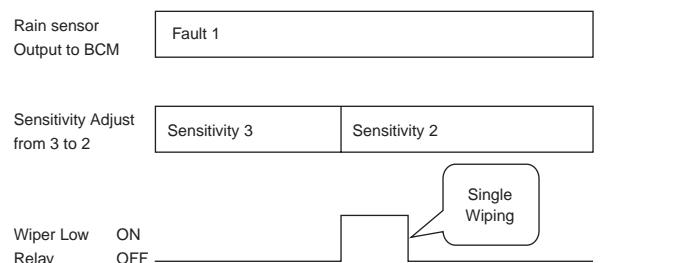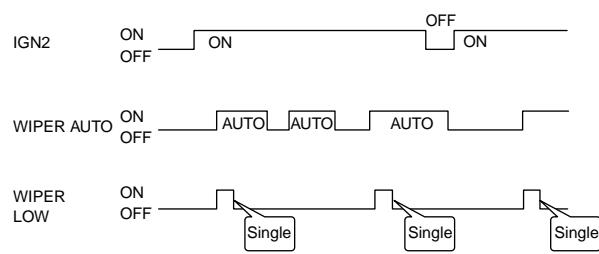

Rain Sensor Fault 2 - Glass Attachment Fault Detected

This failure is detected when the wiper is in automatic mode and the input faulty rain sensor from the rain sensor has a duty cycle corresponding to Fault 2. The confirmation delay for the failure is of 1 s.

When this failure is detected, the wiper outputs are OFF and the wiper will also do a wipe on the transition from sensitivity 4 to sensitivity 3 (Step 1 to 2) in order to signal the presence of this fault. If another sensitivity is set, the wiper won't make any additional wipe.

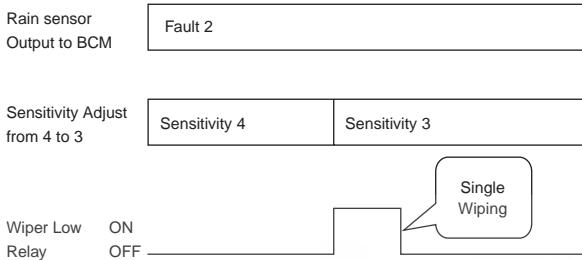

Rain Sensor Fault 3 - No Input Signal Present

This failure is detected when the wiper is in automatic mode and the input faulty rain sensor from the rain sensor has a duty cycle corresponding to Fault 3 or in case the duty cycle of the input faulty rain sensor is 0% or 100%. The confirmation delay for the failure is of 1 s.

When this failure is detected, the wiper outputs are OFF.

REMOVAL

EB4E2F2B


CAUTION

The dust or foreign substance on the rain sensor have a bad effect upon the rain sensor capability, so protect the sensor surface with protection cover until installing the rain sensor to bracket for accurate funtion.

The coupling pad on the rain sensor surface has adhesive strength, so the coupling pad could stick to the windshield by environment condition during the using time.

If separate it by force, it could be damaged. So make sure to separate the rain sensor from the windshield carefully.

1. Remove the rain sensor cover first. Be careful not to damage the cover latch by applying excessive force. To remove the latch, pull aside the latch using the cover hole (B) with the little (-) screwdriver (A).

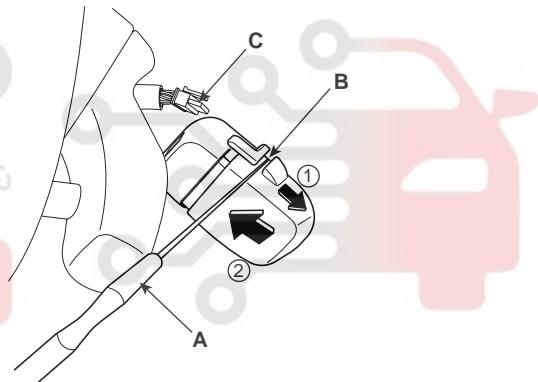

KTBF365B

2. Remove the wiring harness connector (C) from sensor.
3. Rain sensor module is attached to the front windshield by glue replacing the front windshield, remove the rain sensor module from the existing front windshield and install on the new front windshield.



WINDSHIELD WIPER / WASHER

BE -181

INSTALLATION EFF683D8**NOTE**

- In case of the windshield with reflection layer which reflects the infrared rays in sensing field, should install the rain sensor into the field removed the reflection layer.
- Install the rain sensor after some time and be care not to be settled the dust after installation.

1. Install the rainsensor bracket to the windshield glass using the tape.

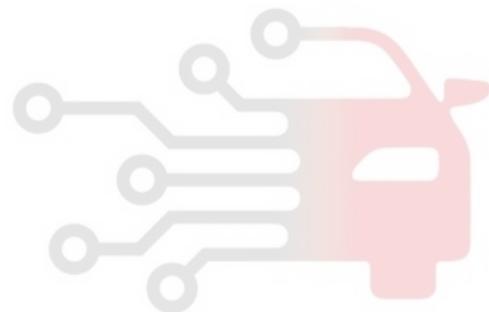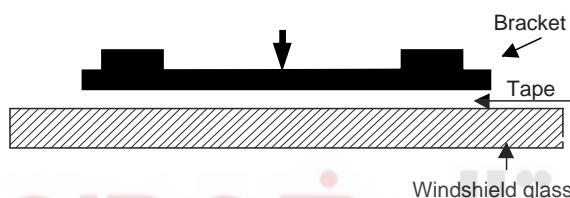

شركة ديجيتال خودرو سامانه (مسؤولیت محدود)
ETZE015I

CAUTION


اولین سامانه در جهت این سامانه کار خود را ممکن نماید.
It is very important that the coupling pad pushes the windshield completely to stick to each other without bubbles.

2. Connect the rainsensor connector, and then install the sensor cover.

REAR WIPER / WASHER

COMPONENT LOCATION

E91C4A25

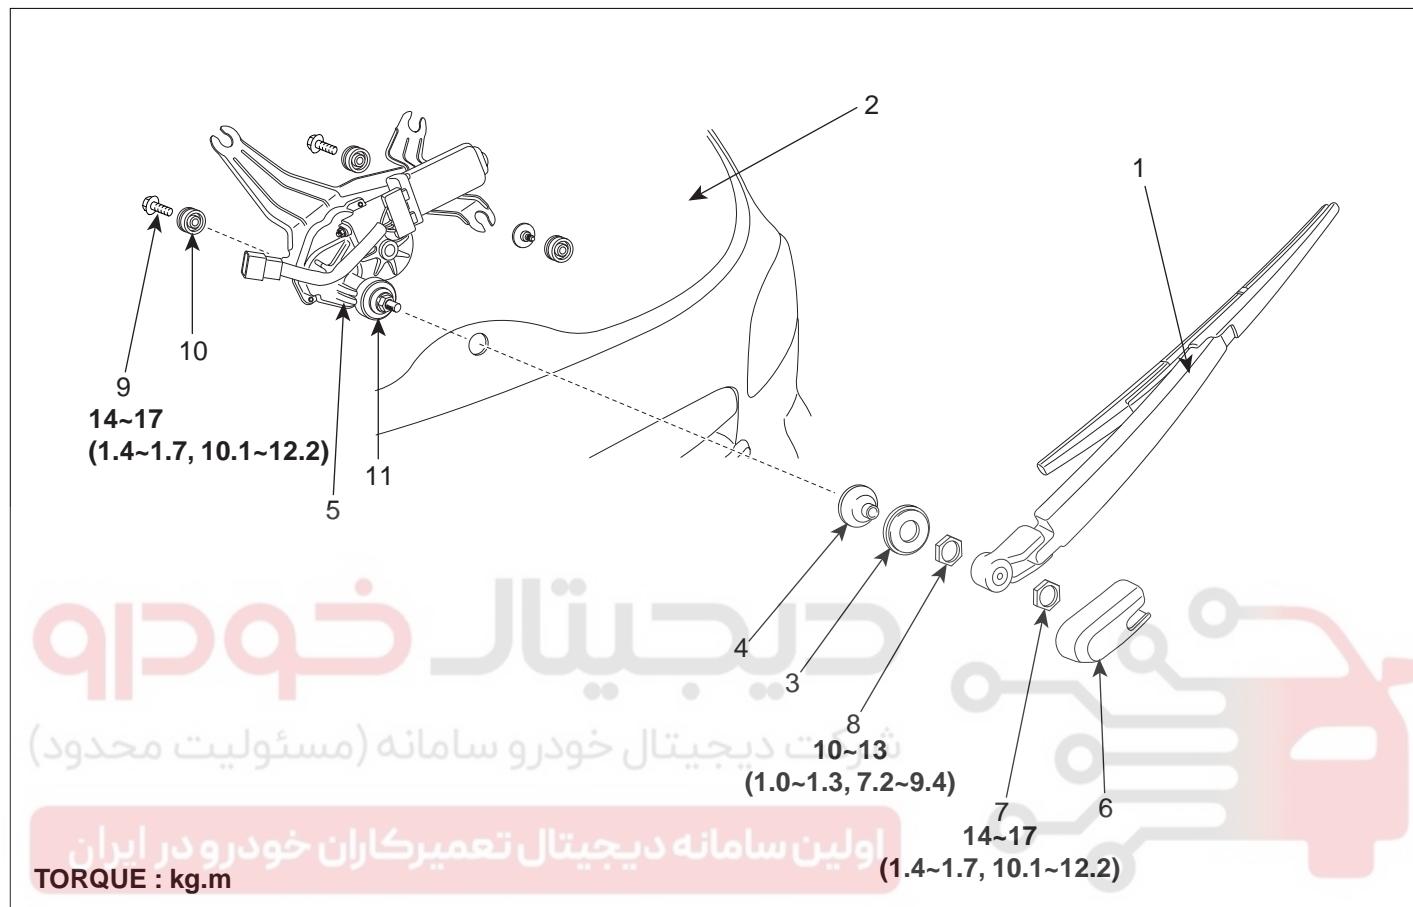

1. Rear wiper arm & blade
2. Tailgate glass
3. Grommet
4. Outside cover
5. Rear wiper motor assembly
6. Head cap

7. Nut
8. Nut
9. Bolt
10. Bush
11. Grommet

SCMBE6360L

REAR WIPER / WASHER


BE -183

REAR WIPER MOTOR**INSPECTION** EE5AEB15**REAR WIPER AND NOZZLE**


1. Install the rear wiper arm and blade to the specified position.

Specified position	A
Distance	0.059 ± 0.2 in (15 ± 5 mm)

Specified position : The first deicer line from bottom of the rear window.

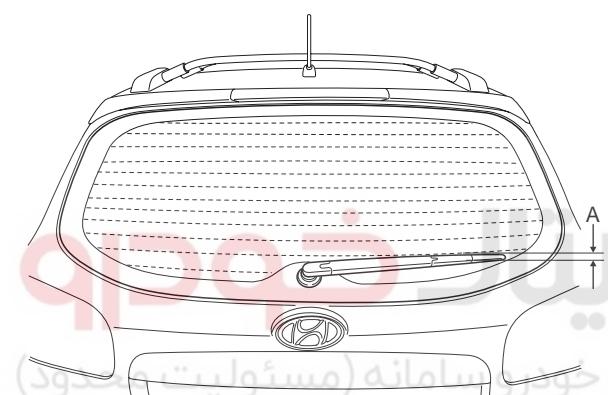

2. Set the rear washer nozzle on the specified spray position.

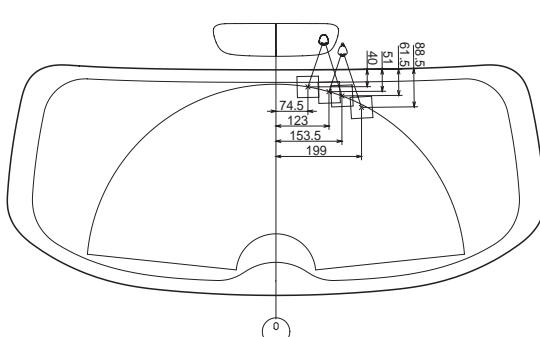


Unit : mm

SCM6365D

REAR WIPER MOTOR

1. Remove the 4P connector from the rear wiper motor.
2. Connect battery positive (+) and negative (-) cables to terminals 3 and 4 respectively.


ATGE381F

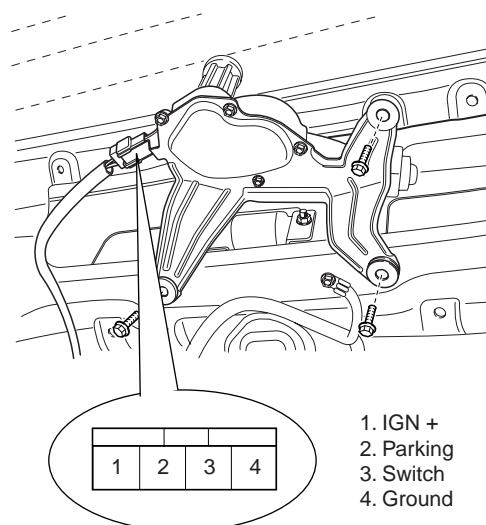

SCM6364L

AUTOMATIC STOP OPERATION CHECK

1. Operate the motor at low speed using the stalk control.
2. Stop the motor operation anywhere except at the off position by disconnecting terminal 3.
3. Connect terminals 2 and 3.
4. Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 4.
5. Check that the motor stops running at the off position.

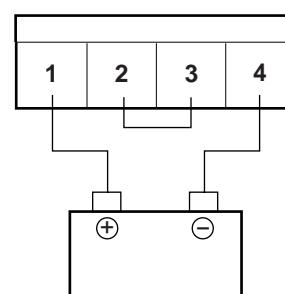


REPLACEMENT

E9F0AEC8

1. Detach the wiper cap (A), then remove the rear wiper arm (C) after removing a nut (B).

Tightening torque Nut(B) :

14~17 Nm (1.4~1.7 kgf.m, 10.1~12.3 lbf.ft)

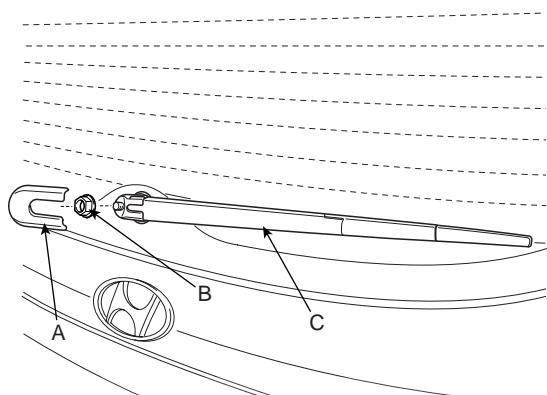


3. Open the tailgate glass then remove the tailgate trim.

4. Disconnect the rear wiper motor connector then remove the rear wiper motor (B) after removing 3 bolts.

Tightening torque Nut :

14~17 Nm (1.4~1.7 kgf.m, 10.1~12.3 lbf.ft)

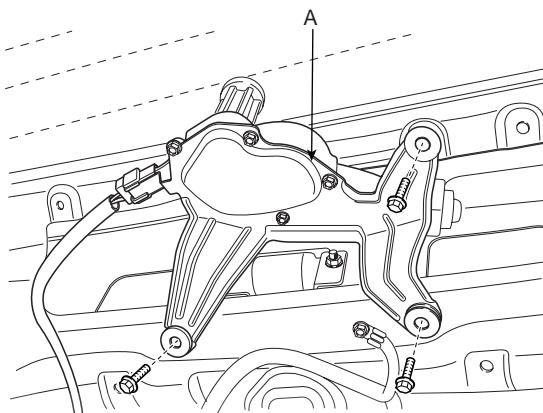

2. Remove the rear wiper cap & pad (B) after removing a nut (A).


Tightening torque Nut (A) :

10~13 Nm (1.0~1.3 kgf.m, 7.2~9.4 lbf.ft)

5. Installation is the reverse of removal.

SCMBE6363D

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

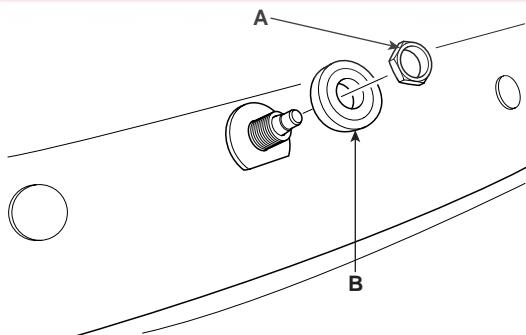

SCMBE6362D

REAR WIPER / WASHER


BE -185

REAR WASHER SWITCH

INSPECTION E5C9EED0

- With the rear wiper & washer switch in each position, make sure that continuity exists between the terminals below. If continuity is not as specified, replace the multifunction switch.

[LHD]

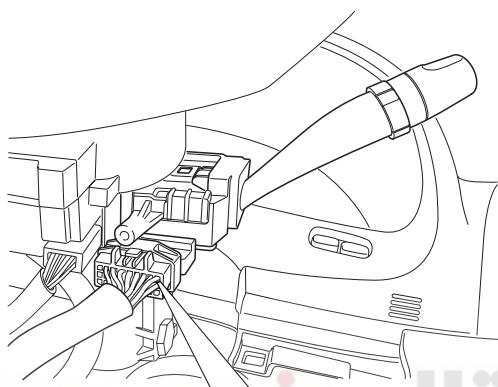


REAR WIPER & WASHER SWITCH

() : RHD

Terminal Position	9(13)	11(11)	12(10)
Rear washer	○		○
OFF			
ON	○	○	
Rear washer	○		○

SCMBE6054L

شرکت دیجیتال خودرو سایت رسمی (www.digalkhodro.com) روزیت محدود

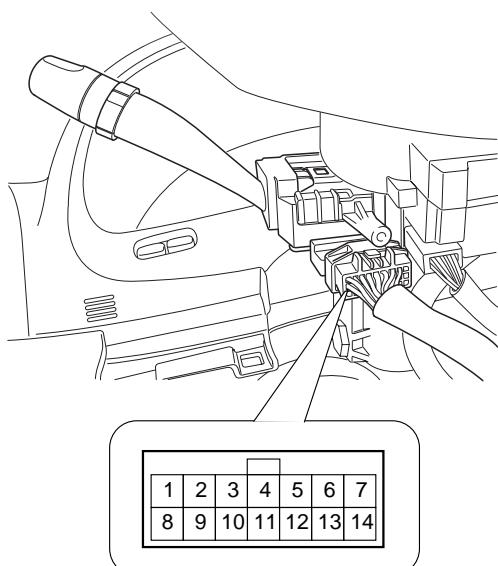اولین سامانه دیجیتال تعمیرکاران خودرو در ایران
[RHD]



SCMBE6367R



REAR WASHER MOTOR

INSPECTION EA10033D


1. With the washer motor connected to the reservoir tank, fill the reservoir tank with water.
2. Remove the front bumper cover. (Refer to the Body group- Front bumper)
3. Connect positive (+) and negative (-) battery cables to terminals 3 and 1 respectively to see that the washer motor runs and water is pumped.
4. Check that the motor operates normally.
Replace the motor if it operates abnormally.

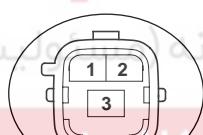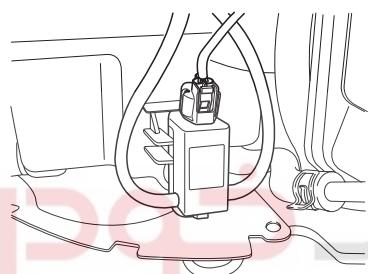

[Front & Rear washer]

1. Windshield washer (+)
2. Ground
3. Rear washer (+)

SCMBE6368L

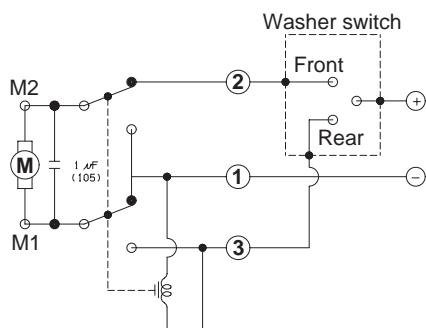

<Windshield & Rear washer motor>

SCMBE6369L


ELECTRO CHROMIC INSIDE REAR VIEW MIRROR

BE -187

ELECTRO CHROMIC INSIDE REAR VIEW MIRROR


DESCRIPTION E1A4FF0E

The ECM (Electro Chromic inside rear view Mirror) is for dimming the reflecting light from a vehicle behind at night, in order the user not to be dazzled by the light. The front looking sensor detects brightness of the surroundings, while the rearward looking sensor the strength of the reflecting light so that adjusts the reflexivity of the mirror in the range of 10~70%. But, when the reverse gear is engaged, it stops functioning.

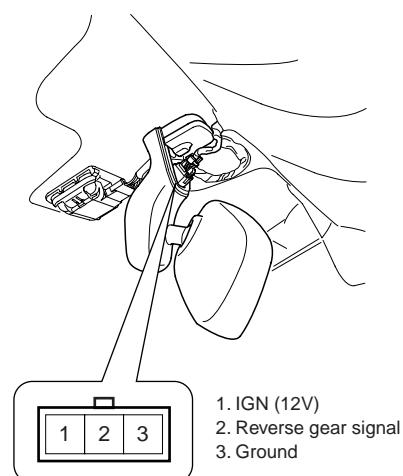


SCMBE6370L

1. The front looking sensor sees if the brightness of the surroundings is low enough for the mirror to operate its function.
2. The rearward looking sensor detects glaring of the reflecting light from a vehicle behind.
3. The ECM is darkened to the level as determined by the rearward looking sensor. When the glaring is no longer detected, the mirror stops functioning.

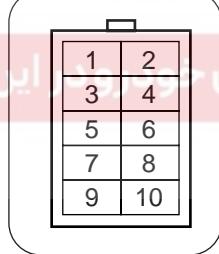


1. Ground
6. IGN (12V)
10. Reverse gear signal

ETQE280J

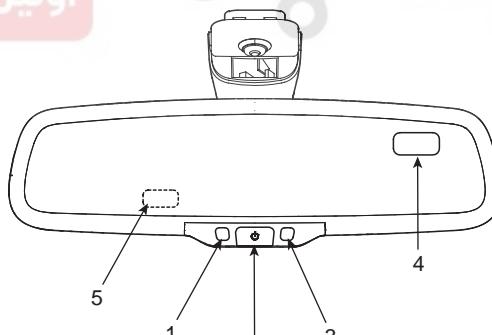

1. Status Indicator LED
2. Bottom
3. Rear indicator
4. Rear light sensor
5. Front light sensor

SCMBE6371L

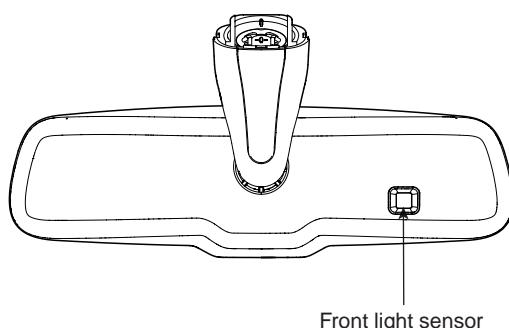

ETBF410C

AUTOMATIC-DIMMING FUNCTION EF840FF2

To protect your vision during nighttime driving, your mirror will automatically dim upon detecting glare from the vehicles traveling behind you. The auto-dimming function can be controlled by the Dimming ON/OFF Button :

1. Pressing and holding the Feature Control button for more than 3 but less than 6 seconds turns the auto-dimming function OFF which is indicated by the green Status Indicator LED turning off.
2. Pressing and holding the Feature Control button again for more than 3 but less than 6 seconds turns the auto-dimming function ON which is indicated by the green Status Indicator LED turning on.

NOTE

The mirror defaults to the "ON" position each time the vehicle is started.

INSPECTION EEF84EDF

Check it by the procedure below to see if the function of the ECM is normal.

1. Turn the ignition key to the "ON" position.
2. Cover the front looking sensor to stop functioning.
3. Head a light to the rearward looking sensor.
4. The ECM should be darkened as soon as the rearward looking sensor detects the light.


NOTE

If this test is performed in daytime, the ECM may be darkened as soon as the front looking sensor is covered.

5. When the reverse gear is engaged, the ECM should not be darkened.
When heading lights to both the front looking and rearward looking sensors, the ECM should not be darkened.

REPLACEMENT EF3DC08D


1. Push the inside rear view mirror base down to remove the inside rear view mirror assembly (A) after removing the mirror wire cover.

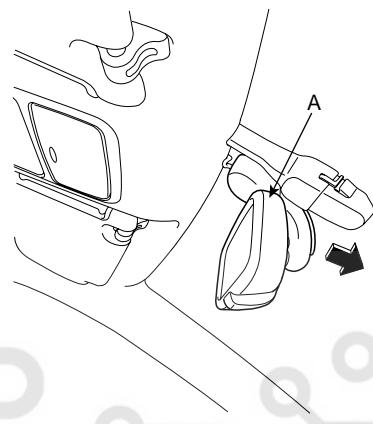

SCMBE6373D

NOTE

Mirror it adheres closely in the mirror base (A) and it separates while removing the mirror (B). Make sure the spring mounting bracket (C) of the mirror not to be damaged.

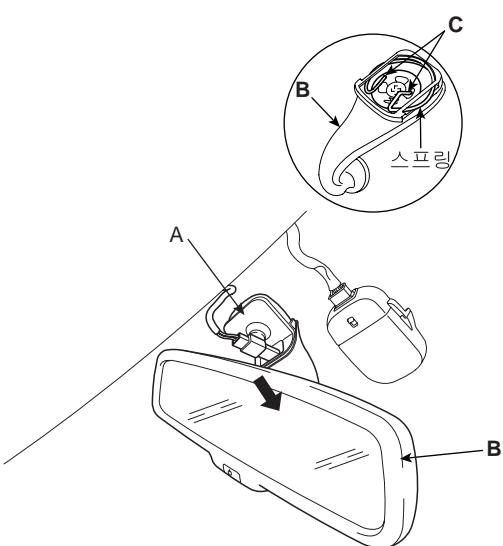

SCMBE6375D

2. Installation is the reverse of removal.

ELECTRO CHROMIC INSIDE REAR VIEW MIRROR

BE -189

COMPASS MIRROR**DESCRIPTION** EDD9985F

The mirror assembly shall display a compass heading. The compass mirror then take the sensor information to determine static field strengths and rotating field information to determine an accurate compass heading.

The compass feature is designed to be integrated into an electro chromic interior rearview mirror.

SPECIFICATION

Item	Standard value
Rate voltage	DC 12V
Operating voltage range	DC9 ~ 16V
Operating temperature range	-30 ~ +65°C
Direction display	8
Renewal time	2 sec.

SWITCH POINT ACCURACY


The compass module shall, while compensating for the vehicle magnetic fields, until the Earth's varying magnetic fields to determine direction.

[SWITCH POINTS]

Switch point	Heading $\pm 10^\circ$
N - NE	22.5
NE - E	67.5
E - SE	112.5
SE - S	157.5
S - SW	202.5
SW - W	247.5
W - NW	292.5
NW - N	337.5

NOTE

There should be hysteresis at each switch point. Switch points between the 8 cardinal directions, these switch points are $\pm 10^\circ$

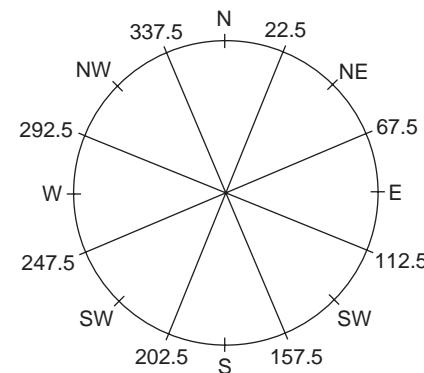

COMPASS DISPLAY INTERVAL

Compass display should be updated at every two seconds.

FUNCTION

EE94334D

The compass can be turned ON and OFF and will remember the last state when the ignition is cycled. To turn the display feature ON/OFF :

1. Press and release the feature control button (A) to turn the display feature OFF.
2. Press and release the feature control button (A) again to turn the display back ON.

Additional options can be set with press and hold sequences of the feature control button (A) and are detailed below.

ADJUSTMENT

EE10EDCF

CALIBRATION PROCEDURE

If the display read "C", calibrate the compass.

1. Driving the vehicle in a circle at less than 8km/h 3 times or until the compass heading appears.
2. Driving in a circle in right-handed direction and opposite direction are possible, and if the calibration is completed, the compass heading will appear.
3. Keep driving in a circle until a compass heading appears.


TO ADJUST THE ZONE SETTING :

1. Determine the desired zone number based upon your current location on the zone maps.
2. Press and hold the Feature Control button for more than 6 but less than 9 seconds, the current zone number will appear on the display (B).
3. Pressing and holding the feature control button (A) again will cause the numbers to increment (Note: they will repeat ...13, 14, 15, 1, 2,...). Releasing the button when the desired zone number appears on the display will set the new zone.
4. Within about 5 seconds the compass will start displaying a compass heading again.

TO RE-CALIBRATE THE COMPASS :

There are some conditions that can cause changes to the vehicle magnets. Items such as installing a ski rack or a antenna or even some body repair work on the vehicle can cause changes to the vehicle's magnetic field. In these situations, the compass will need to be re-calibrated to quickly correct for these changes.

1. Press and hold the feature control button (A) for more than 9 seconds. When the compass memory is cleared, a "C" will appear in the display (B).
2. To calibrate the compass, drive the vehicle in 2 complete circles at less than 8 KPH (5 MPH).

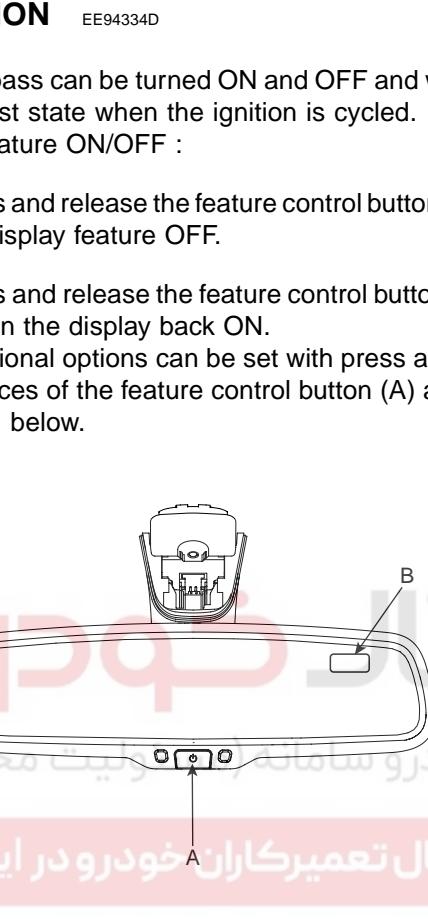

ETQF241C

There is a difference between magnetic north and true north. The compass in the mirror can compensate for this difference when it knows the magnetic zone in which it is operating. This is set either by the dealer or by the user.


ELECTRO CHROMIC INSIDE REAR VIEW MIRROR

BE -191


ZONE MAP




NORTH AMERICA

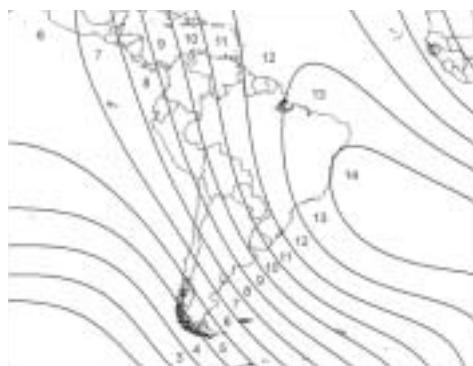


SOUTH AMERICA

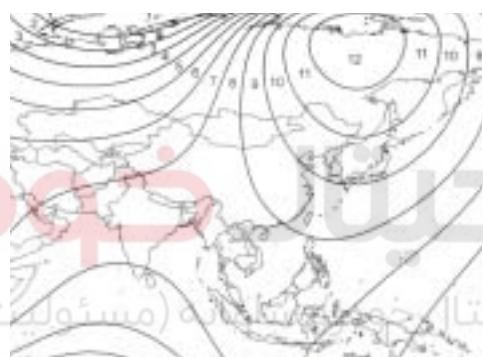

اورین سامانه دیجیتال تیکاران خودرو در ایران ASIA

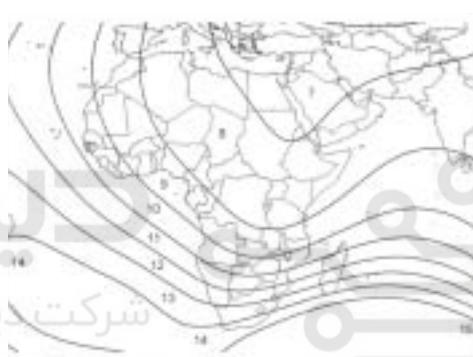

AFRICA

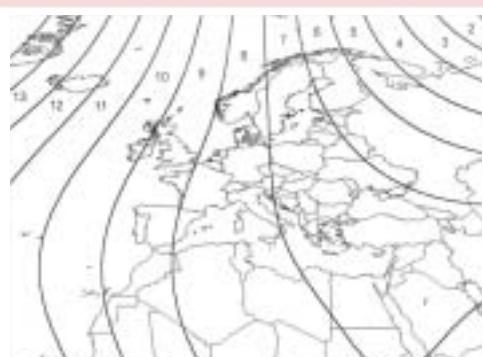

EUROPE



AUSTRALIA

ETQF241D


POWER SEAT

COMPONENT LOCATION

EC5CFA07

This illustration shows the LHD type.

RHD type is symmetrical.

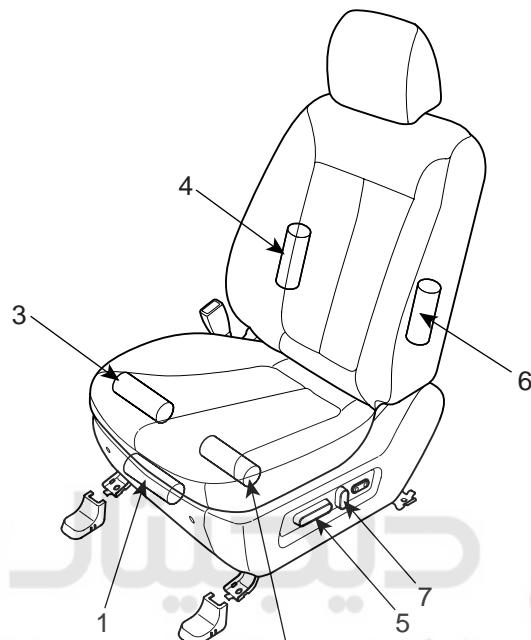

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

1. Slide motor	5. Power seat switch
2. Front height motor	6. Lumbar support motor
3. Rear height motor	7. Reclining switch
4. Reclining motor	

SCMBE6390L

POWER SEAT


BE -193

POWER SEAT MOTOR

INSPECTION E6BDAD4F

SLIDE MOTOR LIMIT SWITCH

1. Disconnect the limit switch (A) and operate the limit switch.
2. Check for continuity between the terminals.
3. Make sure that the seat operation is normal in the reverse after the maximum operation.
4. If there is an abnormality, replace the limit switch.

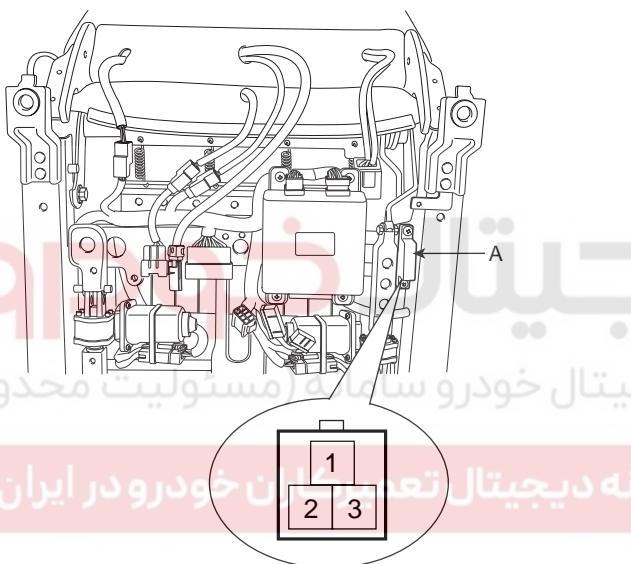


SCMBE6391D

Terminal NO. Position	1	2	3
Frontward	<input type="circle"/>	<input type="circle"/>	
Backward	<input type="circle"/>	<input type="circle"/>	

ETRF421B

RECLINING MOTOR LIMIT SWITCH

1. Disconnect the limit switch and operate the limit switch.
2. Check for continuity between the terminals.
3. Make sure that the seat operation is normal in the reverse after the maximum operation.
4. If there is an abnormality, replace the limit switch.

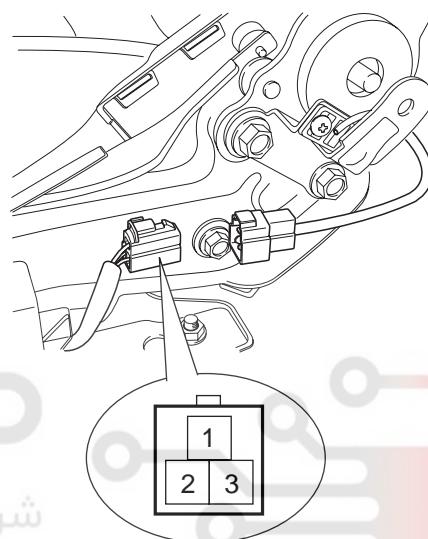


SCMBE6393D

Terminal NO. Position	1	2	3
Frontward	<input type="circle"/>		<input type="circle"/>
Backward	<input type="circle"/>	<input type="circle"/>	

ETRF421B

POWER SEAT MOTOR


1. Disconnect the connectors for each motor.

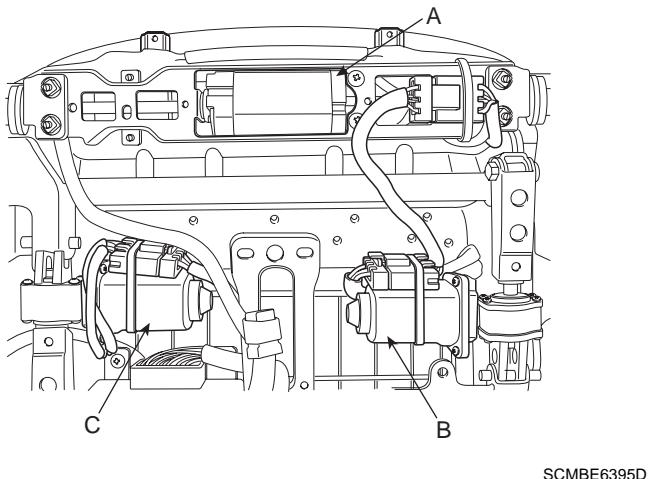

4. If there is an abnormality, replace the motors.

Position	Terminal	1	2
Slide motor A	Frontward	⊕	⊖
	Backward	⊖	⊕
Front height motor B	UP	⊖	⊕
	DOWN	⊕	⊖
Rear height motor C	UP	⊕	⊖
	DOWN	⊖	⊕
Reclining motor D	Forward	⊖	⊕
	Rearward	⊕	⊖
Lumbar support E	Forward	⊕	⊖
	Rearward	⊖	⊕

SCMBE6398L

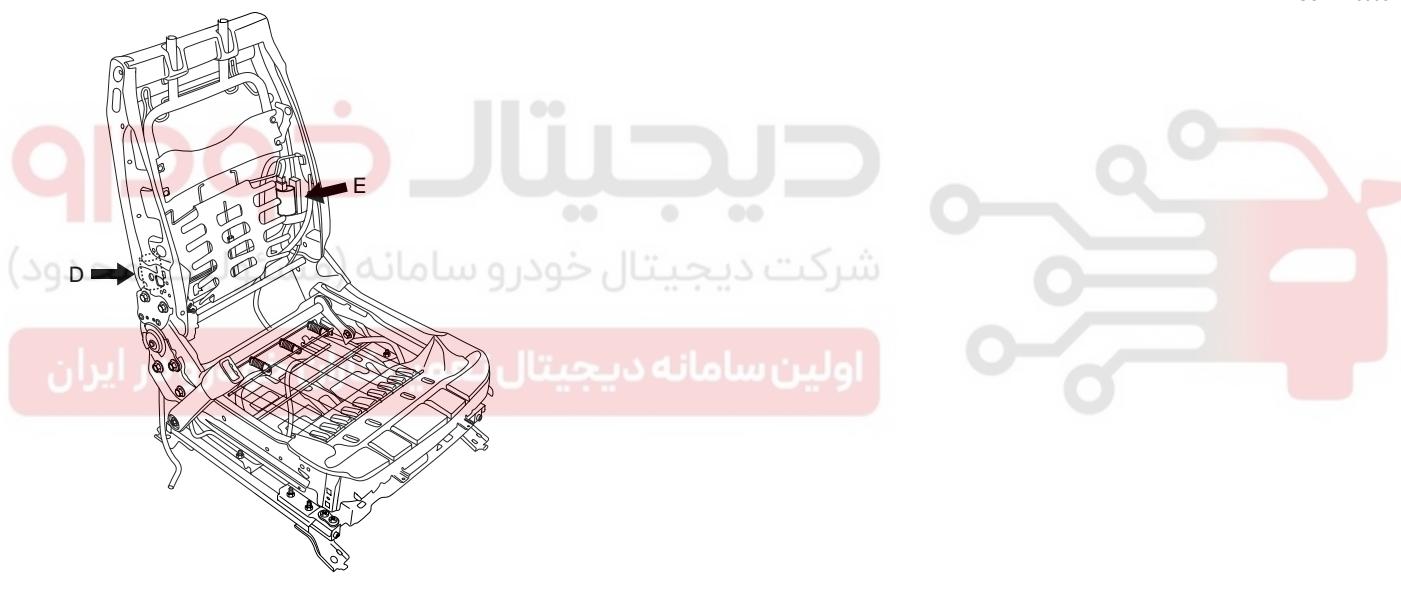


2. With the battery connected directly to the motor terminals, check if the motors run smoothly.
3. Reverse the connections and check that the motor turns in reverse.

POWER SEAT SWITCH

INSPECTION E6FC0DFE


- With the power seat switch in each position, make sure that continuity exists between the terminals below. If continuity is not as specified, replace the power seat switch.

[LHD]

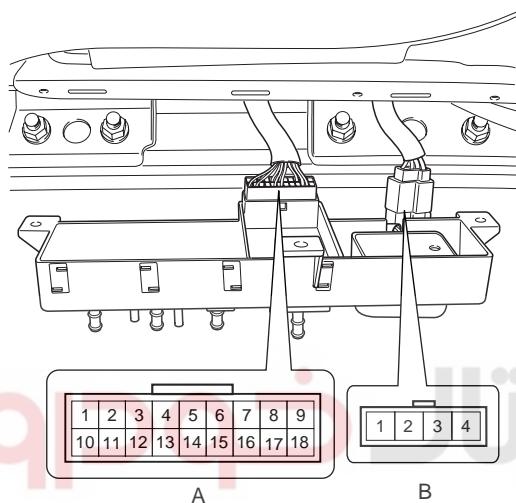

شرکت دیجیتال خودرو سامانه (مسئولیت محدود) SCMBE6400D

[RHD]

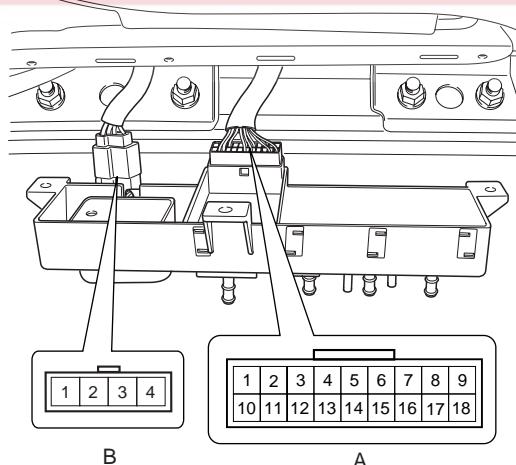

SCMBE6400R




Power seat switch connector A

() : RHD

	Height switch				Seat switch				Height switch (Backward)				Reclining switch									
	Left		Right		Frontward		Left		Right		Left		Right		Frontward		Left		Right			
	UP	DOWN	UP	DOWN	Height	SEAT	F	R	F	R	UP	DOWN	UP	DOWN	HEL	LH	RH	REC	Height	R	F	R
17(11)	○	○	○	○			○	○	○	○	○	○	○	○					○	○	○	○
11(17)							○	○	○	○												
10(18)							○	○	○	○												
6(4)							○	○	○	○												
5(5)							○	○														
8(2)																			○	○	○	○
18(10)																		○	○	○	○	○
15(13)																		○	○			○
16(12)																		○		○	○	○
2(8)	○		○	○			○															
4(6)	○	○	○				○	○														
1(9)	○						○	○														
3(7)		○	○					○														
13(15)											○	○	○	○	○	○	○	○	○	○	○	○
14(14)											○	○	○	○	○	○	○	○	○	○	○	○
12(16)											○	○	○	○	○	○	○	○	○	○	○	○
7(3)																						

Driver lumbar connector B () : RHD

	L/SUPT SW		
	RR	N	FR
1(4)	○		○
2(3)		○	○
3(2)		○	
4(1)	○	○	

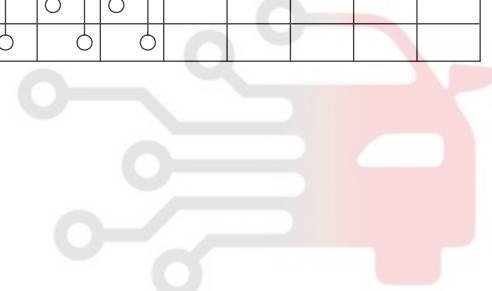



SEAT WARMER

BE -197

SEAT WARMER

COMPONENT LOCATION


E4F9F24F

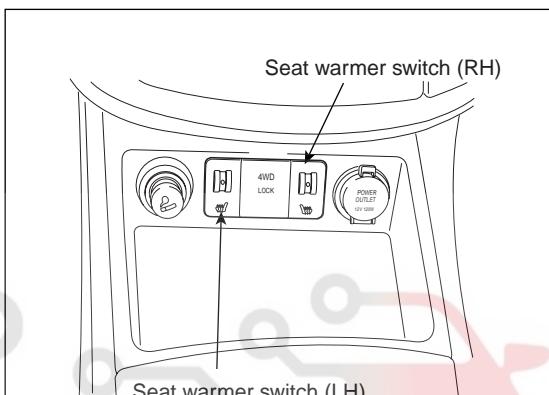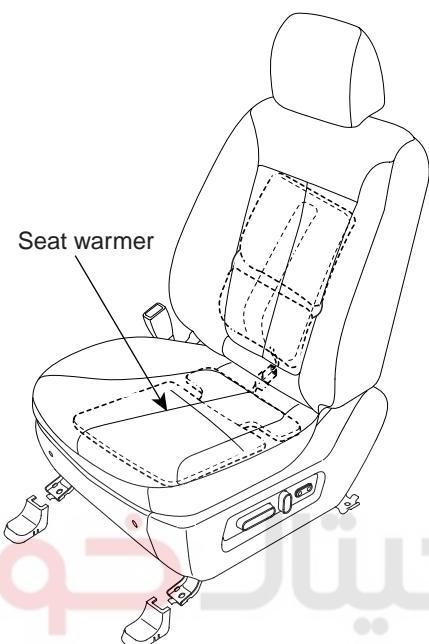

SCMBE6380L

CIRCUIT DIAGRAM

E40A63EF

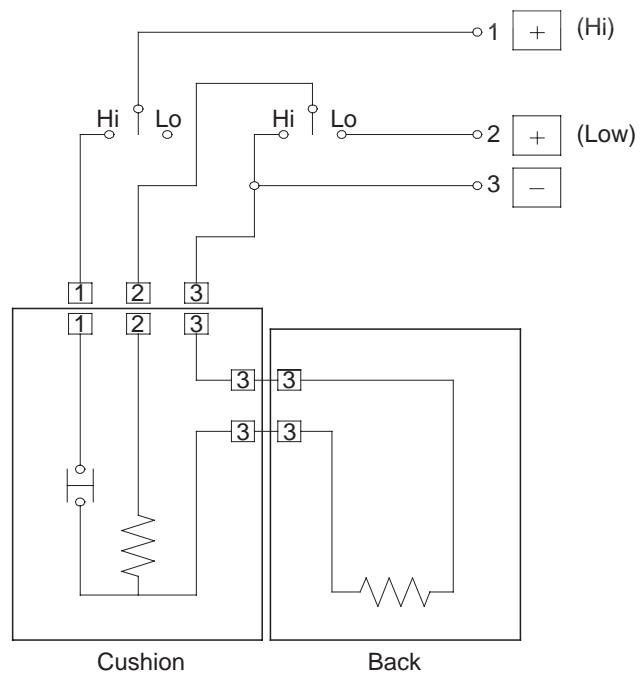


SCMBE6381L

SEAT WARMER SWITCH

INSPECTION EE2C00FE

FRONT SEAT WARMER SWITCH

1. Disconnect the negative (-) battery terminal.
2. Remove the seat warmer switch (A) with scraper.

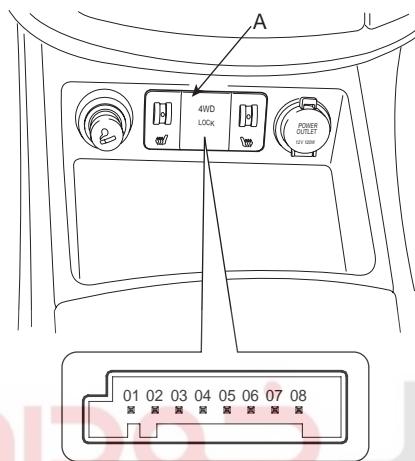

SCMBE6382D

شركة ديجيتال خودرو سامانه (مسؤولیت محدود)
اولین سامانه در جهان خودرو

3. Check that continuity exists between the terminals.

Terminal Position	2	6	3	4	1
ON				IND.	
OFF		Illumina- tion			

ETRF441B




SEAT WARMER

BE -199

SEAT WARMER**INSPECTION** EBA3D9F7

1. Check for continuity and measure the resistance between No.1 and NO.3 terminals.

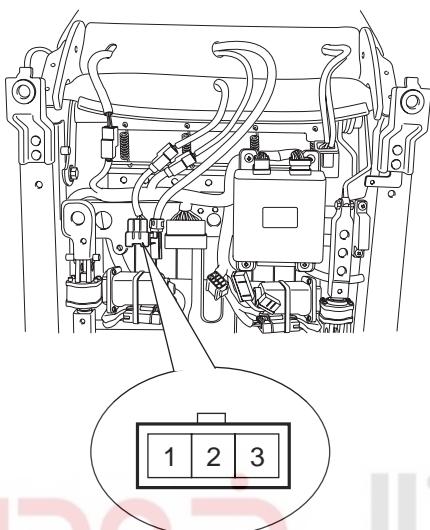

SCMBE6383D

شرکت دیجیتال خودرو سامانه (مسئولیتی داری)

Standard value

Cushion : $4.73 \pm 10\%$, Back : $34.97 \pm 10\%$

اولین سامانه در جهان تعمیر کاران خودرو در ایران


2. Operate the seat warmer after connecting the 3P connector, and then check the thermostat by measuring the temperature of seat surface.
3. Check for continuity between the terminals after disconnecting the connector.

Standard value

HI : $42 \pm 2^\circ\text{C}$ (Cushion), $52 \pm 2^\circ\text{C}$ (Back)

Terminal Position	1	2	3
HIGH	⊕	⊖	⊖
LOW		⊕	⊖


SCMBE6384L

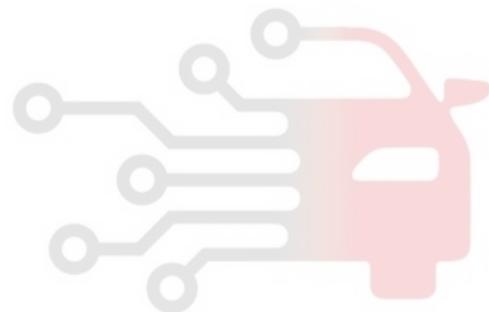

SUNROOF

COMPONENT LOCATION

EFAD0C7C

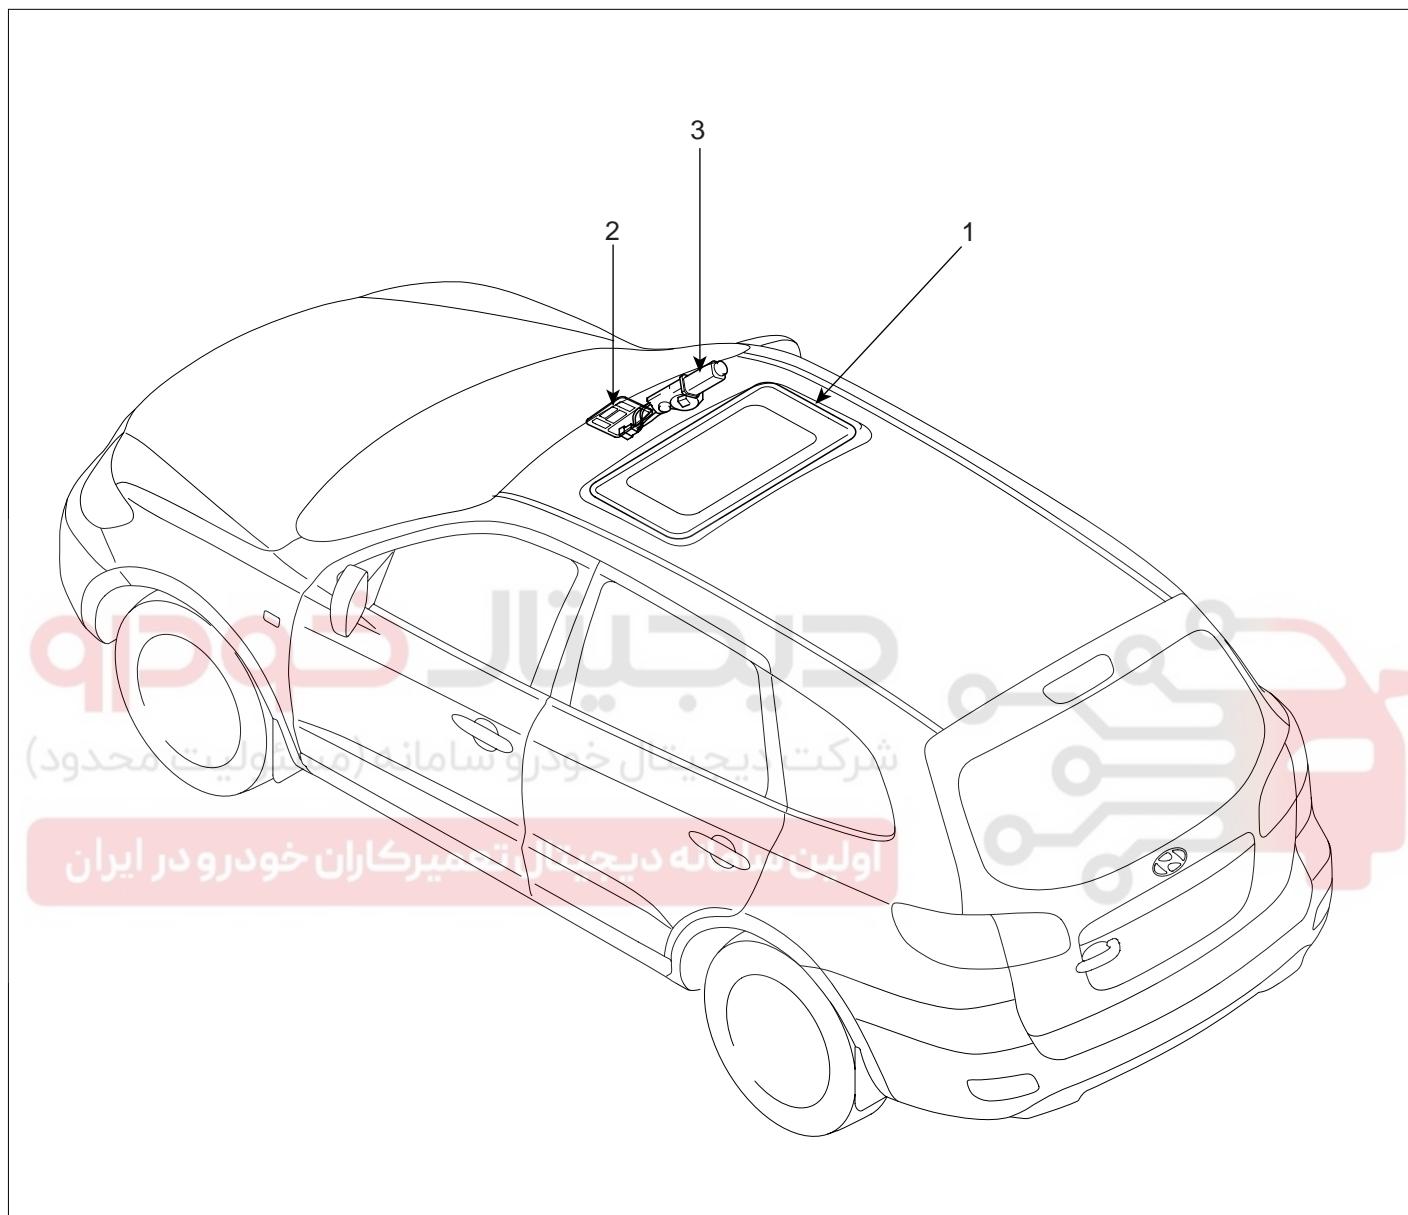


- 1. Sunroof
- 2. Sunroof switch

- 3. Sunroof motor & controller

SCMBE6420L

CIRCUIT DIAGRAM

E3BAFCEA

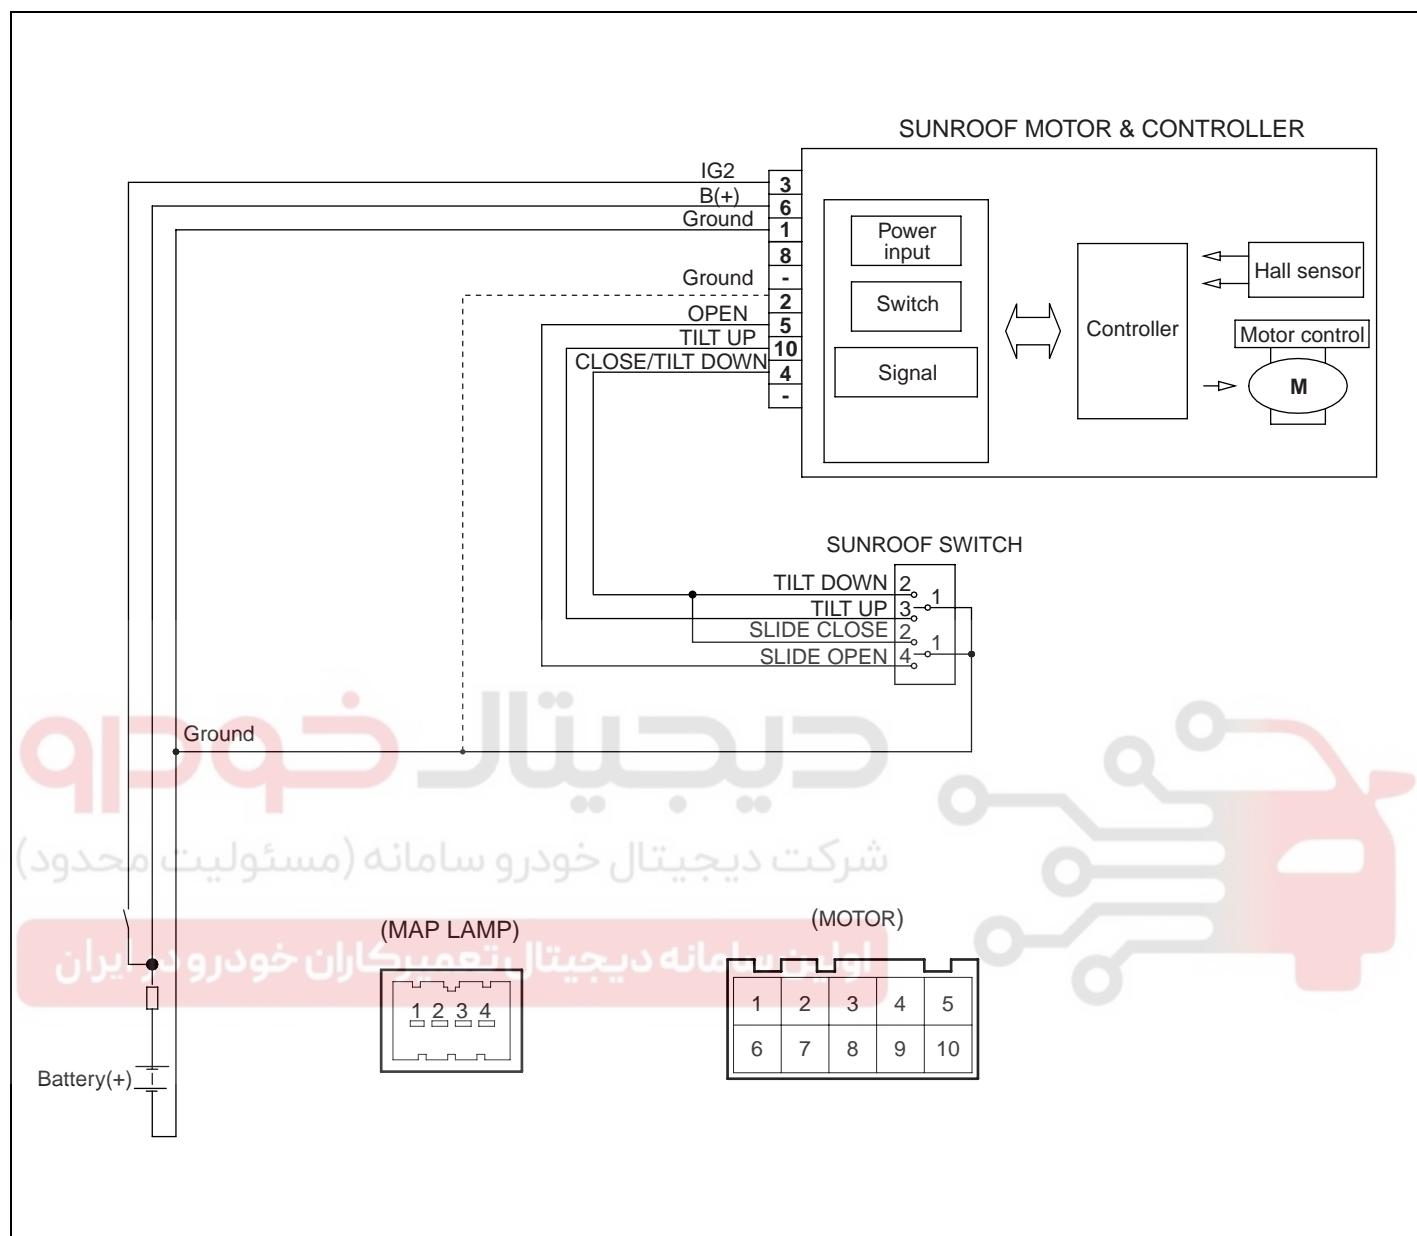

SCMBE6421L


SUNROOF SWITCH

INSPECTION E3FE5982

1. Disconnect the negative (-) battery terminal.
2. Open the sunglass case cover from the overhead console then remove the 2 screws holding the overhead console. Disconnect the switch connector (4P) and Map lamp connector (2P), and then remove the overhead console lamp.

Terminal Position	1	2	3	4
SLIDE OPEN	<input type="circle"/>			<input type="circle"/>
CLOSE/DOWN	<input type="circle"/>	<input type="circle"/>		
TILT UP	<input type="circle"/>		<input type="circle"/>	


SCMBE6424L

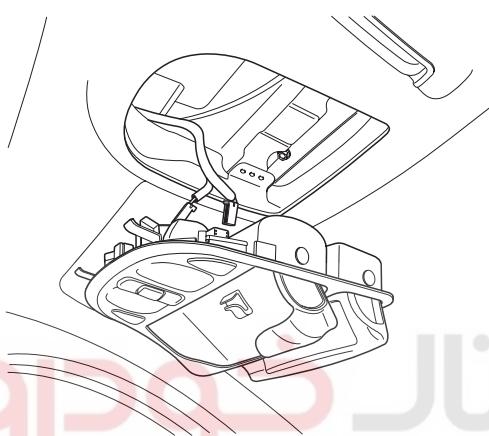

SCMBE6422D

3. Check for continuity between the terminals. If the continuity is not as specified, replace the sunroof switch.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

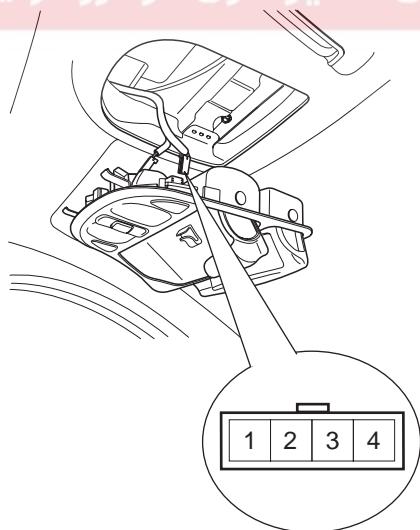

[Switch side connector]

SCMBE6423L




SUNROOF

BE -203

SUNROOF MOTOR

REPLACEMENT E7FAABC1

1. Disconnect the negative (-) battery terminal.
2. Remove the overhead console then remove the sun roof motor mounting screws (3EA). And then remove the sunroof motor after disconnecting the connector (10 Pin).

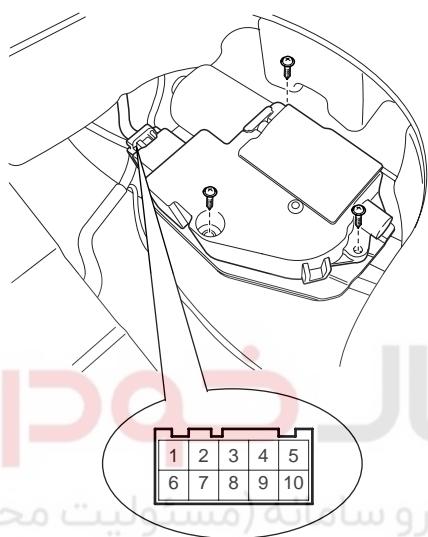

4. Make these input tests at the connector if any test indicates a problem, find and correct the cause, then recheck the system. If all the input tests prove OK, the sunroof motor must be faulty; replace it.

Terminal	Test condition	Test : Desired result
3	IG2 ON	Check for voltage to ground : There should be battery voltage
1	Under all conditions	Check for continuity to ground : There should be continuity.
6	Under all conditions	Check for voltage to ground : There should be battery voltage.

RESETTING THE SUNROOF

Whenever the vehicle battery is disconnected or discharged, or you use the emergency handle to operate the sunroof, you have to reset your sunroof system as follows :

1. Turn the ignition key to the ON position.
2. According to the position of the sunroof, do as follows.
 - 1) In case that the sunroof has closed completely or been tilted : Press the TILT button until the sunroof has tilted upward completely.
 - 2) In case that the sunroof has slide-opened : Press and hold the CLOSE button for more than 5 seconds until the sunroof has closed completely. Press and hold the CLOSE button for more than 5 seconds after the sunroof has closed completely. Press the TILT button until the sunroof has tilted upward completely.
3. Release the TILT button.
4. Press and hold the TILT button once again until the sunroof has returned to the original position of TILT after it is raised a little higher than the maximum TILT position.
When this is complete, the sunroof system is reset.

3. Ground the terminals as below table, and check that the sunroof unit operates as below table.

Terminal Position	3	4	5	10
TILT UP	⊕			⊖
SLIDE CLOSE/DOWN	⊕	⊖		
SLIDE OPEN	⊕		⊖	

ETQF965A

LIGHTING SYSTEM

SPECIFICATION E46B93B3

Items	Bulb Wattage (W)
Head lamp (High)	55
Head lamp (Low)	35
Front turn signal lamp	21
Front position lamp	6
Front fog lamp	27
Rear stop/tail lamp (Outside)	8/27
Back up lamp	16
Rear turn signal lamp	21
Rear fog lamp - Europe	21
License plate lamp	5
Side repeater	5
Room lamp	10
Overhead console lamp	10
High mounted stop lamp	5
Glove box lamp	5
Rear map lamp	10


اولین سامانه دیجیتال تعمیر کاران خودرو در ایران

LIGHTING SYSTEM

BE -205

COMPONENT LOCATION

EE6A464F

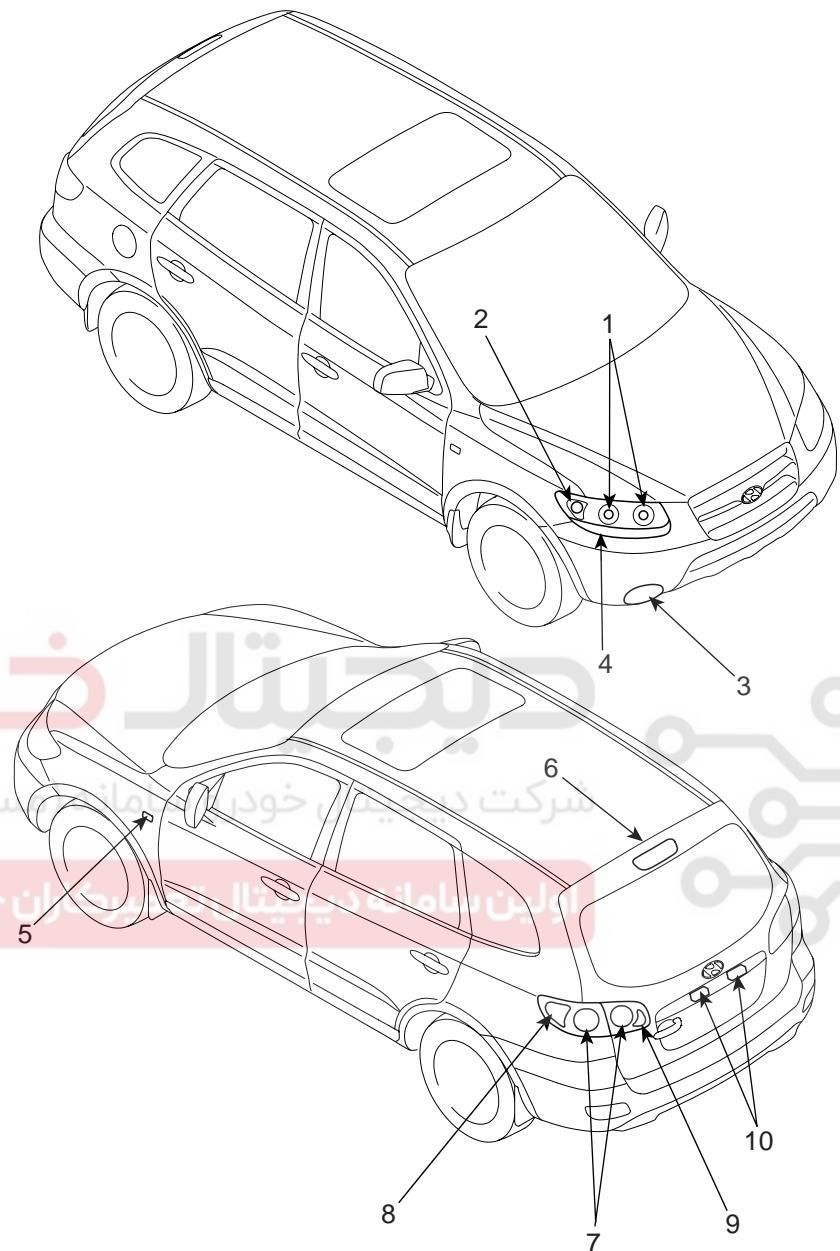

1. Head lamp (High/Low)
2. Front turn signal lamp
3. Front fog lamp
4. Position lamp
5. Side repeater

6. High mounting stop lamp
7. Tail/stop lamp
8. Rear turn signal lamp
9. Back up lamp
10. License plate lamp

SCMBE6430L

TROUBLESHOOTING

E4993738

Symptom	Possible cause	Remedy
One lamp does not light (all exterior)	Bulb burned out	Replace bulb
	Socket, wiring or ground faulty	Repair if necessary
Head lamps do not light	Bulb burned out	Replace bulb
	Ignition fuse (LOW:15A, HIGH:15A) blown	Check for short and replace fuse
	Head lamp fuse (15A) blown	Check for short and replace fuse
	Head lamp relay faulty	Check relay
	Lighting switch faulty	Check switch
Tail lamps and license plate lamps do not light	Wiring or ground faulty	Repair if necessary
	Bulb burned out	Replace bulb
	Tail lamp fuse (20A) blown	Check for short and replace fuse
	Tail lamp relay faulty	Check relay
	Lighting switch faulty	Check switch
Stop lamps do not light	Wiring or ground faulty	Repair if necessary
	Bulb burned out	Replace bulb
	Stop lamp fuse (15A) blown	Check for short and replace fuse
	Stop lamp switch faulty	Adjust or replace switch
Stop lamps do not turn off Instrument lamps do not light (Tail lamps light)	Wiring or ground faulty	Repair if necessary
	Stop lamp switch faulty	Repair or replace switch
	Rheostat faulty	Check rheostat
Turn signal lamp does not flash on one side	Wiring or ground faulty	Repair if necessary
	Bulb burned out	Replace bulb
	Turn signal switch faulty	Check switch
Turn signal lamps do not light	Wiring or ground faulty	Repair if necessary
	Bulb burned out	Replace bulb
	Turn signal lamp fuse (10A) blown	Check for short and replace fuse
	Flasher unit faulty	Check flasher unit
	Turn signal switch faulty	Check switch
Hazard warning lamps do not light	Wiring or ground faulty	Repair if necessary
	Bulb burned out	Replace bulb
	Hazard warning lamp fuse (15A) blown	Check for short and replace fuse
	Flasher unit faulty	Check flasher unit
	Hazard switch faulty	Check switch
Flasher rate too slow or too fast	Wiring or ground faulty	Repair if necessary
	Lamps' wattages are smaller or larger than specified	Replace lamps
	Flasher unit faulty	Check flasher unit

LIGHTING SYSTEM

BE -207


Symptom	Possible cause	Remedy
Back up lamps do not light	Bulb burned out	Replace bulb
	Back up lamp fuse (10A) blown	Check for short and replace fuse
	Back up lamp switch (M/T) faulty	Check switch
	Transaxle range switch (A/T) faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Room lamp does not light	Bulb burned out	Replace bulb
	Room lamp fuse (15A) blown	Check for short and replace fuse
	Room lamp switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Front fog lamps do not light	Bulb burned out	Replace bulb
	Front fog lamp fuse (15A) blown	Check for short and replace fuse
	Front fog lamp relay faulty	Check relay
	Front fog lamp switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Rear fog lamps do not light	Bulb burned out	Replace bulb
	Rear fog lamp fuse (10A) blown	Check for short and replace fuse
	Rear fog lamp fuse (15A) blown	Check for short and replace fuse
	Rear fog lamp switch faulty	Check switch
	Rear fog lamp relay faulty	Check relay
	Wiring or ground faulty	Repair if necessary
Map lamp does not light	Bulb burned out	Replace bulb
	Room lamp fuse (10A) blown	Check for short and replace fuse
	Map lamp switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Trunk room lamp does not light	Bulb burned out	Replace bulb
	Room lamp fuse (10A) blown	Check for short and replace fuse
	Trunk room lamp switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary

HEAD LAMPS


INSPECTION E76F89A5

HEAD LAMP RELAY INSPECTION

1. Pull out the head lamp relay (Low) (A) and head lamp relay (High) (B) from the engine compartment relay box.

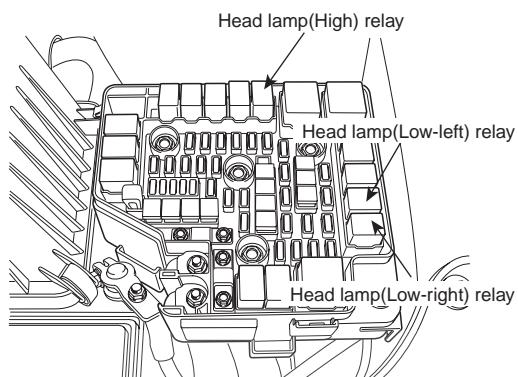REPLACEMENT E4FFBE43


1. Disconnect the negative (-) battery terminal.
2. Loosen the mounting bolts (2EA) and a nut of head lamp. Remove the head lamp assembly after disconnecting the lamp connectors.

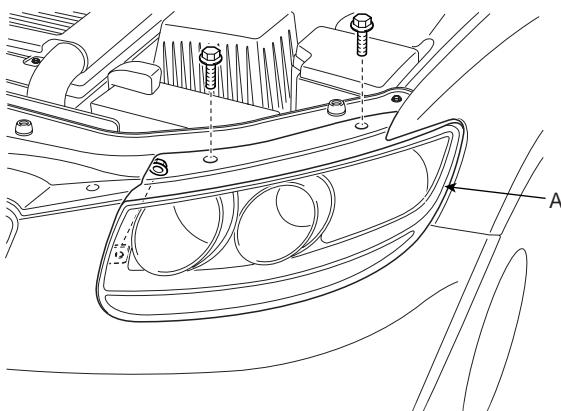

SCMBE6431D


NOTE

Take care that retaining clip (A) is not to be damaged.

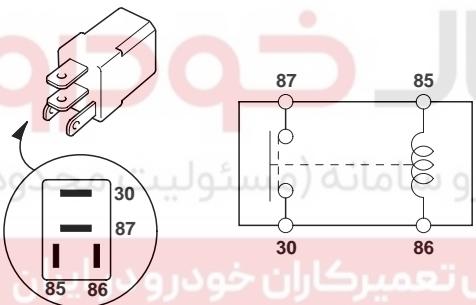

SCMBE6434L

2. Check for continuity between terminals. There should be continuity between the No.87 and No.30 terminals when power and ground are connected to the No.86 and No.85 terminals.
3. There should be no continuity between the No.87 and No.30 terminals when power is disconnected.

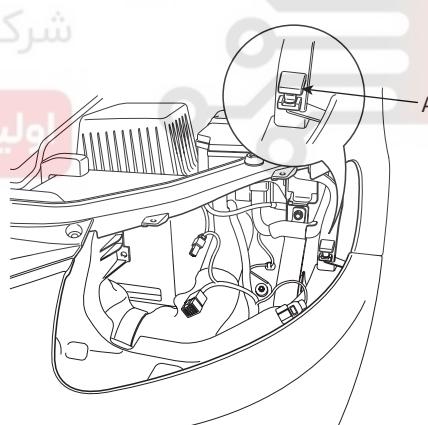

SCMBE6433D


Terminal Power	30	87	85	86
Disconnected			○	○
Connected	○	○	○	○

SCMBE6195L

LIGHTING SYSTEM

BE -209

3. Remove the head lamp bulb.

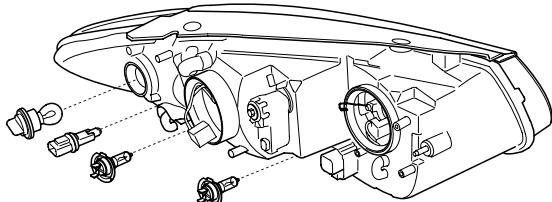

SCMBE6435L

4. Installation is the reverse of removal.

ADJUSTMENT EFD0DACA

HEAD LAMP AIMING INSTRUCTIONS


The head lamps should be aimed with the proper beam-setting equipment, and in accordance with the equipment manufacturer's instructions.

 **NOTE**

If there are any regulations pertinent to the aiming of head lamps in the area where the vehicle is to be used, adjust so as to meet those requirements.

Alternately turn the adjusting gear to adjust the head lamp aiming. If beam-setting equipment is not available, proceed as follows :

1. Inflate the tires to the specified pressure and remove any loads from the vehicle except the driver, spare tire, and tools.
2. The vehicle should be placed on a flat floor.
3. Draw vertical lines (Vertical lines passing through respective head lamp centers) and a horizontal line (Horizontal line passing through center of head lamps) on the screen.
4. With the head lamp and battery in normal condition, aim the head lamps so the brightest portion falls on the horizontal and vertical lines.
Make vertical and horizontal adjustments to the lower beam using the adjusting wheel.

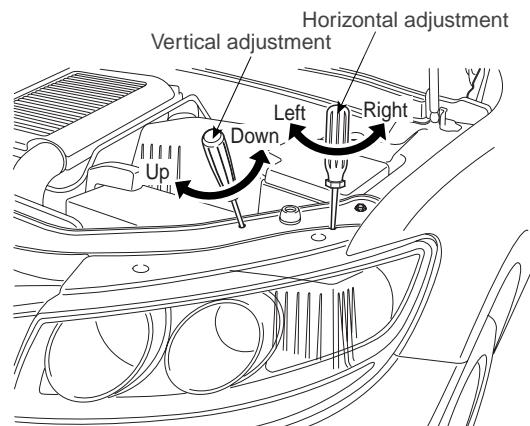


SCMBE6440L

FRONT FOG LAMP AIMING


The front fog lamps should be aimed as the same manner of the head lamps aiming.

With the front fog lamps and battery normal condition, aim the front fog lamps by turning the adjusting gear (A).

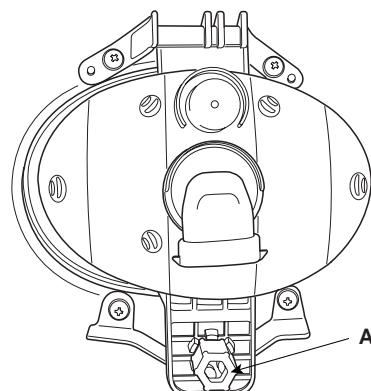

SCMBE6442D

HEAD LAMP AND FOG LAMP AIMING POINT

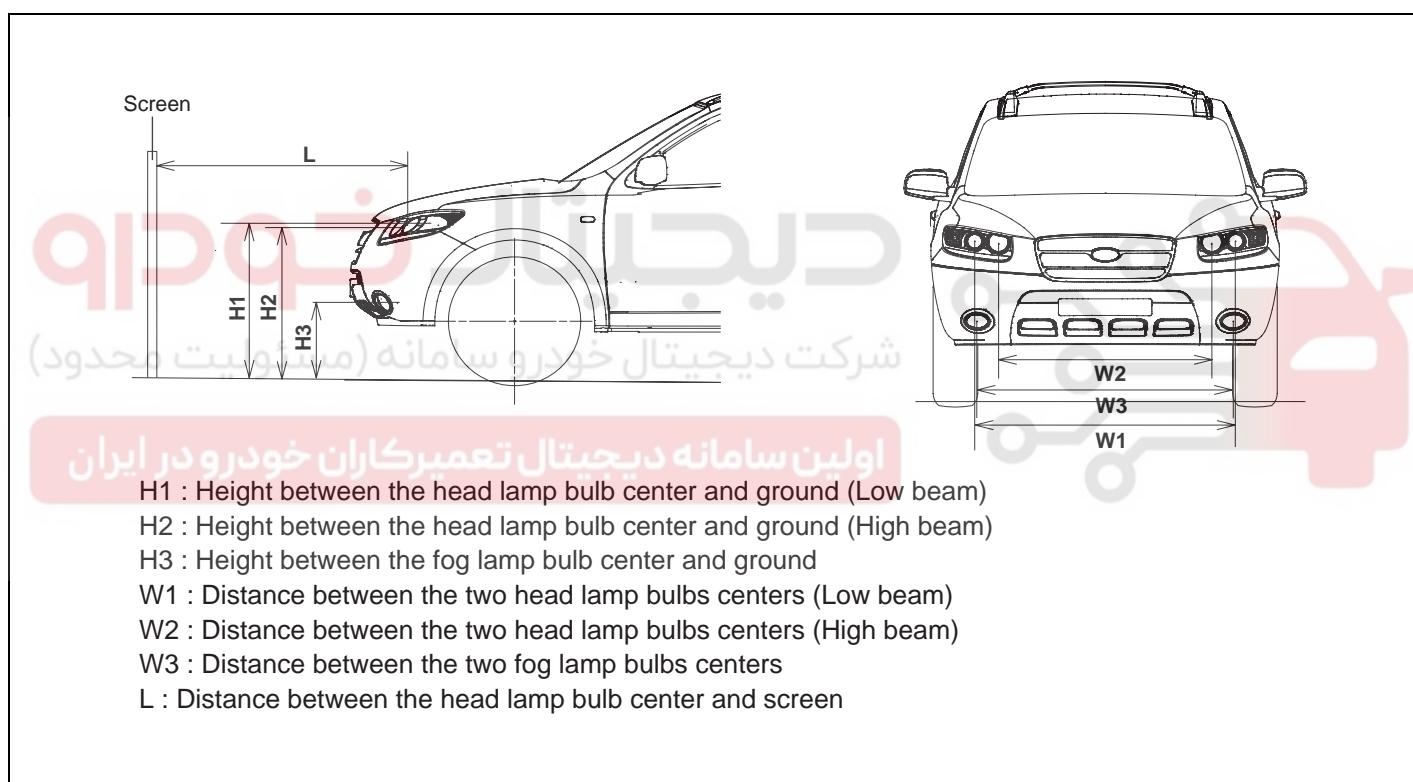

SCMBE6443L

Unit : in (mm)

Vehicle condition	H1	H2	H3	W1	W2	W3	L
Without driver	35(889)	34.4(875)	17.5(445)				
With driver	34.7(883)	34.2(869)	17.2(439)	55.2(1,402)	45.0(1,144)	54.2(1,378)	118(3,000)

SCMBE6444L


LIGHTING SYSTEM

BE -211

- Turn the low beam on without the driver aboard. The cut-off line should be projected in the allowable range (shaded region). In case of equipping with the manual leveling device, set the leveling device switch on the "O" position.


In case of equipping with the auto leveling device, set the initialization by using the diagnostic tool before aiming.

[LHD]

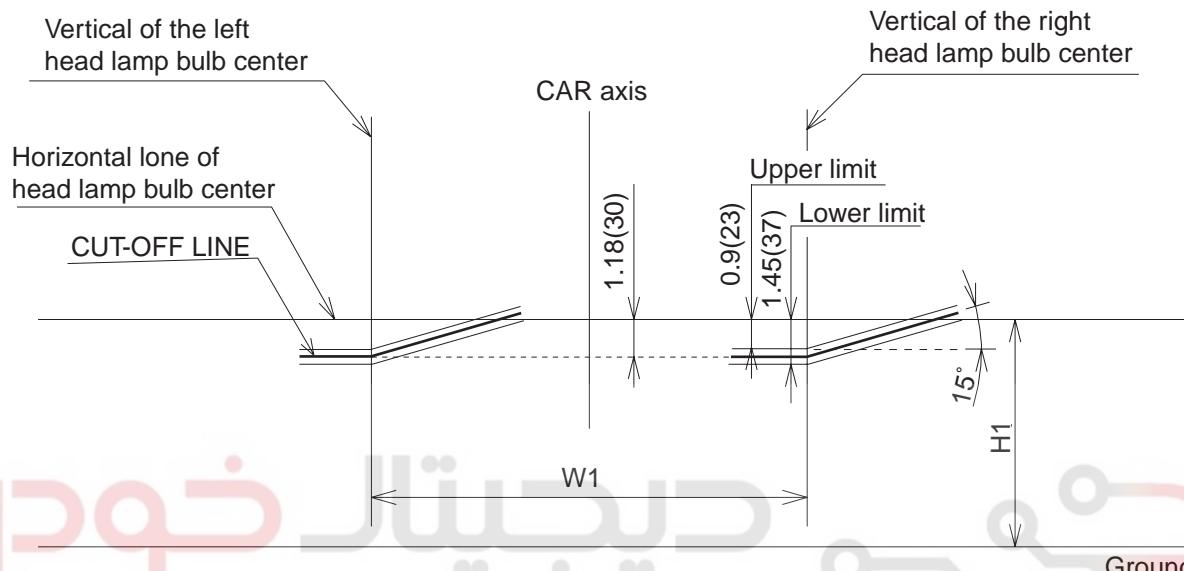

شرکت دیجیتال خودرو سامانه (مسئول تهیه)


[RHD]

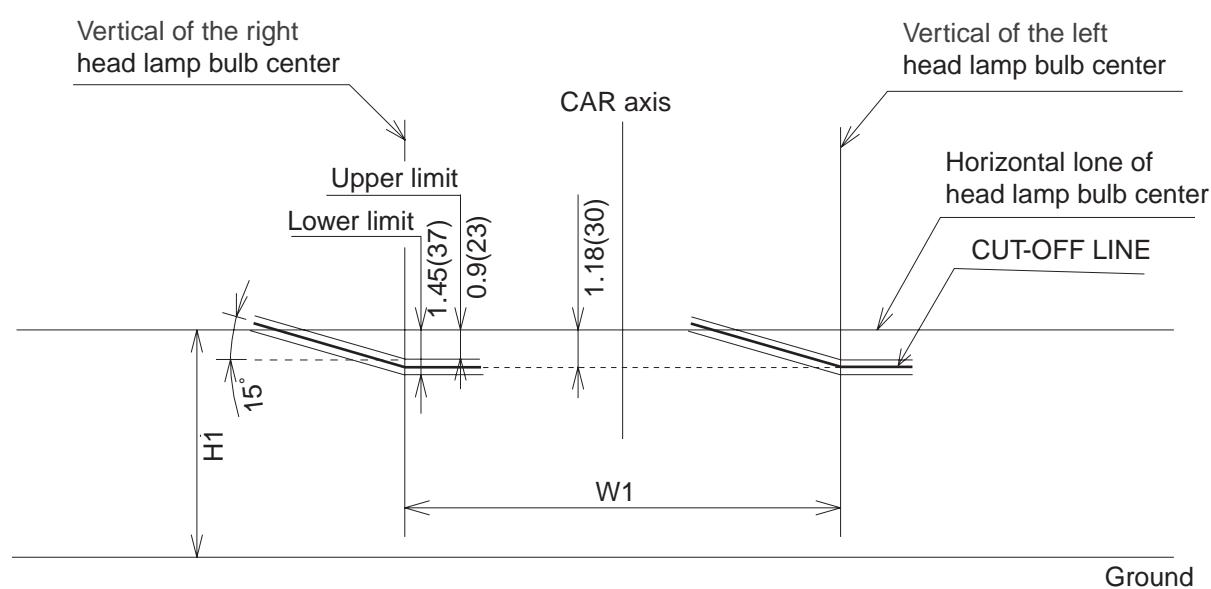

Unit : in.(mm)


SCMBE6459L

2. Turn the high beam on without the driver aboard.
The cut-off line should be projected in the allowable range (shaded region).

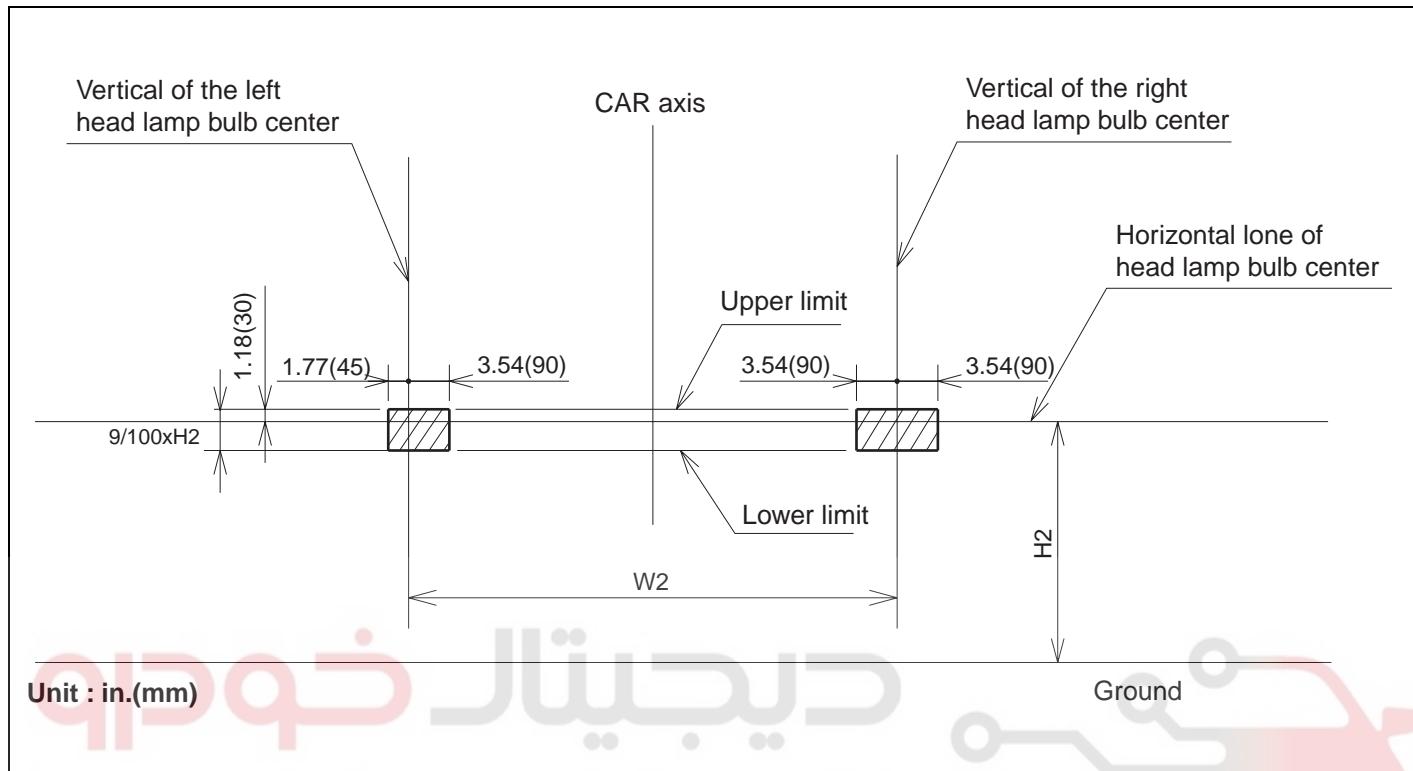

3. Turn the front fog lamp on without the driver aboard.

The cut-off line should be projected in the allowable range (shaded region)

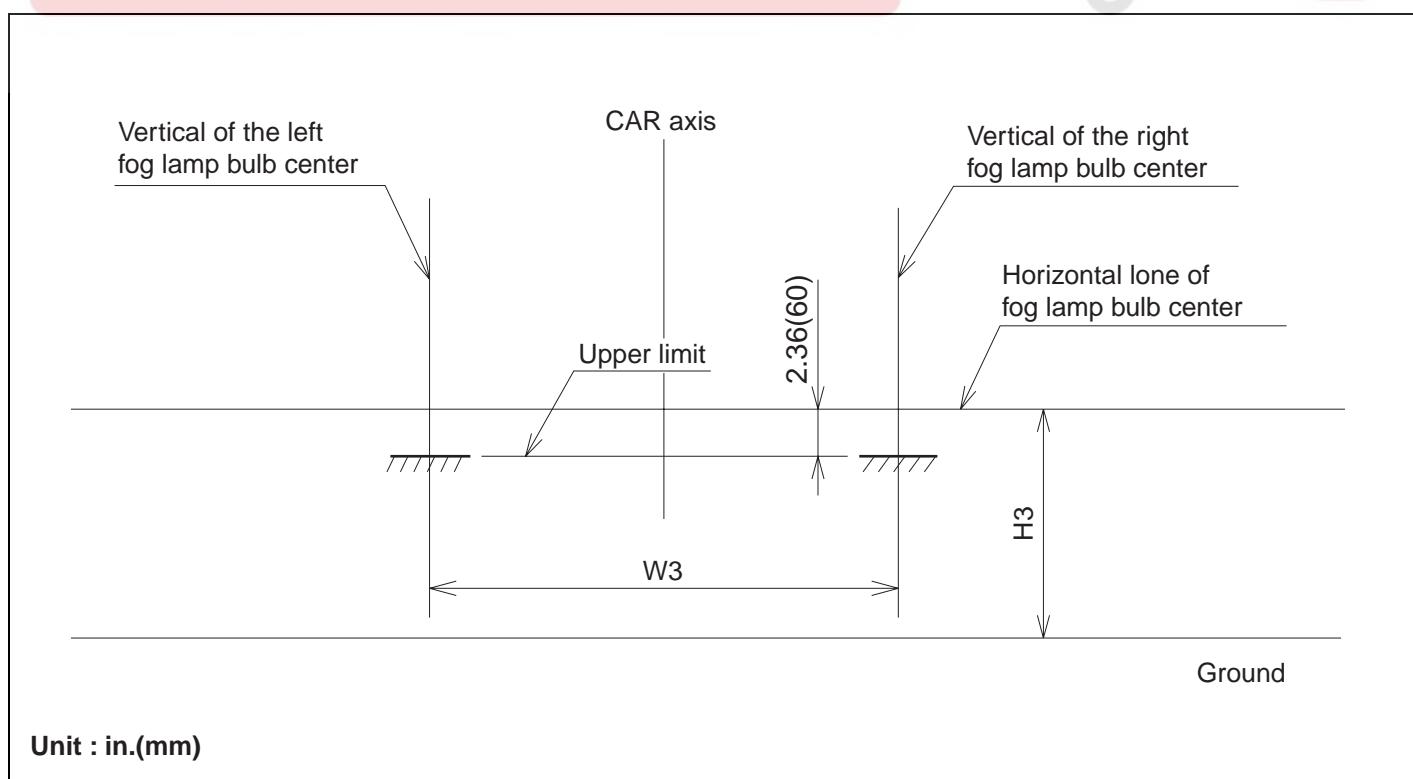


LIGHTING SYSTEM

BE -213


TURN SIGNAL LAMP

REPLACEMENT EEF3E5C7

1. Disconnect the negative (-) battery terminal.
2. Loose the screws (3EA) holding the rear combination lamp then disconnect the 4P connector then remove the outside rear combination lamp.

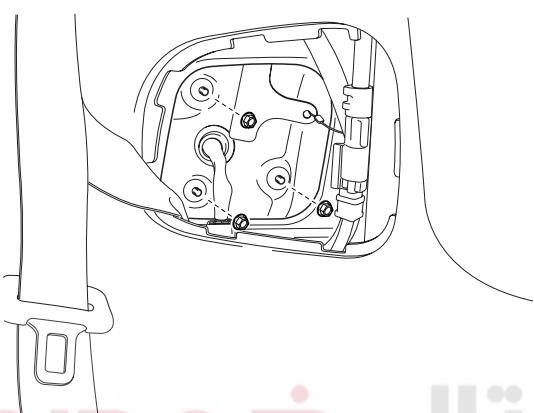


SCMBE6448D

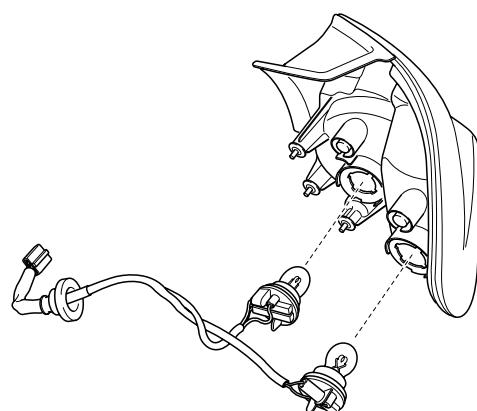


SCMBE6450D

3. Replace the bulbs (2EA) after disconnecting the rear combination lamp assembly..
4. Disconnect the lamp cover on tailgate. Remove the lamp assembly after loosening the connector (4pin), Cap nuts (2EA) and nuts (2EA).
5. Remove the tailgate combination lamp assembly and the replace the bulbs.

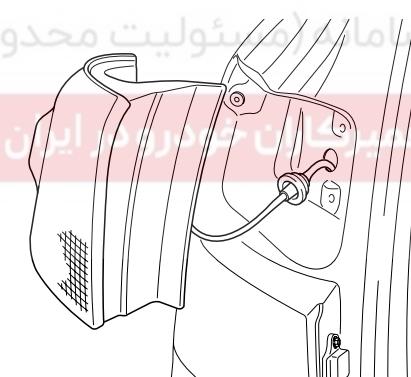

SCMBE6449D

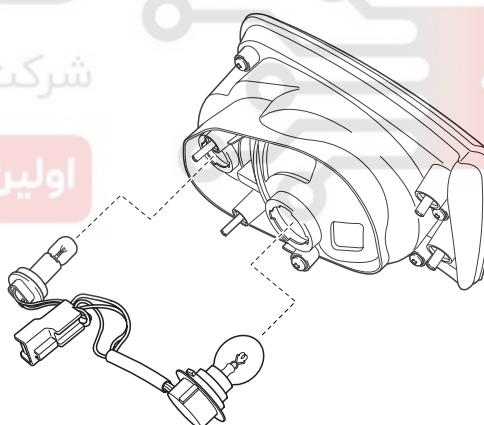


SCMBE6451D

6. Installation is the reverse of removal.

ROOM LAMP


INSPECTION EA676E05

1. Remove the room lamp assembly then check for continuity between terminals.

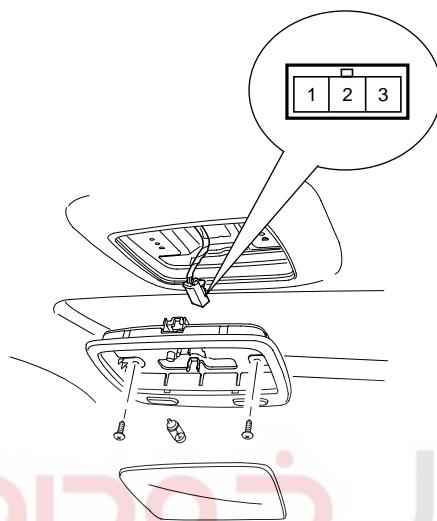

REPLACEMENT E342AAEF

1. Disconnect the negative (-) battery terminal.
2. Detach the lamp lens (A) from the room lamp with a flat-tip screwdriver then replace the bulb.
3. Loosen the fixing screw (2EA) and disconnect the 3P connector. And then remove the room lamp assembly.

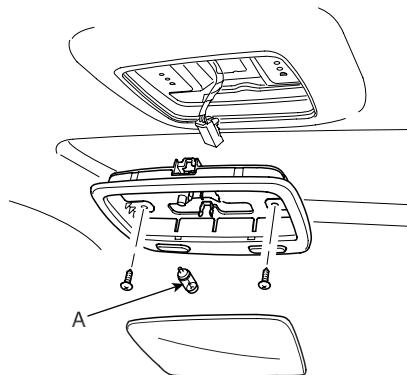

SCMBE6452D

4. Installation is the reverse of removal.

Terminal	1	2	3
Position ON		○	○
DOOR	○	○	
OFF			

SCMBE6453L


SCMBE6454L

LIGHTING SYSTEM

BE -215

OVERHEAD CONSOLE LAMP**INSPECTION** E0EDDEFD


Remove the overhead console lamp assembly then check for continuity between terminals. If the continuity is not as specified, replace the map lamp switch.

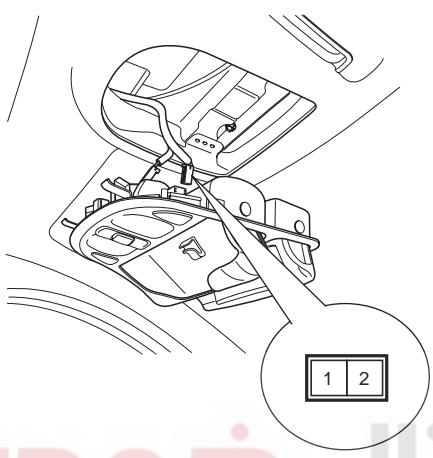


SCMBE6457D

REPLACEMENT E0EB8DD4

1. Disconnect the negative (-) battery terminal.
2. Replace the bulb after removing the lens.
3. Remove the 2 screws, sunroof switch connectors (4Pin / 2Pin). And then remove the overhead consol (A), lamp (B).

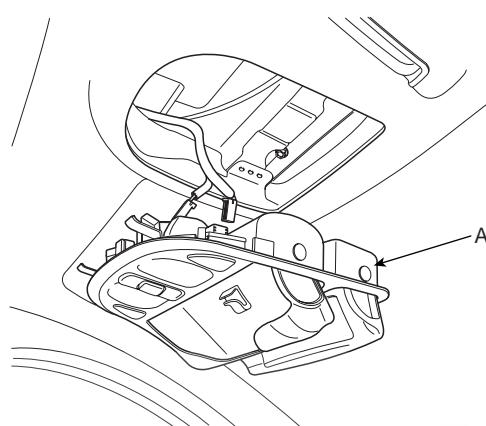

SCMBE6455D

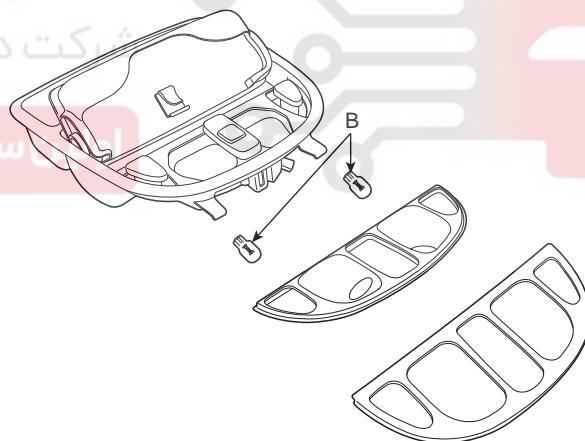

SCMBE6456D

Position	Map lamp switch			
	LH		RH	
Terminal	ON	OFF	ON	OFF
1				
2				

ETKE007M


4. Installation is the reverse of removal.

TURN / HAZARD LAMPS



INSPECTION EBC7E7BC

HAZARD LAMP SWITCH

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad center speaker grill (A).

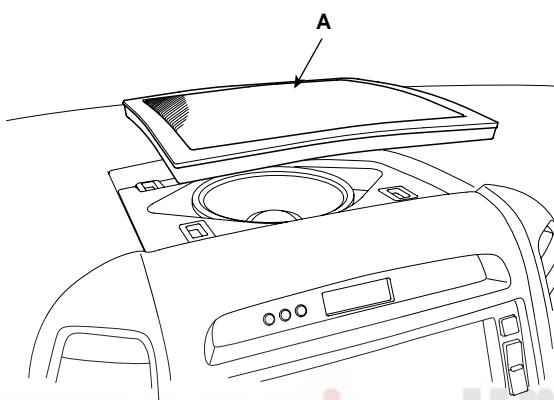


SCMBE6460D

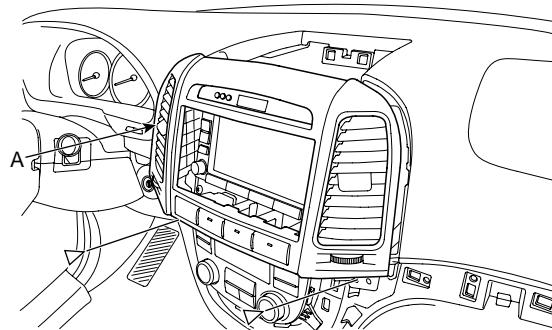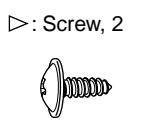

SCMBE6010L


5. Disconnect the connectors.
6. Operate the switch and check for continuity between terminals with an ohmmeter.

[LHD]

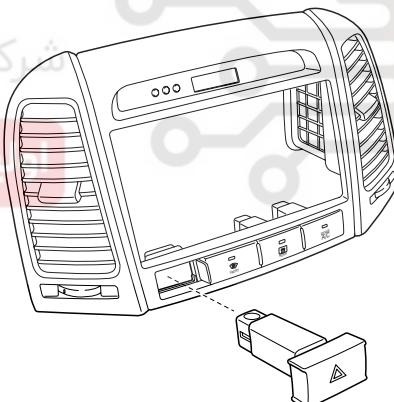

SCMBE6467D

[RHD]

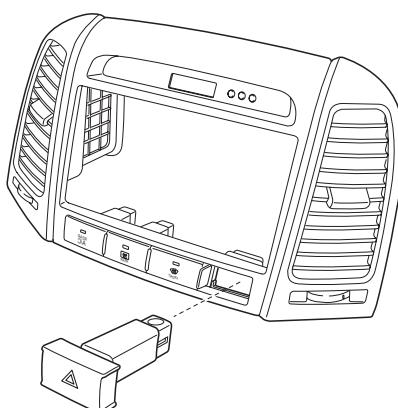

SCMBE6467R

3. Remove the center speaker (A) after loosening the screws (2EA).




SCMBE6015D

4. Remove the center facia panel after loosning the screw (2EA).
(Refer to the Body group - Crash pad)



LIGHTING SYSTEM

BE -217

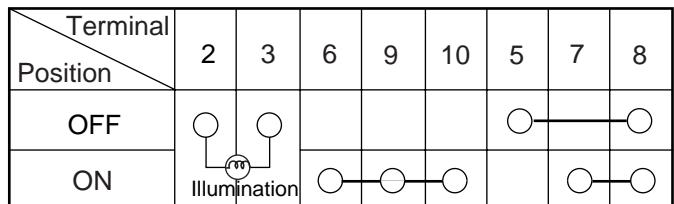


HAZARD LAMP RELAY

1. Disconnect the negative (-) battery terminal.
2. Disconnect the passenger compartment.
3. Check for continuity between terminals. There should be continuity between the No.2 of I/P-C and No.3 or No.4 of I/P-E terminals when power and ground are connected to the No.2 of I/P-C and No.6 of I/P-G terminals.
4. There should be no continuity between the No.2 of I/P-C and No.3 or No.4 of I/P-E terminals when power is disconnected to the No.2 of I/P-C and No.6 of I/P-G terminals.

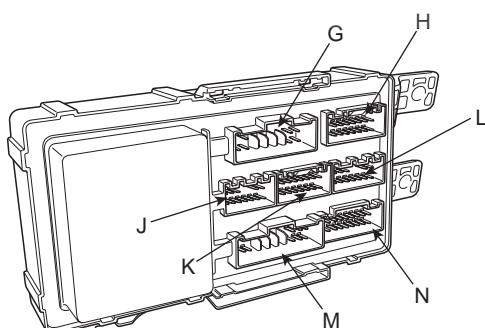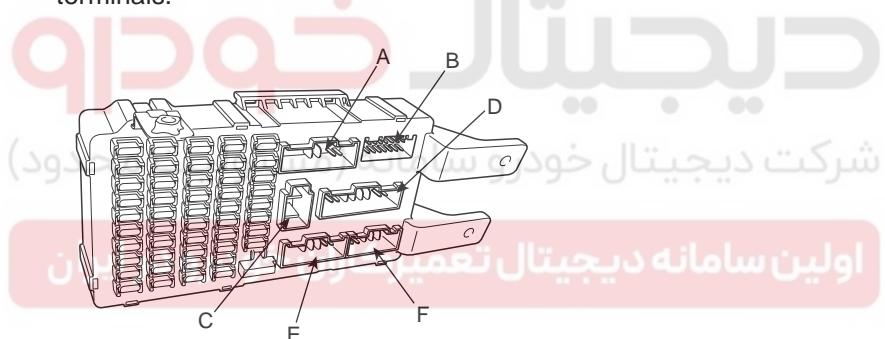

SCMBE6462D

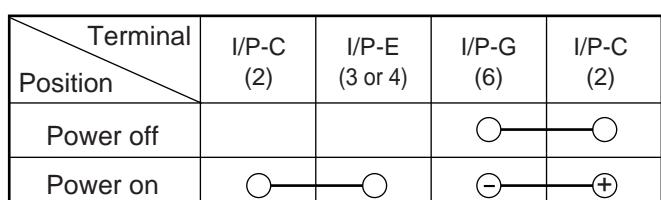


SCMBE6463L

RHEOSTAT

INSPECTION E4E671BB

1. Disconnect the negative (-) battery terminal.
2. Remove the lower crash pad switch assembly (A) by using the scraper and then disconnect the connectors.


[LHD]

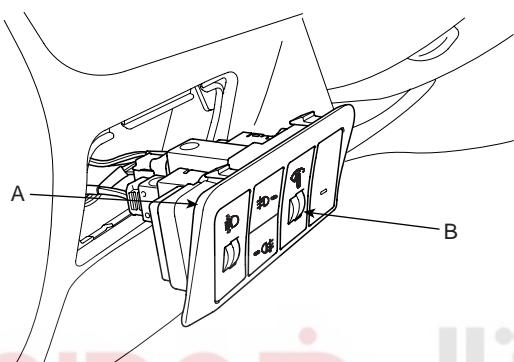

SCMBE6458L

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

[RHD]

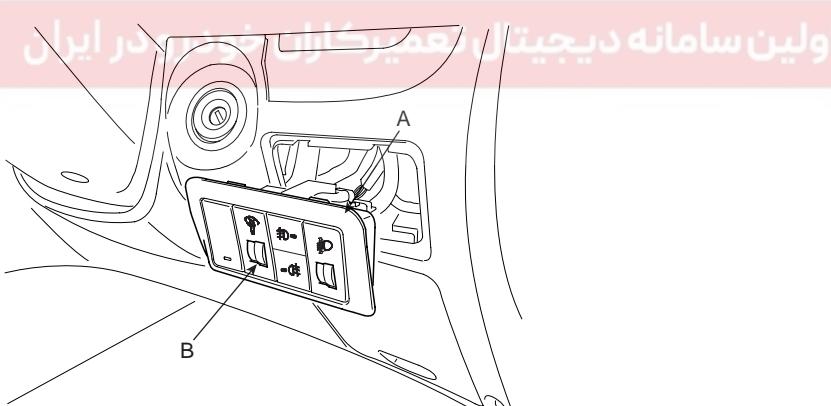

SCMBE6458R

3. Remove the rheostat (B) from lower crash pad switch assembly.
4. Check for intensity of new rheostat switch. If the light intensity of the lamps changes smoothly without any flickering when the rheostat is turned, it can be assumed that the rheostat is normal.




FRONT FOG LAMPS


INSPECTION E738DE84

FRONT FOG LAMP RELAY

1. Pull out the front fog lamp (A) relay from the engine compartment relay box.
2. Check for continuity between terminals. There should be continuity between the No.87 and No.30 terminals when power and ground are connected to the No.85 and No.86 terminals.
3. There should be no continuity between the No.87 and No.30 terminals when power is disconnected.

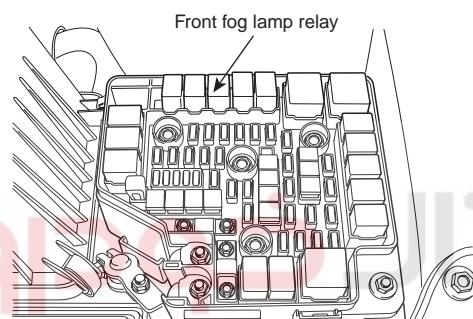REPLACEMENT E5D0F606

1. Disconnect the negative (-) battery terminal.
2. Remove the front side cover screw.
3. Remove the front fog lamp assembly (A) after loosening screws (4EA).

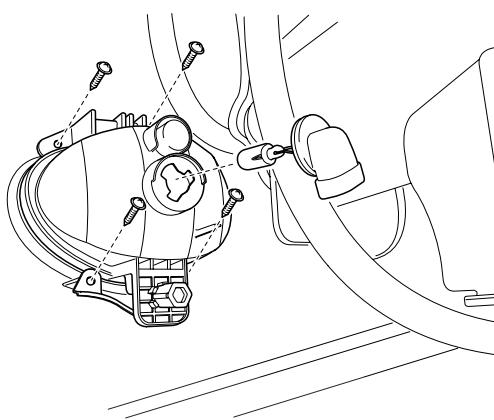


SCMBE6441D

4. Installation is the reverse of removal.

شرکت دیجیتال خودرو (ماد) مسولیت محدود

اولین سامانه دیجیتال تعییر کاران خودرو ایران

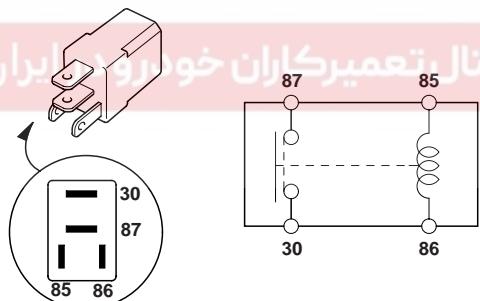

SCMBE6464L

Terminal	30	87	85	86
Power			○	○
Disconnected			○	○
Connected	○	○	—	+

LTGE221B

BE -220

BODY ELECTRICAL SYSTEM


REAR FOG LAMPS

INSPECTION E7D4CDB2

REAR FOG LAMP SWITCH

1. Disconnect the negative (-) battery terminal.
2. Remove the lower crash pad switch (A) from the side crash pad cover by using the scraper and then disconnect the connectors.
3. Remove the rear fog lamp (B) switch from lower crash pad switch.


[LHD]

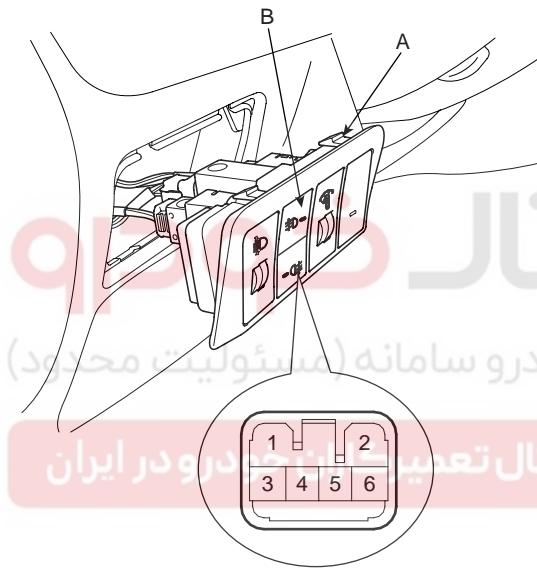

SCMBE6427L



[RHD]

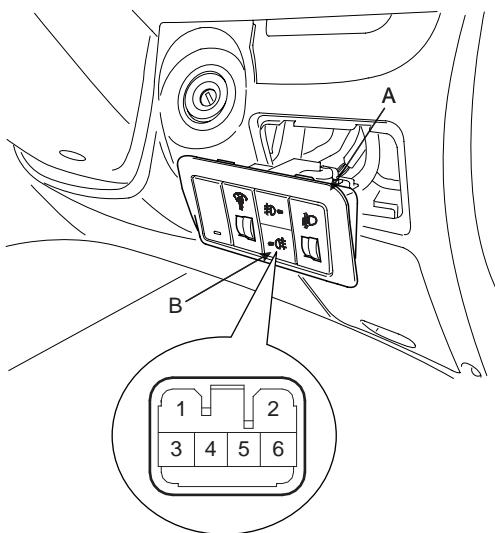

SCMBE6427R

4. Check for continuity between the terminals in each switch position according to the table.


Terminal Position	2	5	1	4	3
ON	○	○	○	○	○
OFF					

SCMBE6469L

LICENSE LAMPS

REPLACEMENT E83B391E



1. Disconnect the negative (-) battery terminal.
2. Remove the license lamp lens (A) from the panel after loosening a screw (2EA).

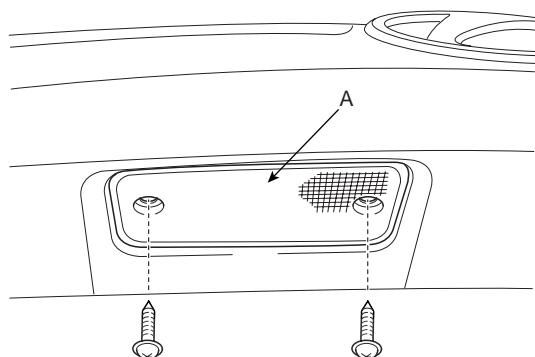

SCMBE6465D

3. Replace the bulb (A).

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

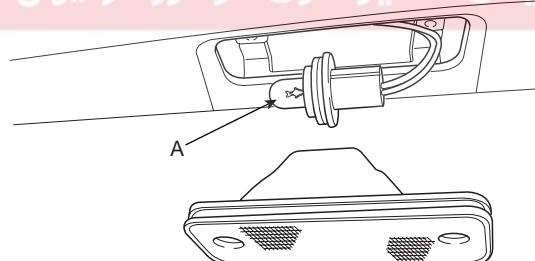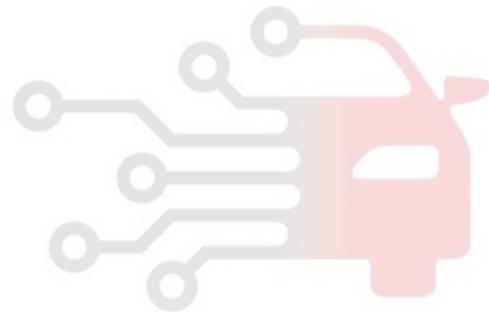

SCMBE6466D


4. Installation is the reverse of removal.

STOP LAMPS

REPLACEMENT E79FFC53

HIGH MOUNTED STOP LAMP


1. Disconnect the negative (-) battery terminal.
2. Remove the tailgate (Refer to the Body group - Tailgate).
3. Remove the high mounted stop lamp assembly after removing 2 nuts, then remove the spoiler.

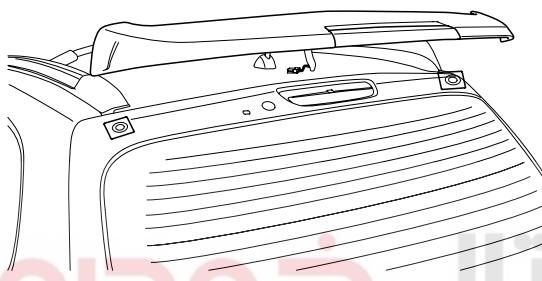

SCMBE6477D

4. Remove the spoiler lamp cover (A) and loosening the screw (4EA). And then remove the high mounted stop lamp.

اولین سامانه دیجیتال تعمیر کاران خودرو در ایران

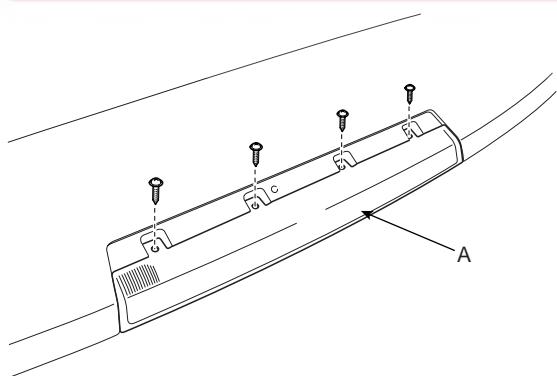

SCMBE6478D

5. Installation is the reverse of removal.


LIGHTING SYSTEM

BE -223


REAR ROOM LAMP

INSPECTION E4FBF49C

1. Remove the trunk room lamp assembly then check for continuity between terminals.

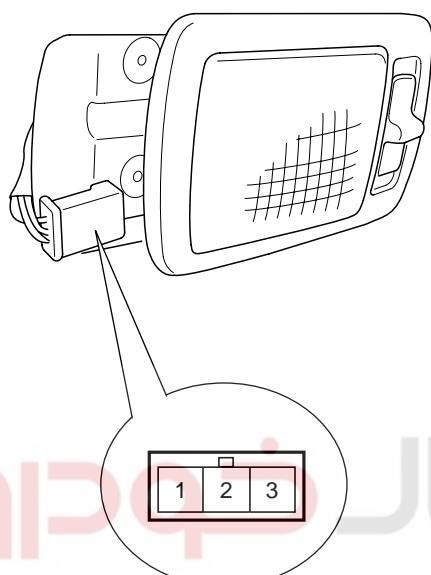REPLACEMENT E48BEEC9

1. Disconnect the negative (-) battery terminal.
2. Remove the trunk room lamp lens with a flat-tip screwdriver and replace the bulb.
3. Remove the trunk room lamp assembly after removing 2 screws, then disconnect the 3P connector.

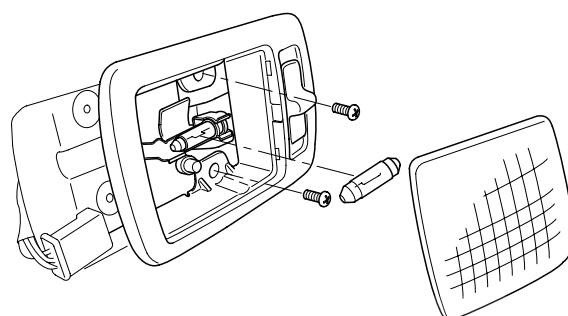

4. Installation is the reverse of removal.

شركة ديجيتال خودرو سامانه (مسئوليّت محدود) KTKD087A

Position	Terminal 1	2	3
ON		○	Ⓜ
DOOR	○	Ⓜ	○
OFF			

ETQF088A

KTKD088A

AUTO LIGHTING CONTROL SYSTEM

SPECIFICATIONS

E968DD1C

Item	Specifications
Rated voltage	5V
Load	Max. 1mA
Detection illuminations	Tail lamp ON : 24 ± 5.2 (Lux), 1.77 ± 0.08 (V) OFF : 48 ± 10.5 (Lux), 3.47 ± 0.1 (V)
	Head lamp ON : 6 ± 1.4 (Lux), 0.63 ± 0.06 (V) OFF : 12 ± 2.7 (Lux), 1.02 ± 0.06 (V)

DESCRIPTION

E4047CBE

The auto light control system operates by using the auto light switch.

If you set the multi-function switch to "AUTO" position, the tail lamp and head lamp will be turned automatically on or off according to external illumination.



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

AUTO LIGHTING CONTROL SYSTEM

BE -225


COMPONENT LOCATION

EFCEC781

The parts with asterisk(*) :

This illustration shows the LHD type.

RHD type is symmetrical.

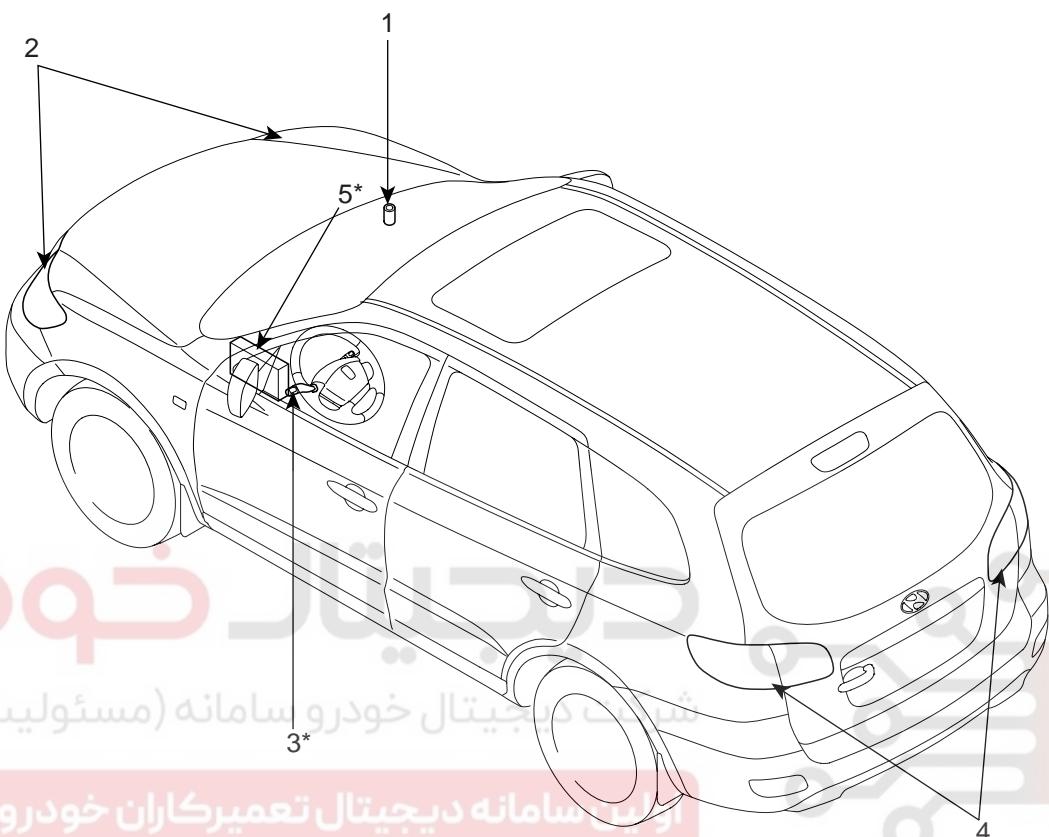

1. Auto light sensor unit

2. Head lamps

3. Lighting switch (Auto)



4. Tail lamps

5. Body control module

SCMBE6514L

CIRCUIT DIAGRAM

ED5E07FD

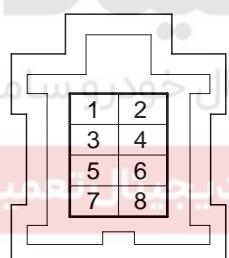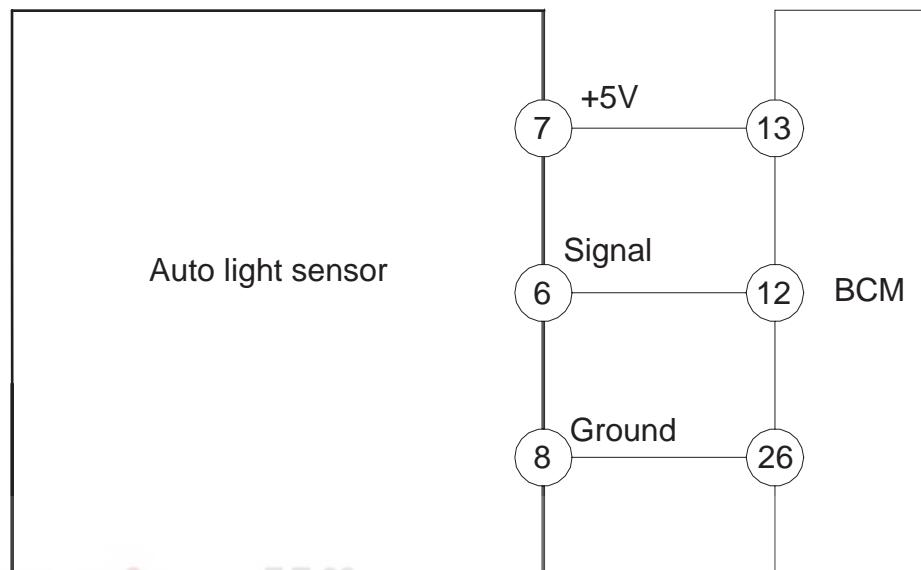

6. Sensor signal
7. Vcc (+5V)
8. Sensor ground

[Autolight unit connector]


SCMBE6515L

AUTO LIGHTING CONTROL SYSTEM

BE -227

AUTO LIGHT SWITCH**INSPECTION** E0BF4EBE

1. Operate the auto light switch, then check for continuity between terminals of 18P multi - function switch connector.

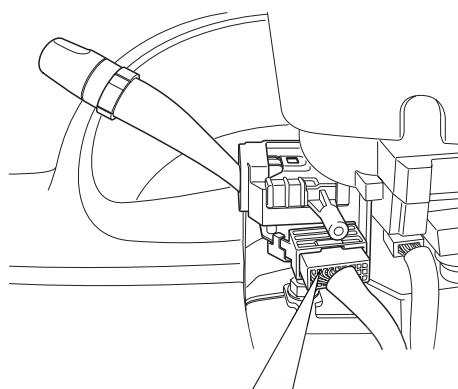
[LHD]

Terminal Position	14(13)	15(14)	16(15)	17(16)
OFF				
I	○			○
II	○	○		○
AUTO			○	○

SCMBE6513L

شركة ديجيتال خودرو سامانه (مسؤولیت محدود)

SCMBE6512D

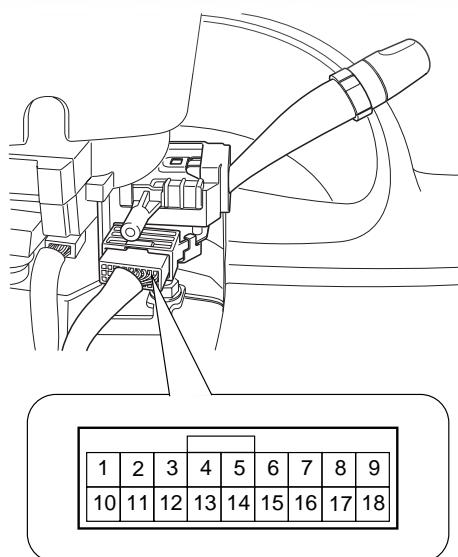اولین سامانه دیجیتال تعمیرکاران خودرو در ایران [RHD]

SCMBE6512R

AUTO LIGHT SENSOR

INSPECTION E0BEF93A


While operating the auto light switch, check if the operations are normal as shown in the timing chart.

1. Auto light sensor value is always read at IGN ON.
2. Light is turned ON after $2.5\text{sec} \pm 0.2\text{sec}$ when auto light sensor value is same as light ON input value.
3. Light is turned OFF after $2.5\text{sec} \pm 0.2\text{sec}$ when sensor value is same as light OFF input value.
4. Tail lamp and head lamp are turned ON when sensor value is same as tail lamp ON input value.
5. Light ON value of sensor is based on the below table.
6. Head lamp signal is output when head lamp switch is ON. After head lamp is turned OFF, head lamp signal output is immediately stopped if head lamp OFF luminescence condition is met at auto light switch ON.

	TAIL LAMP, AV LAMP	HEAD LAMP (low beam)
ON	$1.77V \pm 0.08V$	$0.63V \pm 0.06V$
OFF	$3.47V \pm 0.10V$	$1.02V \pm 0.06V$

REPLACEMENT EF6FDDE7


1. Disconnect the negative (-) battery terminal.
2. Remove the Photo & auto light sensor (B) using screw (-) driver.

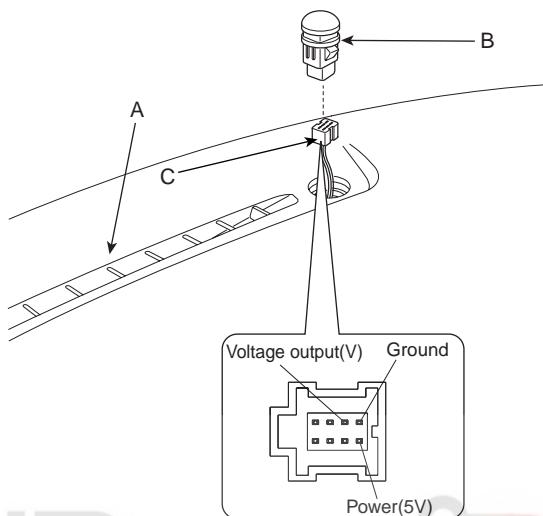

SCMBE6510L

3. Remove the auto light connector (C).
4. Installation is the reverse of removal.

اولین سامانه دیجیتال تعمیر کاران خودرو در ایران

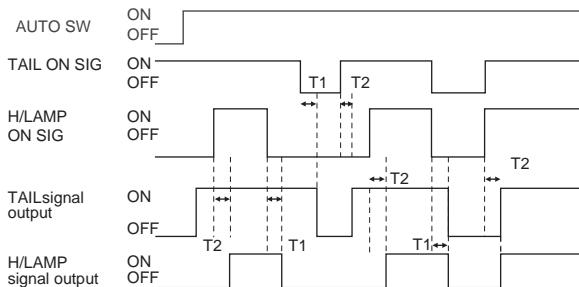

ETRF141X


T1 : $2.5 \pm 0.2 \text{ sec}$ T2 : $2.5 \pm 0.2 \text{ sec}$.

DAYTIME RUNNING LIGHTS

DRL CONTROL MODULE

INSPECTION E251DBDE


1. The daytime running unit (A) is integrated in the BCM.

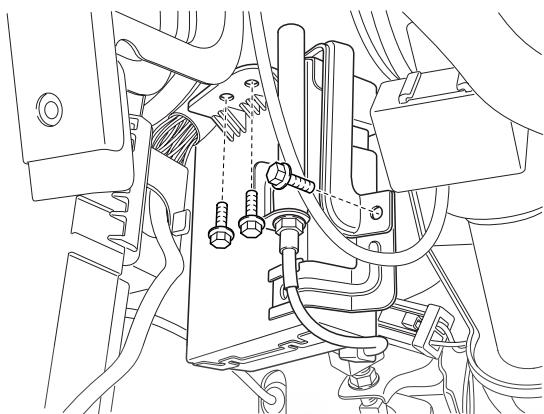

SCMBE6150D

2. Check that the light operate according to the following timing chart.

شركة ديجيتال خودرو (مسؤولية محدودة)

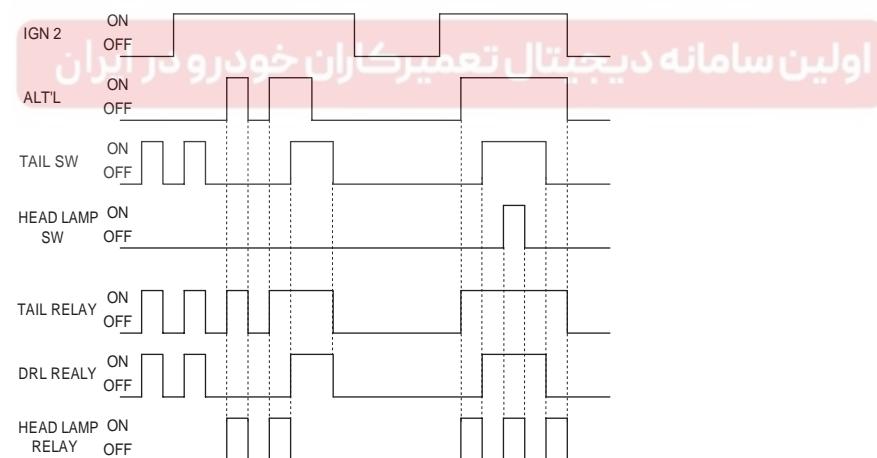

SCMBE6903L




HEAD LAMP LEVELING DEVICE

COMPONENT LOCATION E4FA4AB6

The parts with asterisk (*) :

This illustration shows the LHD type.

RHD type is symmetrical.

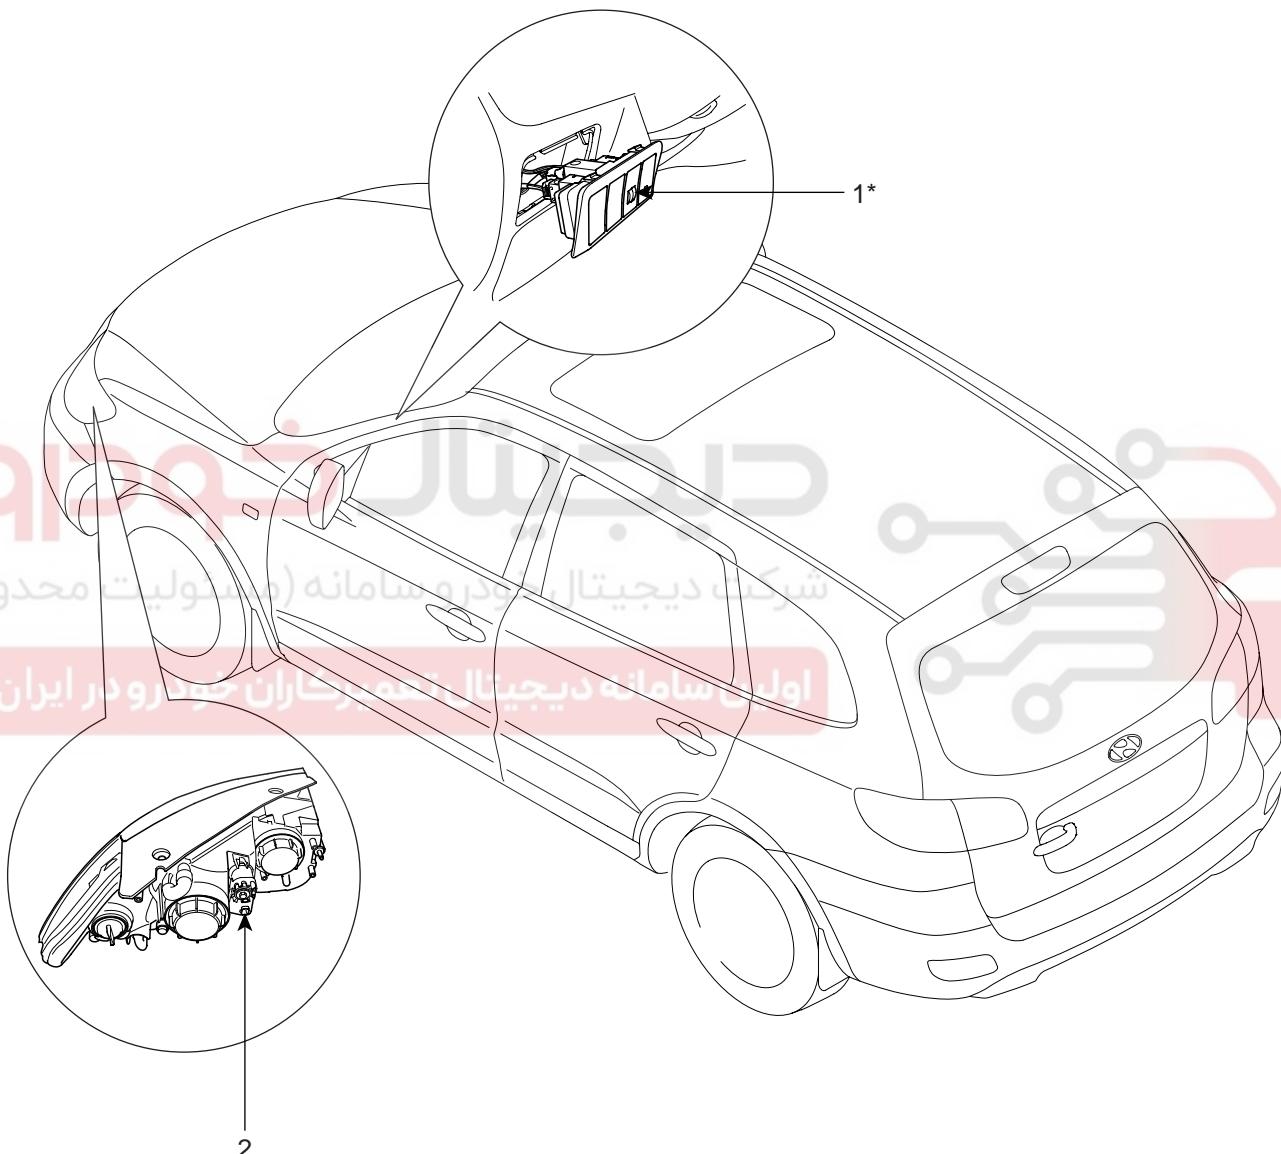

1. Headlamp leveling switch

2. Headlamp leveling actuator


SCMBE6490L

HEAD LAMP LEVELING DEVICE

BE -231

CIRCUIT DIAGRAM

E17EB8B0

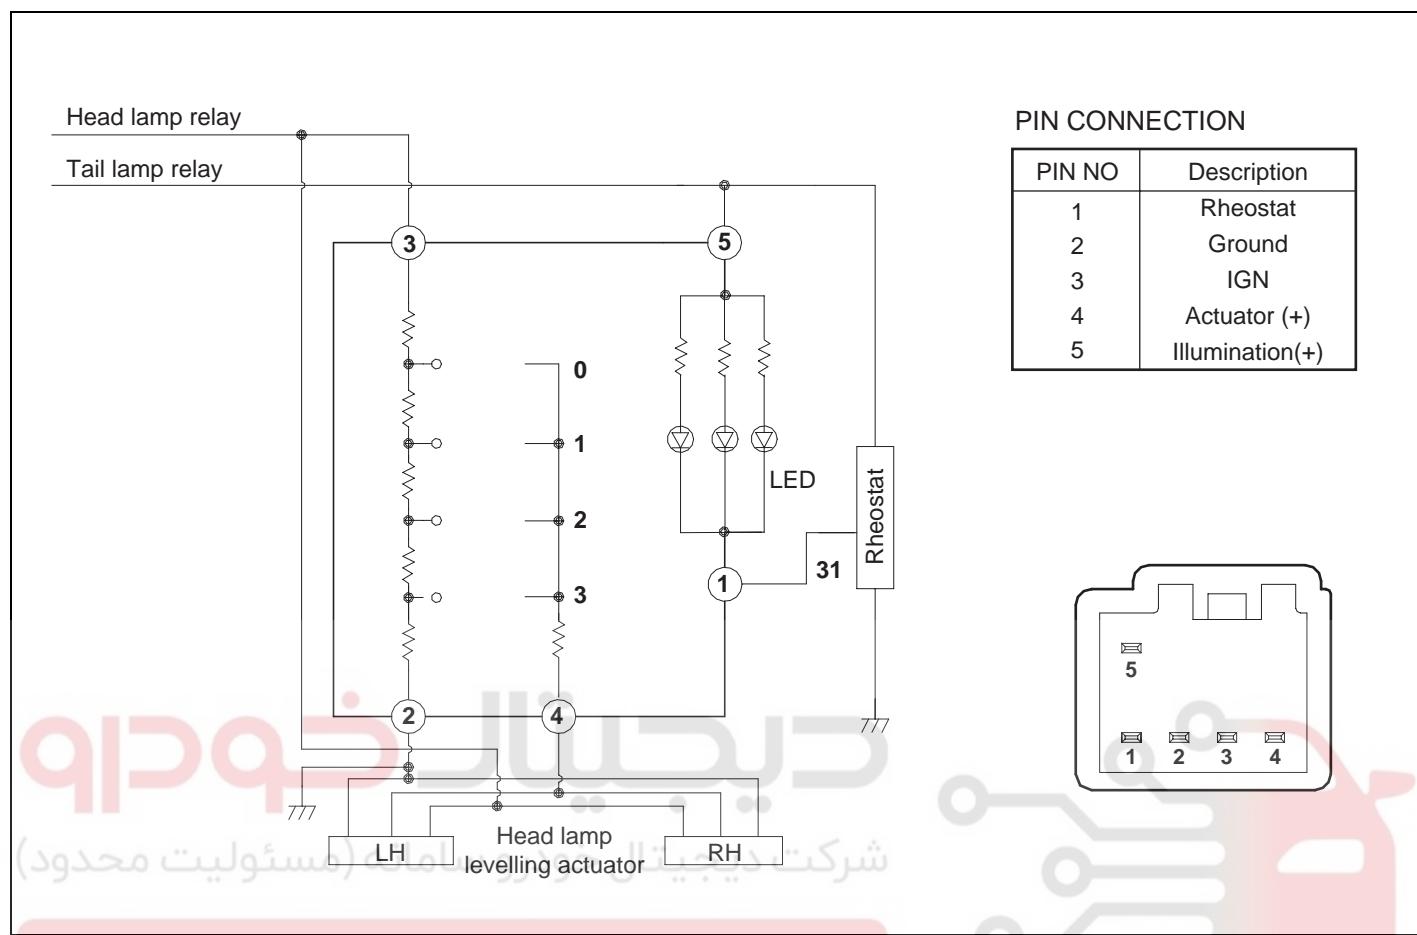

SCMBE6429L


اولین سامانه دیجیتال تعییر کاران خودرو در ایران

HEAD LAMP LEVELING ACTUATOR

REPLACEMENT

E14C459B

1. Disconnect the negative (-) battery terminal.
2. Remove the head lamp assembly (Refer to the head lamp).
3. Remove the head lamp leveling actuator (A) by loosening the adjusting bolt (B) after rotating it to an arrow direction.

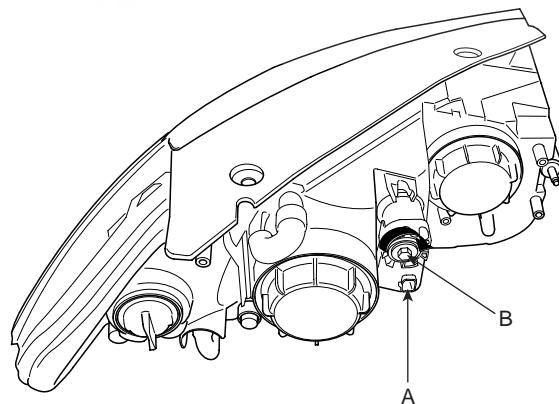

SCMBE6494L


4. Installation is the reverse of removal procedure.

HEAD LAMP LEVELING SWITCH


INSPECTION EE9680DD

1. Disconnect the negative (-) battery terminal.
2. Remove the lower crash pad switch (A) from the side crash pad cover by using the scraper and then disconnect the connectors.

[LHD]

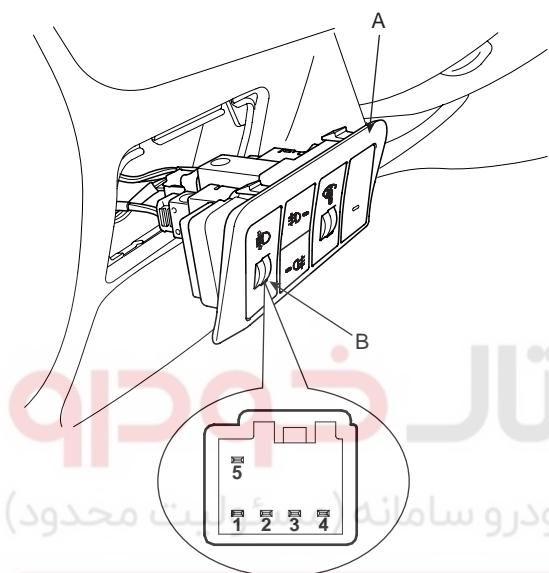

[RHD]

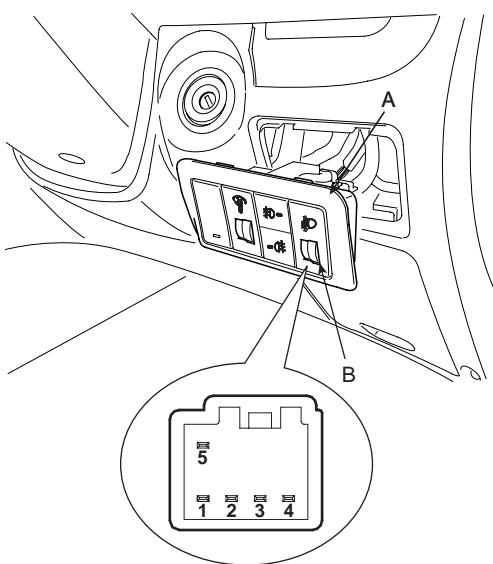

3. Remove the head lamp leveling switch (B) from the lower crash pad switch.
4. Connect the battery voltage between terminals 5 and 4.
5. Measure the voltage between terminals 1 and 4 (V) at each position.

Position No.	Rotation	Voltage (V) ($\pm 5\%$)
0	0°	6.6
1	20°	7.7
2	40°	9.67
3	60°	12.06

6. If the voltage is not as specified, replace the head lamp leveling switch.



دیجیتال خودرو
شرکت دیجیتال خودرو سامانه تعمیرکاران خودرو در ایران

SCMBE6428L

SCMBE6428R


IMMOBILIZER CONTROL SYSTEM

DESCRIPTION EB551D42

The immobilizer system will disable the vehicle unless the proper ignition key is used, in addition to the currently available anti-theft systems such as car alarms, the immobilizer system aims to drastically reduce the rate of auto theft.

1. SMARTRA type immobilizer

- The SMARTRA system consists of a transponder located in the ignition key, an antenna coil, a SMARTRA unit, an indicator light and the PCM(ECM).
- The SMARTRA communicates to the PCM(ECM) (Engine Control Module) via a dedicated communications line. Since the vehicle engine management system is able to control engine mobilization, it is the most suitable unit to control the SMARTRA.
- When the key is inserted in the ignition and turned to the ON position, the antenna coil sends power to the transponder in the ignition key. The transponder then sends a coded signal back through the SMARTRA unit to the PCM(ECM).
- If the proper key has been used, the PCM(ECM) will energize the fuel supply system. The immobilizer indicator light in the cluster will simultaneously come on for more than five seconds, indicating that the SMARTRA unit has recognized the code sent by the transponder.
- If the wrong key has been used and the code was not received or recognized by the PCM(ECM) the indicator light will continue blinking for about five seconds until the ignition switch is turned OFF.
- If it is necessary to rewrite the PCM(ECM) to learn a new key, the dealer needs the customer's vehicle, all its keys and the Hi-scan (pro) equipped with an immobilizer program card. Any key that is not learned during rewriting will no longer start the engine.
- The immobilizer system can store up to four key codes.
- If the customer has lost his key, and cannot start the engine, contact HMC motor service station.

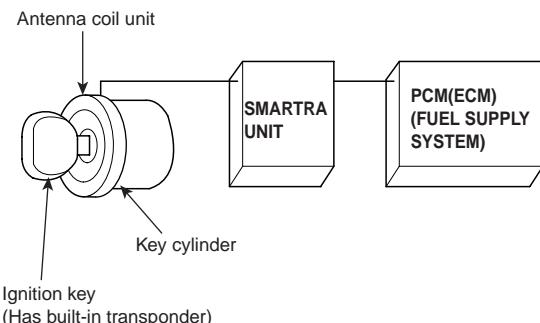


ETBF740B

COMPONENTS OPERATIONS EA703DCB

PCM (POWER TRAIN CONTROL MODULE)

1. The PCM(ECM) carries out a check of the ignition key using a special encryption algorithm, which is programmed into the transponder as well as the PCM(ECM) simultaneously. Only if the results are equal, the engine can be started. The data of all transponders, which are valid for the vehicle, are stored in the PCM(ECM).

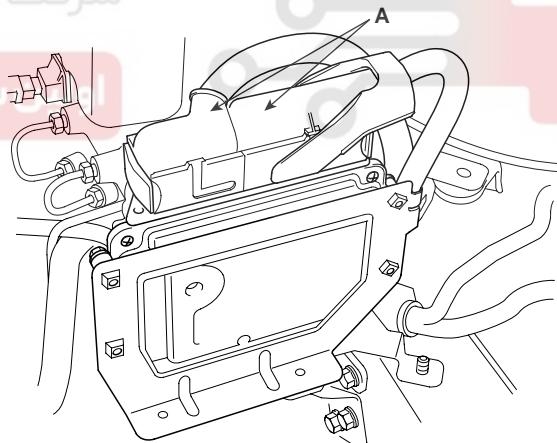

SCMBE6544D

SMARTRA UNIT (B)

The SMARTRA carries out communication with the built-in transponder in the ignition key. This wireless communication runs on RF (Radio frequency of 125 kHz). The SMARTRA is mounted behind of the crush pad under panel close to the antenna coil for RF transmission and receiving. The RF signal from the transponder, received by the antenna coil, is converted into messages for serial communication by the SMARTRA device. And, the received messages from the PCM(ECM) are converted into an RF signal, which is transmitted to the transponder by the antenna.


The SMARTRA does not carry out the validity check of the transponder or the calculation of encryption algorithm. This device is only an advanced interface, which converts the RF data flow of the transponder into serial communication to the PCM(ECM) and vice versa.



SCMBE6542L

TRANSPOUNDER (BUILT-IN KEYS)

The transponder has an advanced encryption algorithm. During the key teaching procedure, the transponder will be programmed with vehicle specific data. The vehicle specific data are written into the transponder memory. The write procedure is once only; therefore, the contents of the transponder can never be modified or changed.

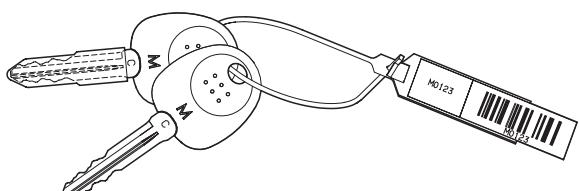


SCMBE6540D

ANTENNA COIL


The antenna coil (A) has the following functions.

- The antenna coil supplies energy to the transponder.
- The antenna coil receives signal from the transponder.
- The antenna coil sends transponder signal to the SMARTRA.

It is located directly in front of the steering handle lock.

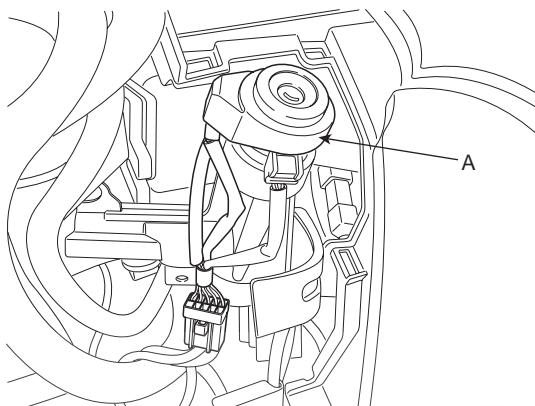

SCMBE6541D

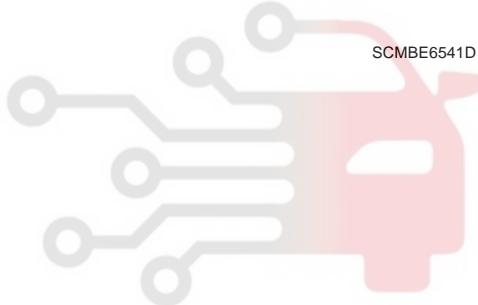

دیجیتال خودرو
شرکت دیجیتال خودرو
اولین سامانه دیجیتال تعیین کننده خودرو ایران

IMMOBILIZER CONTROL SYSTEM

BE -235

TEACHING PROCEDURES EDEFC04

1. Key Teaching Procedure

Key teaching must be done after replacing a defective PCM(ECM) or when providing additional keys to the vehicle owner.

The procedure starts with an PCM(ECM) request for vehicle specific data (PIN code: 6digits) from the tester. The "virgin" PCM(ECM) stores the vehicle specific data and the key teaching can be started. The "learnt" PCM(ECM) compares the vehicle specific data from the tester with the stored data. If the data are correct, the teaching can proceed.

If incorrect vehicle specific data have been sent to the PCM(ECM) three times, the PCM(ECM) will reject the request of key teaching for one hour. This time cannot be reduced by disconnecting the battery or any other manipulation. After reconnecting the battery, the timer starts again for one hour.

The key teaching is done by ignition on with the key and additional tester commands. The PCM(ECM) stores the relevant data in the EEPROM and in the transponder. Then the PCM(ECM) runs the authentication required for confirmation of the teaching process. The successful programming is then confirmed by a message to the tester.

If the key is already known to the PCM(ECM) from a previous teaching, the authentication will be accepted and the EEPROM data are updated. There is no changed transponder content (this is impossible for a learnt transponder).

The attempt to repeatedly teach a key, which has been taught already during the same teaching cycle, is recognized by the PCM(ECM). This rejects the key and a message is sent to the tester.


The PCM(ECM) rejects invalid keys, which are presented for teaching. A message is sent to the tester. The key can be invalid due to faults in the transponder or other reasons, which result from unsuccessful programming of data. If the PCM(ECM) detects different authenticators of a transponder and an PCM(ECM), the key is considered to be invalid.

The maximum number of taught keys is 4

If an error occurs during the Immobilizer Service Menu, the PCM(ECM) status remains unchanged and a specific fault code is stored.

If the PCM(ECM) status and the key status do not match for teaching of keys, the tester procedure will

be stopped and a specific fault code will be stored at PCM(ECM).

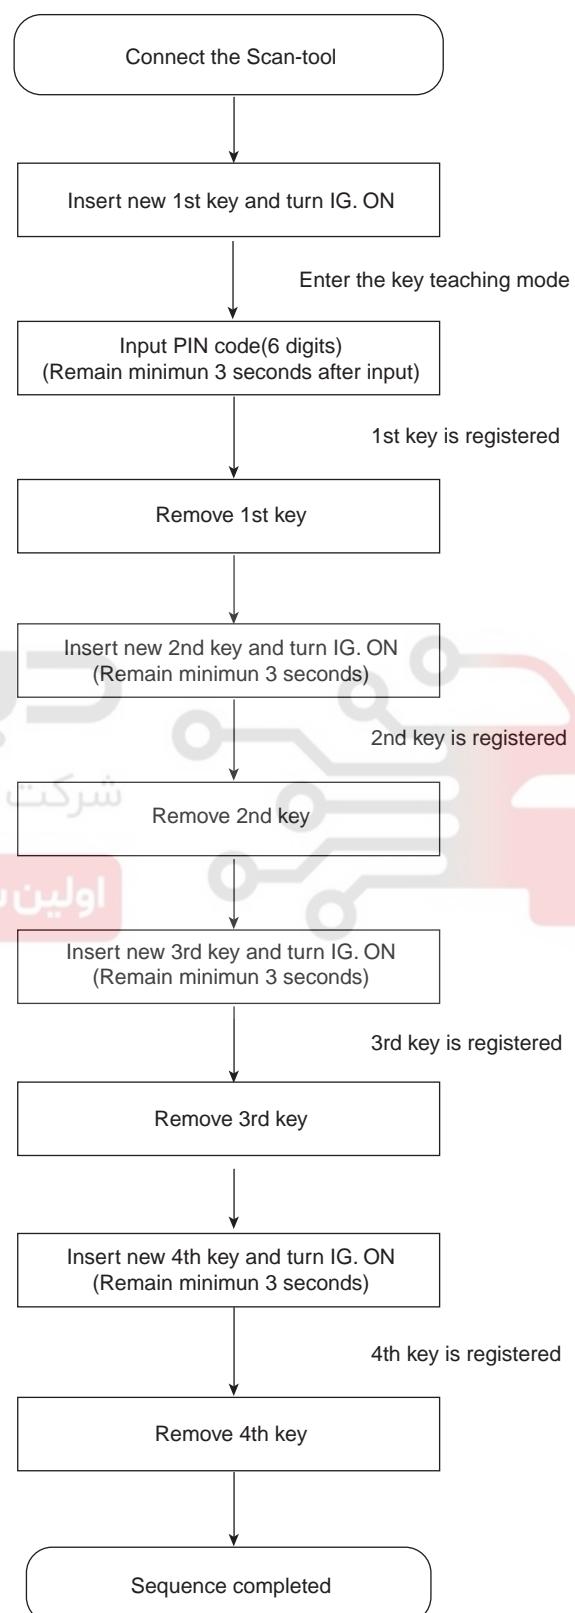

ETBF740M

BE -236

BODY ELECTRICAL SYSTEM

1) PCM(ECM) learnt status.

1. HYUNDAI VEHICLE DIAGNOSIS ▼

MODEL : SANTAFE

- 01. ENGINE
- 02. AUTOMATIC TRANSAXLE
- 03. ANTI-LOCK BRAKE SYSTEM
- 04. SRS-AIRBAG
- 05. ELEC. CONTROL SUSPENSION
- 06. IMMOBILIZER**
- 07. ELEC. POWER STEERING
- 08. FULL AUTO AIR/CON.

SCMBE6551L

1.3 TEACHING

MODEL : SANTAFE
 SYSTEM : IMMOBILIZER
 STATUS : LEARNT

1st KEY TEACHING
 ARE YOU SURE ? [Y/N]

CODE : 234567

SCMBE6554L

1. HYUNDAI VEHICLE DIAGNOSIS

MODEL : SANTAFE
 SYSTEM : IMMOBILIZER

- 01. CURRENT DATA
- 02. PASSWORD TEACHING/CHANGING
- 03. TEACHING**
- 04. NEUTRAL MODE
- 05. LIMP HOME MODE

SCMBE6552L

1.3 TEACHING

MODEL : SANTAFE
 SYSTEM : IMMOBILIZER
 STATUS : LEARNT

1st KEY TEACHING
 COMPLETED

CODE : 234567

SCMBE6555L

1.3 TEACHING

MODEL : GRANDEUR
 SYSTEM : IMMOBILIZER
 STATUS : LEARNT

INPUT PIN OF SIX
 FIGURE AND PRESS [ENTER] KEY

CODE : 234567

SCMBE6553L

1.3 TEACHING

MODEL : SANTAFE
 SYSTEM : IMMOBILIZER
 STATUS : LEARNT

2st KEY TEACHING
 ARE YOU SURE ? [Y/N]

CODE : 234567

SCMBE6556L

IMMOBILIZER CONTROL SYSTEM

BE -237

1.3 TEACHING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : LEARNED

2st KEY TEACHING
COMPLETED

CODE : 234567

1.3 TEACHING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : VIRGIN

1st KEY TEACHING
COMPLETED

CODE : 234567

SCMBE6557L

SCMBE6560L

2) PCM(ECM) virgin status.

After replacing new "PCM(ECM)" scantool displays that PCM(ECM) is virgin status in Key Teaching mode.

"VIRGIN" status means that PCM(ECM) has not matched any PIN code before.

1.3 TEACHING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : VIRGIN

INPUT PIN OF SIX
FIGURE AND PRESS [ENTER] KEY

CODE : 234567

SCMBE6558L

SCMBE6561L

1.3 TEACHING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : VIRGIN

1st KEY TEACHING
ARE YOU SURE ? [Y/N]

CODE : 234567

SCMBE6559L

1.3 TEACHING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : VIRGIN

2st KEY TEACHING
ARE YOU SURE ? [Y/N]

CODE : 234567

1.3 TEACHING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : VIRGIN

2st KEY TEACHING
COMPLETED

CODE : 234567

SCMBE6562L

2. User Password Teaching Procedure

The user password for limp home is taught at the service station. The owner of the vehicle can select a number with four digits.

User password teaching is only accepted by a "learnt" PCM(ECM). Before first teaching of user password to an PCM(ECM), the status of the password is "virgin" No limp home function is possible.

The teaching is started by ignition on, with a valid key and sending the user password by tester. After successful teaching, the status of the user password changes from "virgin" to "learnt"

The learnt user password can also be changed. This can be done if the user password status is "learnt" and the tester sends authorization of access, either the old user password or the vehicle specific data. After correct authorization, the PCM(ECM) requests the new user password. The status remains "learnt" and the new user password will be valid for the next limp home mode.

If incorrect user passwords or wrong vehicle specific data have been sent to the PCM(ECM) three times, the PCM(ECM) will reject the request to change the password for one hour. This time cannot be reduced by disconnecting the battery or any other actions. After reconnecting the battery, the timer starts again for one hour.

1) User password teaching

1. HYUNDAI VEHICLE DIAGNOSIS

MODEL : SANTAFE
SYSTEM : IMMOBILIZER

- 01. CURRENT DATA
- 02. PASSWORD TEACHING/CHANGING**
- 03. TEACHING
- 04. NEUTRAL MODE
- 05. LIMP HOME MODE

SCMBE6563L

1.2 PASSWORD TEACHING/CHANGING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : VIRGIN

INPUT NEW PASSWORD OF FOUR
FIGURES AND PRESS [ENTER] KEY

NEW PASSWORD :

SCMBE6564L

1.2 PASSWORD TEACHING/CHANGING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : VIRGIN

INPUT NEW PASSWORD OF FOUR
FIGURES AND PRESS [ENTER] KEY

NEW PASSWORD : 2345

SCMBE6565L

1.2 PASSWORD TEACHING/CHANGING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : VIRGIN

ARE YOU SURE ? [Y/N]

NEW PASSWORD : 2345

SCMBE6566L

IMMOBILIZER CONTROL SYSTEM

BE -239

1.2 PASSWORD TEACHING/CHANGING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : VIRGIN

COMPLETED
PRESS [ESC] TO EXIT

NEW PASSWORD : 2345

SCMBE6567L

1.2 PASSWORD TEACHING/CHANGING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : LEARNT

INPUT OLD PASSWORD OF FOUR
FIGURES AND PRESS [ENTER] KEY

OLD PASSWORD : 2345

SCMBE6569L

In case of putting wrong password, retry from
first step after 10 seconds.

2) User password changing

1. HYUNDAI VEHICLE DIAGNOSIS

MODEL : SANTAFE
SYSTEM : IMMOBILIZER

01. CURRENT DATA

02. PASSWORD TEACHING/CHANGING

03. TEACHING

04. NEUTRAL MODE

05. LIMP HOME MODE

SCMBE6563L

1.2 PASSWORD TEACHING/CHANGING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : LEARNT

INPUT OLD PASSWORD OF FOUR
FIGURES AND PRESS [ENTER] KEY

OLD PASSWORD :

SCMBE6568L

1.2 PASSWORD TEACHING/CHANGING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : LEARNT

INPUT NEW PASSWORD OF FOUR
FIGURES AND PRESS [ENTER] KEY

NEW PASSWORD : 1234

SCMBE6570L

1.2 PASSWORD TEACHING/CHANGING

MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : LEARNT

ARE YOU SURE ? [Y/N]

NEW PASSWORD : 1234

SCMBE6571L

1.2 PASSWORD TEACHING/CHANGING
MODEL : SANTAFE
SYSTEM : IMMOBILIZER
STATUS : LEARNT
COMPLETED PRESS [ESC] TO EXIT
NEW PASSWORD : 1234

SCMBE6572L

REPLACEMENT EE2BB323**PROBLEMS AND REPLACEMENT PARTS:**

Problem	Part set	Scan tool required?
All keys have been lost	Blank key (4)	YES
Antenna coil unit does not work	Antenna coil unit	NO
ECM does not work	PCM(ECM)	YES
Ignition switch does not work	Ignition switch with Antenna coil unit	YES
Unidentified vehicle specific data occurs	Key, PCM(ECM)	YES
SMARTRA unit does not work	SMARTRA unit	NO

REPLACEMENT OF ECM AND SMARTRA

In case of a defective ECM, the unit has to be replaced with a "virgin" or "neutral" ECM. All keys have to be taught to the new ECM. Keys, which are not taught to the ECM, are invalid for the new ECM (Refer to key teaching procedure). The vehicle specific data have to be left unchanged due to the unique programming of transponder.

In case of a defective SMARTRA, there is no special procedure required. A new SMARTRA device simply replaces the old one. There are no transponder-related data stored in this device.

1. Things to remember before a replacement (PCM(ECM))

When installing PCM(ECM) of car "A" on car "B"
※ All non-virgin PCM(ECM)'s need to be neutralized before installing on the other vehicles.

Neutralize the PCM(ECM) of car "A"

Installing the PCM(ECM) of car "A" on car "B"

Register the keys with the PIN code of car "B"

Register additional keys (Maximum of 4 keys)
※ All phases of key registration should be completed in under 10 seconds

Registration completed

ETBF746A

2. Things to remember before a replacement (Keys & Additional registration)

Replace keys & additional registration
※ You must know the PIN code before executing this procedure

Turn the key to the IG ON position

Initialize the PCM(ECM) (Under the Neutral Mode)

Insert the key you want to register and turn it to the IG ON position

Register the key (Under the Teaching Mode)

Register additional keys (Maximum of 4 keys)
※ All phases of key registration should be completed in under 10 seconds

Registration completed

ETBF746B

**NOTE**

1. When there is only one key registered and you wish to register another key, you need to re-register the key which was already registered.
2. When the key #1 is registered and master key #2 is not registered, Put the key #1 in the IG/ON or the start position and remove it. The engine can be started with the unregistered key #2.
(Note that key #2 must be used within 10 seconds of removing key #1)

IMMOBILIZER CONTROL SYSTEM

BE -241

3. When the key #1 is registered and key #2 is not registered, put the unregistered master key #2 in the IG/ON or the start position.
The engine cannot be started even with the registered key #1.
4. When you inspect the immobilizer system, refer to the above paragraphs 1, 2 and 3.
Always remember the 10 seconds zone.
5. If the pin code & password are entered incorrectly on three consecutive inputs, the system will be locked for one hour.
6. Be cautious not to overlap the transponder areas.
7. Problems can occur at key registration or vehicle starting if the transponders should overlap.

NEUTRALISING OF ECM

The PCM(ECM) can be set to the "neutral" status by a tester.

A valid ignition key is inserted and after ignition on is recorded, the PCM(ECM) requests the vehicle specific data from the tester. The communication messages are described at "Neutral Mode". After successfully receiving the data, the PCM(ECM) is neutralized.

The ECM remains locked. Neither the limp home mode nor the "twice ignition on" function, is accepted by the PCM(ECM).

The teaching of keys follows the procedure described for the virgin PCM(ECM). The vehicle specific data have to be unchanged due to the unique programming of the transponder. If data should be changed, new keys with a virgin transponder are requested.

This function is for neutralizing the PCM(ECM) and Key. Ex) when lost key, Neutralize the PCM(ECM) then teach keys.

(Refer to the Things to do when Key & PIN Code the PCM(ECM) can be set to the "neutral" status by a scanner. A valid ignition key is inserted and after ignition on is recorded, the PCM(ECM) requests the vehicle specific data from the scanner. The communication messages are described at "Neutral Mode". After successfully receiving the data, the PCM(ECM) is neutralized.

The PCM(ECM) remains locked. Neither the limp home mode nor the "twice ignition on" function is accepted by PCM(ECM).

The teaching of keys follows the procedure described for virgin PCM(ECM). The vehicle specific data have to be unchanged due to the unique programming of transponder. If data should be changed, new keys with virgin transponder are requested.

- In case of PCM(ECM) status "Learnt" regardless of user password "Virgin or Learnt"
- Input correct PIN code by scanner.
- Neutralizing meaning .
 - : PIN code (6) & user password (4) deletion.
 - : Locking of ECM (except key teaching permission)

1. HYUNDAI VEHICLE DIAGNOSIS

MODEL : SANTAFE

SYSTEM : IMMOBILIZER

01. CURRENT DATA

02. PASSWORD TEACHING/CHANGING

03. TEACHING

04. NEUTRAL MODE

05. LIMP HOME MODE

SCMBE6573L

1.4 NEUTRAL MODE

MODEL : SANTAFE

SYSTEM : IMMOBILIZER

STATUS : LEARNT

INPUT PIN OF SIX
FIGURE AND PRESS [ENTER] KEY

CODE : 234567

SCMBE6574L

1.4 NEUTRAL MODE

MODEL : SANTAFE

SYSTEM : IMMOBILIZER

STATUS : NEUTRAL

COMPLETED
PRESS [ESC] TO EXIT

SCMBE6575L



- Neutralizing setting condition

1. HYUNDAI VEHICLE DIAGNOSIS
MODEL : SANTAFE
SYSTEM : IMMOBILIZER
01. CURRENT DATA
02. PASSWORD TEACHING/CHANGING
03. TEACHING
04. NEUTRAL MODE
05. LIMP HOME MODE

SCMBE6576L

1. HYUNDAI VEHICLE DIAGNOSIS
MODEL : SANTAFE
SYSTEM : IMMOBILIZER
01. CURRENT DATA
02. PASSWORD TEACHING/CHANGING
03. TEACHING
04. NEUTRAL MODE
05. LIMP HOME MODE

SCMBE6585L

1.1 CURRENT DATA	
01. NO. OF LEARNT KEY	0
02. ECU STATUS	NEUTRAL
03. KEY STATUS	NOT CHECK
FIX SCRН FULL PART GRPH HELP	

SCMBE6577L

1.5 LIMP HOME MODE	
MODEL : SANTAFE	
SYSTEM : IMMOBILIZER	
INPUT PASSWORD OF FOUR FIGURES AND PRESS [ENTER] KEY	
PASSWORD :	

SCMBE6586L

LIMP HOME FUNCTION E6DD2F66

1. LIMP HOME BY TESTER

If the PCM(ECM) detects the fault of the SMARTRA or transponder, the PCM(ECM) will allow limp home function of the immobilizer. Limp home is only possible if the user password (4 digits) has been given to the PCM(ECM) before. This password can be selected by the vehicle owner and is programmed at the service station.

The user password can be sent to the PCM(ECM) via the special tester menu.

Only if the PCM(ECM) is in status "learnt" and the user password status is "learnt" and the user password is correct, the PCM(ECM) will be unlocked for a period of time (30 sec.). The engine can only be started during this time. After the time has elapsed, engine start is not possible.


If the wrong user password is sent, the PCM(ECM) will reject the request of limp home for one hour. Disconnecting the battery or any other action cannot reduce this time. After connecting the battery to the PCM(ECM), the timer starts again for one hour.

1.5 LIMP HOME MODE	
MODEL : SANTAFE	
SYSTEM : IMMOBILIZER	
INPUT PASSWORD OF FOUR FIGURES AND PRESS [ENTER] KEY	
NEW PASSWORD : 2345	

SCMBE6587L

IMMOBILIZER CONTROL SYSTEM

BE -243

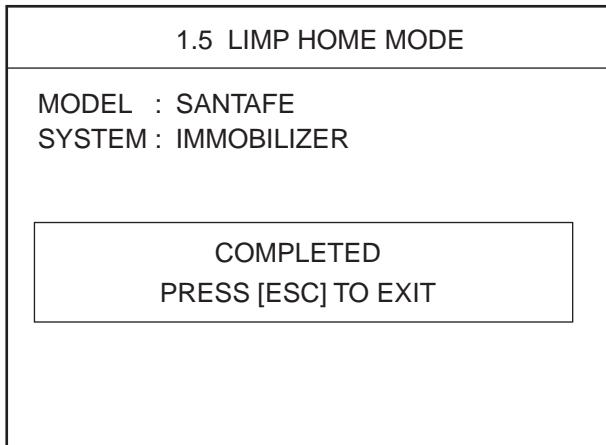


2. LIMP HOME BY IGNITION KEY

The limp home can be activated also by the ignition key. The user password can be input to the PCM(ECM) by a special sequence of ignition on/off. Only if the PCM(ECM) is in status "learnt" and the user password status is "learnt" and the user password is correct, the PCM(ECM) will be unlocked for a period of time (30 sec.). The engine can be started during this time. After the time has elapsed, engine start is not possible. After a new password has been input, the timer (30 sec.) will start again.

After ignition off, the PCM(ECM) is locked if the timer has elapsed 8 seconds. For the next start, the input of the user password is requested again.

SCMBE6588L

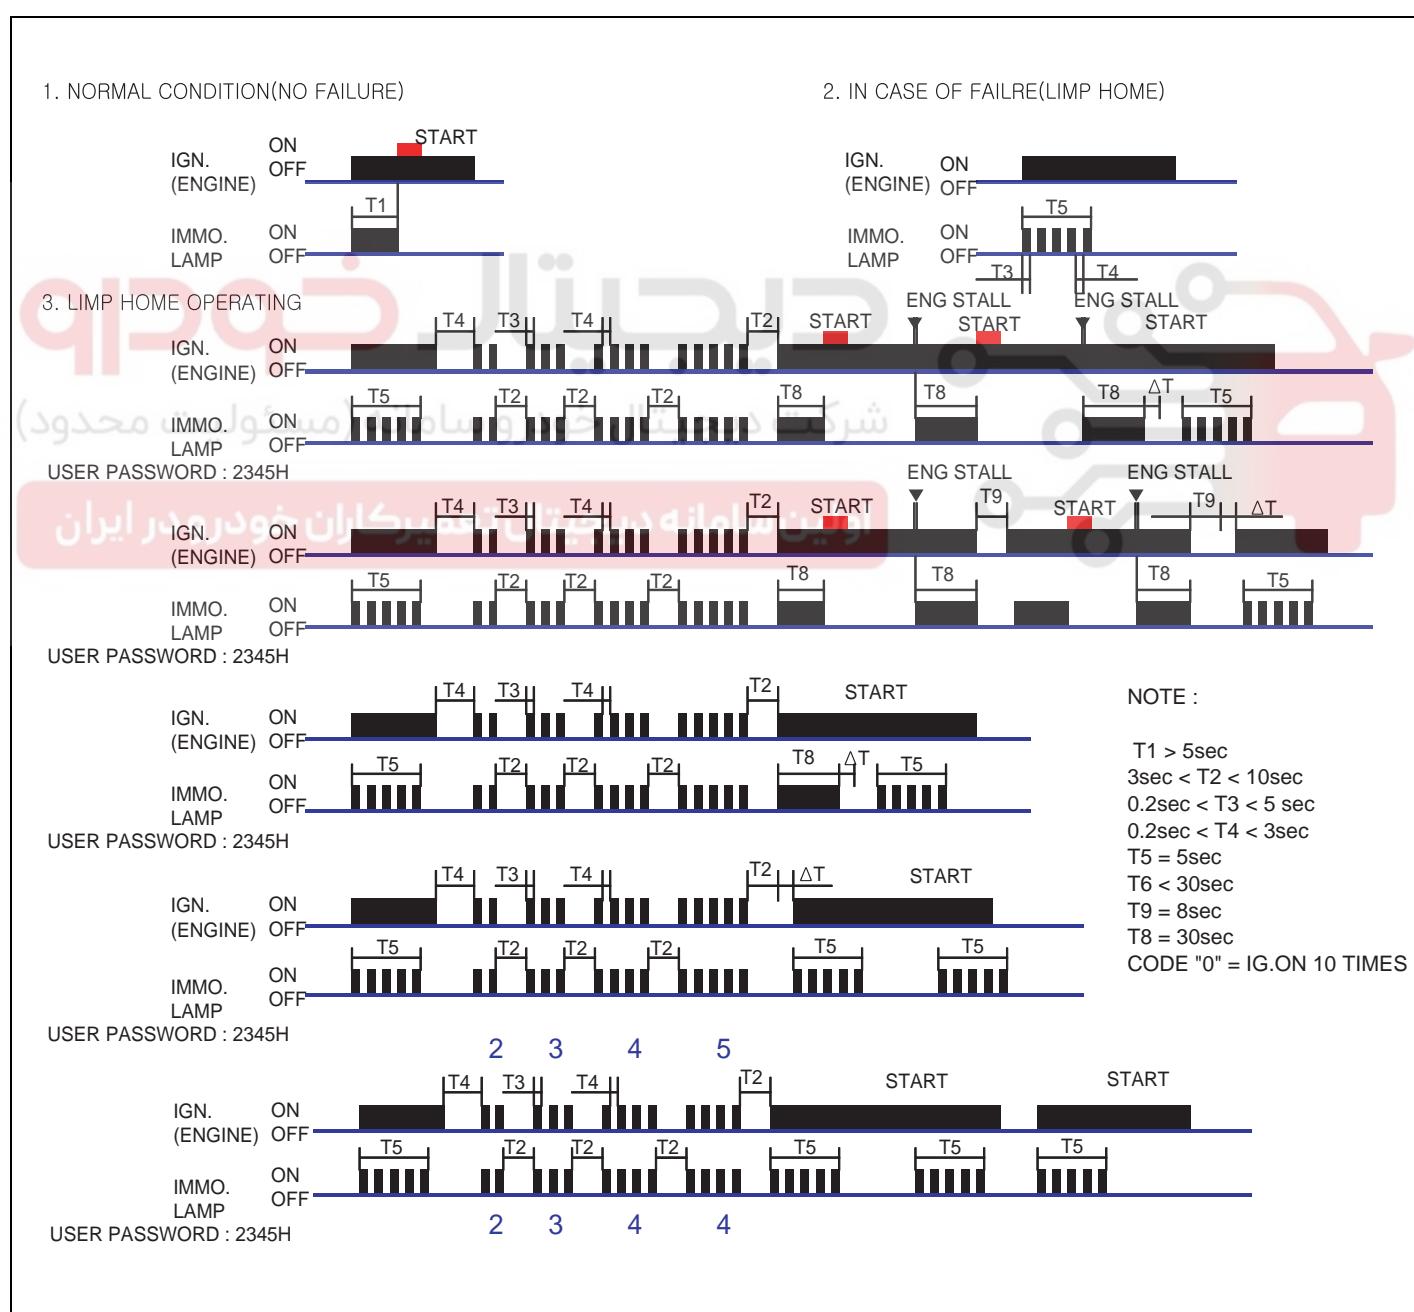

DIAGNOSIS OF IMMOBILIZER FAULTS

ECD7CB72

- Communication between the ECM and the SMARTRA.
- Function of the SMARTRA and the transponder.

- Data (stored in the ECM related to the immobilizer function.

The following table shows the assignment of immobilizer related faults to each type:

Immobilizer Related Faults	Fault types	Diagnostic codes
PCM(ECM) fault	1. Non-Immobilizer-EMS connected to an Immobilizer	P1610
Transponder key fault	1. Transponder not in password mode 2. Transponder transport data has been changed.	P1674 (Transponder status error)
Transponder key fault	1. Transponder programming error	P1675 (Transponder programming error)
SMARTRA fault	1. Invalid message from SMARTRA to PCM(ECM)	P1676 (SMARTRA message error)
SMARTRA fault	1. No response from SMARTRA 2. Antenna coil error 3. Communication line error (Open/Short etc.) 4. Invalid message from SMARTRA to PCM(ECM)	P1690 (SMARTRA no response)
Antenna coil fault	1. Antenna coil open/short circuit	P1691 (Antenna coil error)
Immobilizer indicator lamp fault	1. Immobilizer indicator lamp error (Cluster)	P1692 (Immobilizer lamp error)
Transponder key fault	1. Corrupted data from transponder 2. More than one transponder in the magnetic field (Antenna coil) 3. No transponder (Key without transponder) in the magnetic field (Antenna coil)	P1693 (Transponder no response error/invalid response)
PCM(ECM) fault	1. Request from PCM(ECM) is invalid (Protocol layer violation- Invalid request, check sum error etc.)	P1694 (PCM(ECM) message error)
PCM(ECM) internal permanent memory (EEPROM) fault	1. PCM(ECM) internal permanent memory (EEPROM) fault 2. Invalid write operation to permanent memory (EEPROM)	P1695 (PCM(ECM) memory error)
Invalid key fault	1. Virgin transponder at PCM(ECM) status "Learnt" "Learnt (Invalid) Transponder at PCM(ECM) status "Learnt" (Authentication fail)	P1696 (Authentication fail)
Hi-Scan fault	1. Hi-Scan message error	P1697
Locked by timer	1. Exceeding the maximum limit of Twice IGN ON (32 times)	P1699 (Twice IG ON over trial)


IMMOBILIZER (SMARTRA) DTC LIST


No.	Fault code	Monitor strategy description	Gasoline (μ-engine)	Diesel (D-engine)	Page
1	P1610	Non-Immobilizer-EMS connected to an immobilizer	-	O	BE - 246
2	P1674	Transponder status error	O	O	BE - 249
3	P1675	Transponder programming error	O	O	BE - 252
4	P1676	SMARTRA message error	O	O	BE - 255
5	P1690	SMARTRA no response	O	O	BE - 258
6	P1691	Antenna coil error	O	O	BE - 264
7	P1692	Immobilizer lamp error	O	O	BE - 267
8	P1693	Transponder no response error / Invalid response	O	O	BE - 272
9	P1694	EMS message error	O	O	BE - 274
10	P1695	EMS memory error	O	O	BE - 277
11	P1696	Authentication fail	O	O	BE - 280
12	P1697	HI-SCAN message error	O	-	BE - 282
13	P1699	Twice overtrial	O	O	BE - 284



شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

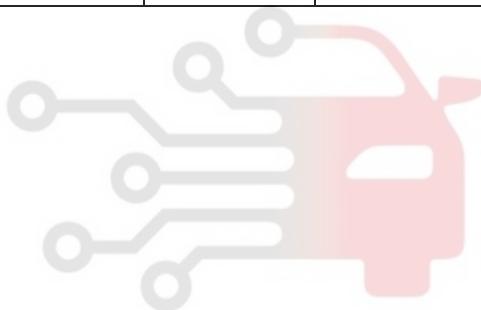

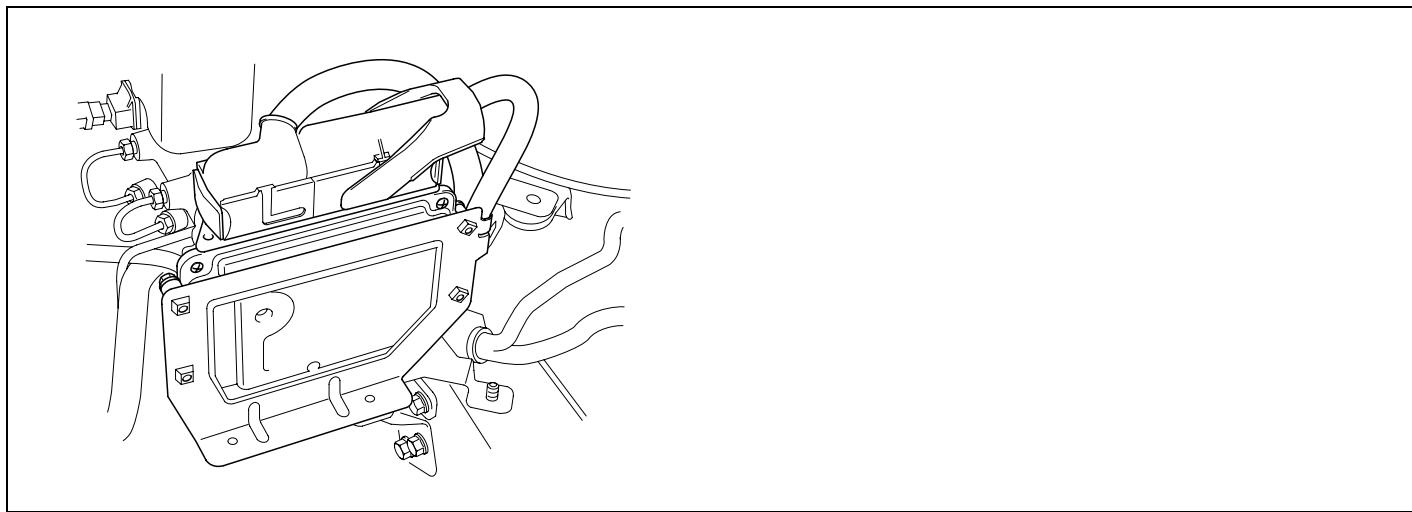DTC P1610 NON-IMMOBILIZER-EMS CONNECTED TO AN IMMOBILIZER**COMPONENT LOCATION** ED81FEC6

SCMBE6740D

GENERAL DESCRIPTION EF0ACABD

Immobilizer is device that prevents car from being thieved by reproduced key. Major components of immobilizer are ECM(Engine Control Module) and SMARTRA. Besides them, Immobilizer has transponder and coil antenna in it. If driver inserts key into key hole, SMARTRA gets transponder signal by wireless communications via coil antenna and delivers it to ECM through K-line communication line. then ECM deciphers code in it. If inserted key has invalid transponder with incorrect code or doesn't have transponder in it, ECM judges that inserted key is reproduced key and prohibits engine starting.

DTC DESCRIPTION EAB57BBB

The ECM sets DTC P1610 if Non Immobilizer EMS is installed on vehicle equipped with Immobilizer.

DTC DETECTING CONDITION E5163E76




Item	Detecting Condition	Possible Cause
DTC Strategy		• Invalid ECM
Enable Conditions	• IG ON	
Threshold value		
Detecting time		
FAIL SAFE		

IMMOBILIZER CONTROL SYSTEM

BE -247

SCHEMATIC DIAGRAM

E6C04908

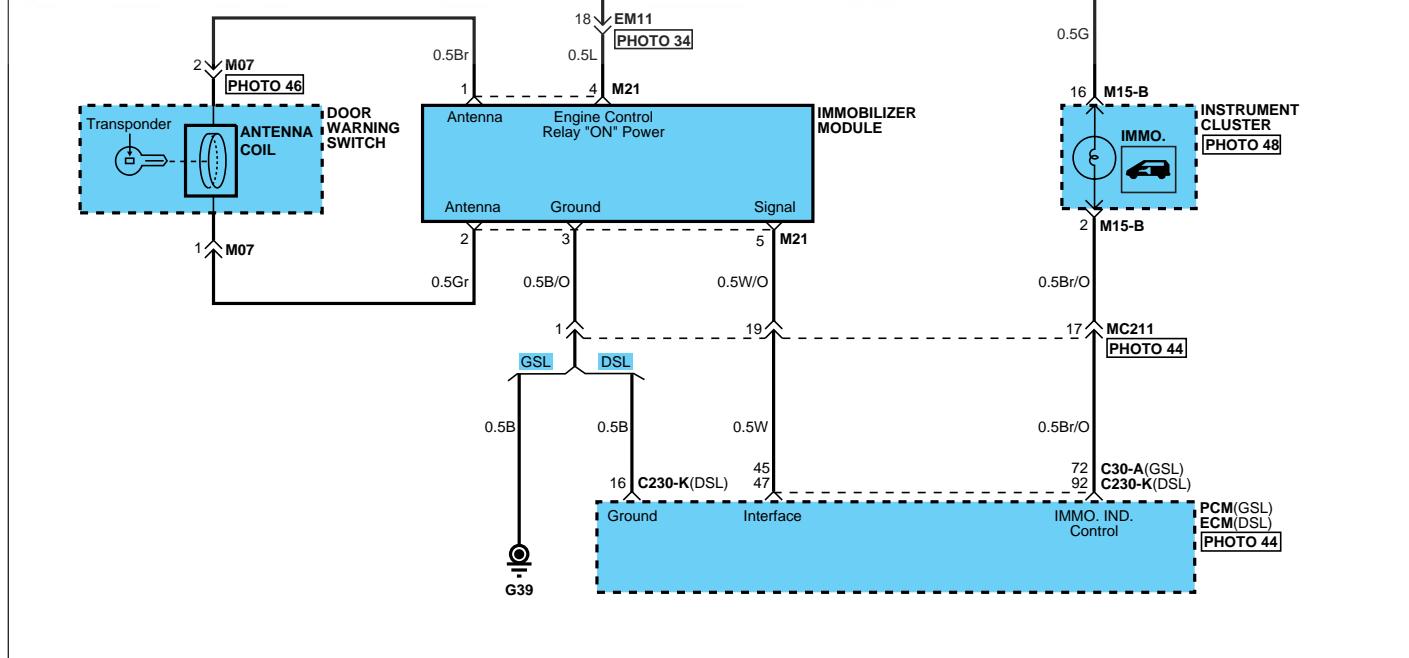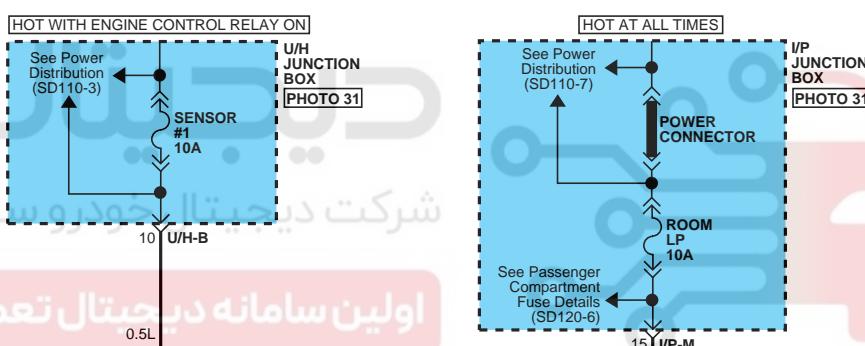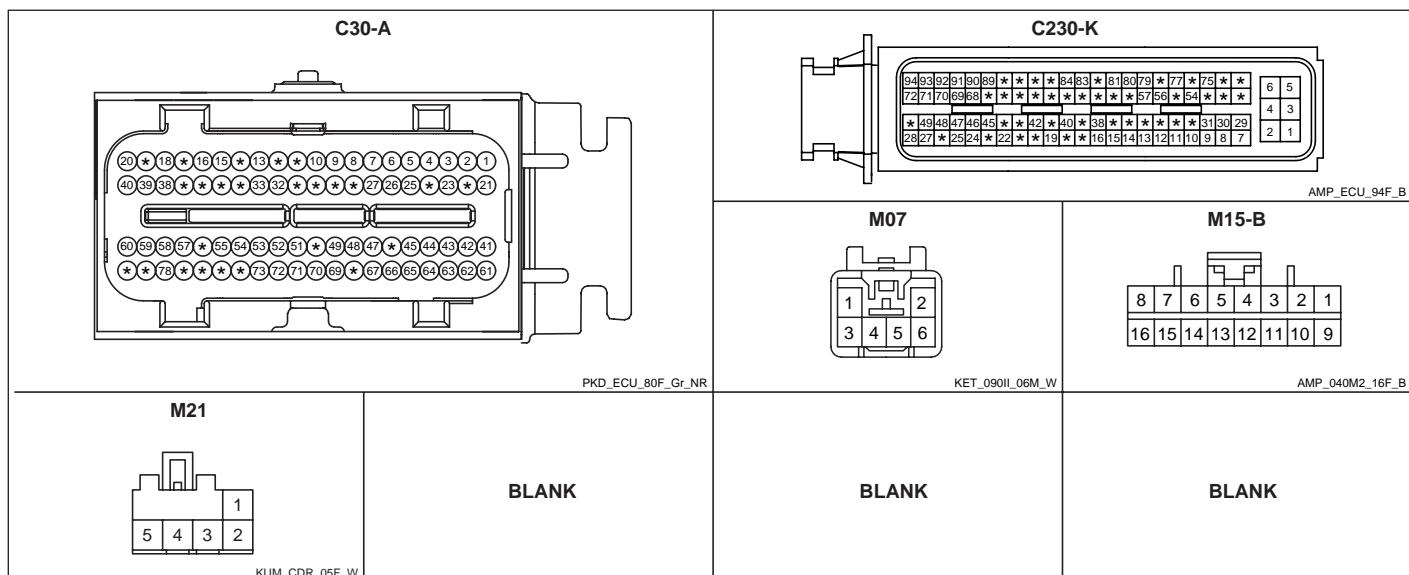

SCMBE6745L

MONITOR DTC STATUS

E7FEF4DA

1. Connect scantool to Data Link Connector(DLC).
2. Ignition "ON" & engine "OFF".
3. Select "Diagnostic Trouble Codes(DTCs)" mode and monitor "DTC Status" parameter
4. Is the DTC B1610 present?

YES

Substitute with a known-good ECM with immobilizer and check for proper operation. If the problem is corrected, replace ECU and then go to "Verification of Vehicle Repair" procedure.

NO

Fault is intermittent caused by poor contact in SMARTRA's and/or ECM's connector or was repaired and ECM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR

E103EAA9

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scantool and select "Diagnostic Trouble Codes(DTCs)" mode and then clear DTC.
2. Operate the vehicle and monitor the DTC on the scantool.
3. Are any DTCs present?

YES اولین سامانه دیجیتال تعمیر کاران خودرو در

Go to the applicable troubleshooting procedure.

NO


System is performing to specification at this time.



IMMOBILIZER CONTROL SYSTEM

BE -249

DTC P1674 TRANSPONDER STATUS ERROR

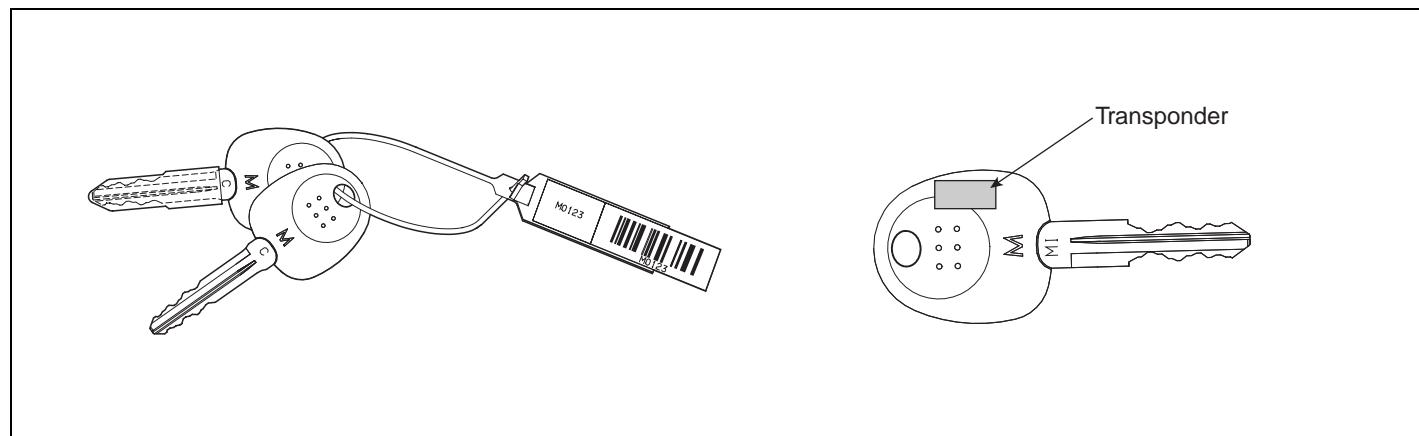COMPONENT LOCATION E16E69B2

SCMBE6750L

GENERAL DESCRIPTION E41DDC6B

During the key teaching procedure the transponder will be programmed with vehicle specific data. The vehicle specific data are written into the transponder memory. The write procedure is unique; therefore the content of transponder can never be modified or changed. The data are a string of 9 bytes defined by vehicle manufacturer.

The transponder memory is split into two strings called authenticator and key password. After this programming the transponder memory is locked and the data(PIN code) cannot be read or changed respectively. The transponder status changes from "virgin" to "learnt". Additionally every transponder includes a unique IDE (Identifier number) of 32 bit. Unique means that the IDE of all transponder is different from each other. The IDE is programmed by the transponder manufacturer and is a read-only value. The authenticator and the key password are not transferred from ECM to transponder or vice versa. Only the results from the encryption algorithm are transferred. It is almost impossible to calculate the vehicle specific data from the encryption result.

For teaching of keys and special purposes the ECM is connected to the tester device.

When IG is ON, the coil supplies energy to the transponder which in turn accumulates energy in the condenser. Once the energy supply from the coil has stopped, using the stored energy in the condenser, the transponder transmits the ID CODE (stored within the ASIC).

DTC DESCRIPTION E4CEBDC2

The ECM sets DTC P1674 if transponder key that can't be register(TP not in the password mode or whose transport data has been changed) is inserted for registration procedure.

DTC DETECTING CONDITION ED14DFB8

Item	Detecting Condition	Possible Cause
DTC Strategy		
Enable Conditions	• IG ON (On Registering TP Procedure)	• Invalid transponder. Key not in 'VIRGIN' Status or with invalid ID code
Threshold value		
Detecting time		
FAIL SAFE		

SCHEMATIC DIAGRAM

ECFBA039

Refer to DTC P1610.

MONITOR DTC STATUS

EF4076FD

1. Connect scantool to Data Link Connector(DLC).
2. Ignition "ON" & engine "OFF".
3. Select "Diagnostic Trouble Codes(DTCs)" mode and monitor "DTC Status" parameter
4. Is the DTC B1674 present?

YES

Go to "Inspection & Repair" procedure.

NO

Fault is intermittent caused by poor contact in SMARTRA's and/or ECM's connector or was repaired and ECM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

دیجیتال خودرو سامانه

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



IMMOBILIZER CONTROL SYSTEM

BE -251

COMPONENT INSPECTION

EBEBD049

1. Check transponder status
 - 1) IGN "ON" & Engine "OFF" with key intended to register.
 - 2) Monitor the "KEY STATUS" Parameter on the Scantool.

Specification : 'VIRGIN' or 'LEARNT'



1.1 CURRENT DATA

01. NO. OF LEARNT KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	NOT CHECK

1.1 CURRENT DATA

01. NO. OF LEARNT KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	INVALID

FIX
SCRN
FULL
PART
GRPH
HELP

Fig 1

Fig 1) The current data in abnormal state
 شرکت دیجیتال خودرو سامانه (مستوفیت محدود)

SCMBE6751L

3) Is the measured voltage within specifications?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Substitute with a known-good transponder and check for proper operation.

If the problem is corrected, replace transponder and then go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR

EEC1748B

Refer to DTC P1610.

DTC P1675 TRANSPONDER PROGRAMMING ERROR**COMPONENT LOCATION** E0EFE3BC

Refer to DTC P1674.

GENERAL DESCRIPTION EC6C260F

Refer to DTC P1674.

DTC DESCRIPTION EE5B821B

The ECM sets DTC P1675 if characteristic data of transponder doesn't coincide with that of ECM owing to transponder programming error.

DTC DETECTING CONDITION EF9A9CD1

Item	Detecting Condition	Possible Cause
DTC Strategy		
Enable Conditions	• IG ON	
Threshold value		
Detecting time		
FAIL SAFE		<ul style="list-style-type: none"> Invalid transponder. Invalid characteristic data No transponder or more than two transponder is detected by coil antenna.

SCHEMATIC DIAGRAM E5A3794F

Refer to DTC P1610.

MONITOR DTC STATUS E9EAAB24

1. Connect scantool to Data Link Connector(DLC).
2. Ignition "ON" & engine "OFF".
3. Select "Diagnostic Trouble Codes(DTCs)" mode and monitor "DTC Status" parameter
4. Is the DTC B1675 present?

YES

Go to "Inspection & Repair" procedure.

NO

Fault is intermittent caused by poor contact in SMARTRA's and/or ECM's connector or was repaired and ECM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

IMMOBILIZER CONTROL SYSTEM

BE -253

COMPONENT INSPECTION EDEB8AA9

1. Check transponder and ECU status
 - 1) IGN "ON" & Engine "OFF" with key intended to register.
 - 2) Monitor the "KEY STATUS" and "ECU STATUS" Parameter on the Scantool.

Specification : 'LEARNT'


1.1 CURRENT DATA	
01. NO. OF LEARNED KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	LEARNT

▼

FIX SCRН FULL PART GRPH HELP

Fig 1

Fig 1) The current data in abnormal state
 شرکت دیجیتال خودرو سامانه (مسنونیت محدود)

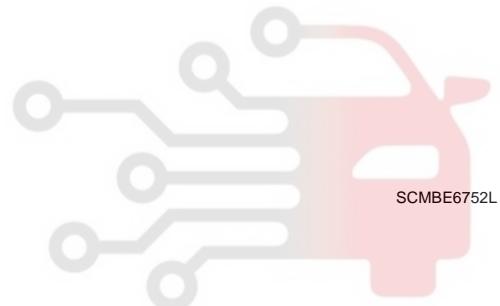

3) Is the measured voltage within specifications?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Go to "Check transponder" procedure.

2. Check transponder

- 1) IGN "ON" & Engine "OFF".
- 2) Neutralize ECM and Register transponder key by scantool.

NOTE

Pin code is required to Neutralize ECM and to Register transponder key.

- 3) Are Neutralizing and Registering completed normally?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Substitute with a known-good transponder and check for proper operation.

If the problem is corrected, replace transponder and then go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR E43CAE2D

Refer to DTC P1610.




شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

DTC P1676 SMARTRA MESSAGE ERROR

COMPONENT LOCATION EF6EAFEA

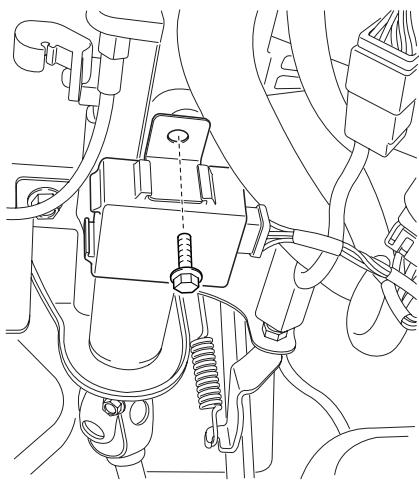

SCMBE6751D

GENERAL DESCRIPTION E53AFD8A

The SMARTRA carries out communication with the built-in transponder of the ignition key. This wireless communication runs on RF (Radio frequency of 125 kHz). The SMARTRA is mounted at the ignition lock close to the antenna coil for RF transmission and receiving. The RF signal from the transponder received by the antenna coil is converted into messages for serial communication by the SMARTRA device. And the received messages from the ECM are converted into an RF signal, which is transmitted to the transponder by the antenna. The SMARTRA does not carry out the validity check of transponder or the calculation of encryption algorithm. This device is only an advanced interface, which converts the RF data flow of the transponder into serial communication to ECM and vice versa.

* SMARTRA : SMART TRansponder Antenna

DTC DESCRIPTION E50570B3

The ECM sets DTC P1676 if there's any fault in message from SMARTRA to ECU.

DTC DETECTING CONDITION E15FB4DC

Item	Detecting Condition	Possible Cause
DTC Strategy		• Faulty SMARTRA.
Enable Conditions	• IG ON	
Threshold value		
Detecting time		
FAIL SAFE		

SCHEMATIC DIAGRAM

EECC953B

Refer to DTC P1610.

MONITOR DTC STATUS

ED91CC1F

1. Connect scantool to Data Link Connector(DLC).
2. Ignition "ON" & engine "OFF".
3. Select "Diagnostic Trouble Codes(DTCs)" mode and monitor "DTC Status" parameter
4. Is the DTC B1676 present?

YES

Go to "Inspection & Repair" procedure.

NO

Fault is intermittent caused by poor contact in SMARTRA's and/or ECM's connector or was repaired and ECM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

COMPONENT INSPECTION

E1B0DDCA

1. Check transponder and ECU status
 - 1) IGN "ON" & Engine "OFF" with key intended to register.
 - 2) Monitor the "KEY STATUS" and "ECU STATUS" Parameter on the Scantool.

Specification : 'LEARNT'

1.1 CURRENT DATA	
01. NO. OF LEARNT KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	LEARNT
FIX SCRN FULL PART GRPH HELP	

Fig 1

Fig 1) The current data in abnormal state

SCMBE6752L

3) Are "KEY STATUS" and "ECU STATUS" Parameter within specifications?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Go to "Check SMARTRA" procedure.

2. Check SMARTRA

- 1) IGN "ON" & Engine "OFF".
- 2) Neutralize ECM and Register transponder key by scantool.

 **NOTE**

Pin code is required to Neutralize ECM and to Register transponder key.

3) Are Neutralizing and Registering completed normally?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Substitute with a known-good SMARTRA and check for proper operation.

If the problem is corrected, replace SMARTRA and then go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR

EBECB467

Refer to DTC P1610.

DTC P1690 SMARTRA NO RESPONSE**COMPONENT LOCATION** EEACF1AF

Refer to DTC P1676.

GENERAL DESCRIPTION EDCA78B8

Refer to DTC P1676.

DTC DESCRIPTION E4711F56

The ECM sets DTC P1690 if there's No Response from SMARTRA.

DTC DETECTING CONDITION E7DB0663

Item	Detecting Condition	Possible Cause
DTC Strategy		
Enable Conditions	• IG ON	
Threshold value		
Detecting time		
FAIL SAFE		<ul style="list-style-type: none"> Open Circuit in signal harness Short Circuit in signal harness Faulty SMARTRA

SCHEMATIC DIAGRAM E0B1A7CE

Refer to DTC P1610.

MONITOR DTC STATUS E3782FEB

1. Connect scantool to Data Link Connector(DLC).
2. Ignition "ON" & engine "OFF".
3. Monitor the "KEY STATUS" and "ECU STATUS' Parameter on the Scantool.

Specification : 'LEARNT'

1.1 CURRENT DATA	
01. NO. OF LEARNED KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	LEARNT
▼	
<input type="button" value="FIX"/> <input type="button" value="SCRN"/> <input type="button" value="FULL"/> <input type="button" value="PART"/> <input type="button" value="GRPH"/> <input type="button" value="HELP"/>	

Fig 1

Fig 1) The current data in abnormal state

SCMBE6752L

4. Are "KEY STATUS" and "ECU STATUS" Parameter within specifications?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Go to "Inspection & Repair" procedure.

TERMINAL AND CONNECTOR INSPECTION

E8C1BDAD

- Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
- Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
- Has a problem been found?

YES

Repair as necessary and go to "Verification Vehicle Repair" procedure.

NO


Go to "W/Harness Inspection" procedure .

POWER SUPPLY CIRCUIT INSPECTION


E22B148E

1. Check for open in harness
 - 1) Ignition "OFF"
 - 2) Disconnect SMARTRA.
 - 3) Ignition "ON" & Engine "OFF"
 - 4) Measure voltage value between terminal "4" of SMARTRA and chassis ground.

Specification : 9~16V

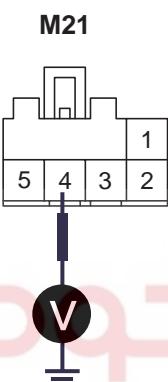

1. Coil antenna
2. Coil antenna
3. Ground
4. Power
5. Signal

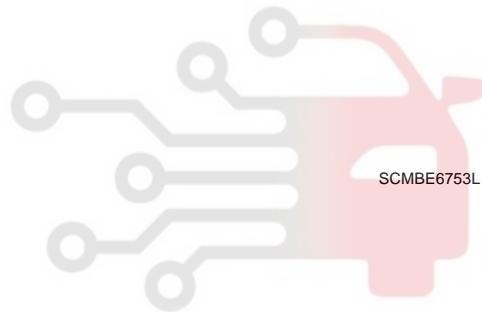

شركة ديجيتال خودرو (مسؤولية محدودة)

5) Is the measured voltage within specifications?

اولین سامانه دیجیتال خودرو دیگران تعمیر کاران

YES

Go to "Signal circuit Inspection" procedure

NO

Check for open or short in harness. Repair as necessary and go to "Verification of Vehicle Repair" procedure.

IMMOBILIZER CONTROL SYSTEM


BE -261

SIGNAL CIRCUIT INSPECTION


E7935D7A

1. Check for open in harness
 - 1) Ignition "OFF"
 - 2) Disconnect SMARTRA.
 - 3) Measure resistance between terminal "5" of SMARTRA and terminal C30-A-45(Gasoline) or C230-K-47(Diesel)

Specification : 1 or less

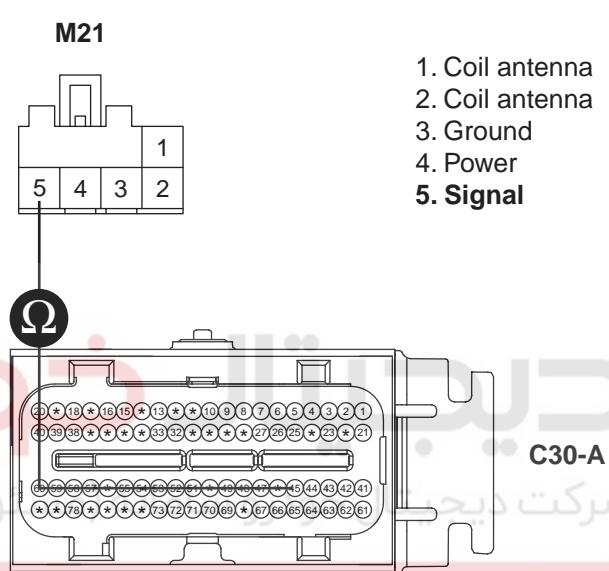[Gasoline]

SCMBE6754L

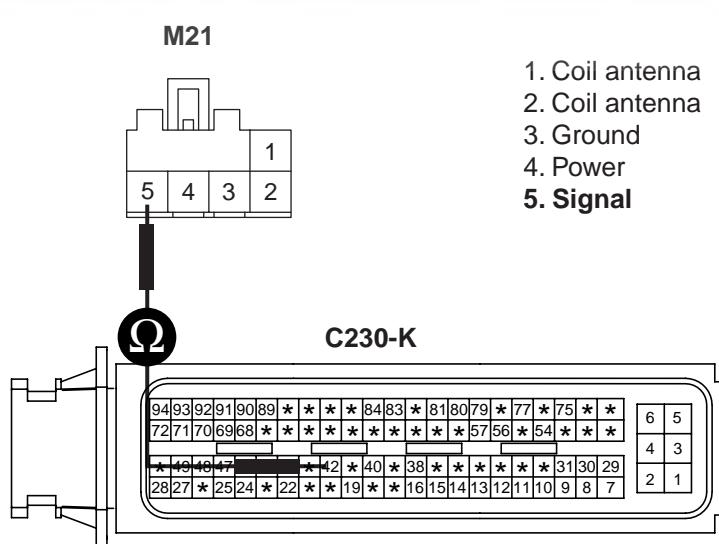[Diesel]

SCMBE6755L

4) Is the measured resistance within specifications?

YES

Go to "Check for short in harness" procedure.


NO

Check for open in harness. Repair as necessary and go to "Verification of Vehicle Repair" procedure.

2. Check for short in harness

- 1) Ignition "OFF"
- 2) Disconnect SMARTRA.
- 3) Ignition "ON" & Engine "OFF"
- 4) Measure voltage value between terminal "5" of SMARTRA and chassis ground.

Specification :Approx. 5.48V

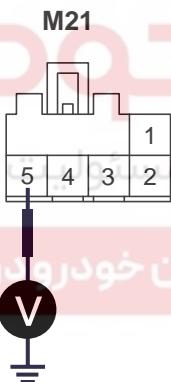

1. Coil antenna
2. Coil antenna
3. Ground
4. Power
5. Signal



SCMBE6756L

5) Is the measured voltage within specifications?

YES

Go to "Signal circuit Inspection" procedure

NO

Check for short in harness. Repair as necessary and go to "Verification of Vehicle Repair" procedure.

IMMOBILIZER CONTROL SYSTEM


BE -263

GROUND CIRCUIT INSPECTION

ECBB382A

1. Check for open in ground harness
 - 1) Ignition "OFF"
 - 2) Disconnect SMARTRA.
 - 3) Measure resistance between terminal "3" of SMARTRA and chassis ground.

Specification : 1 or less

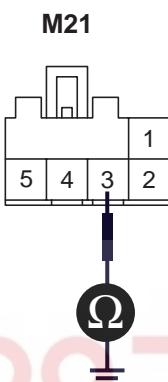

1. Coil antenna
2. Coil antenna
- 3. Ground**
4. Power
5. Signal



- 4) Is the measured resistance within specifications?

YES

اولین سامانه دیجیتال تعمیر کاران خودرو در ایران

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO


Check for open in harness. Repair as necessary and go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR

ED2C8346

Refer to DTC P1610.

DTC P1691 ANTENNA COIL ERROR

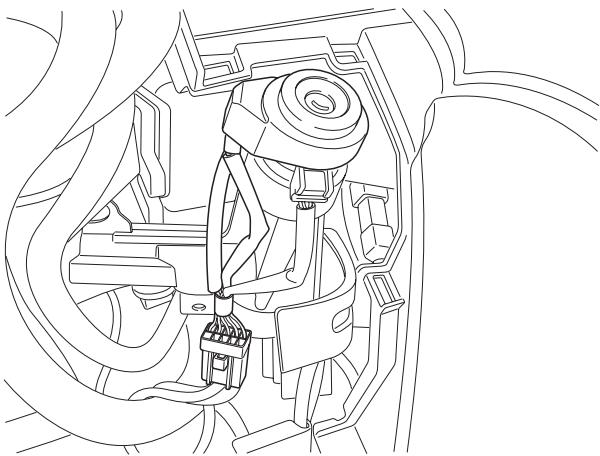COMPONENT LOCATION EBEC2385

SCMBE6752D

GENERAL DESCRIPTION E0D9D74B

This wireless communication runs on RF (Radio frequency of 125 kHz). The SMARTRA is mounted at the ignition lock close to the antenna coil for RF transmission and receiving. The RF signal from the transponder received by the antenna coil is converted into messages for serial communication by the SMARTRA device. And the received messages from the EMS are converted into an RF signal, which is transmitted, to the transponder by the antenna.

DTC DESCRIPTION E58B7CDE

The ECM sets DTC P1691 if there's any fault in immobilizer antenna coil.

DTC DETECTING CONDITION EDA9BF49

Item	Detecting Condition	Possible Cause
DTC Strategy		
Enable Conditions	• IG ON (On Registering TP Procedure)	
Threshold value		
Detecting time		
FAIL SAFE		<ul style="list-style-type: none"> • Open Circuit in antenna coil • Short Circuit in antenna coil • Faulty antenna coil

SCHEMATIC DIAGRAM ECB64C26

Refer to DTC P1610.

IMMOBILIZER CONTROL SYSTEM

BE -265

MONITOR DTC STATUS

EF7F0BA8

1. Connect scantool to Data Link Connector(DLC).
2. Ignition "ON" & engine "OFF".
3. Monitor the "KEY STATUS" and "ECU STATUS' Parameter on the Scantool.

Specification : 'LEARNT'

1.1 CURRENT DATA		
01. NO. OF LEARNED KEY	1	▲
02. ECU STATUS	LEARNT	
03. KEY STATUS	LEARNT	▼

Fig 1

Fig 1) The current data in abnormal state
 شرکت دیجیتال خودرو سامانه (مسئلیت محدود)

4. Are "KEY STATUS" and "ECU STATUS' Parameter within specifications?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Go to "Inspection & Repair" procedure.


**COMPONENT INSPECTION**

EA4EFBB4

1. Check coil antenna
 - 1) Ignition "OFF"
 - 2) Disconnect SMARTRA.

3) Measure resistance between terminal "1" and "2" of SMARTRA.

Specification : Approx 8.5

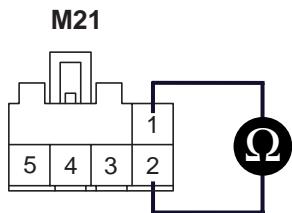

1. Coil antenna
2. Coil antenna
3. Ground
4. Power
5. Signal

SCMBE6758L

4) Is the measured resistance within specifications?

YES

Go to "Check SMARTRA" procedure.

NO

Check for open or short in antenna coil. Repair as necessary and go to "Verification of Vehicle Repair" procedure.

2. Check SMARTRA

- 1) IGN "ON" & Engine "OFF"
- 2) Neutralize ECM and Register transponder key by scantool.

 **NOTE**

Pin code is required to Neutralize ECM and to Register transponder key

3) Are Neutralizing and Registering completed normally?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Substitute with a known-good SMARTRA and check for proper operation.


If the problem is corrected, replace SMARTRA and then go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR

ED99DEFE

Refer to DTC P1610.

DTC P1692 IMMOBILIZER LAMP ERROR

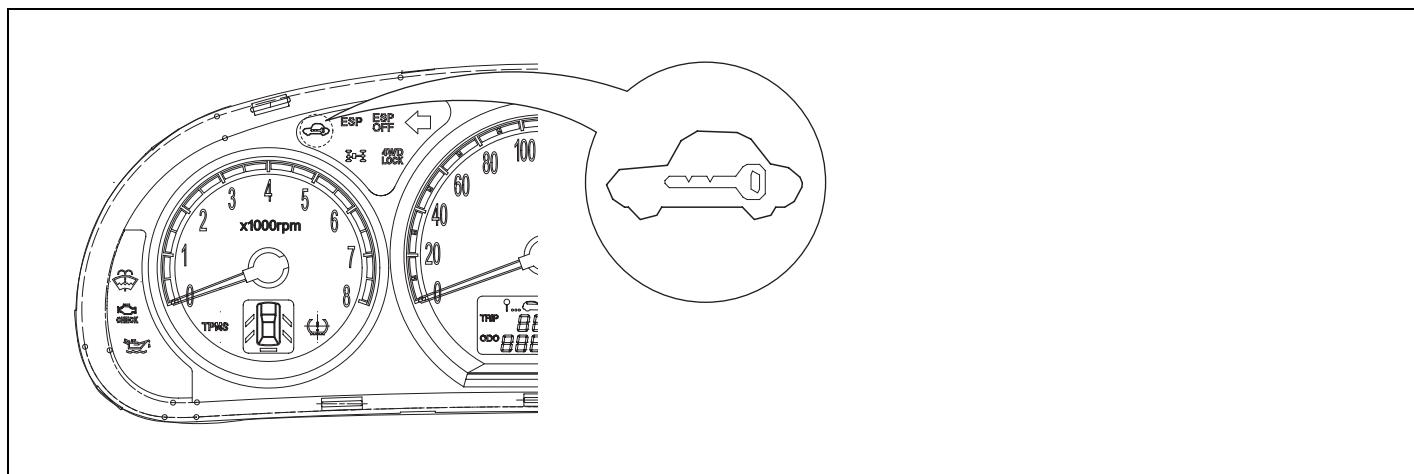COMPONENT LOCATION E7FCA69D

SCMBE6753D

GENERAL DESCRIPTION EC85AA6F

When driver inserts key and IGN "ON", Immobilizer informs status of system and result of Authentication by blinking of immobilizer lamp on instrument cluster. through Authentication procedure immobilizer lamp keep lighting up till engine starts. In normal status. Immobilizer lamp lights up for 30sec Right after ignition "ON". If there's any fault in immobilizer system or in Authentication, lamp blinks 5 times after ignition "ON".

DTC DESCRIPTION ECAAA0D9

The ECM sets DTC P1692 if there's short circuit in immobilizer lamp circuit.

DTC DETECTING CONDITION E9ED3A55

Item	Detecting Condition	Possible Cause
DTC Strategy		
Enable Conditions	• IG ON (On Registering TP Procedure)	
Threshold value		
Detecting time		
FAIL SAFE		<ul style="list-style-type: none"> Short Circuit in immobilizer lamp circuit. Open/Short in control harness Faulty ECM

SCHEMATIC DIAGRAM ED209A72

Refer to DTC P1610.

MONITOR DTC STATUS

E3AF39B2

1. Connect scantool to Data Link Connector(DLC).
2. Ignition "ON" & engine "OFF".
3. Select "Diagnostic Trouble Codes(DTCs)" mode and monitor "DTC Status" parameter
4. Is the DTC B1692 present?

YES

Go to "Inspection & Repair" procedure

NO

Fault is intermittent caused by poor contact in SMARTRA's and/or ECM's connector or was repaired and ECM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

TERMINAL AND CONNECTOR INSPECTION

E5C9AE07

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

YES

Repair as necessary and go to "Verification Vehicle Repair" procedure

NO

Go to "W/Harness Inspection" procedure

IMMOBILIZER CONTROL SYSTEM


BE -269

CONTROL CIRCUIT INSPECTION


E3C85BF4

1. Check for open in harness
 - 1) Ignition "OFF"
 - 2) Disconnect SMARTRA.
 - 3) Ignition "ON" & Engine "OFF"
 - 4) Measure voltage value between terminal C30-A-72(Gasoline) or C230-K-92 (Diesel) and chassis ground.

Specification : Approx. 11V

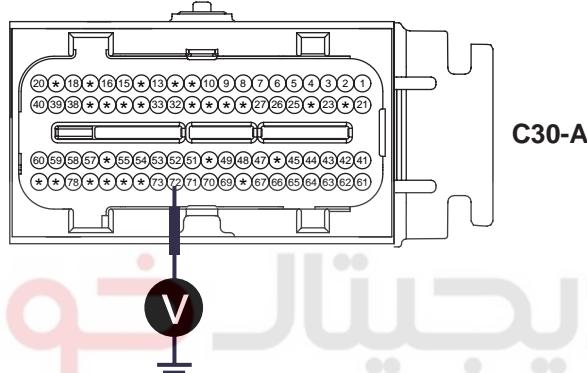[Gasoline]

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

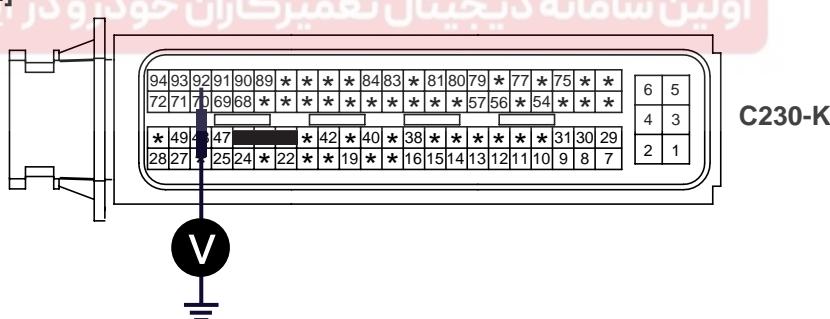[Diesel]

SCMBE6761L

- 5) Is the measured voltage within specifications?

YES

Go to "Component Inspection" procedure

NO

Check for open or short in harness. Repair as necessary and go to "Verification of Vehicle Repair" procedure.

VISUAL / PHYSICAL INSPECTION

EEAF1EB8

1. Check immobilizer lamp circuit.
 - 1) Ignition "ON" & Engine "OFF"
 - 2) Check if immobilizer lamp operates properly.

NOTE

Right after ignition "ON", Immobilizer lamp lights up for 30sec.

If lamp blinks 5 times after ignition "ON", there's any fault in immobilizer system.

- 3) Is immobilizer lamp operates properly?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Go to "Component Inspection" procedure


COMPONENT INSPECTION

E7BFBE87

1. Check immobilizer lamp.
 - 1) Ignition "OFF"
 - 2) Disconnect ECM.
 - 3) Ground terminal "B2" of immobilizer lamp.
 - 4) Ignition "ON" and Monitor operation of immobilizer lamp.



Specification : Immobilizer lamp "ON"

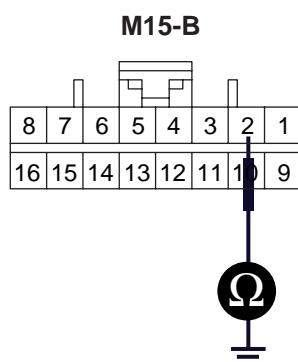

SCMBE6762L

5) Is the Immobilizer lamp "ON"?

YES

Substitute with a known-good ECM and check for proper operation.

If the problem is corrected, replace ECM and then go to "Verification of Vehicle Repair" procedure.



NOTE

ECM substituted for old one must be in "Virgin" or "Neutral" status and Pin code is required to Neutralize ECM and to Register transponder key

NO

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR

ED89A5A6

Refer to DTC P1610.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



BE -272

BODY ELECTRICAL SYSTEM

DTC P1693 TRANSPONDER NO RESPONSE ERROR / INVALID RESPONSE**COMPONENT LOCATION** E6B0B3ED

Refer to DTC P1674.

GENERAL DESCRIPTION EACC3444

Refer to DTC P1674.

DTC DESCRIPTION ED9200AA

The ECM sets DTC P1693 if there's abnormal response from transponder.

DTC DETECTING CONDITION EA03F4ED

Item	Detecting Condition	Possible Cause
DTC Strategy		
Enable Conditions	• IG ON	
Threshold value		
Detecting time		
FAIL SAFE		<ul style="list-style-type: none"> Corrupted data from Transponder More than one TP in the magnetic field No TP(Key without TP) in the magnetic field

SCHEMATIC DIAGRAM E8525FE3

Refer to DTC P1610.

COMPONENT INSPECTION EA082EB6

1. Check transponder and ECU status
 - 1) IGN "ON" & Engine "OFF"
 - 2) Monitor the "KEY STATUS" and "ECU STATUS" Parameter on the Scantool.

Specification : 'LEARNT'

1.1 CURRENT DATA	
01. NO. OF LEARNED KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	LEARNT
▼	
<input type="button" value="FIX"/> <input type="button" value="SCRN"/> <input type="button" value="FULL"/> <input type="button" value="PART"/> <input type="button" value="GRPH"/> <input type="button" value="HELP"/>	

Fig 1

Fig 1) The current data in abnormal state

SCMBE6752L

3) Are "KEY STATUS" and "ECU STATUS" Parameter within specifications?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Go to "Check transponder" procedure.

اولین سامانه دیجیتال خودرو سامانه (مسئولیت حدود)

2. Check transponder

- 1) IGN "ON" & Engine "OFF"
- 2) Neutralize ECM and Register transponder key by scantool.

NOTE

Pin code is required to Neutralize ECM and to Register transponder key

3) Are Neutralizing and Registering completed normally?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Substitute with a known-good transponder and check for proper operation.

If the problem is corrected, replace transponder and then go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR

EBB1DD15

Refer to DTC P1610.

DTC P1694 EMS MESSAGE ERROR**COMPONENT LOCATION** E7BFF80B

Refer to DTC P1610.

GENERAL DESCRIPTION EBA74F6C

The ECM and the SMARTRA communicate by dedicated line. During this communication of ECM and SMARTRA the K line of ECM cannot be used for communication. The ECM controls the communication either to SMARTRA or to other devices(e.g. scanner) on K line by switching of a multiplexer and specific communication procedures. The multiplexer is a part of ECM H/W.

DTC DESCRIPTION E3EB4038

The ECM sets DTC P1694 if Request from EMS is invalid.

DTC DETECTING CONDITION E3C9689B

Item	Detecting Condition	Possible Cause
DTC Strategy		<ul style="list-style-type: none"> • Faulty EMS Protocol layer violation - Invalid request - Check sum error
Enable Conditions	• IG ON	
Threshold value		
Detecting time		
FAIL SAFE		

SCHEMATIC DIAGRAM E5FDAEE2

Refer to DTC P1610.

IMMOBILIZER CONTROL SYSTEM

BE -275

COMPONENT INSPECTION EC87BCB0

1. Check transponder and ECU status
 - 1) IGN "ON" & Engine "OFF"
 - 2) Monitor the "KEY STATUS" and "ECU STATUS" Parameter on the Scantool.

Specification : 'LEARNT'

1.1 CURRENT DATA	
01. NO. OF LEARNED KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	LEARNT

▼

FIX SCRН FULL PART GRPH HELP

Fig 1

Fig 1) The current data in abnormal state

شركت ديجيتال خودرو سامانه (مسئولييت محدود)



3) Are "KEY STATUS" and "ECU STATUS" Parameter within specifications?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Go to "Check transponder" procedure

2. Check ECM

- 1) IGN "ON" & Engine "OFF"
- 2) Neutralize ECM and Register transponder key by scantool.

NOTE

Pin code is required to Neutralize ECM and to Register transponder key

- 3) Are Neutralizing and Registering completed normally?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Substitute with a known-good ECM and check for proper operation.

If the problem is corrected, replace ECM and then go to "Verification of Vehicle Repair" procedure.

NOTE

ECM substituted for old one must be in "Virgin" or "Neutral" status and Pin code is required to Neutralize ECM and to Register transponder key


VERIFICATION OF VEHICLE REPAIR

E0E43ABF

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

Refer to DTC P1610.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

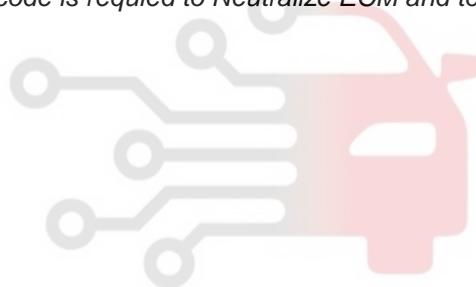

IMMOBILIZER CONTROL SYSTEM

BE -277

DTC P1695 EMS MEMORY ERROR

COMPONENT LOCATION E786EAFF

Refer to DTC P1610.

GENERAL DESCRIPTION EDFD08C5

The relevant data for the immobilizer function are stored at permanent memory (EEPROM or Flash etc.). The immobilizer data are stored by three independent entries. The data from EEPROM are evaluated by "2 of 3 decision". That means all three entries are read and the content is compared before authentication process. If the contents of all entries are equal, the authentication will run without additional measures. If only the contents of two entries are equal, the authentication will run and fault code "EEPROM defective" is stored at ECM. If the contents of all three entries are different from each other, no authentication will be possible and the fault code "EEPROM defective" will be stored. The limp home function cannot be activated. The ECM shall be replaced if the EEPROM related fault occurs again after new teaching of all keys.

DTC DESCRIPTION EE7F16B5

The ECM sets DTC P1694 if there's any fault in EMS internal permanent memory (EEPROM or Flash etc).

DTC DETECTING CONDITION EC4D1C22

Item	Detecting Condition	Possible Cause
DTC Strategy		• Faulty EMS
Enable Conditions	• IG ON	
Threshold value		
Detecting time		
FAIL SAFE		

SCHEMATIC DIAGRAM EAA3850E

Refer to DTC P1610.

COMPONENT INSPECTION

E6FAC11A

1. Check transponder and ECU status
 - 1) IGN "ON" & Engine "OFF"
 - 2) Monitor the "KEY STATUS" and "ECU STATUS" Parameter on the Scantool.

Specification : 'LEARNT'

1.1 CURRENT DATA	
01. NO. OF LEARNED KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	LEARNT

▼

Fig 1

FIX SCRN FULL PART GRPH HELP

Fig 1) The current data in abnormal state

شركة ديجيتال خودرو سامانه (مسؤولیت محدود)


3) Are "KEY STATUS" and "ECU STATUS" Parameter within specifications?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Go to "Check transponder" procedure

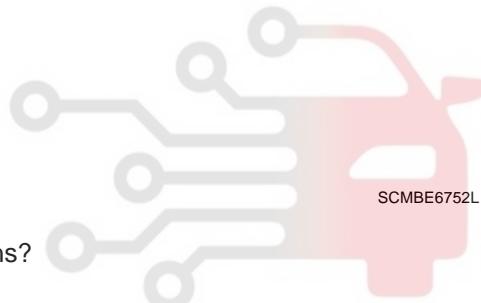

IMMOBILIZER CONTROL SYSTEM

BE -279

2. Check ECM

- 1) IGN "ON" & Engine "OFF"
- 2) Neutralize ECM and Register transponder key by scantool.

NOTE

Pin code is required to Neutralize ECM and to Register transponder key

- 3) Are Neutralizing and Registering completed normally?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Substitute with a known-good ECM and check for proper operation.

If the problem is corrected, replace ECM and then go to "Verification of Vehicle Repair" procedure.

NOTE

ECM substituted for old one must be in "Virgin" or "Neutral" status and Pin code is required to Neutralize ECM and to Register transponder key

VERIFICATION OF VEHICLE REPAIR

EB801803

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

Refer to DTC P1610.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



DTC P1696 AUTHENTICATION FAIL**COMPONENT LOCATION** E5AAB3B2

Refer to DTC P1674.

GENERAL DESCRIPTION EBF9D3EB

Refer to DTC P1674.

DTC DESCRIPTION E3D110D8

The ECM sets DTC P1696 if invalid key is inserted into key hole for Authentication.

DTC DETECTING CONDITION EFEFC47A

Item	Detecting Condition	Possible Cause
DTC Strategy		
Enable Conditions	• IG ON	
Threshold value		
Detecting time		
FAIL SAFE		<ul style="list-style-type: none"> Virgin TP at EMS status "Learned" Learned(Invalid) TP at EMS status "Learned"

شرکت دیجیتال خودرو سامانه (مسئلیت محدود)
SCHEMATIC DIAGRAM E481B11B

اولین سامانه دیجیتال تعمیرکاران خودرو

IMMOBILIZER CONTROL SYSTEM

BE -281

COMPONENT INSPECTION

EC6B8B88

1. Check transponder and ECU status
 - 1) IGN "ON" & Engine "OFF"
 - 2) Monitor the "KEY STATUS" and "ECU STATUS" Parameter on the Scantool.

Specification : 'LEARNT'

1.1 CURRENT DATA	
01. NO. OF LEARNT KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	LEARNT

▼

FIX SCRN FULL PART GRPH HELP

Fig 1

Fig 1) The current data in abnormal state

شـرـكـتـ دـيـجـيـتـالـ خـودـرـ وـسـامـاـهـ (ـمـسـتـوـيـتـ مـحـدـودـ)



3) Are "KEY STATUS" and "ECU STATUS" Parameter within specifications?

YES

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

NO

Register as necessary and then go to "Verification of Vehicle Repair" procedure.

CASE 1. KEY STATUS "VIRGIN" : Register transponder key now inserted

CASE 2. KEY STATUS "INVALID" : Register all transponder key

VERIFICATION OF VEHICLE REPAIR

EF67FFDF

Refer to DTC P1610.

DTC P1697 HI-SCAN MESSAGE ERROR**COMPONENT LOCATION** EFA93E09

Refer to DTC P1610.

GENERAL DESCRIPTION E1C8E714

In immobilizer system, scantool is mainly used for diagnosis. besides this, registration of key and neutralization of ECM is executed by scantool. For ECM communicate with other components such as SMARTRA and scantool by changing type of communication through just one line, K-line communication between scantool and ECM is unavailable while communication between ECM and SMARTRA is in progress.

DTC DESCRIPTION EEDB9E3B

The ECM sets DTC P1696 if Request from Tester is Invalid.

DTC DETECTING CONDITION EE00D6EF

Item	Detecting Condition	Possible Cause
DTC Strategy		
Enable Conditions	• IG ON	
Threshold value		
Detecting time		
FAIL SAFE		<ul style="list-style-type: none"> • Invalid request <ul style="list-style-type: none"> - Protocol layer violation - Check sum error

SCHEMATIC DIAGRAM EC2CF610

Refer to DTC P1610.

MONITOR DTC STATUS EB601B51

1. Connect scantool to Data Link Connector(DLC).
2. Ignition "ON" & engine "OFF".
3. Select "Diagnostic Trouble Codes(DTCs)" mode and monitor "DTC Status" parameter
4. Is the DTC B1697 present?

YES

Go to "Inspection & Repair" procedure.

NO

Fault is intermittent caused by poor contact in SMARTRA's and/or ECM's connector or was repaired and ECM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

IMMOBILIZER CONTROL SYSTEM

BE -283

COMPONENT INSPECTION

E4CF2279

1. Check communication between ECM and scantool
 - 1) IGN "ON" & Engine "OFF"
 - 2) Connect scantool to Data Link Connector(DLC).
 - 3) Erase the DTC and Monitor Parameter of immobilizer on the Scantool.
Try one more time from "select car model" even if "Communication error" is present on the scantool.


1.1 CURRENT DATA	
01. NO. OF LEARNT KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	LEARNT

▲
▼

FIX SCRН FULL PART GRPH HELP

Fig 1

Fig 1) The current data in abnormal state

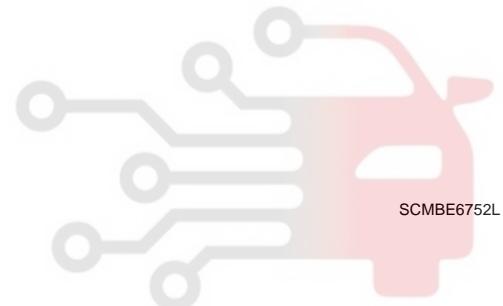

4) Is the communication between ECM and scantool normal?

YES

If ECM is in "Locked by Timer" status. Keep "KEY ON" status for 1 hours to withdraw "Locked by Timer" status. Then repair or replace as necessary and go to "Verification of Vehicle Repair" procedure.

NO

Substitute with a known-good scantool and check for proper operation. If the problem is corrected, Go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR

E6CAE6B3

Refer to DTC P1610.

DTC P1699 TWICE OVERTRIAL**COMPONENT LOCATION** E3ABB893

Refer to DTC P1610.

GENERAL DESCRIPTION ECE32C87

This is a special function for engine start by vehicle manufacturer. The engine can be started for moving from the production line to an area where the key teaching is proceeded.

DTC DESCRIPTION EF64F1A9

The ECM sets DTC P1697 if the maximum limit of Twice IGN is Exceeded.

DTC DETECTING CONDITION EBD5D472

Item	Detecting Condition	Possible Cause
DTC Strategy		• Twice IGN 32 times
Enable Conditions	• IG ON	
Threshold value		
Detecting time		
FAIL SAFE		

SCHEMATIC DIAGRAM EF63DA9A

Refer to DTC P1610.

MONITOR DTC STATUS E5D8B0F5

1. Connect scantool to Data Link Connector(DLC).
2. Ignition "ON" & engine "OFF".
3. Select "Diagnostic Trouble Codes(DTCs)" mode and monitor "DTC Status" parameter
4. Is the DTC B1699 present?

YES

Go to "Inspection & Repair" procedure.

NO

Fault is intermittent caused by poor contact in SMARTRA's and/or ECM's connector or was repaired and ECM memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

IMMOBILIZER CONTROL SYSTEM

BE -285

COMPONENT INSPECTION

EFD3336B

1. Check transponder and ECU status
 - 1) IGN "ON" & Engine "OFF"
 - 2) Connect scantool to Data Link Connector(DLC).
 - 3) Erase the DTC and Monitor the "ECU STATUS' Parameter on the Scantool.

1.1 CURRENT DATA	
01. NO. OF LEARNT KEY	1
02. ECU STATUS	LEARNT
03. KEY STATUS	LEARNT
▼	
FIX SCRN FULL PART GRPH HELP	

Fig 1

Fig 1) The current data in abnormal state

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)



- 4) Is "ECU STATUS' Parameter "Locked"?

اولین سامانه دیجیتال تعمیرکاران خودرو مددی ایران

YES

Keep "KEY ON" status for 1 hours to withdraw "Locked by Timer" status. Then register transponder and go to "Verification of Vehicle Repair" procedure.

NO

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR

EC28D3B9

Refer to DTC P1610.

BE -286


BODY ELECTRICAL SYSTEM

IMMOBILIZER CONTROL UNIT

REPLACEMENT E2DD9004


1. Disconnect the negative (-) battery terminal.
2. Remove the driver crash pad lower panel(A) after removing side cover. (Refer to the Body group - "Crash pad").

[LHD]

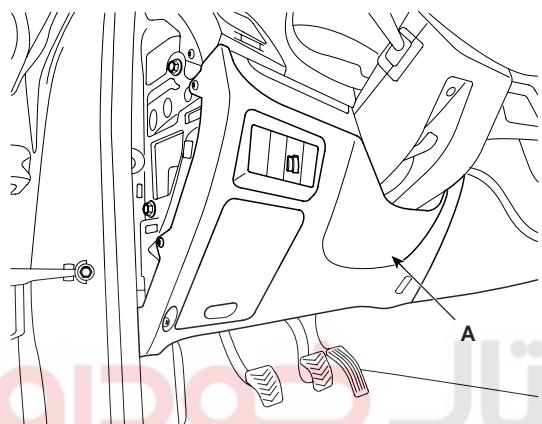


SCM6580D

[RHD]

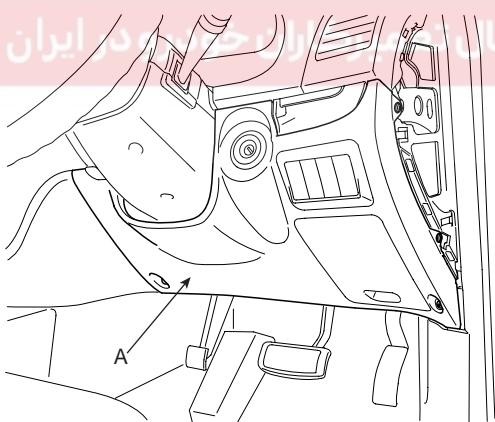

SCM6580R

3. Disconnect the 5P connector of the SMARTRA unit and then remove the SMARTRA unit (A) after loosening a nut.

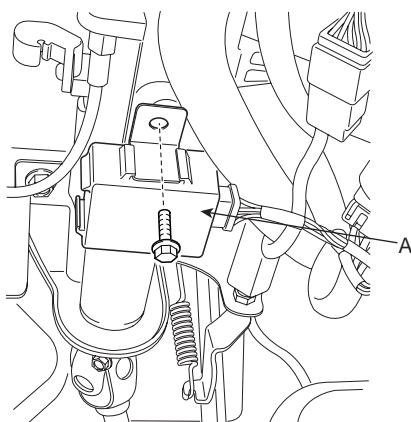

SCM6581D

4. Installation is the reverse of removal procedure.




IMMOBILIZER CONTROL SYSTEM

BE -287

COIL ANTENNA**REPLACEMENT** E0B66B6D


1. Disconnect the negative (-) battery terminal.
2. Remove the driver crash pad lower panel (A). (Refer to the Body group - "Crash pad").

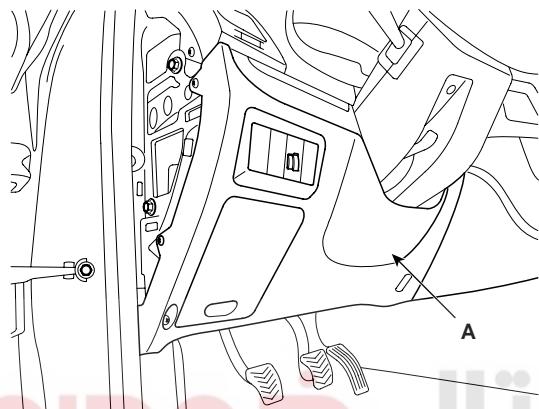[LHD]

SCMBE6590D


[RHD]

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال خودرو در ایران

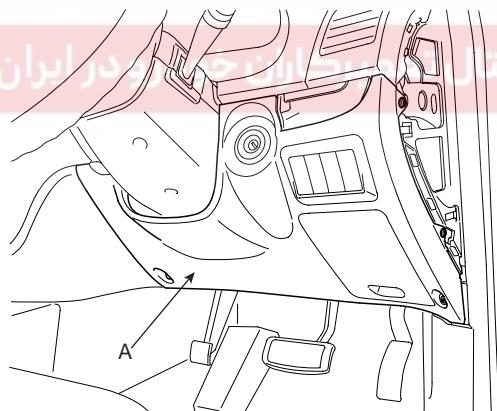


SCMBE6590R

3. Disconnect the 6P connector of the coil antenna and then remove the coil antenna (A) after loosening the screw.

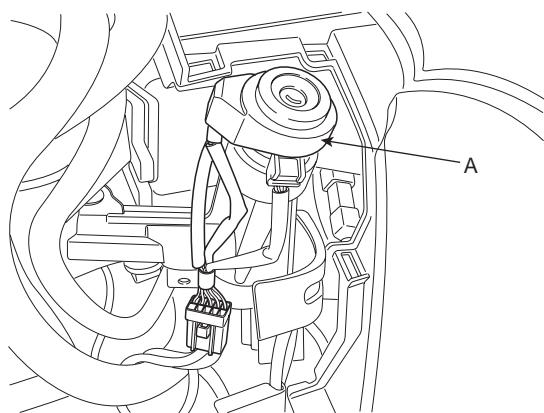

SCMBE6591D



4. Installation is the reverse of removal procedure.

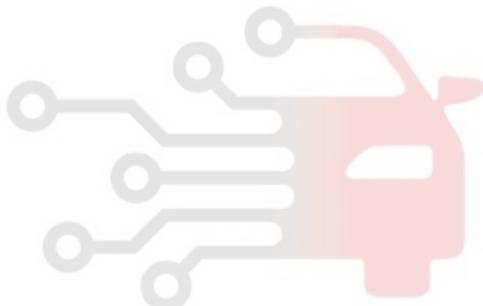

IGNITION SYSTEM

REPLACEMENT EE8BA5DF

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad lower panel (Refer to the Body group - crash pad).
3. Remove the ignition switch (A) after loosening the screw with IG ON and disconnecting the 6P connector.

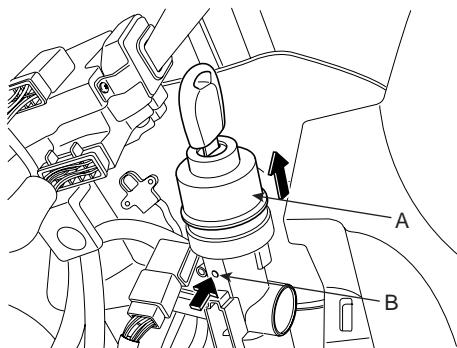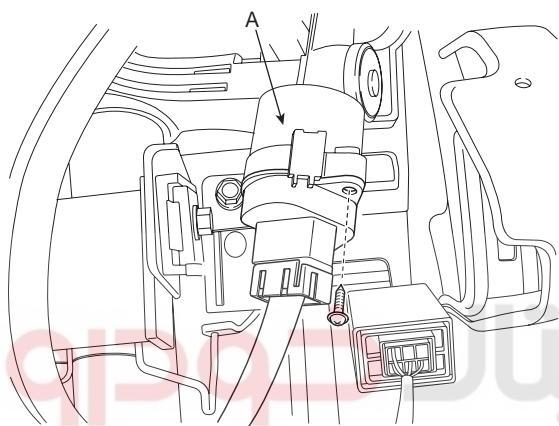


ATIE781C

6. If it is necessary to remove the key lock cylinder (A), Remove the key lock cylinder (A) after pushing lock pin (B) with key ACC.
7. Installation is the reverse of removal procedure.

شركة ديجيتال خودرو سامانه (مسؤولیت محدود) ATL781A

4. Remove the steering column cover (Refer to the ST group).
5. Remove the door warning switch and key illumination lamp (A) after disconnecting the 6P connector.

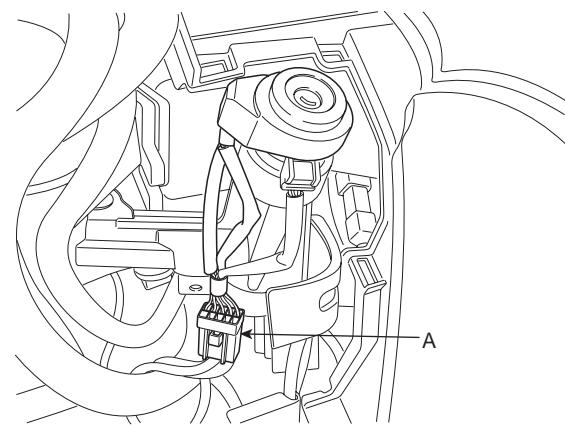

SCMBE6531D




IGNITION SYSTEM

BE -289

INSPECTION

EF31DB95

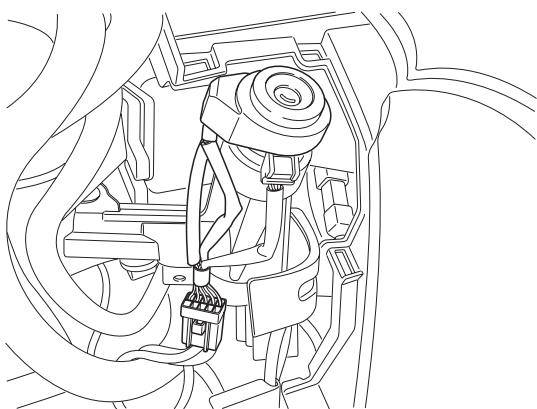

SCMBE6532D

1. Disconnect the ignition switch connector and key warning switch connector from under the steering column.
2. Check for continuity between the terminals.
3. If continuity is not specified, replace the switch.

POSITION	KEY	IGNITION SWITCH						STEERING		KEY WARNING SWITCH		KEY HOLE ILLUMINATION	
		2	4	6	5	3	1	TRAVEL	TRAVEL	5	6	3	4
LOCK	REMOVAL							LOCK					
ACC	INSERT	○	—	○				LOCK	UNLOCK				
ON		○	—	○	—	○	—	UNLOCK		○	—	○	
START		○	—	○	—	○	—			○	—	○	

اولین سامانه دیجیتال تعییرکاران خودرو در ایران

LTIF781E