





معرفی جعبه فیوز محفظه موتور خودروی X60

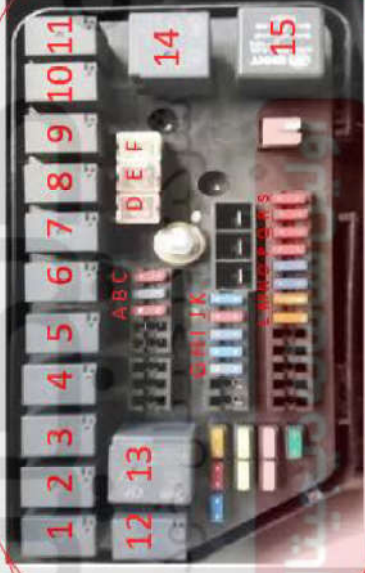

مجموعه فیوزها	مجموعه رله ها
(A) مه شکن عقب	۱- چراغ های عقب
(B) پمپ بنزین	۲- استارت
(C) کولر	۳- چراغ نور پایین
(D) دور تند فن	۴- چراغ نور بالا
(E) برق اصلی فن	۵- چراغ پلیسی
(F) رله اصلی	۶- مه شکن های جلو
(G) چراغ نور پایین	۷- چراغ دنده عقب
(H) چراغ نور بالا	۸- بوق
(I) مه شکن جلو	۹- پمپ سوخت
(J) بوق	۱۰- کولر
(K) چراغ دنده عقب	۱۱- دور تند فن
(L) سنسور اکسیژن پایین	۱۲- قفل کن دسته دنده
(M) سنسور اکسیژن بالا	۱۳- رله اصلی
(N) انژکتور	۱۴- رله اصلی فن
(O) کویل جرقه	۱۵- دور کند فن
(P) قفل کن دسته دنده	
(Q) ABS	
(R) IG2	
(S) ECU	

Engine Compartment Fuse and Relay Box

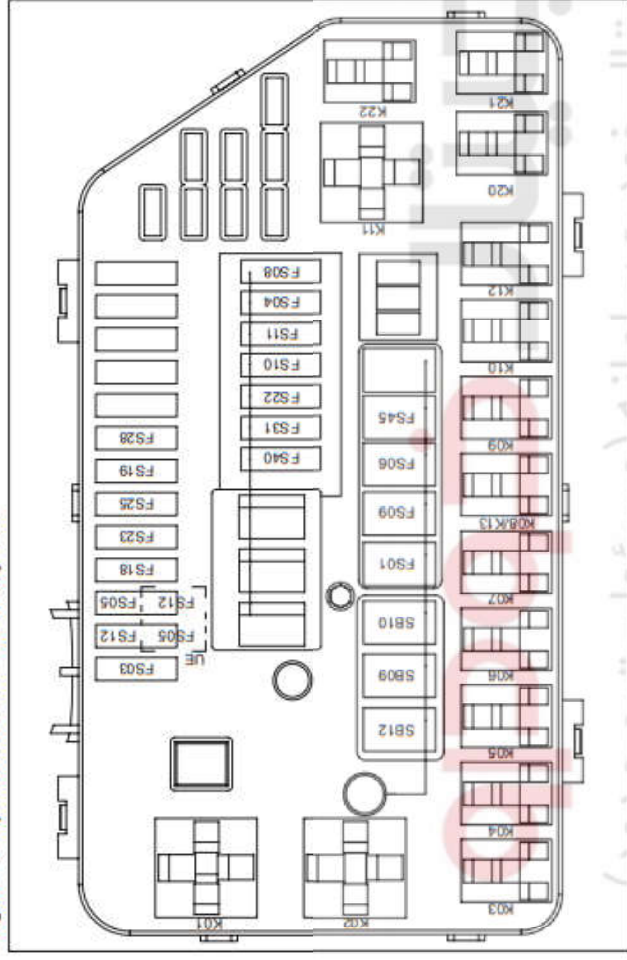

Fuse

Code	Application	Rated Current (A)	Description
FS01	Fan Fuse	5A	
FS03	ECM Fuse	10A	
FS04	Main Relay Fuse	25A	
FS05	IG2 Power Fuse	25A	
FS06	Fuel Pump Fuse	15A	
FS08	TCU Fuse	15A	
FS09	AC Fuse	10A	
FS10	Overtaking/High Beam Lamp Fuse	15A	
FS11	Low Beam Lamp Fuse	15A	
FS12	IG2 Power Fuse	10A	
FS18	TCU Fuse	15A	
FS19	Front Oxygen Sensor Fuse	5A	
FS22	Front Fog Lamp Fuse	15A	
FS23	Ignition Coil Fuse	15A	
FS25	Injector/Fan Relay Fuse	15A	
FS28	Rear Oxygen Sensor Fuse	5A	
FS31	Horn Fuse	15A	
FS40	Width Lamp Fuse	15A	
FS45	Rear Fog Lamp Fuse	10A	
SB09	High Speed Fan Fuse	30A	
SB10	Low Speed Fan Fuse	30A	
SB12	Main Relay Fuse	25A	

Relay

Code	Application	Description
K01	Adjusting Speed Fan Relay	
K02	Low Speed Fan Relay	
K03	High Speed Fan Relay	
K04	AC Compressor Relay	
K05	Fuel Pump Relay	
K06	Horn Relay	
K07	Width Lamp Relay	
K08/K13	Front Fog/Daytime Running Lamp Relay	
K09	Overtaking Lamp Relay	
K10	High-beam Lamp Relay	
K11	Main Relay	
K12	Low-beam Lamp Relay	
K20	Stator Relay	
K21	Reverse Lamp Relay	
K22	Shift Lock Relay	