




Front View of Indoor Fuse & Relay Box

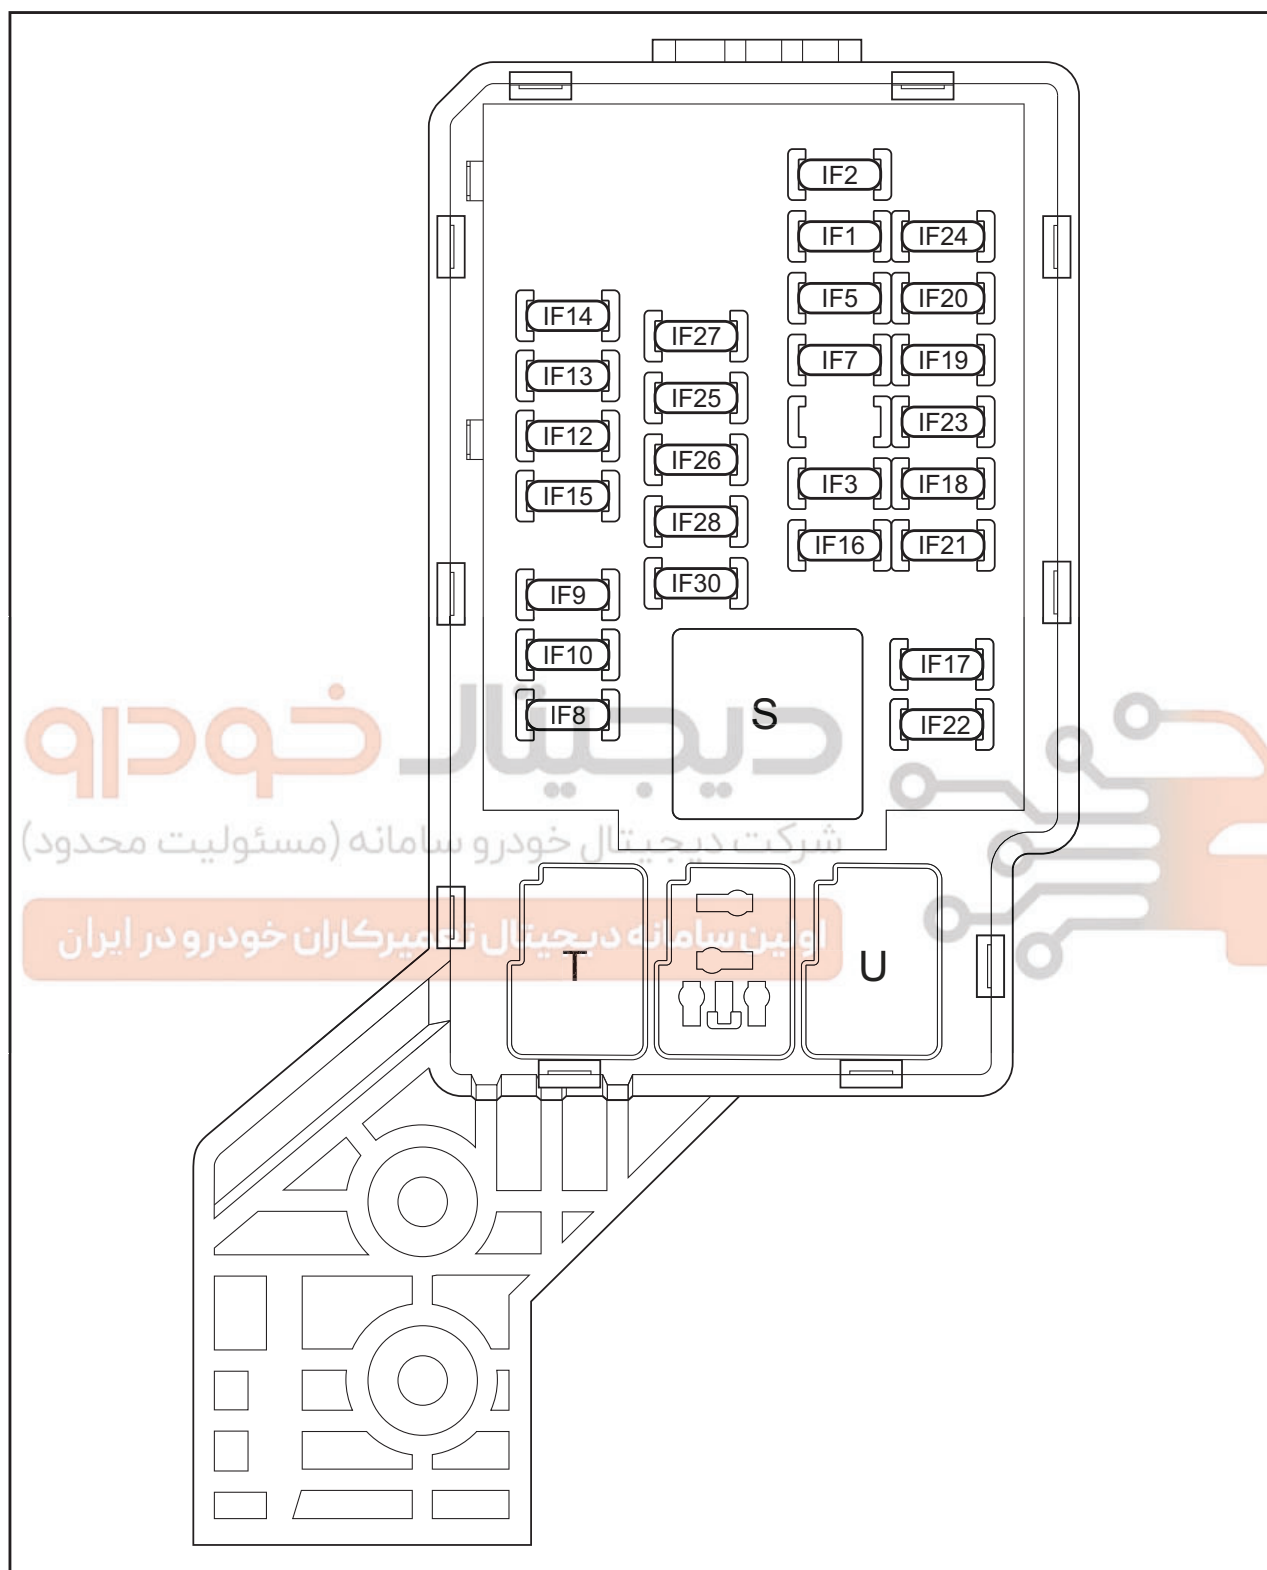


Rear View of Indoor Fuse & Relay Box

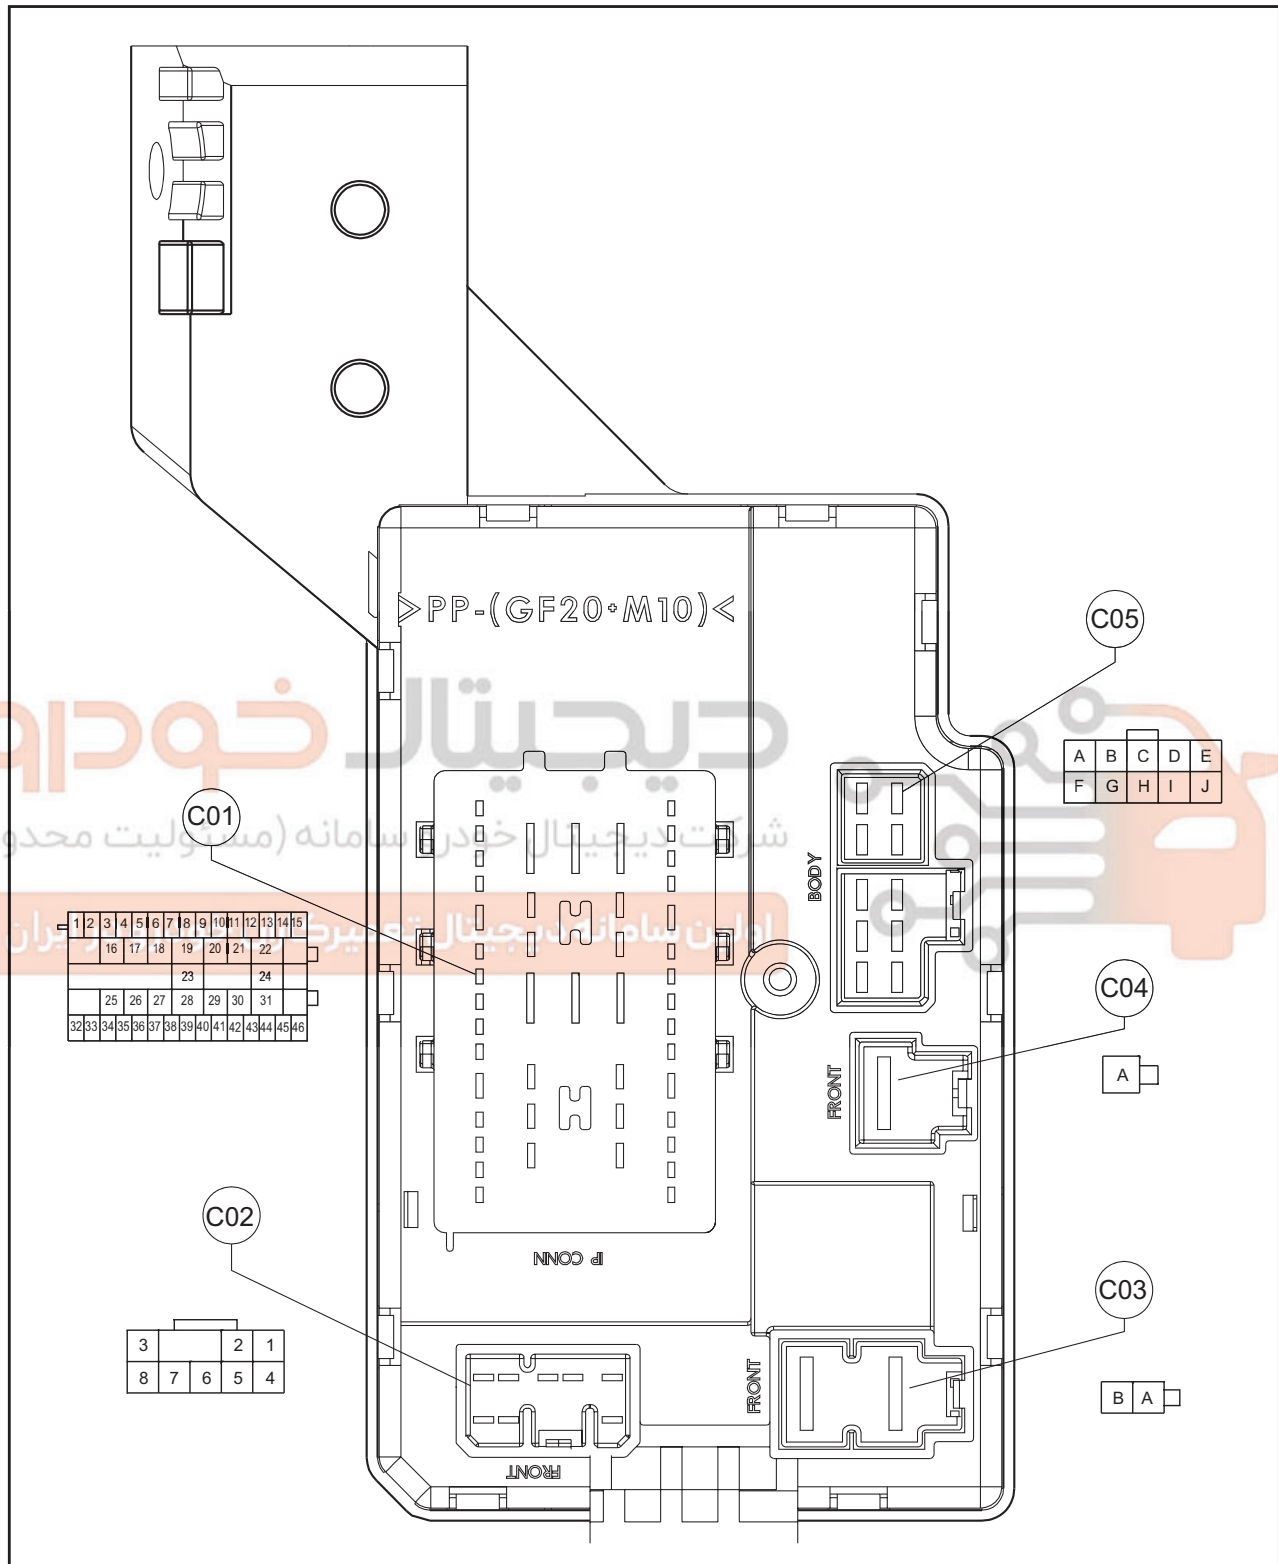

Internal Wiring Diagram of Indoor Fuse, Relay Box

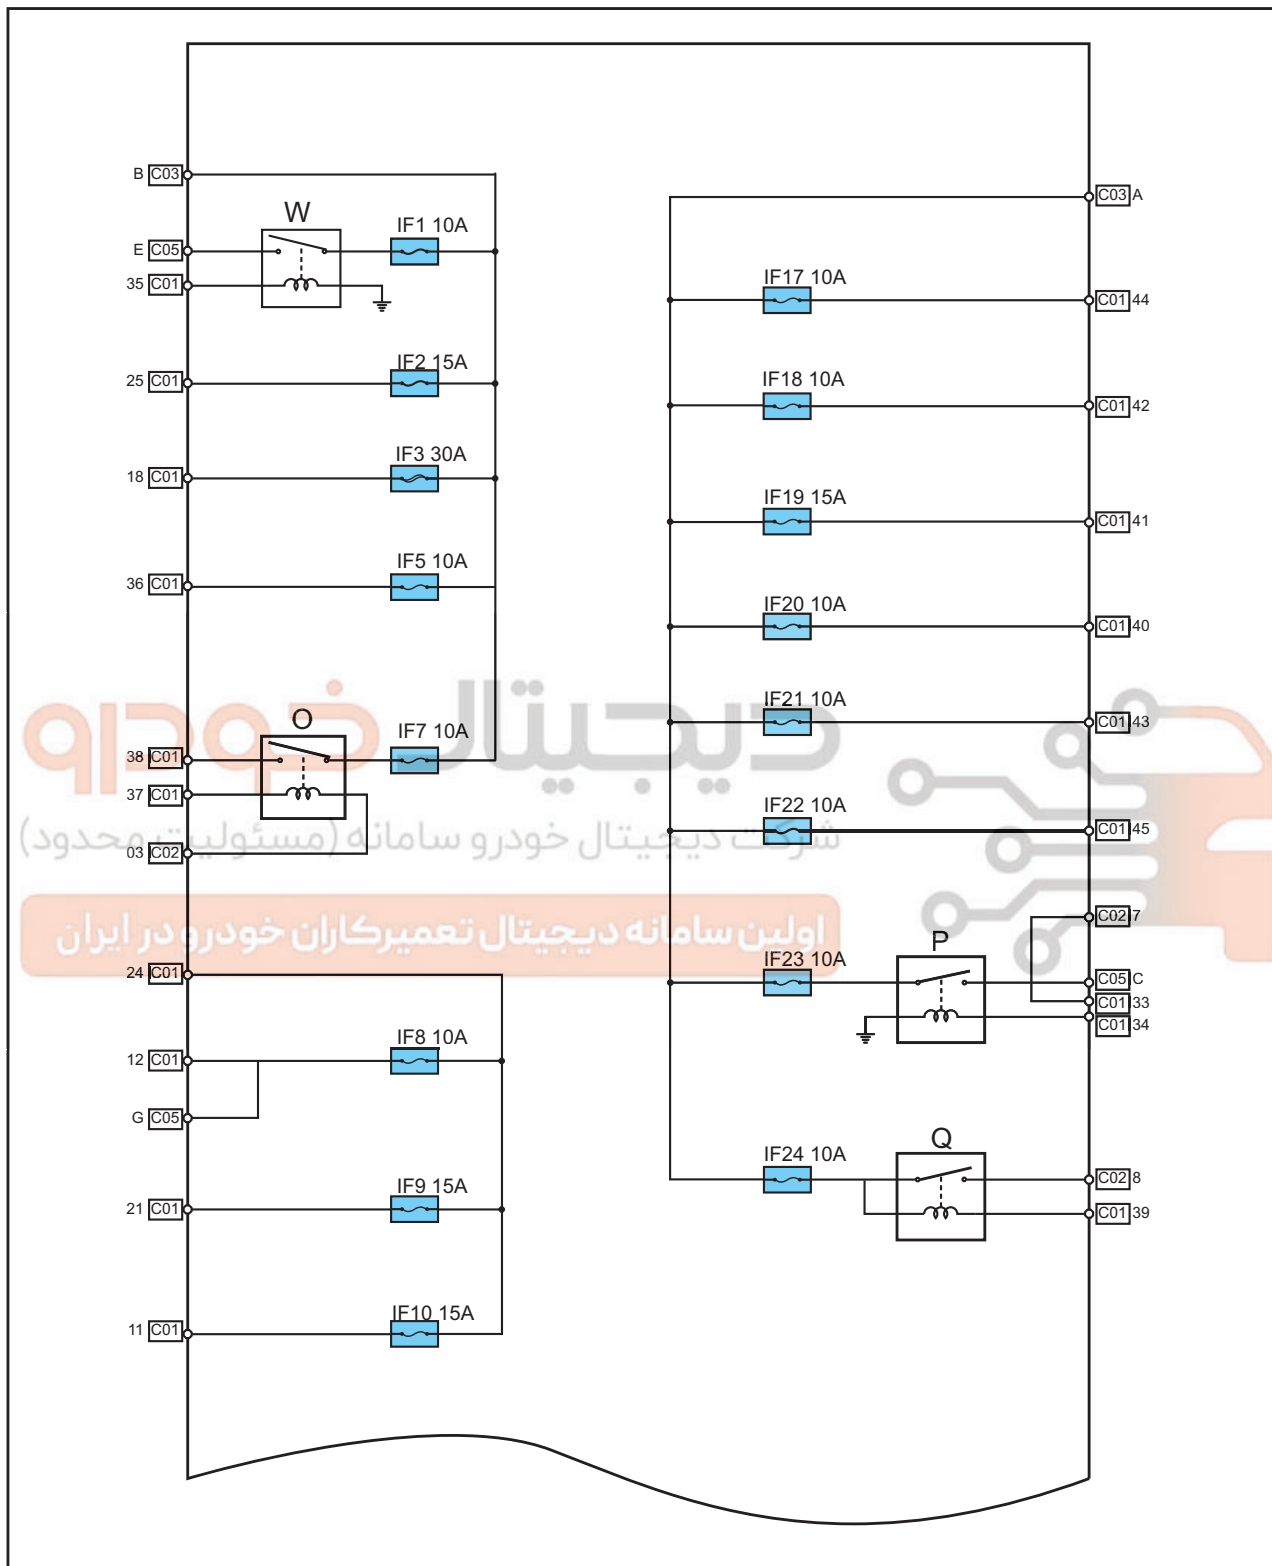

Internal Wiring Diagram of Indoor Fuse, Relay Box (Continued)

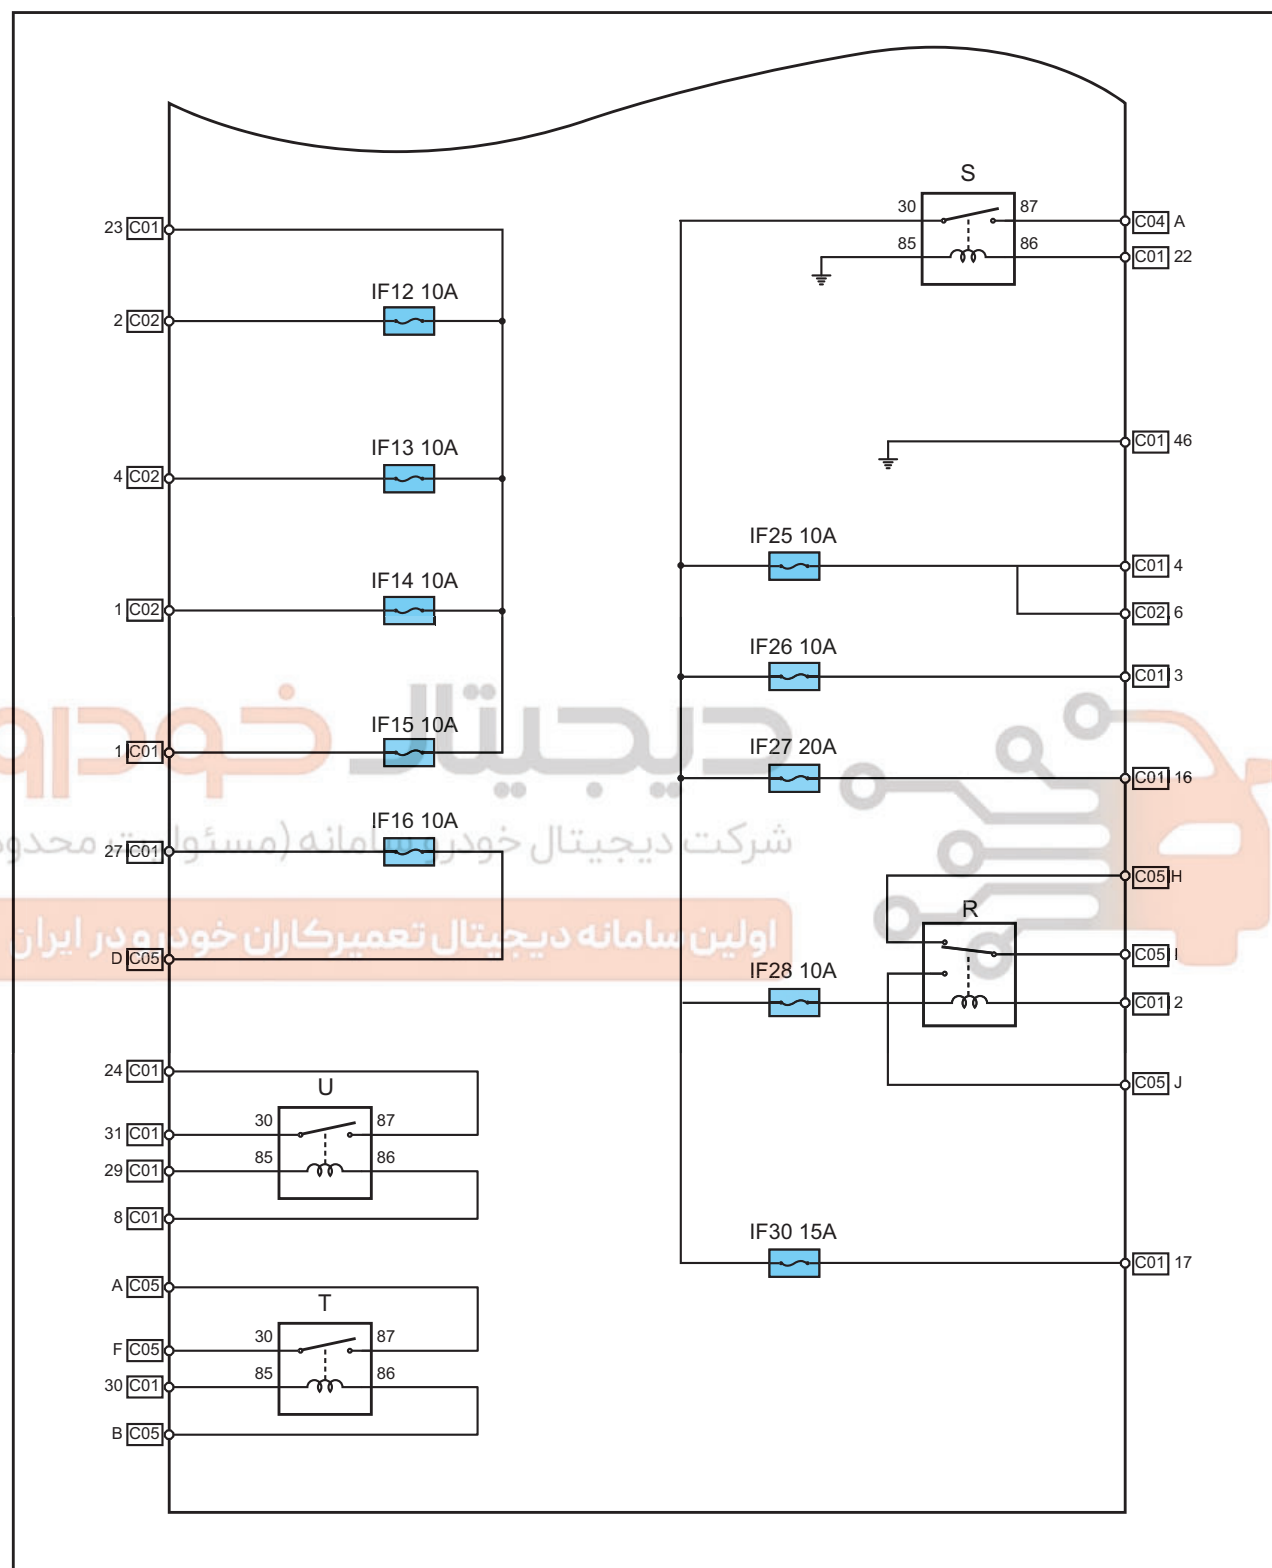

List of Indoor Fuse

Code	Name	Rated current (A)	Descriptions
IF01	Rear Fog Lamp	10	/
IF02	Radio/CD player	15	/
IF03	Sunroof	30	/
IF04	Empty	Empty	Empty
IF05	Immobilizer	10	/
IF06	Empty	Empty	Empty
IF07	A/C compressor	10	/
IF08	Radio/CD player / Sunroof	10	Rearview Mirrors
IF09	Back-up Power Supply	15	/
IF10	Cigarette Lighter	15	/
IF11	Empty	Empty	Empty
IF12	ECM	10	/
IF13	ABS	10	/
IF14	Reverse Lamp Switch	10	/
IF15	ACU	10	/
IF16	Rearview mirror heating	10	/
IF17	Steering / alarming	10	/
IF18	Door lock	10	Trunk lock, over lock
IF19	A/C	15	Power supply fuse, instrument, sunroof buzzer
IF20	Brake lamp	10	/
IF21	Diagnostic interface	10	Immobilizer, TPMS
IF22	Headlamp switch	10	/
IF23	Position lamp	10	Tail lamp, instrument and switch backlight
IF24	Horn	10	/
IF25	Alternator	10	TPMS, instrument, lighting sensor, A/C, sunroof, instrument, blower relay
IF26	BCM	10	Immobilizer
IF27	Wiper	20	Washer switch
IF28	Rear wiper	10	Rear wiper return
IF29	Empty	Empty	Empty
IF30	Ignition coil	15	/

List of Indoor Relay

Code	Name	Descriptions
S	IG1 relay	Ignition control
W	Rear fog lamp relay	Internal part of fuse box
O	A/C Compressor Relay	Internal part of fuse box
P	Position lamp relay	Internal part of fuse box
Q	Horn relay	Internal part of fuse box
R	Rear wiper relay	Internal part of fuse box
T	Front fog lamp relay	External part of fuse box
U	Seat heating relay	External part of fuse box

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

