Engine Electrical System

General Information

TROUBLESHOOTING

1110	ODL		טווי	U I	11.4
CHA	RGI	NG :	SYS	TE	M

Symptom	Suspect Area	Remedy
Charging warning indicator does not light with ignition switch "ON" and engine off		Check fuses Replace light Tighten loose connections Replace voltage regulator
Charging warning indicator does not go out with engine running (Battery requires frequent recharging)	Battery cables loose, corroded or worn	Adjust tension or replace drive belt Repair or replace cavles Check fuses Replace fusible link Test generator Repair wiring
Engine hesitates/poor acceleration Overcharge	Drive belt loose or worn Wiring connection loose or open circuit Fusible link blown Poor grounding Electronic voltage regulator or generator Worn battery Electronic voltage regulator Voltage sensing wire	Adjust tension or replace drive belt Tighten loose connection or repair wiring Replace fusible link Repair Test generator, if faulty, repair or replace Replace battery Replace voltage regulator Repair wire
STARTING SYSTEM	شرکت دیجیتال خودرو سامانه (ه	0

Symptom	Suspect Area	Remedy
Engine will not crank	Battery charge low Battery cables loose, corroded or worn out Transaxle range switch (Vehicle with automatic transaxle only) Fusible link blown Starter motor faulty Ignition switch faulty	Charge or replace battery Repair or replace cables Adjust or replace switch Replace fusible link Repair starter motor Inspect
Engine cranks slowly	Battery charge low Battery cables loose, corroded or worn out Starter motor	Charge or replace battery Repair or replace cables Repair starter motor
Starter keeps running	Starter motor Ignition switch Relay faulty Wiring faulty	Repair starter motor Inspect Replace relay Inspect or replace wiring
Starter spins but engine will not crank	Short in wiring Pinion gear teeth broken or starter motor Ring gear teeth broken	Repair wiring Repair starter motor Replace flywheel ring gear or torque converter

General Information

EE-3

CRUISE CONTROL SYSTEM

MOTICE

Before troubleshooting:

- Check the ECM(10A), Horn(10A), ECU #3(10A) and ECU B+(15A) fuse in the under hood fuse/relay box.
- Check that the horn sounds.
- Check the tachometer to see if it works properly.

Symptom	Suspect Area	See Page
Cruise control cannot be set	Remocon switch Brake switch A/T gear position switch Cruise control unit	See page EE-34 See page EE-35 See page TR group-automatic transaxle See page EE-6
Cruise control cannot be set but indicator light does not go on	Dimming circuit in gauge Cruise control unit	See page EE-6 See page EE-6
Cruise speed is noticeably higher or low- er than what was set	Vehicle speed sensor Cruise control unit and actuator cable deflection Cruise control unit	See page TR group-automatic transaxle See page EE-35 See page EE-6
Excessive overshooting or undershooting when trying to set speed	Cruise control unit and actuator cable deflection Vehicle speed sensor Cruise control unit	See page EE-35 See page TR group-automatic transaxle See page EE-6
Speed fluctuation on a flat road with cruise control set	Vehicle speed sensor Cruise control unit and actuator cable deflection Cruise control unit	See page TR group-automatic tra- nxaxle See page EE-35 See page EE-8
Vehicle does not decelerate or accelerate accordingly when SET/RESUME/CAN-CEL button is pushed		See page EE-57 See page EE-6
Cruise control does not cancel when shift lever is moved to N position (A/T)	A/T gear position switch Cruise control unit	See page TR group-automatic tra- nxaxle See page EE-6
Set speed is not cancelled when brake pedal is pushed	Brake switch Cruise control unit	See page EE-35 See page EE-6
Cruise control will not cancel when main switch is pushed OFF	Remocon switch Cruise control unit	See page EE-34 See page EE-6
Cruise control will not cancel when CAN- CEL button is pushed	Remocon switch Cruise control unit	See page EE-34 See page EE-6
Set speed will not resume when RESU- ME button (with main switch on, when s- et speed is temporarily cancelled)		See page EE-34 See page EE-6

Engine Electrical System

Symptom	Suspect Area	See Page
The transmission shifts down slower than normal when going up a hill with the cruise control on (A/T)	Troubleshooting the cruise control communication circuit	See page EE-6

SPECIFICATION STARTING SYSTEM

Item			Specifications	
	Туре		Reduction drive (with planet- ary gear)	
	Rated voltage		12V, 2.0KW	
	No. of pin	9		
	No-load charasteristics	Voltage	11.5V	
Starter		Amperage	120A, MAX	
		Speed	4,000rpm, MIN	
	Commutator diameter	Standard	35 mm (1.378 in)	
		Limit	33 11111 (1.376 111)	
	Undercut depth	Standard	0.7 mm (0.028 in)	
424	Onderedt deptit	Limit	0.7 11111 (0.028 111)	

CHARGING SYSTEM

ولیت محدود)	ت دیجیتال حودرو سامه (مست	Specifications	
	Туре	Battery voltage sensing	
	Rated voltage	12V, 120A	
Altornator	Speed	1,000 ~ 12,000 rpm	
Alternator	Voltage regulator	I.C regulator built-in type	
	Regulator setting voltage	14.4 ± 0.3V	
	Temperrature compensation	-10 ± 3mV/°C	
	Туре	MF 90 AH	
Dettem	Cold cranking amperage at-18°C (0°F)	720A	
Battery	Reserve capacity	160min	
	Specific gravity at 20°C (77°F)	1.280 ± 0.01	

MOTICE

- COLD CRANKING AMPERAGE is the amperage a battery can deliver for 30 seconds and maintain a terminal voltage of 7.2V or greater at a specified temperature.
- REVERSE CAPACITY RATING is amount of time a battery can deliver 25A and maintain a minimum terminal voltage of 10.5V at 26.7° C(80° F)

PREHEATING SYSTEM

General Information

EE-5

Item		Specifications
	Rated voltage	DC 11V
Glow plug	Current	16A \pm 1.5A after 4 seconds loading at rated voltage
Glow plug relay	Rated voltage	DC 12V
	Operating voltage range	DC 9V ~ DC 16V
	Operating temperature range	-40°C ~ 120°C
	Rated load current	DC 12V, 70A

AUTO CRUISE CONTROL SYSTEM

Items	Specification
Setting error	Within \pm 1.5Km/h on level road
Vehicle speed memory variation	No variation
Setting time	0.1sec max.
Resuming time	0.1sec max.
Minimum operating speed	40 \pm 2Km/h
Cancel speed range	15 ± 2Km/h
Maximum memorized speed	160 ± 2Km/h
Pulling force	127N(13Kgf)
Main switch serial resistance value	3.9 k $\Omega \pm 1\%$
Command quitch parial registance value	SET switch : $220\Omega \pm 1\%$
Command switch serial resistance value	RESUME switch : $910\Omega \pm 1\%$

TIGHTENING TORQUE


Items	Nm	kg⋅cm	lb-ft
Generator terminal (B+)	5 ~ 7	50 ~ 70	3.6 ~ 5.1
Starter motor terminal (B+)	10 ~ 12	100 ~ 120	7.3 ~ 8.8
Battery terminal	4 ~ 6	40 ~ 60	2.9 ~ 4.3
Glow plug	15 ~ 20	150 ~ 200	11 ~ 15
Glow plug plate attaching nut	0.8 ~ 1.5	8 ~ 15	0.6 ~ 1.1

The Micro 570 Analyzer

The Micro 570 Analyzer provides the ability to test the charging and starting systems, including the battery, starter and alternator.

ACAUTION


Because of the possibility of personal injury, always use extreme caution and appropriate eye protection when working with batteries.

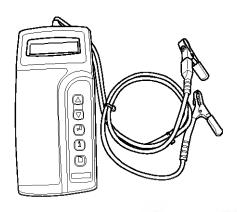

EBKD001A

Keypad

The Micro 570 button on the key pad provide the following functions:

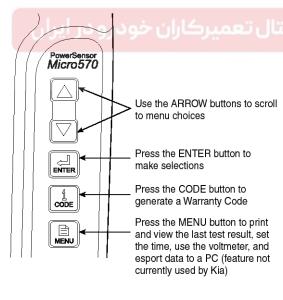


LBGE012A

Engine Electrical System

Battery Test Procedure

- 1. Connect the tester to the battery.
 - Red clamp to battery positive (+) terminal.
 - Black clamp to battery negative (-) terminal.

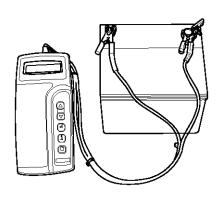


EBKD001C

ACAUTION

Connect clamps securely. If "CHECK CONNECTION" message is displayed on the screen, reconnect clamps securely.

 The tester will ask if the battery is connected "IN-VEHICLE" or "OUT-OF-VEHICLE". Make your selection by pressing the arrow buttons; then press ENTER.

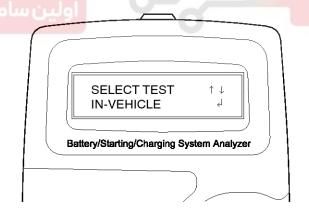


SXMFF9129D

General Information

EE-7

3. Select CCA and press the ENTER button.

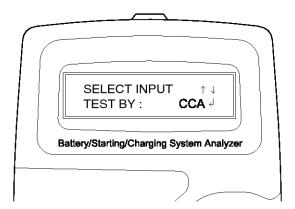

SXMEE9130D

MNOTICE

CCA: Cold cranking amps, is an SAE specification for cranking batteried at -0.4° F (-18° C).

 Set the CCA value displayed on the screen to the CCA value marked on the battery label by pressing up and down buttons and press ENTER.




EBKD001F

MOTICE

The battery ratings(CCA) displayed on the tester must be identical to the ratings marked on battery label.


5. The tester will conduct battery test.

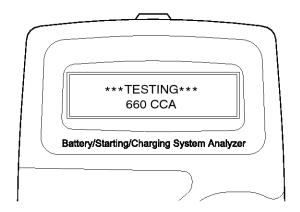

SXMEE9131D

6. The tester displays battery test results including voltage and battery ratings.

Refer to the following table and take the appropriate action as recommended by the Micro 570.

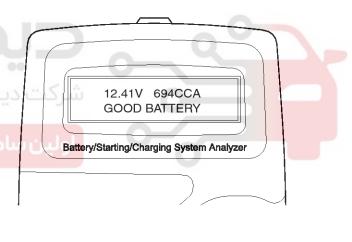

SXMEE9132D

Engine Electrical System

Battery Test Results

Result On Printer	Remedy
GOOD BATTERY	No action is required
GOOD RECHARGE	Battery is in a good state Recharge the battery and use
CHARGE & RETEST	Battery is not charged properly - Charge and test the battery again. (Failure to charge the battery fully may read incorrect measurement value)
REPLACE BATTERY	Replace battery and recheck the charging system. - Improper connection between battery and vehicle cables may cause "REPLACE B-ATTERY", retest the battery after removing cables and connecting the tester to the battery terminal directly prior to replacing the battery.
BAD CELL-REPLACE	Charge and retest the battery. - If the Micro 570 recommends "REPLACE BATTERY", replace the battery and recheck the charging system.

WARNING

Whenever filing a claim for battery, the print out of the battery test results must be attached.


Starter Test Procedure

After the battery test, press ENTER immediately for the starter test.



EBKD001H


8. Start the engine.

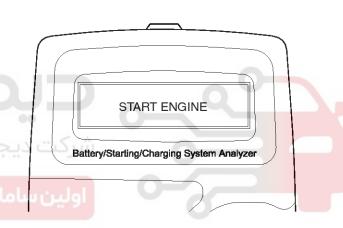

EBKD001I

9. Cranking voltage and starter test results will be displayed on the screen.

Refer to the following table and take the appropriate action as recommended by the Micro 570.

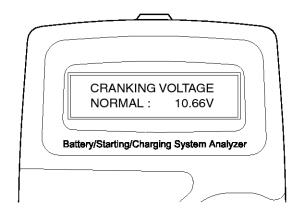

SXMEE9133D

General Information

EE-9

Starter Test Results


Result On Printer	Remedy
CRANKING VOLTAGE NORM- AL	System shows a normal starter draw
CRANKING VOLTAGE LOW	Cranking voltage is lower than normal level - Check starter
CHARGE BATTERY	The state of battery charge is too low to test - Charge the battery and retest
REPLACE BATTERY	Replace battery If the vehicle is not started though the battery condition of "GOOD BATTERY" is displayed, check wiring for open circuit, battery cable connection, starter and repair or replace as necessary. If the engine does crank, check fuel system.

MOTICE

When testing the vehicle with old diesel engines, the test result will not be favorable if the glow plug is not heated. Conduct the test after warming up the engine for 5 minutes.


Charging System Test Procedure

10. Press ENTER to begin charging system test.

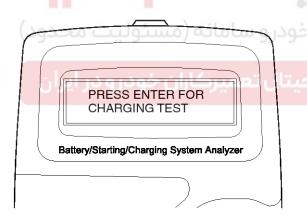


EBKD001K

11. The tester displays the actual voltage of alternator. Press ENTER to continue.

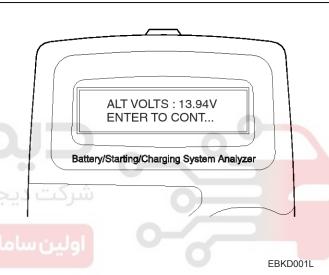


12. Turn off all electrical load and rev engine for 5 seconds with pressing the accelerator pedal. (Follow the instructions on the screen)

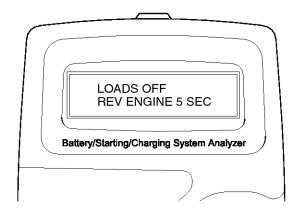

EBKD001M

Engine Electrical System

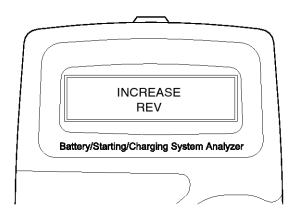


SXMEE9134D




SXMEE9135D

13. The message that engine RPM is detected will be displayed on the screen. Press ENTER to continue.

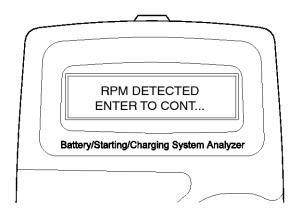


SXMEE9136D

14.If the engine RPM is not detected, press ENTER after revving engine.

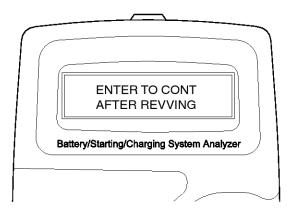


SXMEE9137D

15. The tester will conduct charging system test during loads off.

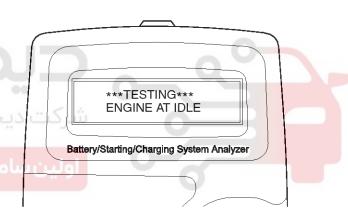

EBKD001O

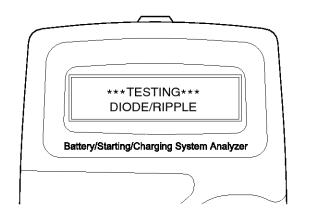


SXMEE9138D

General Information


EE-11

16. Turn on electrical loads (air conditioner, lamps, audio and etc). Press ENTER to continue.

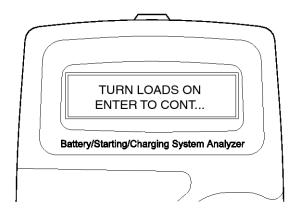


SXMEE9139D

17. The tester will conduct charging system test during loads on.

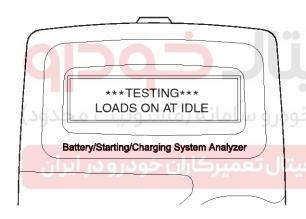


SXMEE9140D


18. Rev engine for 5 seconds with pressing the accelerator pedal. (Follow the instructions on the screen)

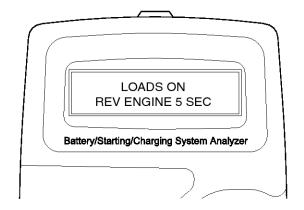

SXMEE9141D

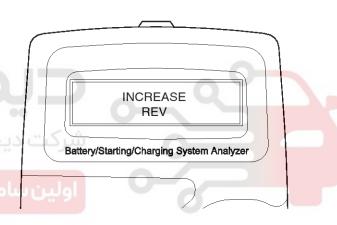


SXMEE9142D

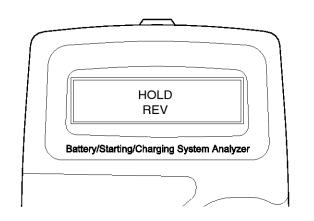


SXMEE9143D

19. The message that engine RPM is detected will be displayed on the screen. Press ENTER to continue.

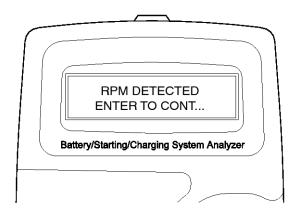


SXMEE9144D

20. If the engine RPM is not detected, press ENTER after revving engine.

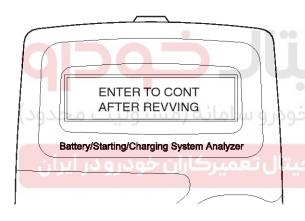

SXMEE9145D

21. Turn off electrical loads (air conditioner, lamps, audio and etc). Turn the engine off.

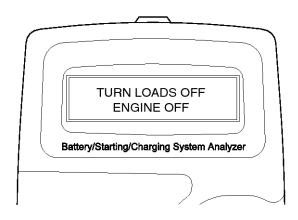


SXMEE9146D


Engine Electrical System

22. Charging voltage and charging system test results will be displayed on the screen.


Shut off engine end disconnect the tester clamps from the battery. Refer to the following table and take the appropriate action as recommended by the Micro 570

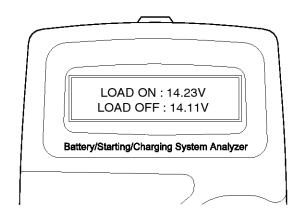



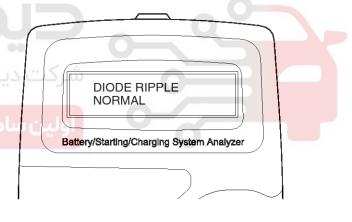

EBKD001P

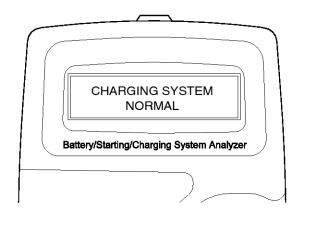

SXMEE9148D

General Information

EE-13

Charging System Test Results

Result On Printer	Remedy
CHARGING SYSTEM NORM- AL / DIODE RIPPLE NORMAL	Charging system is normal
NO CHARGING VOLTAGE	Alternator does not supply charging current to battery - Check belts, connection between alternator and battery and replace belts or cable or alternator as necessary
LOW CHARGING VOLTAGE	Alternator does not supply charging current to battery and electrical load to system fully - Check belts and alternator and replace as necessary
HIGH CHARGING VOLTAGE	The voltage from alternator to battery is higher than normal limit during voltage regulating. - Check connection and ground and replace regulator as necessary - Check electrolyte level in the battery
EXCESS RIPPLE DETECTED	One or more diodes in the alternator is not functioning properly - Check alternator mounting and belts and replace as necessary






Engine Electrical System

Charging System

DESCRIPTION

The conventional internal voltage detection type alternator controls the charging voltage regardless of the battery condition and according to the external load change so that it sometimes causes battery under or over charging or causes flickering of meters and lamps due to ripples of generated voltage resulting from load fluctuation. The figure below show the internal circuits of the alternator and voltage regulator.

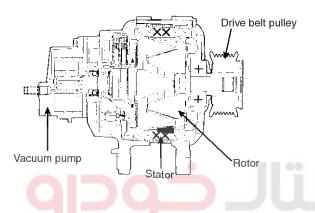

LBIF018A

ON-VEHICLE INSPECTION

ACAUTION

- Check that the battery cables are connected to the correct terminals.
- Disconnect the battery cables when the battery is given a quick charge.
- Do not perform tests with a high voltage insulation resistance tester.
- Never disconnect the battery while the engine is running.

CHECK BATTERY VOLTAGE

- After having driven the vehicle and in the case that 20 minutes have not passed after having stopped the engine, turn the ignition switch ON and turn on the electrical system (headlamp, blower motor, rear defogger etc.) for 60 seconds to remove the surface charge.
- 2. Turn the ignition switch OFF and turn off the electrical systems.

3. Measure the battery voltage between the negative (-) and positive (+) terminals of the battery.

Standard voltage: 12.5~12.9V at 20°C (68°C)

If the voltage is less than specification, charge the battery.

CHECK BATTERY TERMINALS, FUSIBLE LINK AND FUSES

- 1. Check that the battery terminals are not loose or corroded.
- 2. Check the fusible link and fuses for continuity.


INSPECT DRIVE BELT

1. Visually check the belt for excessive wear, frayed cords etc.

If any defect has been found, replace the drive belt.

MNOTICE

Cracks on the rib side of a belt are considered acceptable. If the belt has chunks missing from the ribs, it should be replaced.

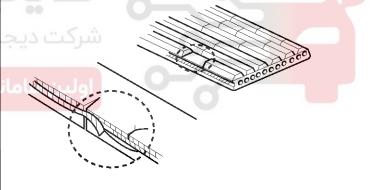

LBIF019A

2. Using a belt tension gauge(A), measure the drive belt(B) tension.


DRIVE BELT TENSION

New belt	540~640 N (121~143 lb)
Used belt	340~490 N (77~110 lb)


If the belt tension is not as specified, adjust it.

Charging System

EE-15

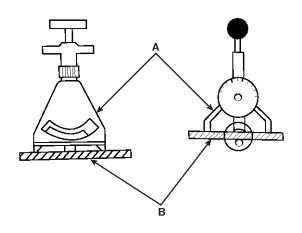

LBIF020A

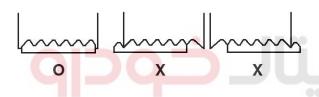

MOTICE

- "New belt" refers to a belt which has been used less than 5 minutes on a running engine.
- "Used belt" refers to a belt which has been used on a running engine for 5 minutes or more.
- After installing a belt, check that it fits properly in the ribbed grooves.
- Check with your hand to confirm that the belt has not slipped out of the groove on the bottom of the pulley.
- After installing a new belt, run the engine for about 5 minutes and recheck the belt tension.

VISUALLY CHECK ALTERNATOR WIRING AND LISTEN FOR ABNORMAL NOISES

- 1. Check that the wiring is in good condition.
- 2. Check that there is no abnormal noise from the alternator while the engine is running.

CHECK DISCHARGE WARNING LIGHT CIRCUIT

- 1. Warm up the engine and then turn it off.
- 2. Turn off all accessories.
- 3. Turn the ignition switch "ON". Check that the discharge warning light is it.
- 4. Start the engine. Check that the light goes off.


INSPECT CHARGING SYSTEM PREPARATION

1. Turn the ignition switch to "OFF".

MOTICE

To find abnormal conditions of the connection, actions should not be taken on the two terminals and each connection during the test.

2. Connect a digital voltmeter between the alternator "B" terminal and battery (+) lead wire to the battery (+) terminal. Connect the (+) lead wire of the voltmeter to the "B" terminal and the (-) lead wire to the battery (+) terminal.

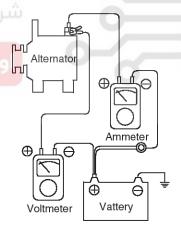

LBIF022A

CONDITIONS FOR THE TEST

- 1. Start the engine.
- 2. Switch on the headlamps, blower motor and so on. And then, read the voltmeter under this condition.

RESULT

1. The voltmeter may indicate the standard value.

0.2V max.

- 2. If the value of the voltmeter is higher than expected (above 0.2V max.), poor wiring is suspected. In this case check the wiring from the alternator "B" terminal to the fusible link to the battery (+) terminal. Check for loose connections, color change due to an overheated harness, etc. Correct them before testing again.
- 3. Upon completion of the test, set the engine speed at idle. Turn off the head lamps, blower motor and the ignition switch.

PREPARATION

1. Prior to the test, check the following items and correct as necessary.

Check the battery installed in the vehicle to ensure that it is in good condition. The battery checking method is described in "BATTERY".

The battery that is used to test the output current should be one that has been partially discharged. With a fully charged battery, the test may not be conducted correctly due to an insufficient load.

Check the tension of the alternator drive belt.


- 2. Turn off the ignition switch.
- 3. Disconnect the battery ground cable.
- 4. Disconnect the alternator output wire from the alternator "B" terminal.
- Connect a DC ammeter (0 to 150A) in series between the "B" terminal and the disconnected output wire. Be sure to connect the (-) lead wire of the ammeter to the disconnected output wire.

MOTICE

Tighten each connection securely, as a heavy current will flow. Do not rely on clips.

- Connect a voltmeter (0 to 20V) between the "B" terminal and ground. Connect the (+) lead wire to the alternator "B" terminal and (-) lead wire to a good ground.
- 7. Attach an engine tachometer and connect the battery ground cable.
- 8. Leave the engine hood open.

Engine Electrical System

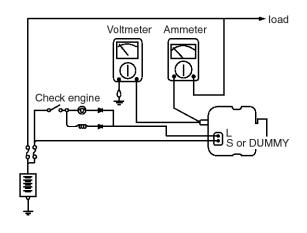

LBIF023A

TEST

- Check to see that the voltmeter reads as the same value as the battery voltage. If the voltmeter reads 0V, and the open circuit in the wire between the alternator "B" terminal and battery (+) terminal, a blown fusible link or poor grounding is suspected.
- 2. Start the engine and turn on the headlights.
- 3. Set the headlights to high beam and the heater blower switch to HIGH, quickly increase the engine speed to 2,500 rpm and read the maximum output current value indicated by the ammeter.

MOTICE

After the engine starts up, the charging current quickly drops. Therefore, the above operation must be done quickly to read the maximum current value correctly.

RESULT

 The ammeter reading must be higher than the limit value. If it is lower but the alternator output wire is in good condition, remove the alternator from the vehicle and test it.

63A min.

MOTICE

- The nominal output current value is shown on the nameplate affixed to the alternator body.
- The output current value changes with the electrical load and the temperature of the alternator itself. Therefore, the nominal output current may not be obtained. If such is the case, keep the headlights on the cause discharge of the battery, or use the lights of another vehicle to increase the electrical load.

The nominal output current may not be obtained if the temperature of the alternator itself or

Charging System

EE-17

ambient temperature is too high.

In such a case, reduce the temperature before testing again.

- 2. Upon completion of the output current test, lower the engine speed to idle and turn off the ignition switch.
- 3. Disconnect the battery ground cable.
- 4. Remove the ammeter and voltmeter and the engine tachometer.
- 5. Connect the alternator output wire to the alternator "B" terminal.
- 6. Connect the battery ground cable.


PREPARATION

1. Prior to the test, check the following items and correct if necessary.

Check that the battery installed on the vehicle is fully charged. For battery checking method, see "BATTERY".

Check the alternator drive belt tension.

- 2. Turn ignition switch to "OFF".
- 3. Disconnect the battery ground cable.
- 4. Connect a digital voltmeter between the "B" terminal of the alternator and ground. Connect the (+) lead of the voltmeter to the "B" terminal of the alternator. Connect the (-) lead to good ground or the battery (-) terminal.
- 5. Disconnect the alternator output wire from the alternator "B" terminal.
- Connect a DC ammeter (0 to 150A) in series between the "B" terminal and the disconnected output wire.
 Connect the (-) lead wire of the ammeter to the disconnected output wire.
- 7. Attach the engine tachometer and connect the battery ground cable.

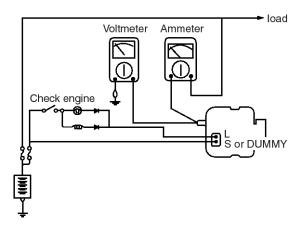

LBIF024A

TEST

1. Turn on the ignition switch and check to see that the voltmeter indicates the following value.

Battery voltage

If it reads 0V, there is an open circuit in the wire between the alternator "B" terminal and the battery and the battery (-), or the fusible link is blown.

- 2. Start the engine. Keep all lights and accessories off.
- Run the engine at a speed of about 2,500 rpm and read the voltmeter when the alternator output current drops to 10A or less.

RESULT

 If the voltmeter reading agrees with the value listed in the Regulating Voltage Table below, the voltage regulator is functioning correctly. If the reading is other than the standard value, the voltage regulator or the alternator is faulty.

REGULATING VOLTAGE TABLE

GASOLINE

Voltage regulator ambie- nt temperature °C (°F)	Regulating voltage (V)
-20 (-4)	14.2 ~ 15.4
20 (68)	14.0 ~ 15.0
60 (140)	13.7 ~ 14.9
80 (176)	13.5 ~ 14.7

DIESEL


Voltage regulator ambient temperature °C (°F)	Regulating voltage (V)
-30 (-22)	14.1 ~ 15.2
20 (68)	14.1 ~ 14.7
120 (248)	13.3 ~ 14.7

- 2. Upon completion of the test, reduce the engine speed to idle, and turn off the ignition switch.
- 3. Disconnect the battery ground cable.
- 4. Remove the voltmeter and ammeter and the engine tachometer.
- Connect the alternator output wire to the alternator "B" terminal.
- 6. Connect the battery ground cable.

Engine Electrical System

Alternator

COMPONENTS COMPONENT

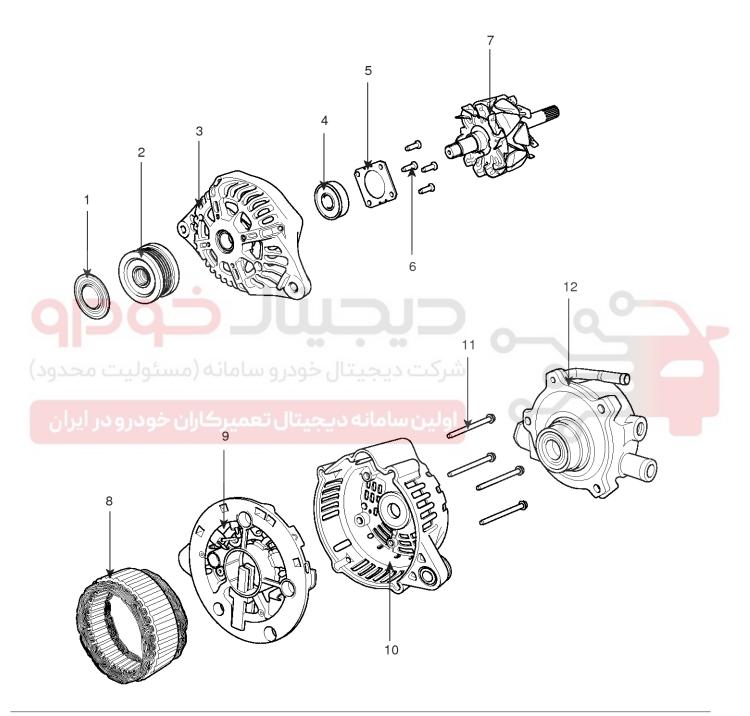

- 1. Pulley cover
- 2. Pulley
- 3. Front frame
- 4. Front bearing
- 5. Bearing cover
- 6. Bolts

- 7. Rotor
- 8. Stator
- 9. Brush & Regulator assembly
- 10. Rear frame
- 11. Throught bolts
- 12. Vacuum pump


Charging System

EE-19

LBIF033A


REPLACEMENT

- 1. Disconnect the battery negative terminal frist, then the positive terminal.
- 2. Disconnect the alternator connector(A) and "B" terminal cable(B) from the alternator(C).
- 3. Disconnect the vacuum pump oil drain hose(D), vacuum pump oil feed hose(E) and vacuum hose(F).

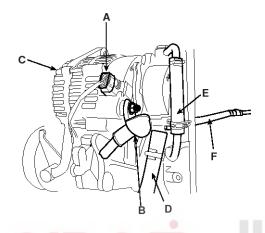

SJMEM6001D

4. Remove the mounting bolt(A) and through bolt(B), then remove the alternator(C).

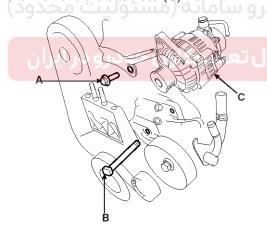


LBIF030A

5. Installation is the reverse of removal.

DISASSEMBLY


DISASSEMBIY

- 1. Remove the pulley cover.
- 2. Remove the pulley(A) using the special tool(B).

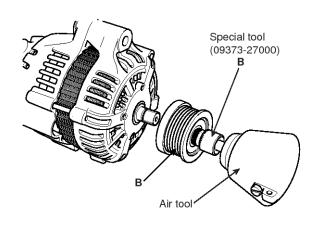


LBIF048A

3. After loosening the three bolts(A). Remove the vacuum pump(B).

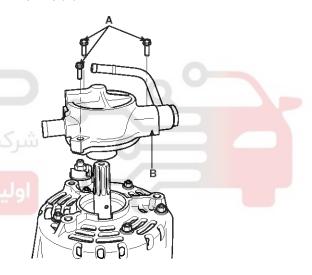

LBIF049A


4. Remove the B terminal insulator(A) and loosen the five rear cover mounting nuts(B).

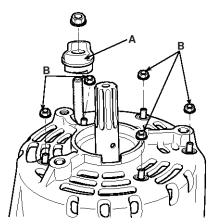

Engine Electrical System


LBIF050A

5. After loosening the four through bolts(A), remove the rear cover(B).

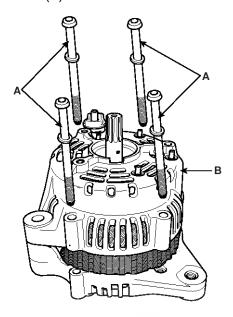


LBIF051A

6. After removing the weld between the stator lead and diode lead(A), remove the regulator assembly(B).

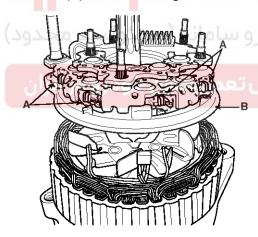

LBIF052A

7. Separate the rotor(A), stator(B), and front cover(C).

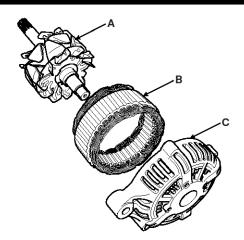


LBIF053A

8. Installation is the reverse of removal.

INSPECTION INSPECT ROTOR

1. Check that there is continuity between the slip rings(A).

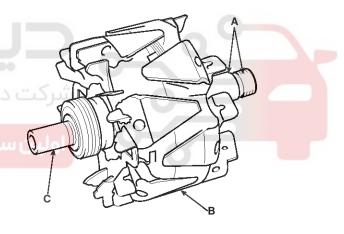

LBIF054A


- 2. Check that there is no continuity between the slip rings and the rotor(B) or rotor shaft(C).
- 3. If the rotor fails either continuity check, replace the alternator.

Charging System

EE-21

INSPECT STATOR

1. Check that there is continuity between each pair of leads(A).

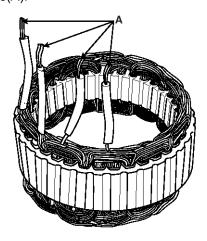

LBIF055A

- 2. Check that there is no continuity between each lead and the coil core.
- 3. If the coil fails either continuity check, replace the generator.



اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Engine Electrical System

Battery

DESCRIPTION

- 1. The maintenance-free battery is, as the name implies, totally maintenance free and has no removable battery cell caps.
- 2. Water never needs to be added to the maintenance-free battery.
- 3. The battery is completely sealed, except for small vent holes in the cover.






Charging System

EE-23

Inspection Battery Diagnostic Flow

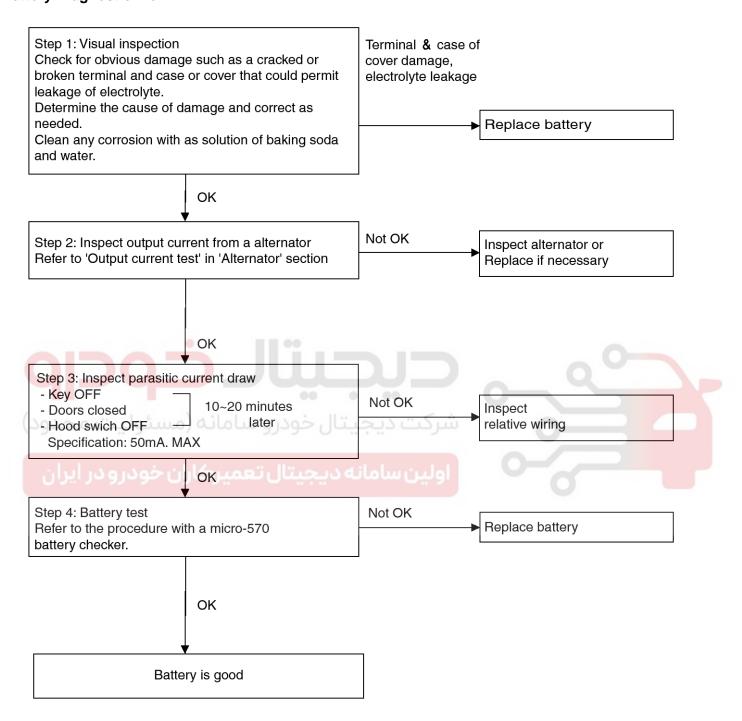

SXMEE9150L

Vehicle parasitic current inspection

- 1. Turn the all electric devices OFF, and then turn the ignition switch OFF.
- 2. Close all doors except the engine hood, and then lock all doors.
 - 1) Disconnect the hood switch connector.
 - 2) Close the trunk lid.
 - 3) Close the doors or remove the door switches.
- 3. Wait a few minutes until the vehicle's electrical systems go to sleep mode.

MNOTICE

For an accurate measurement of a vehicle parasitic current, all electriacl systems should go to sleep mode. (It takes at least one hour or at most one day.) However, an approximate vehicle parasitic current can be measured after 10~20 minutes.

4. Connect an ammeter in series between the battery (-) terminal and the ground cable, and then disconnect the clamp from the battery (-) terminal slowly.


⚠CAUTION

Be careful that the lead wires of an ammeter do not come off from the battery (-) terminal and the ground cable to prevent the battery from being reset. In case the battery is reset, connect the battery cable again, and then start the engine or turn the ignition switch ON for more than 10 sec. Repeat the procedure from No. 1.

To prevent the battery from being reset during the inspection,

- a. Connect a jump cable between the battery (-) terminal and the ground cable.
- b. Disconnect the ground cable from the battery(-) terminal.
- c. Connect an ammeter between the battery (-) terminal and the ground cable.
- d. After disconnecting the jump cable, read the current value of the ammeter.

Engine Electrical System

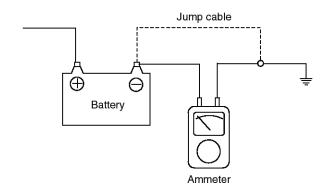

SVQEE0002L

- 5. Read the current value of the ammeter.
 - If the parasitic current is over the limit value, search for abnormal circuit by removing a fuse one by one and checking the parasitic current.
 - Check the parasitic current again, and search for suspected unit by removing a unit connected with the abnormal circuit one by one.

Limit value (after 10~20 min.): Below 50mA

Charging System

EE-25


Cleaning

- 1. Make sure the ignition switch and all accessories are in the OFF position.
- 2. Disconnect the battery cables (negative first).
- 3. Remove the battery from the vehicle.

ACAUTION

Care should be taken in the event the battery case is cracked or leaking, to protect your skin from the electrolyte.

Heavy rubber gloves (not the household type) should be wore when removing the battery.

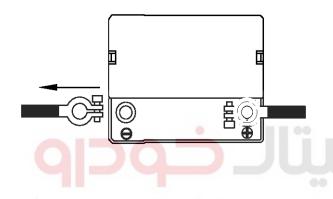


- EBJD008B
- 4. Inspect the battery tray for damage caused by the loss of electrolyte. If acid damage is present, it will be necessary to clean the area with a solution of clean warm water and baking soda. Scrub the area with a stiff brush and wipe off with a cloth moistened with baking soda and water.
- 5. Clean the top of the battery with the same solution as described above.
- 6. Inspect the battery case and cover for cracks. If cracks are present, the battery must be replaced.

- Clean the battery posts with a suitable battery post tool.
- 8. Clean the inside surface of the terminal clamps with a suitable battery cleaning tool. Replace damaged or frayed cables and broken terminal clamps.
- 9. Install the battery in the vehicle.
- 10. Connect the cable terminals to the battery post, making sure tops of the terminals are flush with the tops of the posts.
- 11. Tighten the terminal nuts securely.
- 12. Coat all connections with light mineral grease after tightening.

ACAUTION

When batteries are being charged, an explosive gas forms beneath the cover of each cell. Do not smoke near batteries being charged or which have recently been charged. Do not break live circuit at the terminals of batteries being charged.

A spark will occur when the circuit is broken. Keep open flames away from battery.

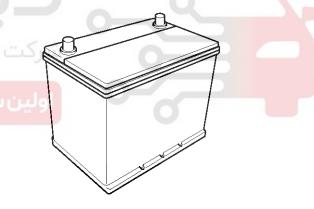

EBJD008A

Engine Electrical System

Starting System


DESCRIPTION

The starting system includes the battery, starter motor, solenoid switch, ignition switch, inhibitor switch(A/T), ignition lock switch, connection wires and the battery cable.

When the ignition key is turned to the start position, current flows and energizes the starter motor's solenoid coil.

The solenoid plunger and clutch shift lever are activated, and the clutch pinion engages the ring gear.

The contacts close and the starter motor cranks. In order to prevent damage caused by excessive rotation of the starter armature when the engine starts, the clutch pinion gear overruns.

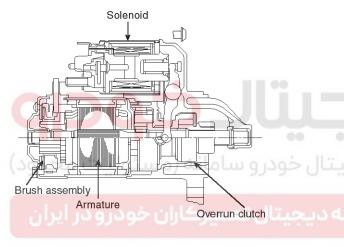

LBIF063A

INSPECTION STARTER TEST

MNOTICE

The air temperature must be between 59 and 100°F (15 and 38°C) before testing.

Recommended procedure:

- Use a starter system tester.
- Connect and operate the equipment in accordance with the manufacturer's instructions.
- Test and troubleshoot as described.

Alternate Procedure:

- Use the following equipment :
 - Ammeter, 0~400A
 - Voltmeter, 0~20V (accurate within 0.1 volt)
 - Tachometer, 0~1,200 rpm
- Hook up a voltmeter and ammeter as shown.

MNOTICE

After this test, or any subsequent repair, reset the ECM/PCM to clear any codes.

Check the Starter Engagement:

- 1. Remove the ECM(B+) fuse from the fuse/relay box.
- Turn the ignition switch to START (III) with the shift lever in N or P position (A/T) or with the clutch pedal depressed (M/T). The starter should crank the engine.
 - If the starter does not crank the engine, go to step 3.
 - If it cranks the engine erratically or too slowly, go to "Check for Wear and Damage" on the next page.
- 3. Check the battery, battery positive cable, ground, starter cut relay, and the wire connections for looseness and corrosion. Test again.

If the starter still does not crank the engine, go to step 4.

- 4. Unplug the connector from the starter.
- 5. Connect a jumper wire from the battery positive (+) terminal to the solenoid terminal.

The starter should crank the engine.

- If the starter still does not crank the engine, remove it, and diagnose its internal problem.
- If the starter cranks the engine, go to step 6.
- 6. Check the ignition switch.
- 7. Check the starter relay (see page EE-54).


Starting System

EE-27

- 8. Check the A/T gear position switch (A/T) or the clutch interlock switch (M/T).
- 9. Check for an open in the wire between the ignition switch and starter.


STARTER SOLENOID TEST

- 1. Disconnect the wires from the Sterminal and the M terminal.
- 2. Connect the battery as shown. If the starter pinion pops out, it is working properly. To avoid damaging the starter, do not leave the battery connected for more than 10 seconds.

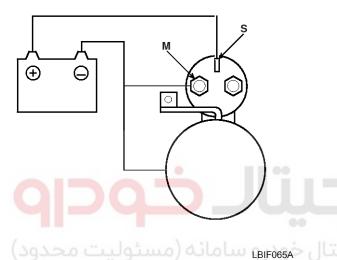


3. Disconnect the battery from the M terminal.

If the pinion does not retract, the hold-in coil is working properly. To avoid damaging the starter, do not leave the battery connected for more than 10 seconds.

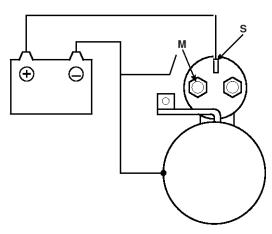

4. Disconnect the battery also from the body. If the pinion retracts immediately, it is working properly.

To avoid damaging the starter, do not leave the battery connected for more than 10 seconds.

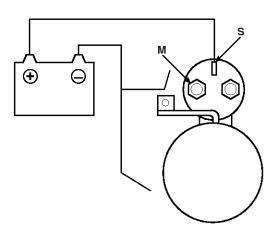


LBIF067A

FREE RUNNING TEST

- 1. Place the starter motor in a vise equipped with soft jaws and connecta fully-charged 12-volt battery to starter motor as follows:
- 2. Connect a test ammeter (100-ampere scale) and carbon pile rheostatas shown is the illustration.
- 3. Connect a voltmeter (15-volt scale) across starter motor.
- 4. Rotate carbon pile to the off position.
- 5. Connect the battery cable from battery's negative post to the starter motor body.
- 6. Adjust until battery voltage shown on the voltmeter reads 11 volts.
- 7. Confirm that the maximum amperage is within the specifications and that the starter motor turns smoothly and freely:

: Max. 120 Amps

: Min. 4,000 rpm

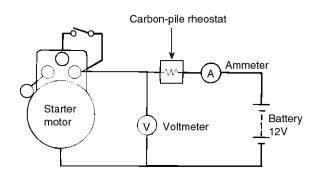

LBIF068A

Engine Electrical System

CLEANING

- 1. Do not immerse parts in cleaning solvent. Immersing the yoke assembly and/or armature will damage the insulation. Wipe these parts with a cloth only.
- 2. Do not immerse the drive unit in cleaning solvent. The overrun clutch is pre-lubricated at the factory and solvent will wash lubrication from the clutch.
- The drive unit may be cleaned with a brush moistened with cleaning solvent and wiped dry with a cloth.






Starting System

EE-29

Starter

COMPONENTS COMPONENT

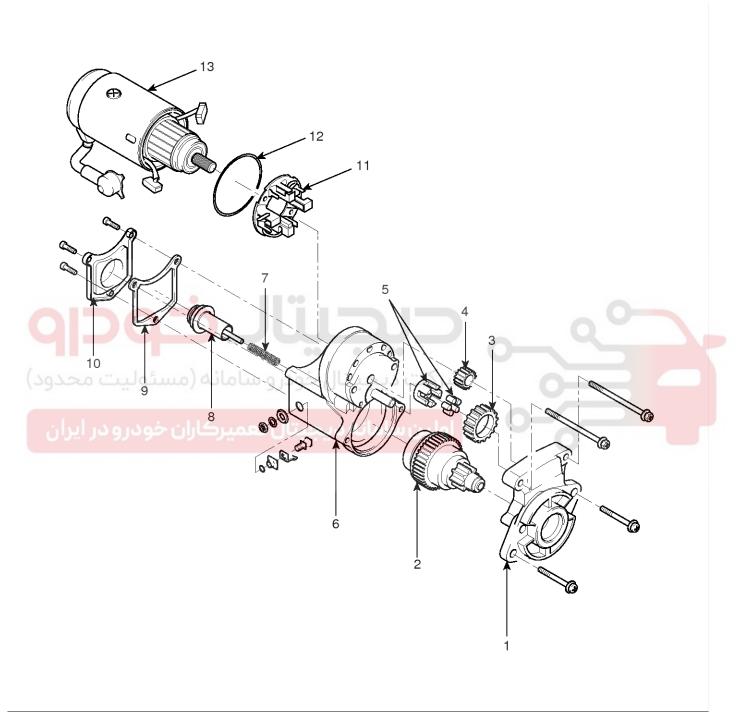

- 1. Front bracket
- 2. Overrun clutch assembly
- 3. Idle gear
- 4. Driver gear
- 5. Idle gear bearing
- 6. Housing
- 7. Spring


- 8. Magnetic switch
- 9. Packing
- 10. Rear cover
- 11. Brush holder
- 12. Packing
- 13. Yoke assembly

Engine Electrical System

LBIF072A

INSPECTION ARMATURE INSPECTION AND TEST

- 1. Remove the starter (see page EE-44).
- 2. Disassemble the starter as shown at the beginning of this procedure.
- 3. Inspect the armature for wear or damage from contact with the permanent magnet. If there is wear or damage, replace the armature.

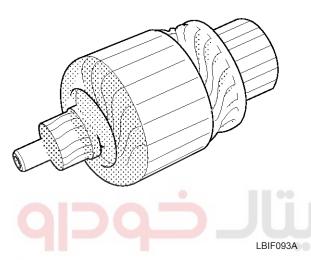


- 4. Measure the commutator (A) runout.
 - If the commutator runout is within the service limit, check the commutator for carbon dust or brass chips between the segments.
 - If the commutator runout is not within the service limit, replace the armature.

Commutator Runout


Standard (New): 0.02mm (0.001 in.) max.

Service limit: 0.05mm (0.002 in.)

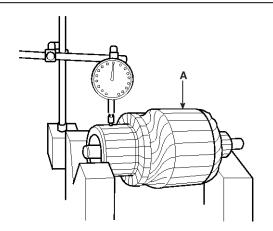


LBIF094A

Check for continuity between the segments of the commutator. If an open circuit exists between any segments, replace the armature.

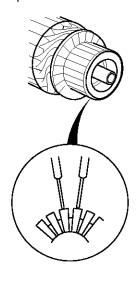

LBIF095A

6. Check with an ohmmeter that no continuity exists between the commutator (A) and armature coil core (B), and between the commutator and armature shaft (C). If continuity exists, replace the armature.

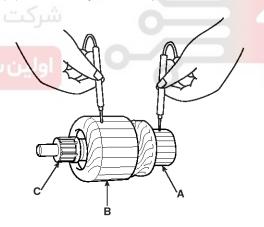


LBIF096A

Starting System

EE-31

INSPECT STARTER BRUSH

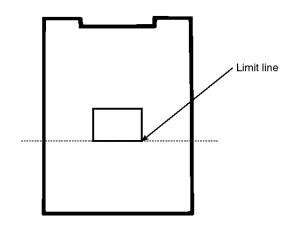

LBIF097A


STARTER BRUSH HOLDER TEST



LBIF098A

INSPECT OVERRUNNING CLUTCH

- Slide the overrunning clutch along the shaft.
 Replace it if does not slide smoothly.
- Rotate the overrunning clutch (A) both ways.
 Does it lock in one direction and rotate smoothly in reverse? If it does not lock in either direction or it locks in both directions, replace it.

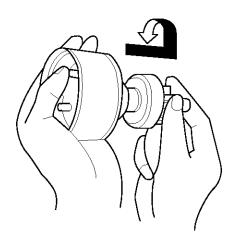

I RIF099A

3. If the starter driver gear (B) is worn or damaged, replace the overrunning clutch assembly: the gear is not available separately.

Check the condition of the flywheel or torque converter ring gear if the starter drive gear teeth are damaged.

DISASSEMBLY


 Remove the nut(A) and disconnect the lead wire(B) from the magnetic switch terminal(C).



LBIF085A

Remove the 2 bolts(A) and pull out the yoke assembly(B) with the armature(C) from the front bracket(D).

Engine Electrical System

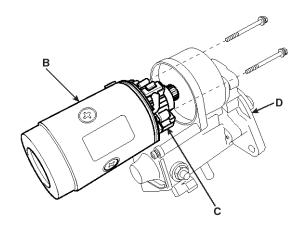


LBIF086A

 Using a screwdriver, hold the spring tank back and disconnect the brush(A) from the brush holder(B).
 Disconnect the 2 brushed and remove the brush holder.


MOTICE

Check that the positive(+) lead wires are not grounded.

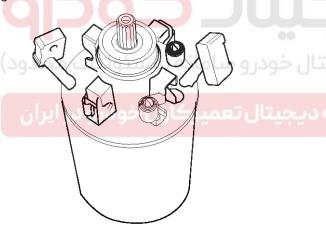


LBIF087A

4. Remove the 3 screws(A) and disconnect the housing rear cover(B) and packing(C).

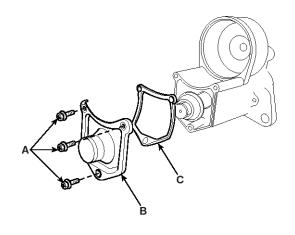


LBIF088A

5. Remove the magnetic switch(A) and spring coil(B).

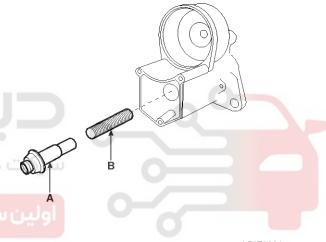

LBIF089A

 Remove the 2 screws(A) and disconnect the clutch sub assembly(B), idle gear(C), idle gear bearing(D) and drive gear(E) from the housing(F).

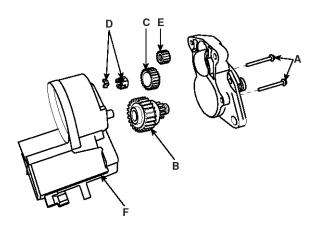


LBIF090A

7. Using a magnetic finger(A), remove the steel ball(B) from the clutch shaft hole.

Starting System

EE-33

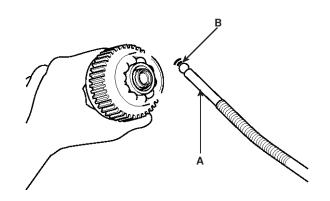


LBIF091A

8. Reassembly is the reverse of disassembly.


MOTICE

When installing the yoke assembly(A), use a new O-ring(B) and align the mark(C) on the housing to the mark(D) range of the brush holder.

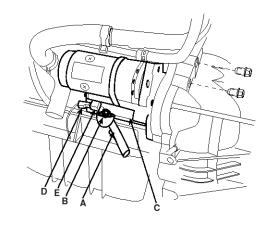

LBIG001B

- 3. Remove the 2 bolts holding the starter, then remove the starter.
- 4. Installation is the reverse of removal.
- 5. Connect the battery positive cable and negative cable to the battery.

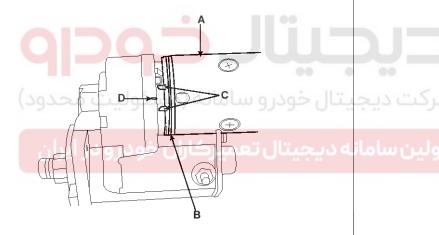



REPLACEMENT

- 1. Disconnect the battery negative cable.
- 2. Disconnect the starter cable(A) from the B terminal(B) on the solenoid(C), then disconnect the connector(D) from the S terminal(E).




Engine Electrical System

Starter Relay

INSPECTION

- 1. Remove the fuse box cover.
- 2. Remove the starter relay(A).

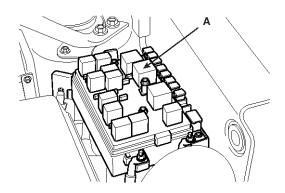

AVIE004A

- 3. Inspect the relay continuity.
 - Using an ohmmeter, check that there is continuity between terminals 85 and 86.

If there is no continuity, replace the relay.


- Check that there is no continuity between terminals 30 and 87.

If there is continuity, replace the relay.

- 4. Inspect the relay operation.
 - Apply battery positive voltage across terminals 85 and 86.
 - Using an ohmmeter, check that there is continuity between terminals 30 and 87.

If there is no continuity, replace the relay.



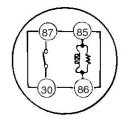

LDAD510B

5. Install the starter relay.


6. Install the fuse box cover.



Preheating System

EE-35

Preheating System COMPONENT LOCATION

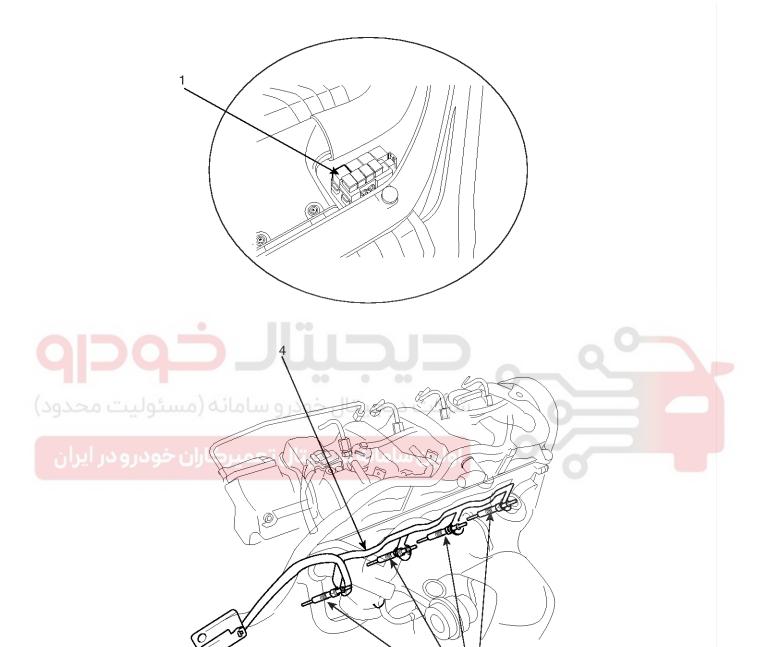

- 1. Glow relay
- 2. Glow plug connector

- 3. Glow plug
- 4. Plate

LBIF116A

INSPECT PREHEATING SYSTEM

Conditions before inspection:


Battery voltage: 12V

- 1. Connect voltmeter between glow plug plate and plug body (ground).
- 2. Check indicated value on voltmeter with ignition switch ON.
- 3. Check that preheat indication lamp lights for about 6 seconds and indicates battery voltage (about 9V or over) for about 36 seconds immediately afterignitionswitch is turned on. [At cooling water temperature 20°C (68°F)]

MNOTICE

Continuity time varies depending upon cooling water temperature.

- 4. After checking 3, set ignition switch at START position.
- The system is normal if battery voltage (about 9V or over) is generatedforabout 6 seconds during engine cranking and after start operation. [at coolingwater temperature 20°C (68°F)]
- 6. When the voltage or continuity time is not normal, check the terminal voltage in glow control unit, and single parts.

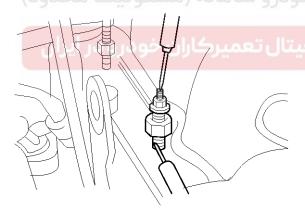

LBIF117A

INSPECT GLOW PLUS

 Check the continuity between the terminal and body as illustrated. Replaceif discontinuity or with large resistance.

Standard value : 0.25Ω


ACAUTION

Remove oil from plug before measuring as glow plug resistance is verysmall.

2. Check for rust on glow plug plate.

Engine Electrical System


3. Check glow plug for damage.

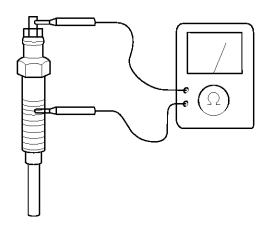

LBIF118A

INSPECT GLOW PLUG RELAY

- 1. Remove the glow plug relay.
- 2. Inspect the relay continuity.
 - Using an ohmmeter, check that there is continuity between terminals 2 and 4.
 - If there is no continuity, replace the relay.
 - Check that there is no continuity between terminals 1 and 5.
 - If there is continuity, replace the relay.

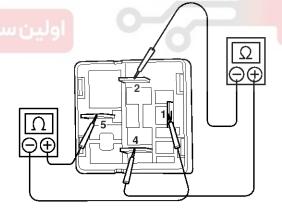


LBIF119A

- 3. Inspect the relay operation.
 - Apply battery positive voltage across terminals 2 and 4.
 - Using an ohmmeter, check that there is continuity between terminals 1 and 5.
 - If there is no continuity, replace the relay.

Preheating System

EE-37

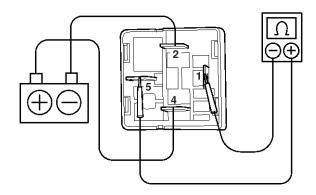

LBIF120A

4. Install the glow plug relay.



